

Instruction Guide

Service and Repairs

Your ACCURIST watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components free of charge.

IMPORTANT - Not covered by Guarantee 1 Batteries straps and bracelets

- Batteries, straps and bracelets.
- Damage caused by accident, misuse or lack of care.
 Water penetrations except in watches marked as "Water Resistant".
- water penetrations except in watches marked as water Resistant .

SERVICING AND REPAIRS UNDER GUARANTEE Please post your watch, together with the Retailer's

Please post your watch, together with the Retailer's Sales Receipt or proof of purchase, the completed Guarantee slip, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will NOT be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE Available at a reasonable charge after an estimate has been sent by T.P. (UK) Ltd. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

Important Note

Important Note
It is important to identify your watch correctly. If, after reading this
Instruction Guide, you have any further questions regarding the use,
operation or adjustment of your watch, please call us during office
hours on 0116 288 2500

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester
LE18 2EZ
United Kingdom.

Water Resistance

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (e.g. "30/50/100/200 metres") on the dial and/or case back.

If it is not marked as water resistant, it should not be allowed to come into contact with water or be won in conditions that could expose it to moisture (e.g. washing, heavy rain etc.). Certain chemicals in water may damage the watch seals. To maintain water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by 1-P, UKN LId.

IMPORTANT

Buttons must not be operated while in contact with water.

WATER RESISTANT or RESISTANT TO 30 METRES
Suitable for normal everyday use and will resist exposure to splashes
and rain: it is NOT designed to be used whilst bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming.


WATER RESISTANT TO 100 METRES.

As 50 metres plus pool side diving and snorkelling, but not high board or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but not high board diving.

3 eye chronograph (1/10th sec) with date

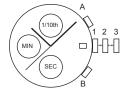

 $^{^{\}ast}$ Chronograph timing up to 60 minutes including 1/10th of a second.

3 eye chronograph (1/10th sec) with date

Resetting the chronograph function:

- Before setting the time please check that all chronograph hands are at the "0" / 12 o'clock position.
- To reset the hands to the "0" / 12 o'clock position press the buttons on your watch in the following sequence:
 - If the chronograph is counting then press 'A' to stop the chronograph and then 'B' to reset back to "0".
 - If split timing is displayed then press 'B' then 'A' followed by 'B' again to reset.

3 eye chronograph (1/10th sec) with date

Setting the time:

- * The chronograph measurement must be stopped before the time can be set.
 - 1. Pull the crown out to position '2'.
 - Turn the crown clockwise until the previous date is displayed.
 - Now pull the crown out to position '3' and adjust the hands to the desired time.
 - Push crown back to position '1'.
- * Do not attempt to set the date between 9:00 PM and 1:00 AM as the date change cycle is already in progress.

3 eye chronograph (1/10th sec) with date

Using the stop watch/chronograph feature:

* The chronograph measurement can time up to 60 minutes.

· Standard measurement:

- Press 'A' to start the chronograph timing, then press 'A' to stop the timing.
- Press 'B' to reset the chronograph.

Accumulated elapsed time measurement:

- Press 'A' to start timing, then press 'A' to stop the timing.
- Restart the timing by pressing 'A' as many times as required.
- 3. Press 'A' to stop the chronograph and 'B' to reset.

3 eye chronograph (1/10th sec) with date

Using the stop watch/chronograph feature continued:

Split time measurement:

- Press 'A' to start the timing, then press 'B' to split the timing.
 Press 'B' to release the timing as many times as
- required.
- Press 'A' to stop the chronograph timing.
 Press 'B' to reset the chronograph.