 


White Tidy Cupboard

Assembly Instructions – Please keep for future reference

830/1732

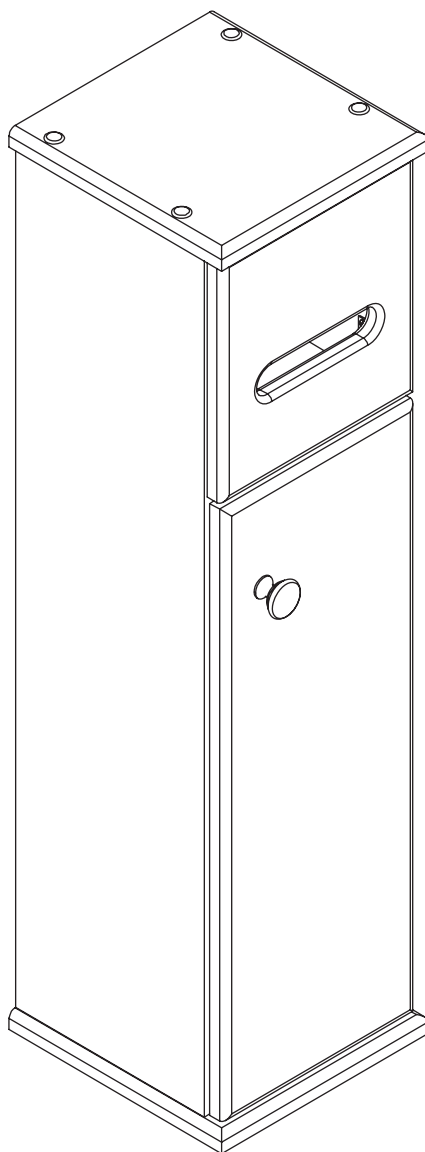

Dimensions

Width - 17cm

Depth - 17.5cm

Height - 63.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and care advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the panels, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

• **Note:** Only apply the glue once you are sure of the assembly.

- The wall plugs supplied are suitable for solid walls only. It is important that the correct type of fixing is used for your wall, seek professional advice if in doubt.

- Parts of the assembly will be easier with 2 people.

- If using power tools, please follow the safety instructions supplied with the tools.



- We do not recommend the use of power drill/ drivers for inserting screws, as this could damage

the unit. Only use hand screwdrivers.

- **Warning:** Before drilling, check the wall for hidden pipes and cables.

- Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately. If possible show product information or label to the medical advisor.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

 
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as a reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components,
call the Customer Helpline: 08456 400800


Please check you have all the panels listed below

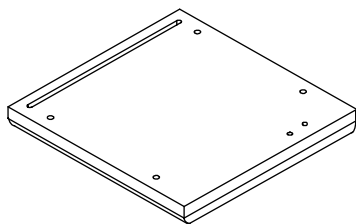


1 Top Panel x 1

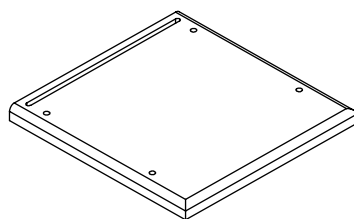 


2 Bottom Panel x 1

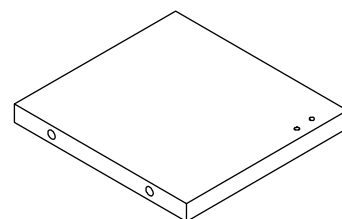 


3 Fixed Shelf x 1

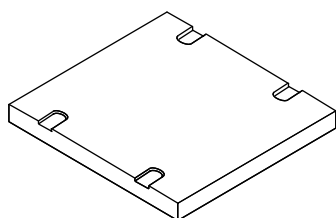 


4 Adjustable Shelf x 2

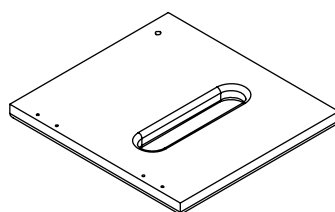 


5 Upper Door x 1

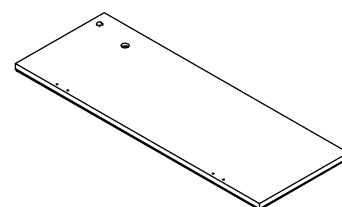 


6 Lower Door x 1

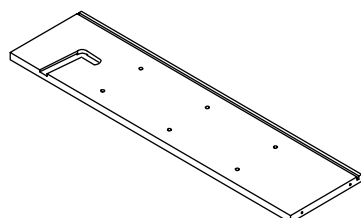 


7 Left Side Panel x 1

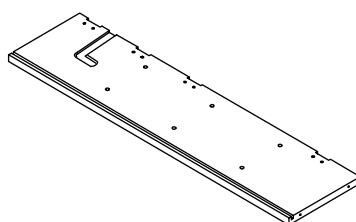 

8 Right Side Panel x 1

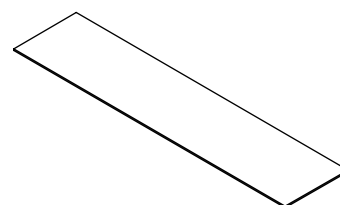 

9 Back Panel x 1

  
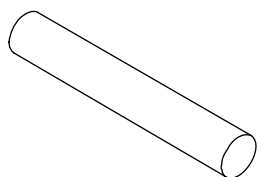 

 
 
 
 
 





10 Paper Holder x 1


Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


| | | |
|--|---|--|
| A  Hinge x 4 | B  12mm Screw x 4 | C  Door Knob x 1 |
| D  25mm Screw x 1 | E  Plastic Support x 8 | F  Magnetic Catch x 2 |
| G  Catch Plate x 2 | H  30mm Screw x 8 | I  Screw Cap x 8 |
| J  Wooden Dowel x 4 | K  10mm Screw x 18 | |

 Tools required



Phillips screwdriver
(medium & large)

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

 
Step 1

Assembling the fixed shelf

NOTE: It would be useful to ask someone to help you at this stage.

a: Attach the magnetic catch **F** to the underside of the fixed shelf **3** using 12mm screws **B**. Insert the wooden dowels **J** into the holes of fixed shelf.


b: Use the wooden dowel to fit the fixed shelf to the side panels **7** and **8**. The shelf should attach to the upper set of the holes. This may be a tight fit.

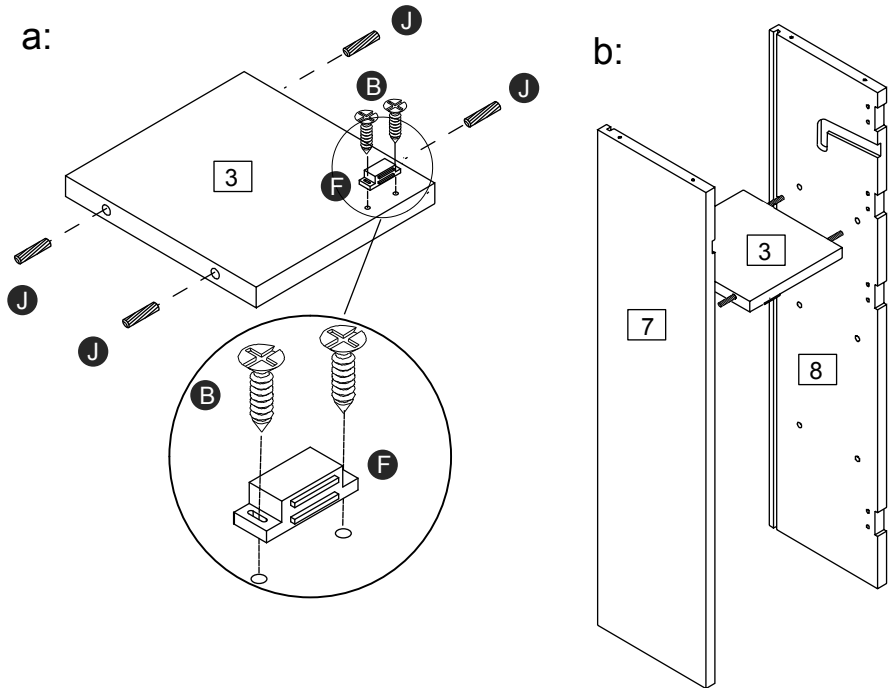

Step 2

Assembling bottom panel

 
Lay the cupboard on its back and use 30mm screws **H** to attach the bottom panel **2**.

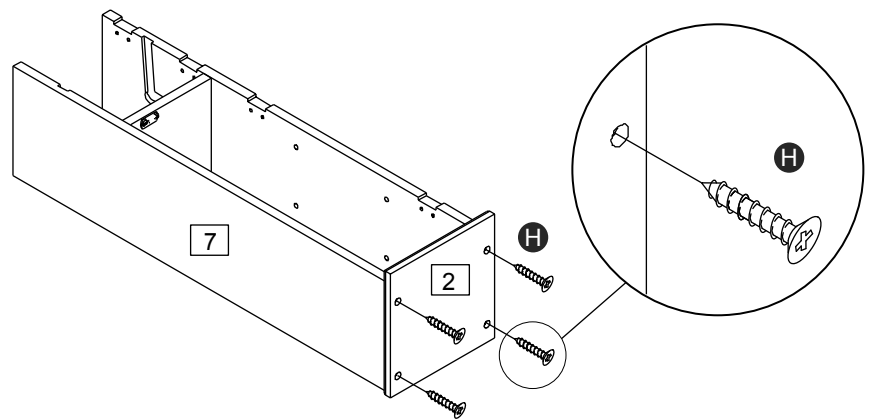

Step 3

Assembling back panel

 Slide the back panel **9** into the grooves of the side panels **7** **8** and bottom panel **2**.

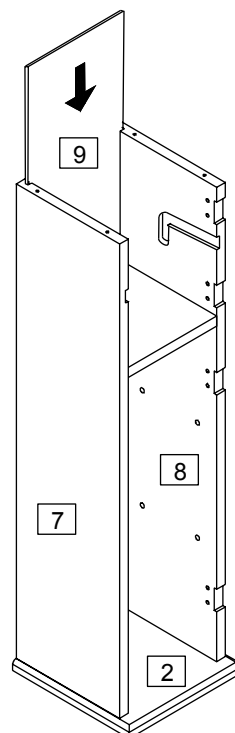


Assembly Instructions

Step 4

Assembling top panel

a: Attach magnetic catch **F** to the underside of the top panel **1** using 12mm screws **B**

 b: Use 30mm screws **H** to fix the top panel to the unit.

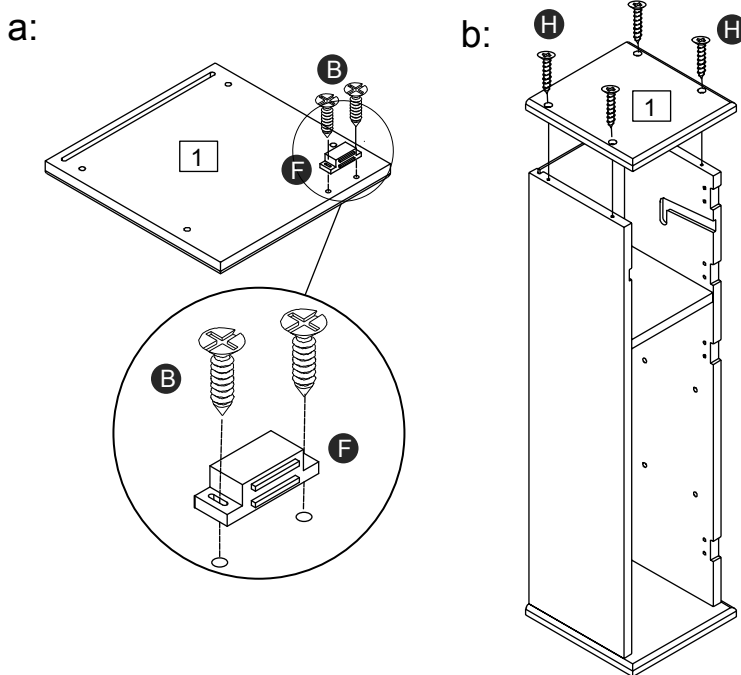


Step 5

Assembling doors

a: Attach catch plates **G** to the upper door **5** and lower door **6** using 10mm screws **K**. Also attach the knob **C** to the lower door with 25mm screw **D**

 b: Attach door hinges **A** to the upper and lower door and the main body of the cupboard with 10mm screws **K**

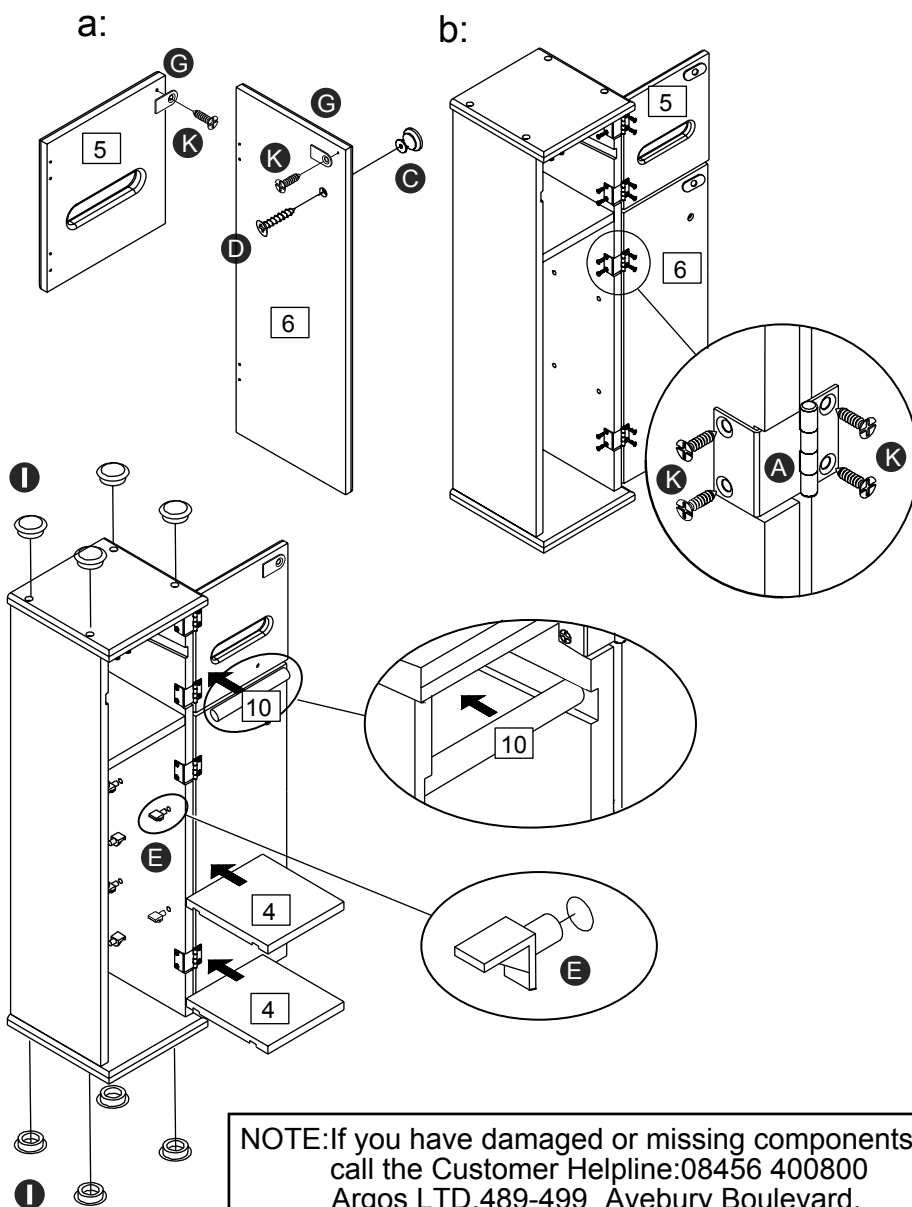

Step 6

Assembling adjustable shelf

Insert the shelf supports **E** into the holes in the side panels, and put the adjustable shelves **4** onto the shelf support.

Insert the paper holder **10**

To finish the assembly of the unit, insert the screw caps **I** over the screw holes on the outside.

NOTE: Please make sure the unit is secure before use

The assembly is now complete

NOTE: If you have damaged or missing components, call the Customer Helpline: 08456 400800
Argos LTD, 489-499 Avebury Boulevard,
Central Milton Keynes, MK9 2NW