

cookworks

White Plastic Blender

Model No. TB507CF



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference



 
ELECTRICAL SAFETY

- This blender is designed for domestic use. Don't use it in wet or damp locations.
- Switch off and unplug when not in use and before assembling, cleaning or dismantling the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep motor housing, cable, and plug dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not cover or block the ventilation holes.
- Do not pull on the cable to disconnect from the mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Only use with the parts supplied and fully assembled.
- Never place hands or utensils inside the jug whilst the blender is in use. Only use a scraper when the blender is not in operation.
- Do not cover the blender and allow the motor housing to cool fully before storing.
- Never use hot liquids in the blender jug, always allow liquids to cool to room temperature before blending.
- Do not fill above maximum level marked (1500ml) or use without the lid and stopper in place as the contents may be ejected when the blender is started.
- Do not leave unattended during use.
- The blender blades are sharp, take care when emptying the jug and cleaning.
- This appliance can cause personal injury if misused.

PARTS

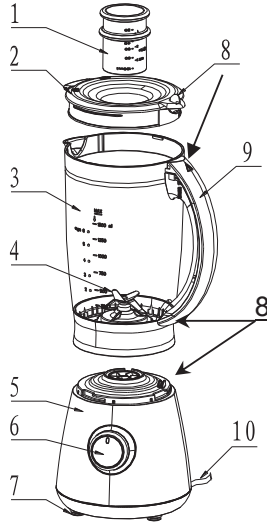



- | | |
|--------------------------|---------------------|
| 1. Stopper measuring cup | 6. Speed switch |
| 2. Lid | 7. Feet |
| 3. Jug | 8. Safety interlock |
| 4. Blade assembly | 9. Handle |
| 5. Motor housing | 10. Power cable |

IMPORTANT:

Your blender is equipped with a safety feature, where the blades will not operate unless the base of the jug and motor housing are fully locked and the lid correctly fitted.

TO USE

  1. Clean thoroughly before use.
2. Place the motor housing on a stable surface, check that the speed switch is at the off (0) position, fully unwind the cable and plug in.
3. Place the ingredients to be blended into the jug and check that the level is not above the maximum level marked (1500ml).
4. Fit the lid and stopper to the jug and lock into position (figs. 1). When the lid is correctly fitted the silver tab will be aligned with the jug handle.
5. Fit the jug onto the base, align the arrow marked on the jug with the 'unlocked' padlock symbol on the side of the motor housing and twist until it is aligned with the 'locked' symbol (figs. 2).
6. Using the speed switch, select the appropriate blender speed for your ingredients. A slower mix will be obtained by selecting the lower speed setting (1) and a faster mix by selecting the higher setting (2).
7. **If the blender does not operate check that the jug and the lid is fully locked into position.**

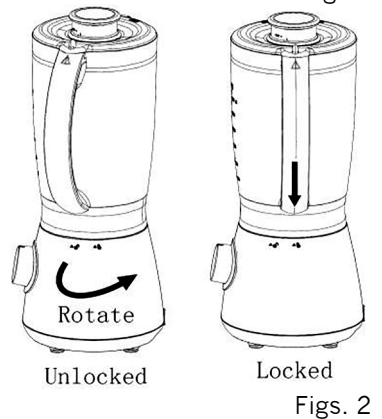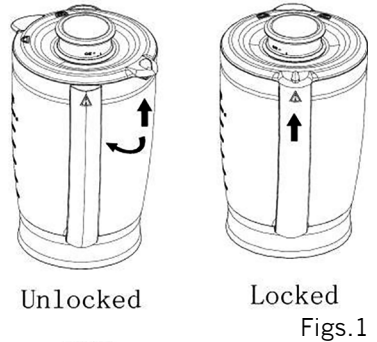

TO USE (CONTINUED)

8. Blend for a **maximum of 2 minutes**. If further blending is required allow it to cool to room temperature before restarting the blender.
9. Switch off; allow the blade to stop spinning before checking the consistency of the mix. If satisfactory, remove the jug.
10. To use the blender on pulse, turn and hold the speed switch to the 'Pulse' position for short intervals. The blender will operate at full speed, when the desired mix is achieved, release the switch.
11. To stop or interrupt the blending process switch the appliance off by turning the speed control switch to '0' or by turning off at the mains.

Notes:

- Do not run the blender with the container empty or with solids only.
- For some types of mixes it may be necessary to fill above the minimum (250ml) to obtain the most efficient mixing.
- The stopper is graduated and may be used as a measuring cup.
- The jug can be rinsed between uses in a session by half filling with clean water and operating the blender on pulse for a few seconds. Always clean thoroughly at the end of each session.
- Always check that the seal is fitted before use.

CLEANING

Clean the blender after each use.

1. Switch off and unplug.
2. The jug, lid and stopper may be washed in hot water with a little washing up liquid taking care not to handle the blades. Rinse and wipe dry. If water or foam enter the handle during washing, stand the jug upright and leave to drain-liquid will drain naturally through a hole situated at the base of handle. Not suitable for dishwashers.

CLEANING (CONTINUED)

3. To remove the blade assembly (not the plastic collar) from the jug, firmly grasp the lugs of blade assembly on the underside of the jug. Twist the assembly anti-clockwise to remove (fig 3). Lift off the silicon seal (fig 4). **Please note the blade assembly may be difficult to remove the first time.**

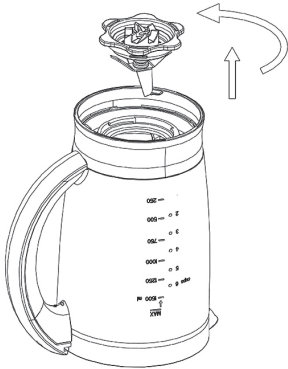 


Fig. 3

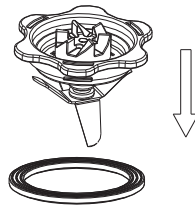 


Fig. 4

4. Wipe the outside of the motor housing with a damp cloth; do not use detergent or abrasives as these may scratch the surface.
5. Never immerse the motor housing, cable or plug in water.

TECHNICAL SPECIFICATION

Cookworks 1.5L plastic jug blender	
Model no	TB507CF
SKU no	135890961
Rated Voltage & Frequency	220 - 240V AC 50/60Hz
Rated Power Input	500W
Capacity	1.5 Litres
Maximum work time	2 minutes
Class rating	2 (Double insulated)
BS 1362 fuse	3A
Product dimensions (external)	220 x 164 x 414 mm
Product weight (net)	1.79 kg approx.



RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



PLUG / WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:

BLUE = NEUTRAL

BROWN = LIVE

 
GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.


Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

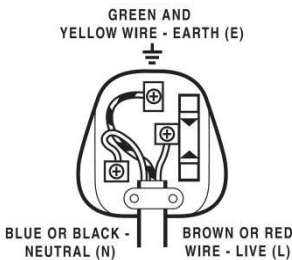

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connected to the terminal marked with the letter E or the earth symbol .

Produced in
China.

Argos Limited, 489-499 Avebury Boulevard,
Milton Keynes, MK9 2NW.

Argos (N.I.) Ltd, Forestside Shopping
Centre, Upper Galwally, Belfast, United
Kingdom, BT8 6FX.

Argos Distributors (Ireland) Limited, Unit 7,
Ashbourne Retail Park, Ballybin Road,
Ashbourne, County Meath, Ireland

www.argos.co.uk/cookworks

Tel: 0345 640 3030



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk

