

cookworks

Filter Coffee Maker

Model No. CM2058A



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for
future reference




ELECTRICAL SAFETY

- You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug when not in use and before cleaning the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep cable, plug and outside of coffee maker dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not pull on the cable to disconnect from mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.
- This appliance must be plugged in to an earthed socket outlet.

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Do not cover and allow to the coffee maker to cool fully before storing.
- The surfaces of the coffee maker will become hot during use. Do not touch and always carry the jug by the handle. Note the hotplate surface will retain residual heat after use.
- Do not use the coffee maker near or under surfaces that are heat sensitive or those that may be damaged by steam.
- Always close the lid before use and ideally, allow the coffee maker to complete the brewing process before removing the glass jug.
- Use only with the parts provided and to heat water. This appliance can cause personal injury if misused.
- This coffee maker is fitted with a safety device that automatically switches off the heater element if the appliance is inadvertently switched on when empty, or if it boils dry. In this case allow the coffee maker to cool completely (minimum 5 minutes) before refilling with cold water. The coffee maker will resume operation after refilling.
- This coffee maker is fitted with an anti-drip valve. This means that the glass jug maybe removed from the hotplate for a short while (e.g. to pour a cup of coffee) whilst the coffee maker is in operation. Always replace the jug on the hotplate immediately after pouring. Failure to replace the glass jug promptly may lead to hot water and coffee overflowing from the filter holder.

PARTS

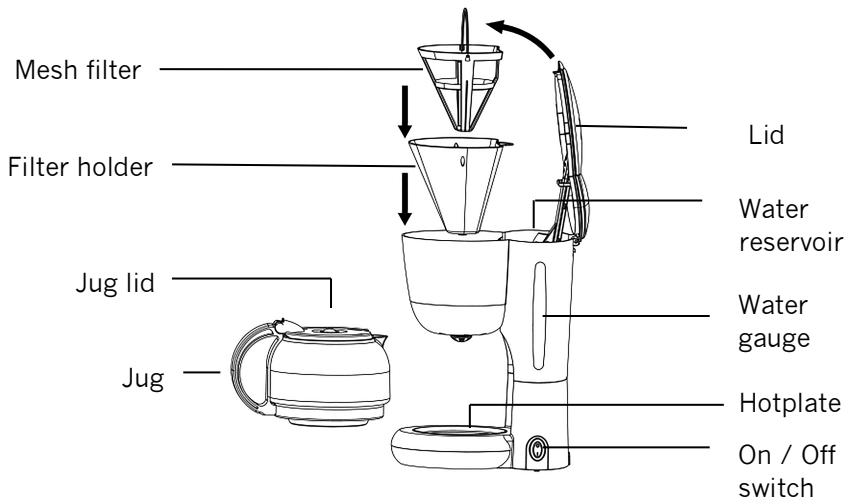

TO USE

1. Place the coffee maker on a stable, flat, heat resistant surface and away from surfaces that may be damaged by steam.
2. Fully unwind the cable and plug in. For safety do not allow the cable to dangle over the edge of units.
3. Lift the lid of the coffee maker and fit the filter holder as shown. Insert the mesh filter into the filter holder and add fresh ground coffee for the required number of cups into the mesh filter according to personal taste. Alternatively, a traditional paper filter (not included) can be used instead of the mesh filter.
4. Fill the water reservoir to the required level using the graduated markings on the clear panel as a guide. **Do not fill past the maximum** 10 cups (otherwise water will flow out of the back of the reservoir and onto the work surface) or fill below the minimum (2 cups) levels.
5. Close the lid and place the glass jug onto the hotplate.

TO USE (CONTINUED)

6. Press the On / Off switch to the on (I) position. The coffee maker will start to operate and the power indicator lamp in the switch will be illuminated.
7. The coffee maker element will switch off automatically when all the coffee has been brewed but the switch will remain lit for 35 minutes to indicate that the hotplate is still keeping the coffee warm.
8. Switch the coffee maker off after use and to avoid damaging the glass jug never replace the empty glass jug onto the warm hotplate.
9. To stop or interrupt the coffee making process, switch the appliance off using the On / Off switch or unplug from the mains.
10. After use, remove and empty the mesh filter (or remove paper filter, if used) and throw the waste grounds away.

Notes:

- Before using for the first time, fill the coffee maker to the maximum level with clean water, close the lid and allow the coffee maker to work. Discard the hot water after it is finished. Wash the loose parts (mesh filter, filter holder, glass jug and jug lid) in hot water with a little washing up liquid. Rinse and dry thoroughly. Not suitable for the dishwasher.
- For best results always use fresh cold water in the coffee maker and freshly ground beans. Serve coffee immediately after brewing.
- After 35 minutes the coffee maker will automatically enter standby (power saving) mode and the coffee will no longer be kept warm.

CLEANING

To maximize the efficiency of the coffee maker, clean and descale regularly

1. Switch off and unplug the coffee maker and allow the coffee maker to cool completely.
2. Lift the lid, remove and empty the mesh filter and place the glass jug onto the hotplate.
3. Descal with a proprietary descaler suitable for plastic coffee makers and use in accordance with the instructions on the pack. Alternatively half fill the coffee maker with water and add the juice of one lemon. Close the lid, switch on and allow the coffee maker to transfer some of the descaling solution before turning the coffee maker off and allowing it to stand for 15 minutes. Repeat this last step a further two times before discarding the solution.
4. After descaling, fill the coffee maker to the maximum level with clean water, close the reservoir lid and allow the coffee maker to work. Discard the hot water after it is finished. Repeat this step a second time.
5. Wash loose parts (mesh filter, filter holder, glass jug and jug lid) in hot water with a little washing up liquid. Rinse and dry thoroughly. Not suitable for the dishwasher.
6. Wipe external surfaces with a soft damp cloth and dry surfaces with a soft dry cloth. Do not use detergent or abrasives as these may scratch the surface. Never immerse in water.

TECHNICAL SPECIFICATION

Cookworks 2 Filter Coffee Maker	
Model	CM2058A
Rated Voltage & Frequency	220 – 240V AC 50/60Hz
Rated Power Input	730 – 870W
Capacity	10 cups / 1.25 litre
Class rating	1 (earthed)
Filter paper	Size 4
BS 1362 fuse	5A
Product dimensions (external)	255 x 174 x 300mm
Product weight (net)	1.5kg approx.



RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



PLUG / WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:

BLUE = NEUTRAL

BROWN = LIVE


GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.


Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

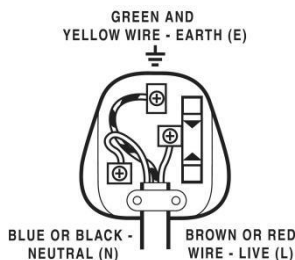

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol .

Produced in China.

Argos Limited, 489-499 Avebury Boulevard,
Milton Keynes, MK9 2NW.

Argos (N.I.) Ltd, Forestside Shopping Centre,
Upper Galwally, Belfast, United Kingdom, BT8
6FX.

Argos Distributors (Ireland) Limited, Unit 7,
Ashbourne Retail Park, Ballybin Road,
Ashbourne, County Meath, Ireland

www.argos.co.uk/cookworks

Tel: 0345 640 3030



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk

