



USER MANUAL

IMPORTANT SAFETY REMINDERS

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Hoover service engineer must replace the power cord.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only attachments, consumables or spares recommended or supplied by Hoover.

When using cleaning tools ensure that the appliance is kept in the upright (parked) position. This will avoid possible damage to the carpet or floor covering. When cleaning stairs, do not position the appliance above you.

Static electricity: some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors or on any wet surface or for wet pick up.

Do not pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.

Do not spray with or pick up flammable liquids, cleaning fluids,

aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

Hoover service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.

Do not use the appliance to clean animals or people.

When using the cleaning tools, ensure to always steady the appliance with your other hand. This will ensure that the appliance does not fall while in use.

This product contains magnetic material. Please contact your doctor if you have any questions on whether this might affect your implanted medical device.



WARNING: A thermal cut out switches off the appliance to prevent overheating if it is used when full or there is a blockage or dirty filters. If this should happen then switch off, unplug and correct the fault. It will take approximately 45 minutes for the cut out to automatically reset.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.




CE This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via Privata Eden Fumagalli, 20861 Brugherio (MB) Italy

GETTING TO KNOW YOUR CLEANER


Effortless
cleaning
with your
new Hoover

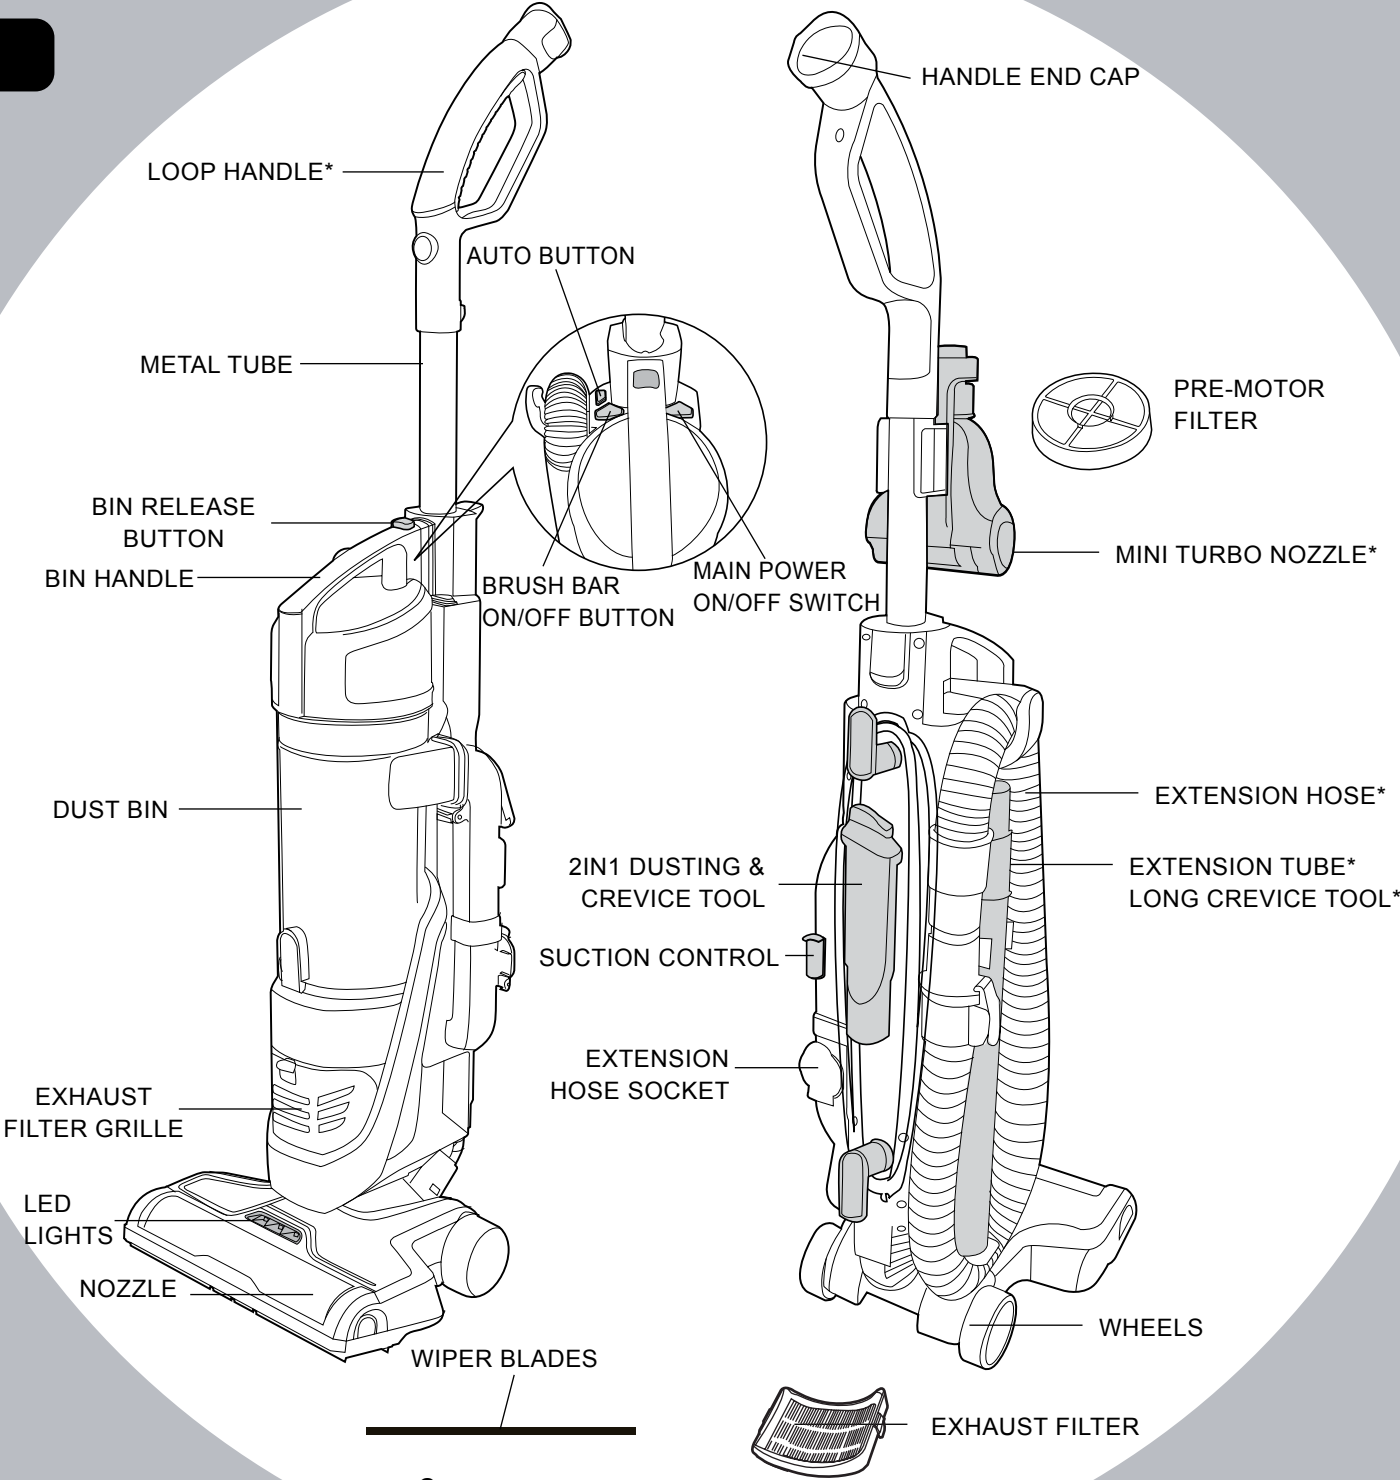

* Certain models only


PREPARING YOUR CLEANER

Insert the main handle in the cleaner body and then adjust handle up/down to the desired height.

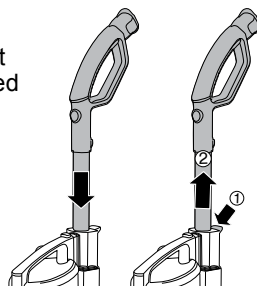


SUPPLY CORD

 Do not run over the supply cord. Clip the supply cord in the cord clip at the back of the handle to avoid accidentally running the cleaner over the cord and causing any damage.



MINI TURBO BRUSH ASSEMBLY*


Assemble the mini turbo brush holder to the handle tube of the cleaner, then put the mini turbo nozzle to the holder.

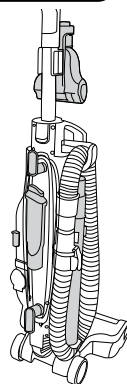

Put 2-in-1 tool and crevice tool on board storage area.

SWITCH AND OPERATION

1. Main power on/off button
Press the Main power ON/OFF button to operate the cleaner. If the cleaner is ON, the nozzle LED will always be ON.

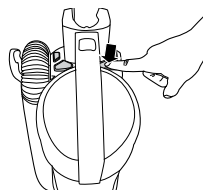


2. AUTO button

Press the Auto button to turn ON or OFF the FLOOR SENSOR function.

3. Brush bar on/off button

You can press the brush bar ON/OFF button at the top of the unit only when the FLOOR SENSOR function is OFF. It is advised to turn the brush bar OFF if you have to clean deep pile area rugs.

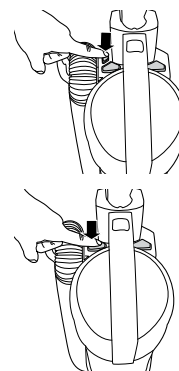


FLOOR SENSOR TECHNOLOGY

1. The FLOOR SENSOR function is ON by default when you switch the product ON. When the cleaner is reclined and unlocked, in few seconds the FLOOR SENSOR function automatically detects the type of floor and adjusts the suction power and agitator rotating speed.

2. The FLOOR SENSOR function has 3 different power modes for different floors:

- On hard floor: maximum suction power and lower agitator rotating speed, which are better suited to clean hard floor while protecting it.
- On short pile carpet: maximum suction power and maximum agitator rotating speed, for an intensive cleaning.
- On medium/long pile carpet: lower suction power, maximum agitator rotating speed. The brush bar helps to drive forward, reducing the push force.

3. When the FLOOR SENSOR function is OFF, suction power and agitator speed are both maximum. You can adjust the suction control to reduce the operating push force if required.

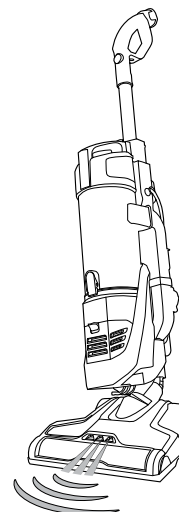


INTELLICARE TECHNOLOGY

This vacuum cleaner features Intellicare technology which helps to protect your carpet from unnecessary wear. When you stop moving the cleaner, the nozzle power will be automatically cut off. You can still use on hose mode with accessories. When the cleaner is moved, the power nozzle automatically starts to work.


MANOEUVRABILITY

Twist the handle to manoeuvre under or around the furniture.

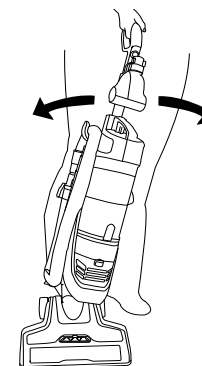


SUCTION CONTROL

Your product is fitted with suction control which allows you to select the desired suction level by sliding the regulator up or down. It can also be used to reduce the operating push force if required.

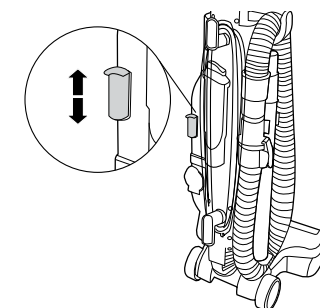

LED LIGHTS

This vacuum cleaner has nozzle LED lights. They are perfect to light up dark areas to leave nothing behind and to have an excellent cleaning experience.

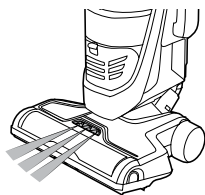


WIPER BLADE ASSEMBLY

1 The front wiper blade supplied in the instruction manual package is not necessary for normal cleaning. Fitting the wiper blade will improve the energy efficiency of the product, but this can also make the product more difficult to push and manoeuvre.

2 If you decide to fit wiper blade, then grip the side of the wiper blade and slide along the slot until the wiper blade is fully located. To disassemble, lift the end of the wiper blade and pull it out.

IMPORTANT: Switch the cleaner off and remove the plug from the electricity supply before attempting any maintenance.

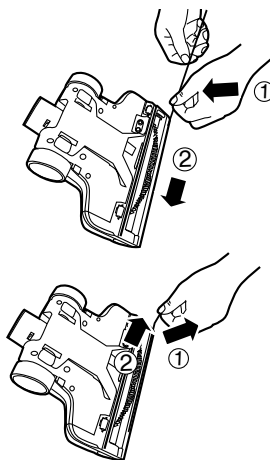

CLEANING TOOLS



All accessories can be fitted directly onto the hose, handle and handle tube. Combine accessories depending on use.

Mini Turbo Nozzle*: Ideal for removing pet hairs. DO NOT touch the rotating brush.


Parquet Nozzle*: Ideal for cleaning delicate surfaces.

Connect Accessory to Hose


- 1 Take off the upper hose end pulling it upwards.
- 2 Detach the lower hose end pushing the lever and pull it downwards.

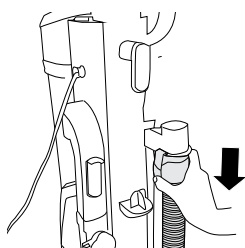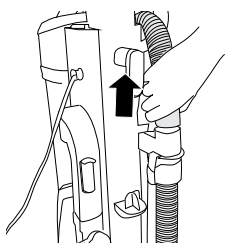

- 3 Plug the lower hose end in the hose socket.

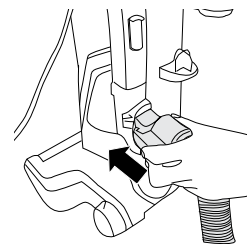


- 4 Choose your accessory and connect it to the hose.

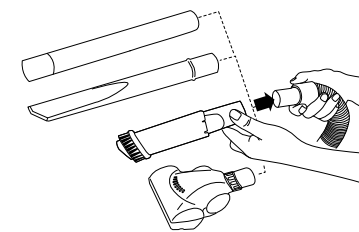


Connect Accessory to Handle Tube

- 4 Repeat the above action 1,2,3, then remove handle tube and open the handle end cap.

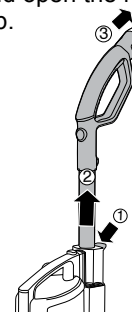

- 5 Connect the hose to the handle tube. Connect the accessory to the handle tube.

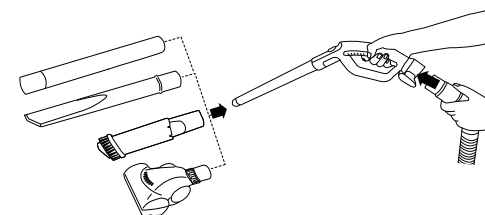


IMPORTANT! When using cleaning tools, the cleaner must be kept in the upright position, particularly when cleaning stairs. Hold unit while using hose or handle tube.

CLEANING THE STAIRS


It is dangerous to place the cleaner above you when cleaning stairs.

Ensure it is always operated in an upright position.

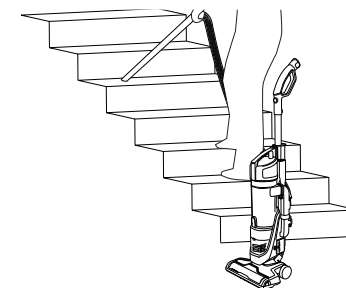


STORING THE CLEANER

Turn the cleaner off and remove the plug from the socket. Wind the power cord around the cord storage hooks.

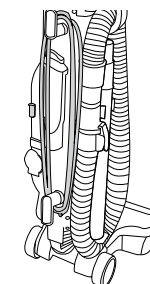

EMPTYING THE BIN

! IMPORTANT: Before emptying the bin, make sure vacuum cleaner has been switched off.

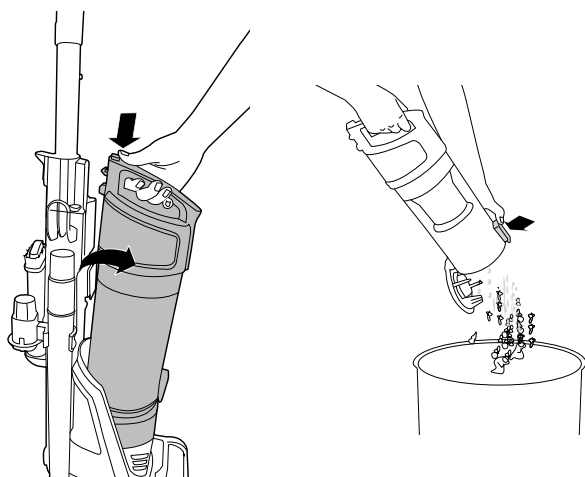

- 1 To remove the bin from the cleaner press the bin release button.

- 2 Hold the container over the bin and press the easy open button.


The container release flap will open and you can empty the debris into the waste bin with no dust contact.

- 3 Once emptied, gently tap or shake the container to release any excess dust.


Do not overfill the bin above the max level line.

CLEANING THE PRE MOTOR FILTERS


- 1 Rotate the upper part of the dust bin to open.

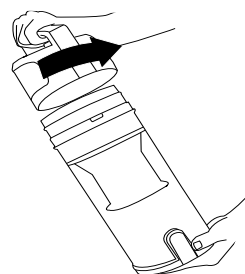


- 3 Gently tap both filters to release any excess dust.

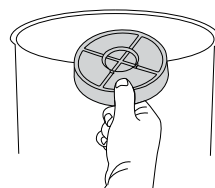

- 2 Take out the pre motor filter and the separation unit from the dust bin. Clean excess debris from the separation unit and refit.

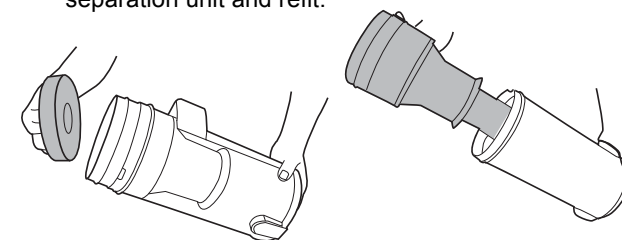


- 4 Wash both filter and sponge under warm water until the water runs clean. Remove excess water by shaking and leave to dry for 24 hours. Reassemble and refit filters to cleaner, only when they are completely dry.

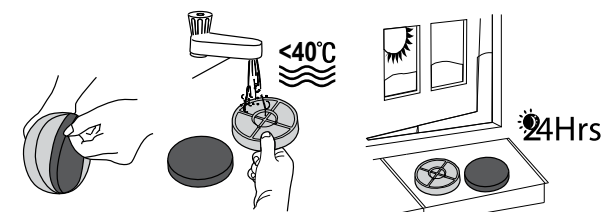

CLEANING THE EXHAUST FILTER


- 1 Remove the exhaust grille by pressing the button.

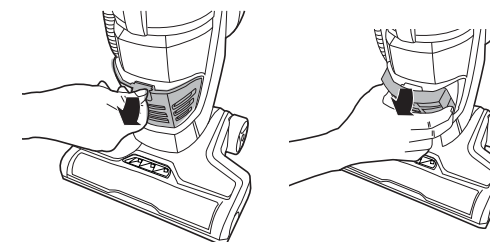

- 2 Remove the exhaust filter by pressing the latch on both sides.

- 3 The exhaust filter should be washed every month. Remove the exhaust filter from your cleaner and wash with lukewarm water.

- 4 Remove excess water by shaking and leave to dry for 24 hours. Refit filters only when completely dry.

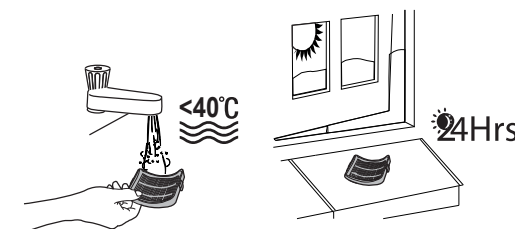

CHANGING THE BELT OR BRUSHES


If your cleaner is not picking up efficiently, the belt or brushes (or both) may need replacing, but first please make sure you have:

- Emptied the bin
- Cleaned the filters
- Checked for blockages




IMPORTANT: Switch the cleaner off and remove the plug from the electricity supply before attempting any maintenance.


- 1** Turn the cleaner over and remove 2 rear rollers and 2 retaining screws.

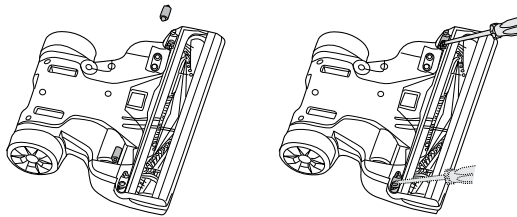

- 2** Remove the brush guard.

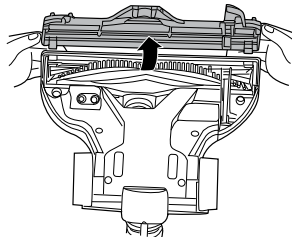


- 3** Remove brush assembly and check for wear on the belt. Loop the new belt around the motor and brush channel.

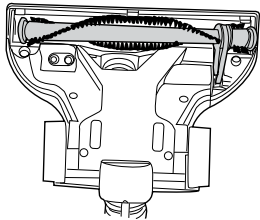


NOTE: When the brush bar is blocked, the nozzle will stop rotating and nozzle LED will be flashing. Switch off and remove the plug from the electricity supply, then use a pair of scissors to cut through any threads or hairs embedded around the brush bar. Reassemble the brush bar and the brush guard.


- 4** Hold the brush assembly and stretch the belt until the brush can be slotted back into the cleaner housing.

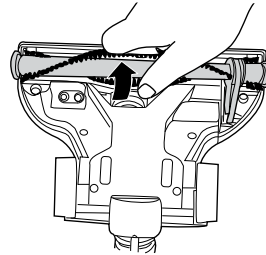

- 5** Rotate the brush to ensure free movement of the belt.

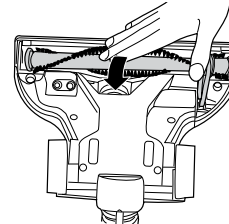


- 6** Refit the brush guard with 2 retaining screws and 2 rear rollers..

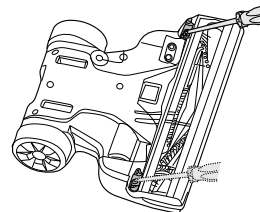


CLEARING A BLOCKAGE


Check the cleaning tools and hose for blockages.

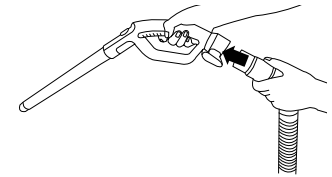


The hose can be removed at both ends.

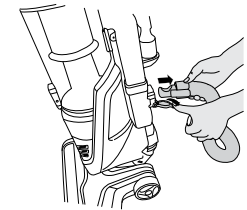


Turn the cleaner over and rotate the brushes to identify any obstructions including hair.

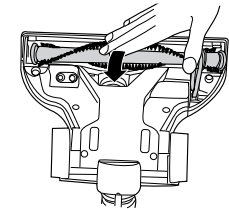

Check for a blockage in the hose socket. Use a flexible rod to remove any obstruction.

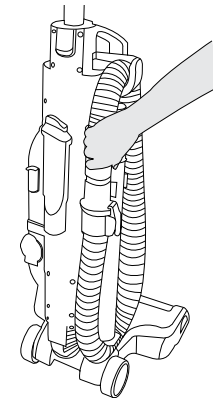

Removing a blockage from the mini turbo nozzle. Open the nozzle at each side, lift cover and remove the blockage.

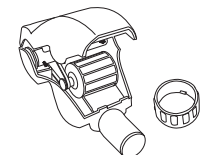

User checklist

If your cleaner is not working properly run through the following checklist.

1. Is there a working electricity supply to the cleaner?
Check with another electrical product.
2. Is the bin full or choked with fine dust?
To empty the bin, see the User Manual on P5.
3. Is the hose blocked?
To clear a blockage, see the User Manual on P6.
4. Is there a blockage in the cleaner base?
To clear a blockage, see the User Manual on P6.
5. Are the filters blocked?
To clean filters, see the the Manual on P5.
6. Are the brushes rotating correctly?
To check the brushes, see the User Manual on p6.
7. Has the cleaner overheated?
If so, it will take about 45 minutes to reset.

If there is any doubt call the Hoover Service Office for advice. They may be able to assist you over the telephone. A service charge will be made if the cleaner is examined and found to be in working order, has not been assembled in accordance with these instructions or has been used incorrectly.

WARNING! A thermal cut out switches off the cleaner to prevent overheating if it is used when full or there is a blockage or dirty filters. If this should happen switch off, unplug and correct the fault.
It will take about 45 minutes for the cut out to automatically reset.

IMPORTANT: Do not run cleaner over the power cord as this could damage the power cord insulation.

IMPORTANT INFORMATION

Hoover Service

Should you require service at any time, please contact your local Hoover Service Office.

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Quality

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

GUARANTEE STATEMENT

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.

