



Please find enclosed a spare catch for your touch top bin.

Consumer Installation Guide

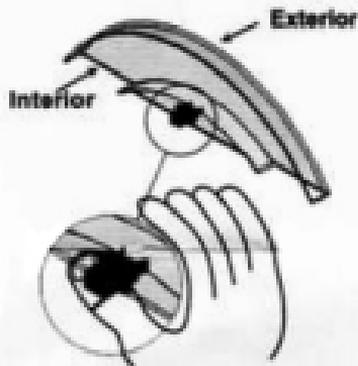

Step 1:

To remove the broken catch, push it from underneath until it pops out of the bin lid.

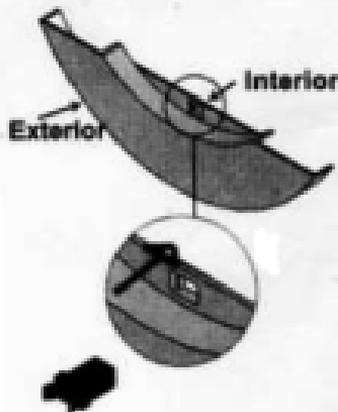

Step 2:

Put the new catch into the bin lid from the top and click into place.