



**Step 1:** Hold the opening of the garbage bag through the bag clip feature.

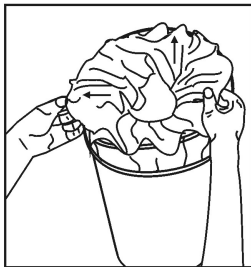

**Step 2:** Open the plastic mid-frame and fold the opening of the garbage bag around the plastic mid-frame.

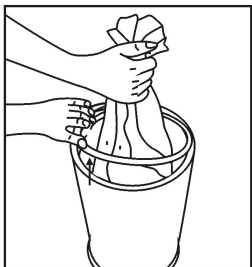

**Step 3:** Replace the garbage bag by lifting up the bag clip feature.



**Step 4:** Remove the bag clip feature to pull out the garbage bag.



## Product Guarantee

This product is guaranteed against manufacturing defects for a period of

**5 Years**

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd  
489-499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW

To Inspector:

Try to replace the spare latch.

