


User Guide

Adjusting Date & Time:

1. Press button "A" once, Month & Day will be shown. Press button "A" twice to adjust the Month; press button "B" to set.
2. Press button "A" three times, Day will be shown. To adjust the Day ; press button "B" to set.
3. Press button "A" four times, Hour will be shown. To adjust the Hour; press button "B" to set.
4. Press button "A" a fifth time. Minutes will be shown. To adjust the Minutes ; press button "B" to set.
5. Press button "A" again, to finalize adjustments; confirm adjustments by pressing button "B" to cycle through Time, Date & Seconds.

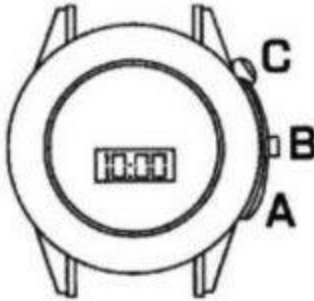

Displaying Date & Time:

1. Press button "B" once, Month & Day will be shown; the proper Month & Day can be adjusted by pressing button "A".
2. Press button "B" twice, Seconds will be shown. Reset Seconds to "00" by pressing button "A".
3. Press button "B" once more to return to normal time display.

How to Light Up :

1. Press button "C" once, Flashing lights will be shown.

**DO NOT IMMERSE IN WATER.
DO NOT WEAR IF CASEBACK IS MISSING OR DISASSEMBLED.
DO NOT MIX NEW AND OLD BATTERIES.
MADE IN CHINA.**

85*95MM