 


BUSH

Instruction manual

Tower Speaker HT-701

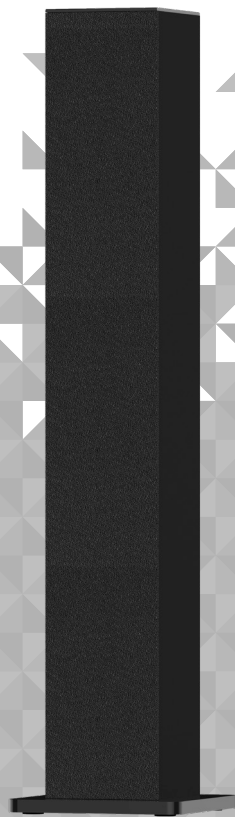

You'll soon be enjoying your new Tower Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Tower Speaker. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021**.

Contents

1 Safety information

Power source	6
Positioning the Tower Speaker	7
General safety information	7

2 Getting to know your Tower Speaker

Your Tower Speaker	12
Power connection	14
Remote control	14
Initial set-up	14
Connect to a Bluetooth device	14
Change the mode	15
Adjusting the volume	16
Change the EQ setting	16

3 Using your Tower Speaker

Bluetooth mode	20
Aux-in mode	21

4 Other information

Technical specification	24
-------------------------	----


5 Product support

Troubleshooting	28
Your Bush Guarantee	31

Safety information

1

 This page is left intentionally blank

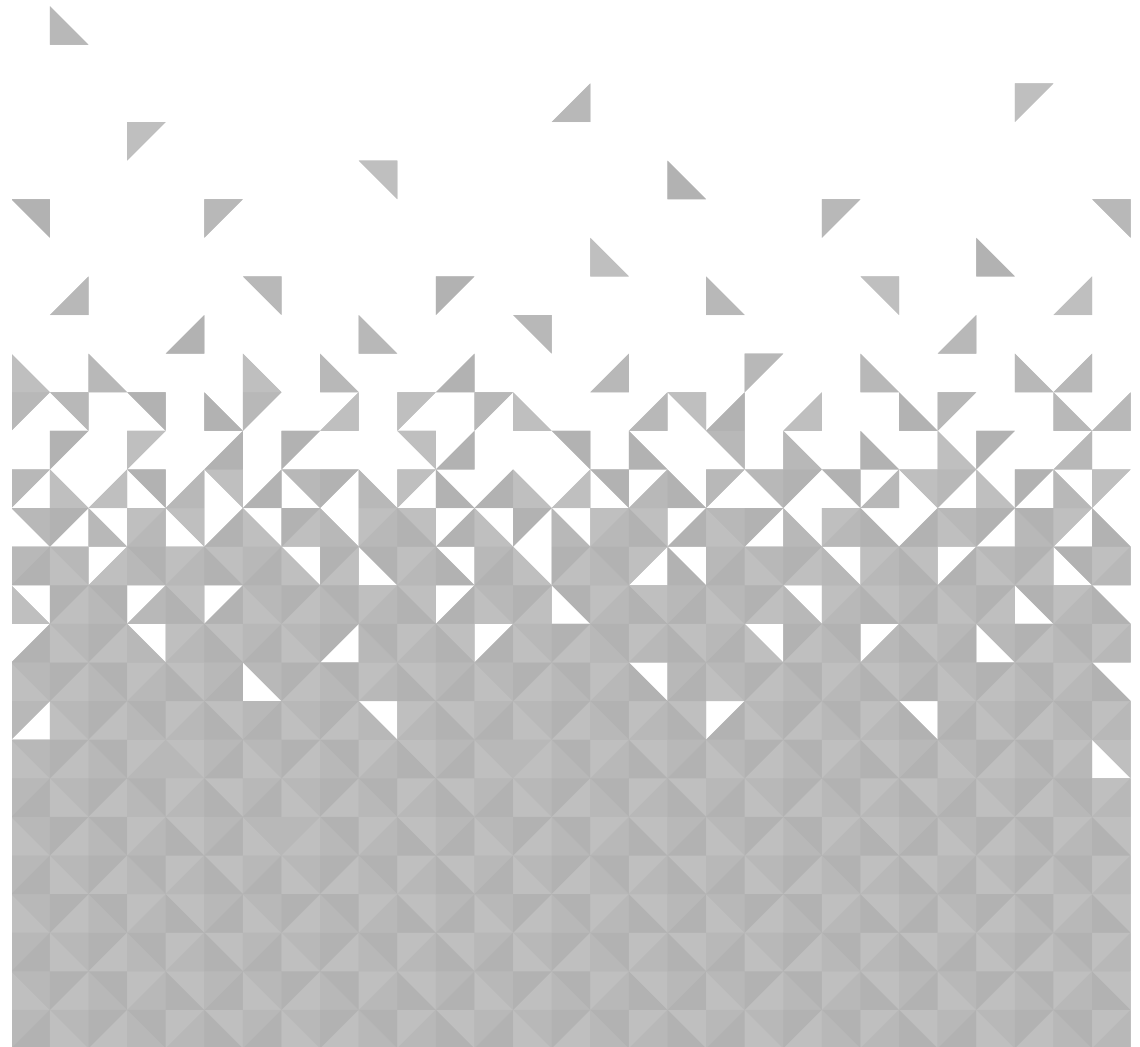

Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Tower Speaker from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Tower Speaker, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the Tower Speaker will not be used for a long period of time, make sure that the mains power is unplugged and battery is removed from the remote control battery compartment.
- Only use recommended batteries or those of the same or equivalent type.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

Heat sources and flames

Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.

Keep it away from bright sunlight or heat sources, such as a radiator.

No naked flame sources, such as lighted candles, should be placed on the product.

Safety information

Important - Please read these instructions fully before installing or operating

Ventilation

Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

Positioning the Tower Speaker

It is important that you consider carefully in advance where your Tower Speaker will be situated and make sure that it is:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead is not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/ iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- Never place your Tower Speaker directly onto antique or polished surfaces.

Caution

To avoid possible hearing damage, do not listen to this Tower Speaker at high volume levels for long periods of time. Always keep the volume within reasonable limits.

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.



Safety information

Important - Please read these instructions fully before installing or operating

 
- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Tower Speaker near emergency/intensive care medical equipment or during an electrical storm.

This page is left intentionally blank

Getting to know your Tower Speaker

2

This page is left intentionally blank

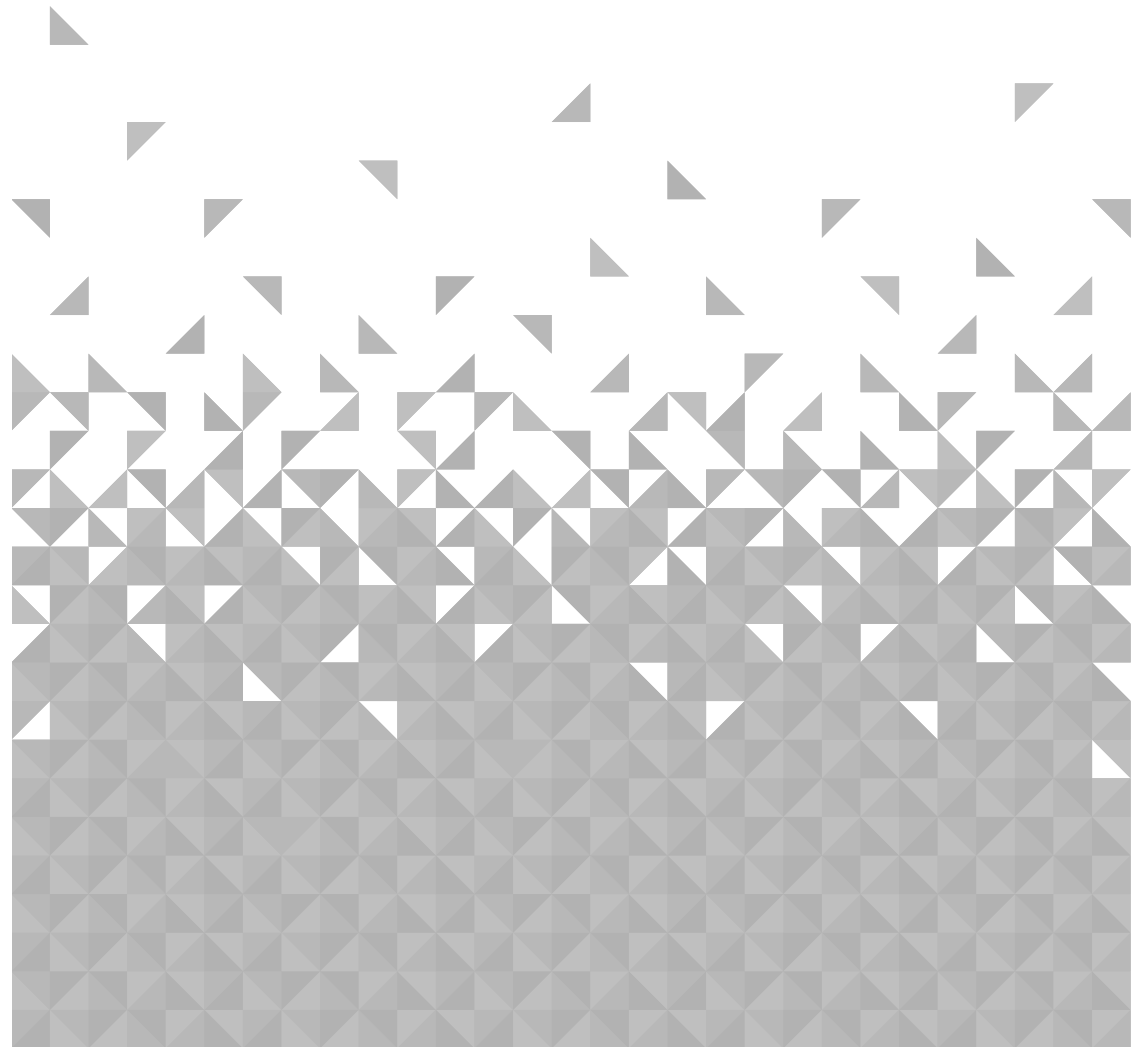

Getting to know your Tower Speaker

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

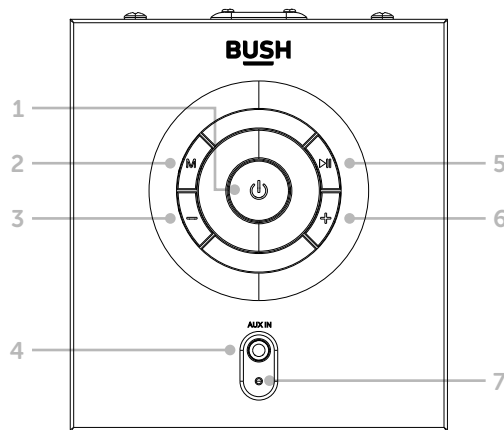 


Fig 1.

Tower Speaker

- | | |
|---|--|
| 1. Press and hold: Power on/Standby | 5. Press and release: Play/Pause |
| 2. Change the mode (Bluetooth/Aux-in) | Press and hold: Unpair a BT device |
| 3. Press and release: Volume down/
Press and hold: Skip back | 6. Press and release: Volume up/
Press and hold: Skip forward |
| 4. Aux-in socket | 7. Mode LED |

Getting to know your Tower Speaker

You'll be up and running in no time

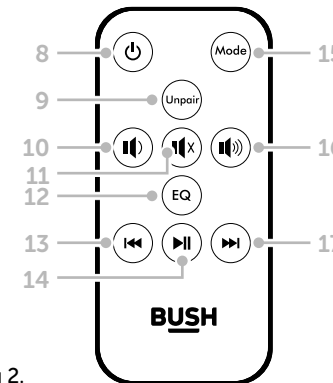 


Fig 2.

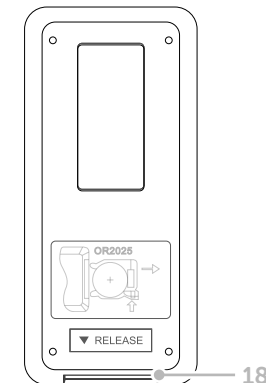 


Fig 3.

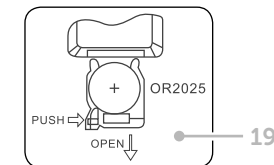 


Fig 4.

Remote Control

- | | |
|------------------------------|--|
| 8. Power on/Standby | 14. Play/Pause |
| 9. Unpair a bluetooth device | 15. Change the mode (Bluetooth/Aux-in) |
| 10. Volume down | 16. Volume up |
| 11. Mute/Unmute the sound | 17. Skip forward |
| 12. Change the EQ setting | 18. Battery compartment |
| 13. Skip back | 19. Battery replacement detail |

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Tower Speaker

You'll be up and running in no time

Power connection

Note: Before you connect the power, you must first attach the Tower speaker to the separate base using the screws supplied.

 

1. Connect the mains power lead into the socket on the back of the Tower Speaker.
2. Plug the power adaptor into the mains power wall socket and switch on.
3. The blue LED on the top panel, in front of the AUX socket will begin to flash whilst your Tower Speaker begins to search for Bluetooth devices.

Remote control

1. Pull out the safety strip on the remote control to activate the battery.

Initial set-up

In Standby mode:

1. If your product is in Standby mode (Red LED), press and hold the  button on the top of the Tower Speaker or press and release the  on the Remote control. The first time you switch on your product, it will power up in Bluetooth mode. The blue LED on the top panel, in front of the AUX socket will begin to flash whilst your Tower Speaker begins to search for Bluetooth devices.

Connect to a Bluetooth device

In Bluetooth (BT) Mode:

1. When the blue LED on the top of the Tower Speaker is flashing,
2. On the device that you would like to connect to your Tower Speaker via Bluetooth (e.g. iPhone/ iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Getting to know your Tower Speaker

You'll be up and running in no time

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Tower Speaker will be displayed as 'BUSH HT-701'. Select the device name to begin pairing.

Note: If your device requests a password, please enter '0000' to complete the device pairing.

5. When pairing is complete you will hear an audible alert, the blue LED will stop flashing and will remain constantly on.
6. Now that you have paired your device with the Tower Speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Tower Speaker unless you decide to disconnect or 'unpair' it.

Note: If your Tower Speaker becomes disconnected from the other Bluetooth device at any time, the blue LED will begin to flash as it searches for a Bluetooth connection, select 'BUSH HT-701' on the device you wish to connect to reconnect.

Note: You can press and hold the  button for 3 seconds to unpair your current device and search for new devices.

Change the mode

On the Tower Speaker or on the Remote control:

- Press and release the M button on the Tower Speaker or the Mode button on the remote control to change between Bluetooth and Aux-in modes.

Blue LED: Bluetooth mode

Blue/Red LED: Aux-in

Red LED: Standby mode

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 600 3021.





Getting to know your Tower Speaker

You'll be up and running in no time

Note: You must connect an Aux-in cable (not supplied) to the Aux-in socket on the top of the product, to use Aux-in mode.



Adjusting the volume

On the Tower Speaker or on the Remote control:

- Press and release the + button on the Tower Speaker or the  button on the remote control to increase the volume in steps.
- Press and hold the  button on the remote control to progressively increase the volume.
- Press and release the - button on the Tower Speaker or the  button on the remote control to decrease the volume in steps.
- Press and hold the  button on the remote control to progressively decrease the volume.

Mute

On the Remote control:

- Press and release the  button to mute the volume.
- Press and release the  button to turn the sound on again

Change the EQ setting

On the Remote control (Bluetooth mode only).

 
- Press and release the EQ button to change the EQ setting. There are 6 options available: Movie, Rock, Jazz, Classical, Country and Flat.

This page is left intentionally blank

Using your Tower Speaker

3

This page is left intentionally blank

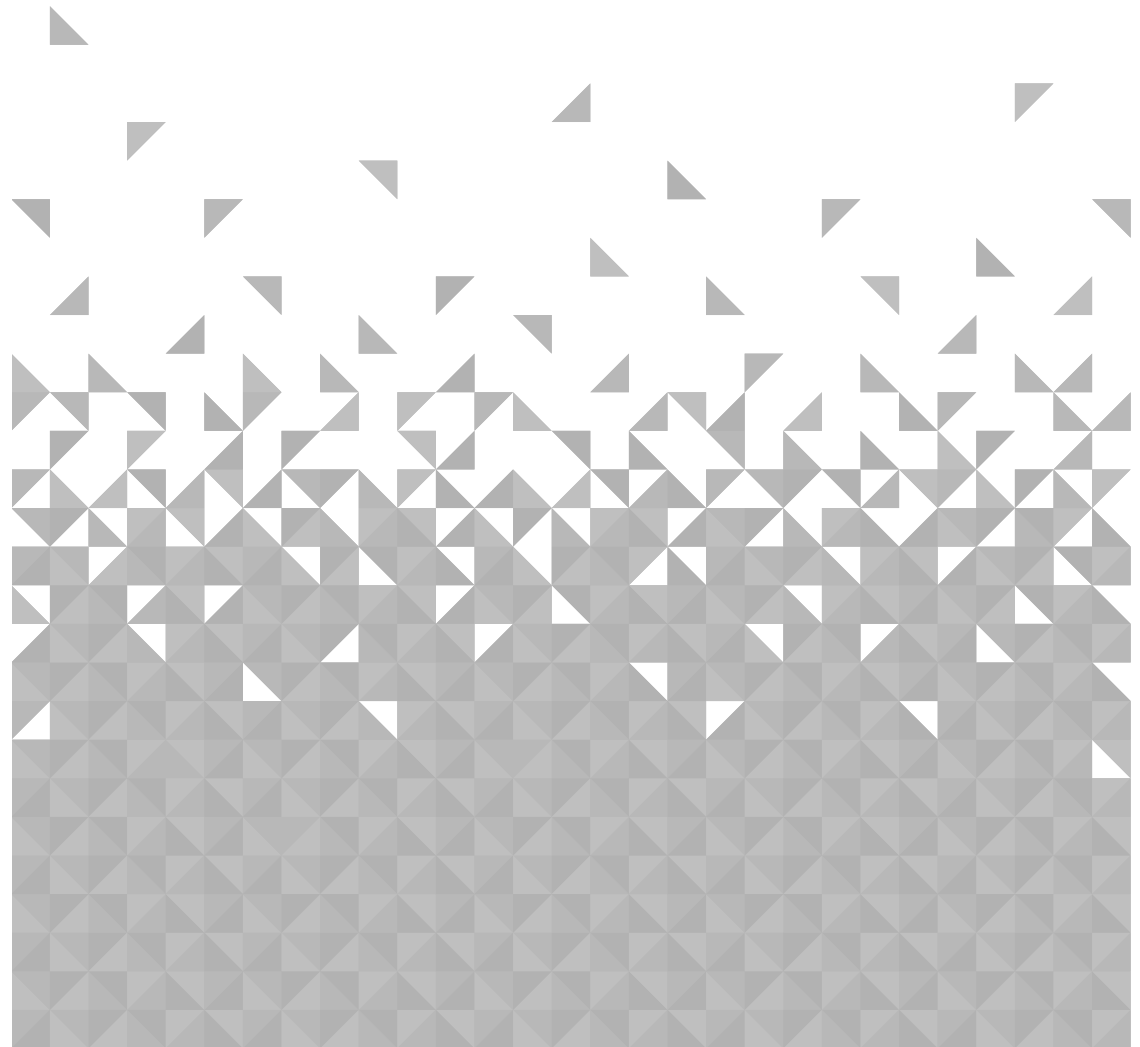

Using your Tower Speaker

Let's get started

Bluetooth mode

Check that your Tower Speaker is in Bluetooth mode. If you are not already in Bluetooth mode, press and release the M button on the Tower Speaker or the Mode button on the Remote control to switch to Bluetooth mode (Blue LED).

Listening to Music/Audio using Bluetooth




In Bluetooth (BT) Mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Tower Speaker. Adjust the volume on the connected device and/or your Tower Speaker.

Note: If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select BUSH HT-701 to reconnect.



2. You can use the controls on your paired Bluetooth device as well as those on your Tower Speaker and Remote control.

Controls available on your Tower Speaker and Remote control.

- Play/Pause:
 - Press and release the  button to play/pause.
- Skip back (Tower speaker) :
 - Press and hold the - button to skip back to the previous track.
- Skip back (Remote control) :
 - Press and release the  button to skip back to the previous track.
- Skip forward (Tower speaker):
 - Press and hold the + to skip forward to the next track.
- Skip forward (Remote control)
 - Press and release the  button to skip forward to the next track.

Using your Tower Speaker

Let's get started

Note: If you do not use your Tower Speaker for approximately 20 minutes and no audio signal is received, it will automatically go to Standby mode. Press and hold the  button on the Tower Speaker or press and release the  button on the Remote control to switch the Tower Speaker back on.

Aux-in mode

Check that your Tower Speaker is in Aux-in mode. If you are not already in Aux-in mode, press and release the M button on the Tower speaker or the Mode button on the Remote control until you are in Aux-in mode (Blue/Red LED).

1. Connect one end of a 3.5mm audio cable (not supplied) to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux-in socket on the top of your Tower Speaker.
2. Press the play button on your external device to start playback through the Tower Speaker.
3. To gain optimal volume levels, adjust the volume level on both the secondary device and on the Tower Speaker.

Note: It is recommended that you unplug the audio cable from the Aux-in socket on the top of the Tower Speaker, after you have finished listening to your external secondary device.

 
If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Other information

4

This page is left intentionally blank

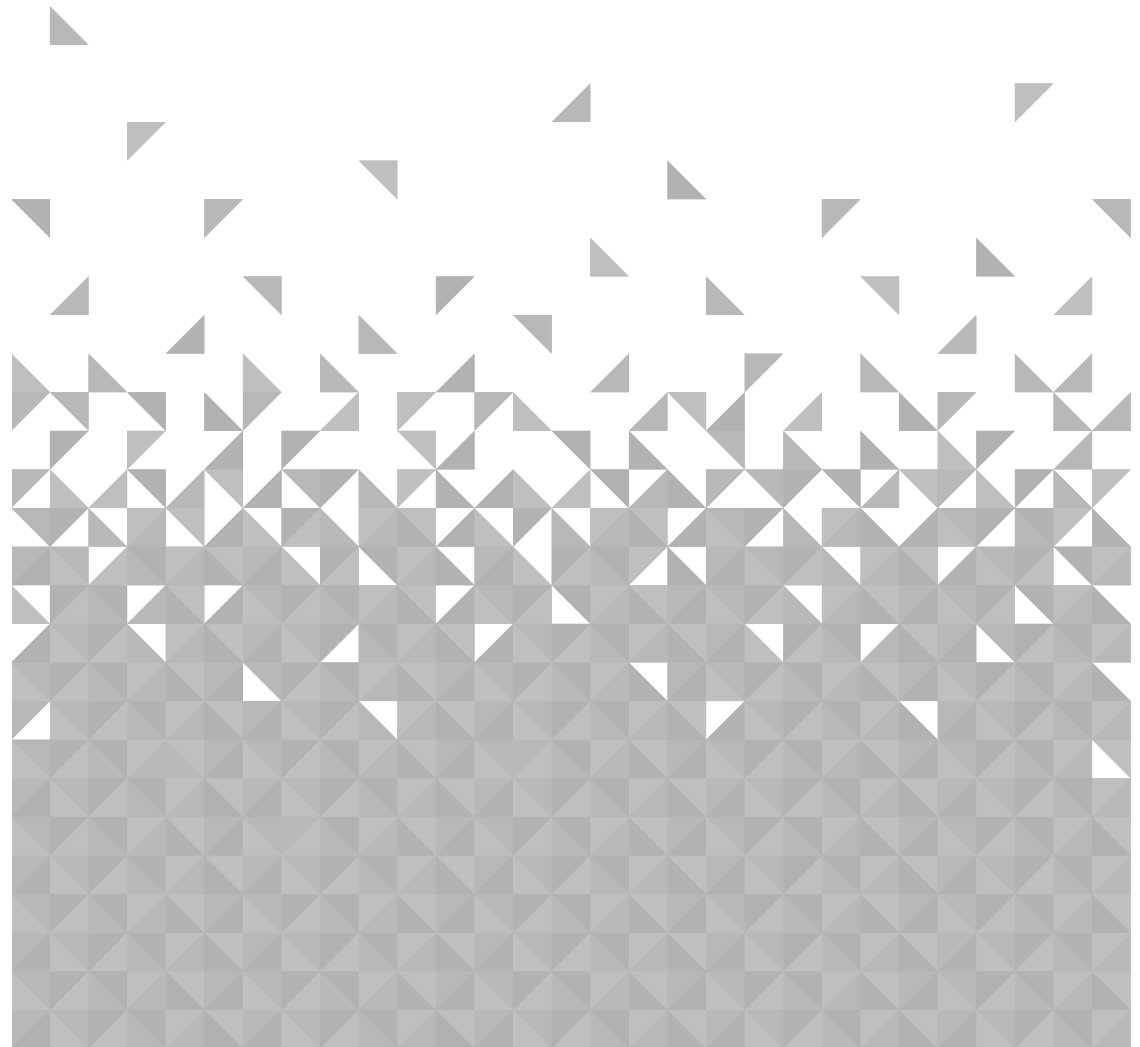

Other information

Helpful technical information


Technical specification

Power supply:	Input: 220-240V~, AC 50-60Hz
Battery (Remote)	1 x CR2025 3V
Audio output:	2 x 15W RMS
Aux-in:	3.5mm socket
Bluetooth:	2.402GHz-2.480GHz
Bluetooth version:	4.2 + EDR
Pairing name:	BUSH HT-701
Profiles	HFPV1.5, A2DPV1.2, AVRCPV1.4, HSP1.2

This page is left intentionally blank

Product support 5

 This page is left intentionally blank

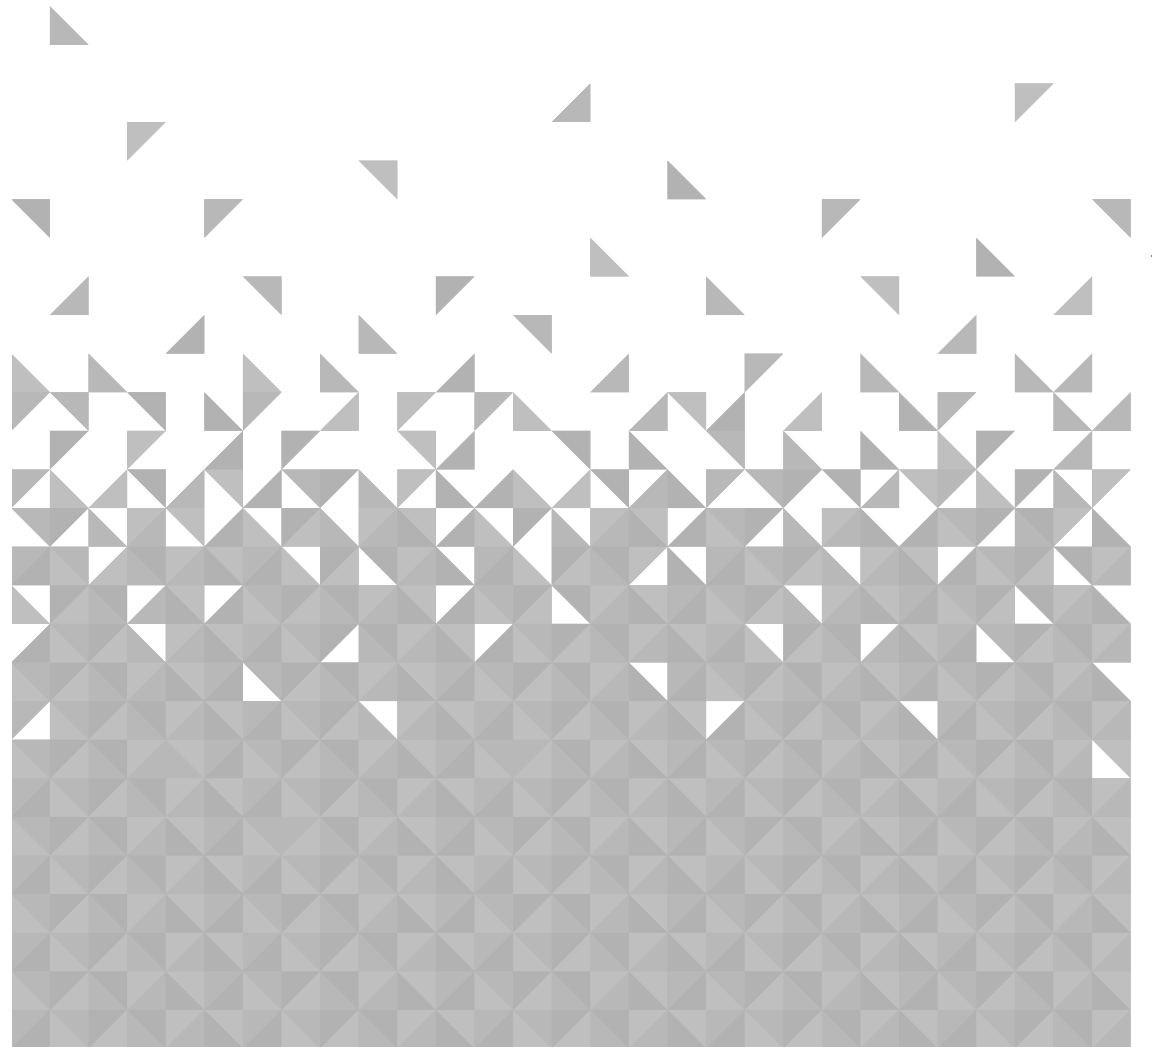

Product support

Help is always at hand

Troubleshooting



No sound / power:

- Adjust the volume.
- Check that the mains power wall socket is switched on and that your Tower Speaker is not in Standby mode.
- If you are using a Bluetooth connected device, increase the volume on the secondary device and on your Tower Speaker.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Tower Speaker for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Tower Speaker and Bluetooth device away from other Bluetooth devices/ electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

The function buttons do not respond:

- Check that the mains power lead is connected at the back of your Tower Speaker and the mains power wall socket is switched on. Press and hold the  button on the Tower Speaker or press and release the  button on the Remote control.
- If you are trying to use the Remote control, the battery may be exhausted and need to be replaced. Please use a new, good quality CR2025 3V battery.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Tower Speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Product support

Help is always at hand

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Tower Speaker HT-701 is in compliance with the essential requirements and other relevant provisions of of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

Product support

Help is always at hand

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 600 3021.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH



Contact:

www.bush-support.com

Helpline: 0345 600 3021