 


DIGITAL LCD ALARM CLOCK

Installation & User Instructions – Please keep for future reference

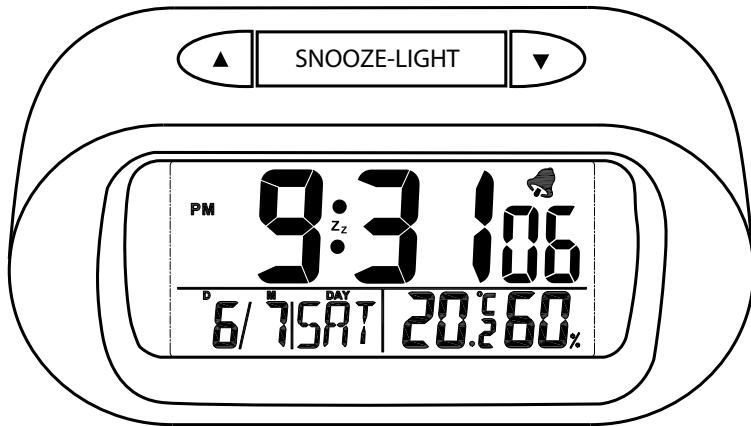

Important – Please read these instructions fully before installing or using

These instructions contain important information which will help you get the best from your appliance and ensure safe and correct installation, use and maintenance.
A replacement copy of this Instruction Manual can be obtained from <http://www.argos-support.co.uk>

Table of Contents

- Button locations4
- Battery installation.....4
- Time and Date Setting.....5
- Setting the Alarms5
- Turning On Alarms.....5
- Turning off Alarms5
- Backlight and Snooze Setting.....5
- Temperature Display6
- Caution.....6
- Trouble Shooting.....7
- Disposal information.....7

Safety Information

Important – Please read these instructions fully before using

CAUTION: DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.

 
- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features.
- Please save this owner's guide for future reference.
- The product label is located on the back of the product.
- Heed all warnings - on the product and in the owner's guide.
- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped -
- Do not attempt to service this product yourself.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Any electrical work that is required to install this appliance MUST be carried out by a qualified electrician.

This product complies European (2014/30/EU) electromagnetic compatibility directives.

Functions & controls


Please familiarize yourself with the parts and accessories listed below

Button locations

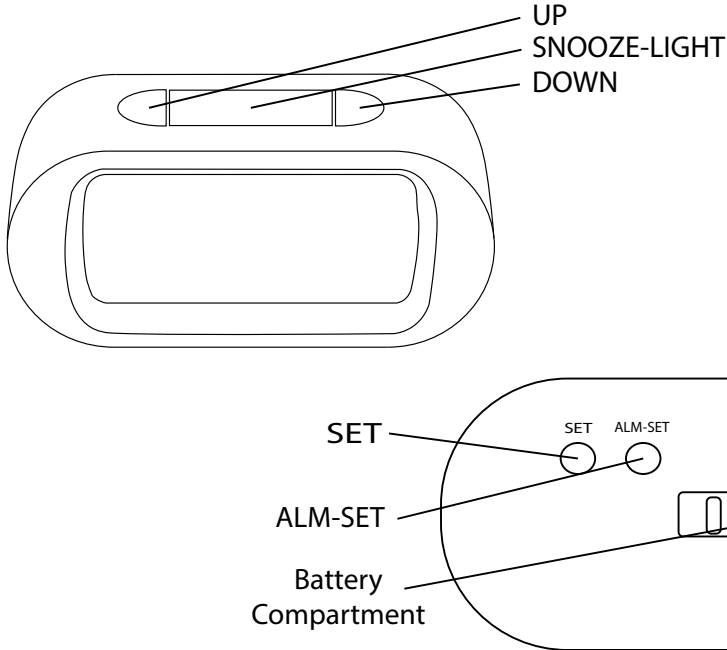

Battery installation

 1. The battery compartment is located on the back of the clock. Unlock the battery compartment and take cover off.
2. Insert three "AAA" size batteries (not included), and aligning the polarity indications (+/-) as shown in the diagram below:

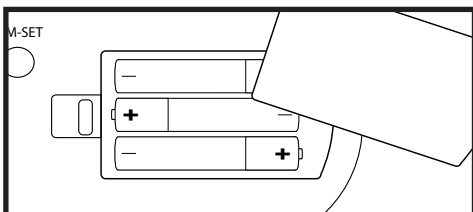

3. Reinstall the battery cover.

Note: Remove the batteries if you do not use the product for a long time

Time and Date Setting

1. Press and hold the 'SET' Button for three seconds to enter clock Setting
2. The display will start blinking, you can press 'UP' or 'DOWN' to select 12Hour Mode or 24Hour Mode. Once your desired mode selected, press 'SET' once.
3. Next, the Hours will start to blink on the display, 'UP' or 'DOWN' to select the current Hours, and press 'SET' once.
4. Next, the Minutes will start to blink on the display, press 'UP' or 'DOWN' to select the

Operation

- current Minutes, and press **'SET'** once.
- Next, the year will start to blink on the display, press **'UP'** or **'DOWN'** to select the year, and press **'SET'** once.
 - Next, the month will start to blink on the display, press **'UP'** or **'DOWN'** to select the current month, and press **'SET'** once.
 - Next, the date will start to blink on the display, press **'UP'** or **'DOWN'** to select the date, and press **'SET'** once.
 - Now the time set is finished, the display will display the time you just set.
- The bell icon also disappears when the alarm is deactivated.

Setting the Alarms

- Press and hold the **'ALM-SET'** button for three seconds to enter Alarm Setting.
- On the display, the hour will start blinking.
- Press **'UP'** or **'DOWN'** to select the desired hour to be set, and press **'ALM-SET'**.
- The minutes will start blinking
- Press **'UP'** or **'DOWN'** to select the desired minutes to be set, and press **'ALM-SET'**.
- Now the display will resume back on current time.
- Please make sure you have activated the Alarm if you want it to ring.

Turning On Alarms

 
- To enable / activate an alarm, you can press the **'ALM-SET'** button on the back of the alarm clock.
- Once you enter the Alarm setting, you can press the **'UP'** button to enable / activate the alarm.
- The bell icon also appears when the alarm is enable / activated.
- When the Alarm is RINGING, you can press **'UP'** or **'DOWN'** once to turn OFF the Alarm.

Turning off Alarms

- To disable an alarm, you can press the **'ALM-SET'** button on the back of the alarm clock.
- Once you enter the Alarm setting, you can press the **'UP'** button to deactivate the alarm.

Backlight and Snooze Setting

- When the alarm is active you can press the **'SNOOZE/LIGHT'** button on top of the alarm clock to stop the alarm, a snooze function is activated for 5 mins.
IF you want to turn off the Alarm, press 'UP' or 'DOWN' once.
- The snooze button also acts as the backlight. Press the snooze button to activate the backlight on the display. The light will remain on for about **5** seconds and turn off automatically.

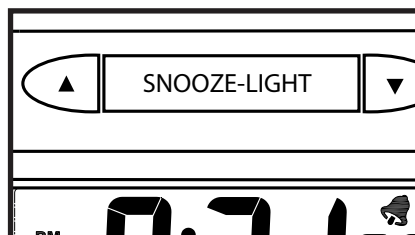

Temperature Display

- The temperature display can be displayed in Celsius and in Fahrenheit. Press the **'DOWN'** button to select either Celsius or Fahrenheit.



Operation

Caution

1. This item is not a toy.
2. This item is not waterproof.
3. Do not mix normal and rechargeable batteries together.
4. Only use '1.5V AAA' batteries.
5. If display seem faint please replace the batteries.

Trouble Shooting

1. In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below.
2. If the problem persists, visit the technical support website: www.argos-support.co.uk

Problem	Reason(s)	Solution(s)
No Power	<ul style="list-style-type: none">• Batteries not inserted / inserted correctly.• Batteries need replacing.	<ul style="list-style-type: none">• Check batteries are inserted correctly.• Replace batteries.
Time reset to 12:00	<ul style="list-style-type: none">• Clock not set	<ul style="list-style-type: none">• Set the clock following steps on pg 4
Alarm does not sound	<ul style="list-style-type: none">• Alarm has not been activated.• Clock not set• Alarm not set	<ul style="list-style-type: none">• Activate the alarm following steps on pg 4.• Set the clock following steps on pg 4• Activate the alarm following steps on pg 4

Disposal information



WEEE marking "Information for the consumer"

Disposal of your old product Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please make yourself aware of the local collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Guarantee



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this Instruction Manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk