



MUG/TUMBLER

GENERAL CARE

- Before first use and promptly after each use, disassemble product and wash all parts with warm, soapy water. Rinse and dry completely before re-assembly. If not cleaned and dried thoroughly, residual food or liquid may cause bacteria or microbe growth.
- DO NOT use bleach, chlorine cleaners, abrasive cleaners or scrubbers since they may damage the finish.
- This product is top-rack dishwasher safe; however, washing by hand will help maintain appearance of the product.

USE

- To keep contents hot/cold longer in vacuum insulated products, preheat product by filling with hot water or prechill with cold water for 5-10 minutes just prior to use.
- Before each use, ensure gaskets (flexible bands) are undamaged and positioned correctly. Missing, worn, or misaligned gaskets may cause leaks, which could burn or scald user, or cause property damage.
DO NOT overfill the container: Leave space for lid and stopper to avoid overflow, which may burn or scald user.
- Hand tighten lid(s) before use (especially if carry handle is on lid).

WARNING

- DO NOT store contents in container longer than 24 hours. Some contents may spoil faster (examples: homemade soup, dairy, tomato, partially-consumed food, or when product is frequently opened/closed). Spoilage may increase pressure and cause forceful ejection of the stopper, lid, or contents, resulting in injury or property damage.
- If contents are stored longer than 24 hours or you suspect spoilage, use caution and before trying to open the container, POINT OPENING AWAY FROM PEOPLE TO AVOID INJURY.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand: do not open it, immediately move people away from the product, and dispose of it at your local waste facility.
- DO NOT use product in microwave, on stove-top, or in any type of oven.
- NOT FOR USE BY CHILDREN: Keep out of the reach of children, especially when product contains hot contents, which may burn or scald user.
- DO NOT use for carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.
- DO NOT use hot liquids with Straw Lid.
- Always test temperature of contents before consuming. USE EXTREME CAUTION when consuming hot beverages, which may burn or scald user.


PRODUCT IMAGES

Images for reference only: actual products may vary.

Proper assembly required (including proper gasket placement) to minimise leaking.

Disassembly for cleaning

1. Rotate stopper counterclockwise into the open position until it clicks.
2. Hold lid upside down with both hands. Using both thumbs, push the drink stopper out from the bottom of the lid. It will click as it is being removed.

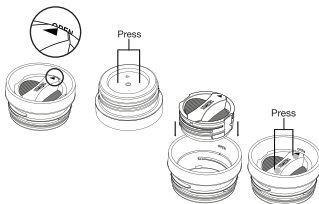

Reassembly

1. Place the drink stopper into the lid body.
2. Align the arrow on the stopper to the open position.
3. Hold lid right side up with both hands. Using both thumbs, push the drink stopper into the lid body until it clicks.



5 YEAR WARRANTY

- This warranty is given by UK Thermos Limited.
- This warranty only applies to Thermos brand products manufactured by or under our license from us and which have been purchased from a retail outlet within the United Kingdom.
- For consumers, the benefits conferred by this warranty are in addition to all rights and remedies provided to consumers under consumer protection laws. This warranty does not exclude, limit, vary or otherwise affect any of your legal rights as a consumer.
- Our obligations under this warranty are limited to the terms set out below.
- We warrant this Thermos brand product to be free from defects in material or workmanship under normal use in accordance with any instructions accompanying this product for five years from the date of original purchase (the "warranty period"). If any such defect arises and a valid claim is received within the warranty period we will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. Nothing in this warranty excludes our liability for defective products under the Consumer Protection Act 1987. Subject to the foregoing and except where this Thermos brand product has been purchased by a consumer, all and any liability on our part for any loss of profits, revenues, use, savings, contracts, goodwill and any indirect, special, incidental, consequential loss or damage are excluded to the maximum extent permitted any applicable law. Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you.
- Please retain your original proof of purchase and this warranty sheet as you must produce them in order to make a claim under this warranty.
- For more information on returning a defective product under this warranty, please contact our customer care line 0113 2763450.
- THERMOS is a registered trademark in over 115 countries.

UK THERMOS LTD, ALBANY HOUSE, 214A LEEDS ROAD, LS26 0JF
NI THERMOS LTD, 30 VICTORIA STREET, BELFAST BT1 3GG
www.thermos.co.uk