 


OFA UHD

 
UNIVERSAL REPLACEMENT REMOTE

URC 1635 ENGLISH SIMPLE SET UP GUIDE


WELCOME, PREPARE YOUR
REMOTE FOR INSTALLATION

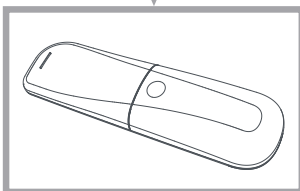


OPEN THE BATTERY DOOR.

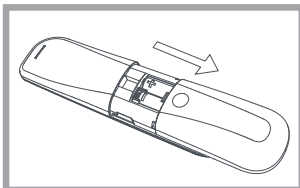

INSERT 2 AAA BATTERIES.

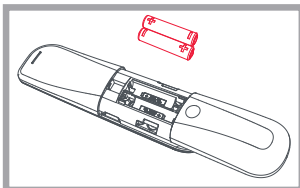 

CLOSE THE BATTERY DOOR.

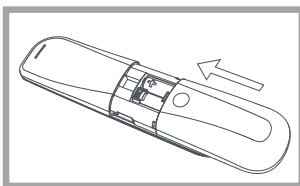 

PRODUCT DISPOSAL

(EUROPEAN DIRECTIVE 2002/96/EC)

The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according to European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

BATTERY DISPOSAL AND SAFETY

(EUROPEAN DIRECTIVE 2006/66/EC)

Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health. Keep batteries away from fire, out of direct sunlight, and away from other sources of heat.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remember that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

UK

www.oneforall.com

Universal Electronics BV –
Europe & International
P.O. Box 3332, 7500 DH Enschede
The Netherlands

 


Thank you for purchasing the One For All UHD Remote.

This remote is intended as a replacement for the Sky Q Infrared remote control, and also offers the functionality of controlling the volume and power of your TV or Sound Bar / Audio Video Receiver. The remote also features handy shortcut macros for easy channel zapping and a powerful all on/off macro.

KEY TABLE

1. TV Power – Switches TV on and off. TV must be set up first – see Setup
2. TV Input – used to select the correct HDMI input on your TV. TV must be set up first – see Setup
3. Power – Switches Sky box on and off.
4. SKY – Opens Recordings / Menu
5. ? – Help info / Accessibility settings
6. i – More info
7. Search – Search for a specific show
8. Rewind – Press repeatedly to increase speed
9. Play/pause
10. Fast forward – Press repeatedly to increase speed
11. Navigation and OK (select) buttons
12. Back/Dismiss – Exits menus or recorded show
13. Home – Home Screen
14. ... – Opens sidebar / options
15. Volume up, down and mute. Can be reassigned to TV or Sound Bar / AV Receiver – see Setup
16. R – Record
17. Channel up/down
18. Coloured buttons – Interactive services. Can also be used for channel shortcuts – see Channel Shortcuts
19. 0-9 – Type in channel numbers

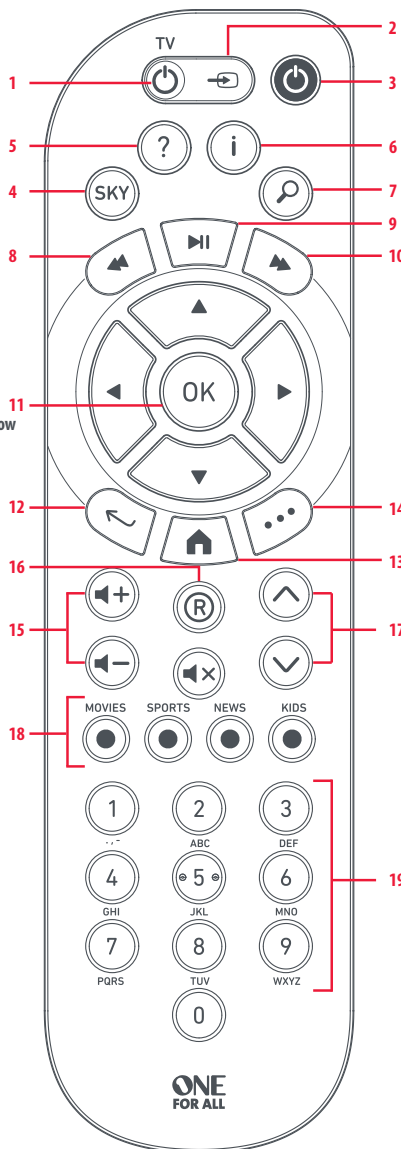

LED COLOUR

Under the Power key there is a three colour LED, which helps to show which device you are controlling as well as helping you to set up your remote. The following colours indicate which device is being controlled or set up:

Green – TV

Amber – Sound Bar / Audio Video Receiver

Red – Sky / Media Box

HOW TO SET UP YOUR REMOTE

SETUP

The OFA UHD remote is pre-programmed to control your Sky Q box, just insert batteries and it will work directly. However it can also be programmed to control the Volume, Mute, Input and Power of your TV, and if required, the Volume and Mute of your Sound Bar. If you have a different Sky box or a Digital Media box such as a Now TV or Apple TV, you can also set this up in place of the Sky Q. You can set up these devices on your remote as follows:

A - SIMPLESET

If the brand of your device is shown below, you can use the SimpleSet system described on the next page:

If the brand of your device is not shown, please proceed to section B - SETUP BY CODE.

TV

1. Bush
2. Grundig
3. LG
4. Panasonic
5. Philips
6. Samsung / Sharp
7. Sony
8. TCL / Thomson
9. Toshiba



Sound Bar / Audio Receiver

1. Bose
2. Denon
3. LG
4. Marantz
5. Onkyo
6. Panasonic / Philips
7. Pioneer
8. Samsung
9. Sony
0. Yamaha



Other Sky / Digital Media Box (not necessary for Sky Q)

1. Apple
2. A C Ryan
3. Asus
4. Dune
5. iOmega
6. Microsoft
7. Roku
8. Sky
9. Sony
0. Western Digital



To set up your device:

1. Turn on your device (not on standby) and point the OFA remote towards it.

2. To set up:

TV

Hold down TV Power and SKY Power until the Green LED under the Power key blinks twice.



AUDIO, RECEIVER, SOUND BAR

Hold down Volume + and Volume – until the Amber LED under the Power key blinks twice.



OTHER SKY / DIGITAL MEDIA BOX

Hold down Channel + and Channel – until the red LED under the Power key blinks twice.



3. Hold down the digit for your brand and device as listed left (e.g. 6 for Samsung TV).
4. For TV and SKY or Digital Media Box the remote will send Power every 3 seconds until your device switches off. For AV Receiver or Sound Bar the remote will send Mute until your device Mutes volume.
5. As soon as your device switches off (or mutes), release the digit.
6. The LED will blink twice and the remote should now operate your device.

• If you find one or more keys do not work as you expect, start again at step 2 – the remote will start with the next code in the memory.

HOW TO SET UP YOUR REMOTE

B - SETUP BY CODE

If the brand of your device is not listed in the SimpleSet feature, you can set up by trying codes individually. To do this:

1. Turn on your device (not on standby) and point the OFA remote towards it.
 2. To set up:
 - TV**
Hold down TV Power and SKY Power until the Green LED under the Power key blinks twice.
 - AUDIO →RECEIVER, SOUND BAR**
Hold down Volume + and Volume – until the Amber LED under the Power key blinks twice.
 - OTHER SKY / DIGITAL MEDIA BOX**
Hold down Channel + and Channel – until the red LED under the Power key blinks twice.
 3. Enter the first 4 digit code listed for your brand (e.g. 4142 for Technika).
 4. The LED will blink twice.
 5. Now aim the remote towards your device and press the Power (or Mute*) key.
 6. If the device turns off (or mutes*), your remote is ready to use. If not, repeat steps 2-5 with the next code in the list.
- * If you are setting up an Audio Video Receiver or Sound Bar, please try the Mute key during step 5.

AFTER SIMPLESET OF CODE SETUP

Your One For All remote can operate up to three devices. By default the remote is pre-programmed to control your Sky Q box, but you can control some functions of your TV and Sound Bar or Audio Video Receiver

If you set up a TV, the Volume Up, Down, Mute, TV Power and TV Input keys will then control your TV.

If you then also set up an Audio Device such as a Sound Bar or Audio Video Receiver, the remote will then control the Volume Up, Down and Mute of that device.

Power Macro

If you have set up your remote to control more than one device, such as a TV and/or Audio device you can turn them all on or off by simply holding down the Sky Power key for 3 seconds. The remote will first send Power to the Sky Box, and then to TV and Audio (if applicable).

AV Shift

As the AV key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the AV key is pressed and a TV is set up, the Menu Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling your Sky Box.

 
HOW TO SET UP YOUR REMOTE

C - LEARNING

Your One For All remote control can learn any function from any other working remote control. This is a quick and easy one-time setup that allows you to control any infrared controlled device you have in your living room. You can even combine multiple devices in one easy to use remote control – for example you could teach the volume keys to control your Sound Bar, the TV Power and Input keys to control your TV, and the rest of the keys to control a Set Top Box (Satellite, Cable or Freeview Receiver).

To do this, firstly make sure you have all your original remote controls to hand, and that they have working batteries in.

To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:

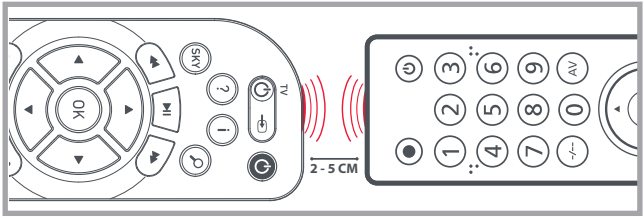

1. Hold down 1 and 3 until the red LED blinks twice.
2. Press and release the key you want to learn a function onto (for example the TV Power key) – The red LED will blink continuously.
3. Press and release* the corresponding key on the original remote, for example Power.
4. The red LED will blink twice to indicate the key has been learned correctly.
5. Repeat steps 2 and 3 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
6. When you have learned all the functions you require, press and hold the OK key until the red LED blinks twice.

Hints:

- If the red LED shows one long blink at step 4, the function was not learned correctly, please try again from step 2.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.
- To delete a learned function, hold down 7 (Q) and 9 (Q) until the red LED blinks twice, and press the key to delete twice.
- If one or more of your original remotes aren't working, you can still set up the One For All remote by SimpleSet (A) or Code Set Up (B).

* Some remotes send commands differently. If you find a function cannot be learned, try holding down the key on the original remote instead of pressing and releasing.

SPECIAL FEATURES

CHANNEL SHORTCUTS



When controlling a Sky Q Box, the Red, Green, Yellow and Blue keys have an extra bonus function. If you press and release each of these keys, they will perform exactly the same function as your original Sky Remote.

However if you are watching any channel and hold down one of these keys for 3 seconds, the remote will send a series of keys (also called a macro) which will act as a shortcut to the first channel in a specific groups of channels. For example, holding the Red key for 3 seconds will jump to channel 301, which is the first available Movie Channel. You can then quickly zap up and down the Movie channels using the Channel Up and Down keys. Holding the Green key will take you to the first Sports Channel, Yellow the first News Channel and Blue the first Kids Channel.

MORE FUNCTIONS ONLINE

Although all the major features of your One For All remote are covered in this guide, there is even more functionality available online. For example you could reprogram the Coloured keys to send your favourite channel numbers instead of the pre-programmed ones, program any missing function from your original remote (Key Magic) or potentially reprogram the input key to always select the same input on your TV. You can find tutorials, tips and extra info for this remote and others at: www.oneforall.co.uk/UHD

We're ready to assist



Support

Learn about One For All products, download manuals, watch instruction videos or get in contact with our Customer Service Team for personal assistance.