



# Delight

## Mini Wand Massager

### Care

Clean after use with sex toy cleaner and leave to air dry until next time. Store your toy away from dust, heat, direct sunlight and other sex toys.

### How to Use

- Charge the mini wand massager by plugging the USB cable into a USB charging point, and the electrical connector into the base of the toy.
- The toy will take approximately 120 minutes to fully charge, and will give you up to 60 minutes of play.
- Turn the power on by pressing the “+” button once. Continue pressing to increase the speed. Press the middle button to cycle through the 7 patterns of vibration and the “+” and “-” buttons to change the intensity of each pattern.
- Press and hold the “-” button to decrease the speed and turn the vibrator off.
- To activate the travel lock, press and hold the “+” and “-” buttons together when the toy is switched off, and hold for 3 seconds. Repeat to deactivate the travel lock.
- Use with water-based lubricant to enjoy your toy at its best.
- Clean after use with sex toy cleaner and leave to air dry until next time.