

Non Stick Cookware Frypans & saucepans

Pargat[®]
housewares

Care & Use Instructions:	Warnings:	Icons:
Suitable for all hob types except induction. Before first use remove all packaging, handwash with warm soapy water and dry thoroughly. Only use wooden, nylon or silicone utensils to prevent scratching the non-stick surface. Do not allow a gas flame or heat source to extend beyond the base of the pan. Use a low to medium heat as overheating the pan can damage the non-stick coating. To clean, rinse in warm soapy water, wipe with a cloth and dry thoroughly. Do not use metal scourers or abrasives. If any burnt food is left in the pan, leave to soak in hot soapy water before attempting to clean. Suitable for use in the oven up to 180°C Never cut food inside of the pans. If Handles become hot the use of oven gloves is recommended Only stand hot pans on heat protected surfaces. Suitable for use in a fridge freezer Please add following if cookware has glass lid For maximum efficiency always use the lid (if applicable). Take care not to knock the lid, repeated or hard knocks may cause it to shatter. Do not immerse a hot lid into cold water. Please add following for crepe pan Wipe lightly with vegetable oil before each use.	Ensure that the handle is never left over the heat source. Handle may become loose & should be tightened with a screwdriver to avoid safety hazards. Do not slide the pan as this may damage the base and may leave marks on some cookers. Never heat up an empty pan or let it boil dry as the pan can be damaged by overheating. In the event that the pan has become overheated, do not remove the pan from the hob, switch the cooker off and allow cooling to room temperature before removing. Allow pan to return to room temperature before use when removing from a fridge freezer	 Gas  Radiant Ring  Dishwasher Safe  Freezer Safe  Solid Hot Plate  Ceramic