

| | | | | | | | | |
|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| ACL220 8626637 | ACL221 8622404 | ACL224 8549790 | ACL440 8492799 | ACL441 8555605 | ACL444 8577236 | ACL640 8477161 | ACL641 8542508 | ACL644 8555708 |
|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|



Catalogue No. Brand Panel Size (Inch)

| Catalogue No. | Brand | Panel Size (Inch) | ACL220 8626637 | ACL221 8622404 | ACL224 8549790 | ACL440 8492799 | ACL441 8555605 | ACL444 8577236 | ACL640 8477161 | ACL641 8542508 | ACL644 8555708 |
|---------------|---------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| 8101884 | SAMSUNG | 32 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102656 | SAMSUNG | 32 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 6869551 | SAMSUNG | 32 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102663 | SAMSUNG | 40 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102405 | SAMSUNG | 40 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 6867106 | SAMSUNG | 40 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 7115077 | SAMSUNG | 40 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8103428 | SAMSUNG | 43 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102137 | SAMSUNG | 49 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8192848 | SAMSUNG | 49 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102096 | SAMSUNG | 49 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102429 | SAMSUNG | 49 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8103435 | SAMSUNG | 50 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102151 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8103442 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8192855 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8192862 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8624433 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8625896 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102106 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8102436 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 6861896 | SAMSUNG | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101554 | SAMSUNG | 65 | | | | | | | ✓ | ✓ | ✓ |
| 8192879 | SAMSUNG | 65 | | | | | | | ✓ | ✓ | ✓ |
| 8192893 | SAMSUNG | 65 | | | | | | | ✓ | ✓ | ✓ |
| 8101396 | SAMSUNG | 65 | | | | | | | ✓ | ✓ | ✓ |
| 8101475 | SAMSUNG | 65 | | | | | | | ✓ | ✓ | ✓ |
| 8101530 | SAMSUNG | 65 | | | | | | | ✓ | ✓ | ✓ |
| 8101561 | SAMSUNG | 75 | | | | | | | ✓ | ✓ | ✓ |
| 5288315 | SONY | 32 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | | |
| 6863090 | SONY | 32 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | | |
| 6877134 | SONY | 32 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | | | |
| 6873011 | SONY | 40 | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101592 | SONY | 43 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101602 | SONY | 43 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101633 | SONY | 43 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101657 | SONY | 43 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101664 | SONY | 43 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101695 | SONY | 49 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101705 | SONY | 49 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101767 | SONY | 49 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101619 | SONY | 50 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101808 | SONY | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101822 | SONY | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101839 | SONY | 55 | | | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 8101293 | SONY | 60 | | | | | | | ✓ | ✓ | ✓ |
| 8101327 | SONY | 65 | | | | | | | ✓ | ✓ | ✓ |
| 8101334 | SONY | 70 | | | | | | | ✓ | ✓ | ✓ |
| 7604681 | TOSHIBA | 43 | | | | | | | | | |
| 7923049 | TOSHIBA | 49 | | | | | ✓ | ✓ | ✓ | ✓ | ✓ |
| 7926077 | TOSHIBA | 55 | | | | | | ✓ | ✓ | ✓ | ✓ |
| 7968341 | TOSHIBA | 65 | | | | | | | ✓ | ✓ | ✓ |

We're here to help!



Installation
Issues



Missing
Parts



Other
Questions

Helpline: 0333 320 0463