 


American Charcoal BBQ

Assembly Instructions - Please keep for future reference

868/8022

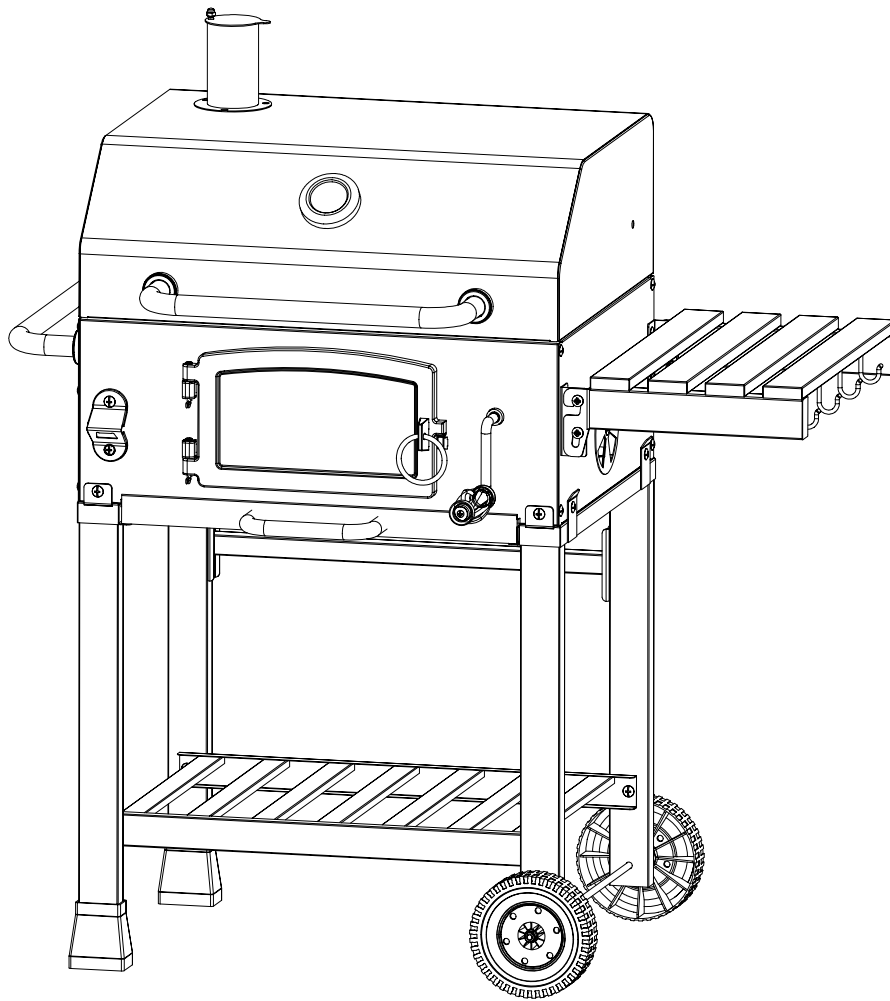

Dimensions

Width - 103cm

Depth - 68cm

Height - 114cm

Important - Please read this instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**. Please visit the website www.argos.co.uk for more information.

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT. Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland

Safety and Care Advice

Important - Please read this instructions fully before starting assembly

Warning: Whilst every effort has been made in the manufacture of your BBQ to remove any sharp edges, care should be taken in handling to avoid any accidental injury.

- Assembly time: approx. 60 mins.
- Make sure the assembly instructions have been followed correctly.
- Set the Charcoal BBQ in a suitable position, on a level surface away from areas likely to catch fire. The base of the Charcoal BBQ will get hot so ensure it stands on a suitable surface.
- Always stand your Charcoal BBQ outdoors and on level ground away from trees and wooden fencing. Ensure there is a least 1 metre clearance around all sides of the Charcoal BBQ. Keep away from fences, over hanging branches and other combustible materials.
- Use Charcoal and a suitable lighting method.
- Do not cook before the fuel has a coating of ash.
- "WARNING! This barbecue will become very hot , do not move it during operation."
- "Do not use indoors."
- "WARNING! Do not use spirit or petrol for lighting or relighting! Use only firelighters complying to EN1860-3!"
- "WARNING! Keep children and pets away."

Method 1. Charcoal & Lighting Fluid/ Gel

- Set up your Charcoal BBQ in a safe place. Place enough charcoal in the charcoal grate to a depth of 3 - 5cm.
- Taking care not to spill any liquid/ gel onto your hands or clothes. Apply carefully the lighting fluid/ gel over the charcoal.
- If using lighting fluid, wait for 30 seconds to allow the liquid to soak into the charcoal.
- Do not light the charcoal if you have spilt fluid or gel onto your clothes. Light the charcoal using a long taper or safety lighter. The charcoal will then burn for a period with flames.
- When the flames die down, check the charcoal is beginning to glow red. If your coals are going out, you should open all the vents and allow to cool down before trying to apply more liquid.

CAUTION: Apply carefully lighting fluid/ gel in small amounts. Over application can be dangerous.

- Do NOT squirt liquid onto burning charcoal.
- After lighting, the fire should be ready for cooking in 30-40 minutes, or when even grey ash is visible by day, or an even red glow is visible by night.

Method 2. Lighting Blocks

- Place three or four Lighting Blocks in the centre of the Charcoal grate and light with a match.
- Place pieces of charcoal around each burning block. Add more charcoal as required, in a pyramid formation.
- When burning is established, spread the fuel out evenly. After lighting, the fire should be ready, or when even grey ash is visible by day, or an even red glow is visible by night.
- Make sure that the cooking grill is fully located into the grill supports so that the cross bar supports lock behind the retaining edges.
- When the charcoal is alight, the smoke and flames have died down and the charcoal has an even layer of grey ash, rake the charcoal into a level layer in the hearth.
- Small quantities of charcoal may be added on top of the charcoal layer prior to cooking to extend cooking time.
- To help prevent food sticking, apply a tin coating of cooking oil on the grill prior to cooking.
- To adjust the airflow using the air vent we recommend to use of a heat resistant glove.
- ALWAYS WEAR OVEN GLOVES WHEN HANDLING THE CHARCOAL BBQ.

Safety and Care Advice

- Recommend using Maximum 1.5kg of charcoal briquettes on the charcoal grate. Excess charcoal will make the BBQ too hot for cooking. The max loading weight of the side shelf is 4kg.
- Ensure the barbecue has cooled down completely before removing the charcoal ash.

Care and Maintenance

- To make it easier to clean your Charcoal BBQ after use, line the firebowl with aluminium cooking foil, shiny side up. Remember to leave ventilation holes clear by piercing the foil where necessary. This process will lengthen the life of your Charcoal BBQ.
- Charcoal is available in lump wood from (large irregular pieces) and as briquettes (uniformly sized pieces). Please use the charcoal complying to EN1860-2.
- It is not advisable to completely fill the firebowl as the BBQ may become far too hot to cook successfully. As a guide ,a 3kg bag of charcoal briquettes should last for at least 2 full BBQ fires.
- If the fires flares up due to dripping fat then douse the flames lightly with a fine water spray.
- When you have finished using the Charcoal BBQ, never pour cold water directly on the coals to extinguish them as this may damage your Charcoal BBQ. Use old cinder, sand or a fine water spray.
- Empty the bottom bowl of ashes when they are completely cold.
- To clean your Charcoal BBQ, soak the cooking grill and tools in hot soapy water as soon as possible after use. Dry thoroughly and store in a dry place. Do not leave your Charcoal BBQ outside unprotected.

Food Safety

 
- Thoroughly defrost frozen meat and poultry in the refrigerator before cooking. Keep raw meat and poultry separate from cooked food.
- Ensure that the grill is thoroughly cleaned before cooking and lighting the barbecue.
- Always wash hands after handling raw meat and poultry before handling any ready to eat food.
- Wipe and disinfect surfaces that have been in contact with raw meat and poultry.
- When barbecuing meat and poultry, make sure the barbecue is really hot. Place the larger, thicker portions furthest away from the most intense heat to ensure thorough cooking without burning and turn regularly.
- Use separate utensils for handling raw meat or poultry and cooked food on the barbecue, or wash them thoroughly between use.
- To check whether meat, particularly poultry, is cooked, pierce the flesh with a skewer or fork: the juices should run clear. Ensure the product is piping hot throughout.

Attention! This BBQ will become very hot do not move it during operation. Do NOT use indoors.

“Warning! Keep children and pets away!”

“Caution! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3”

Carbon Monoxide Hazard

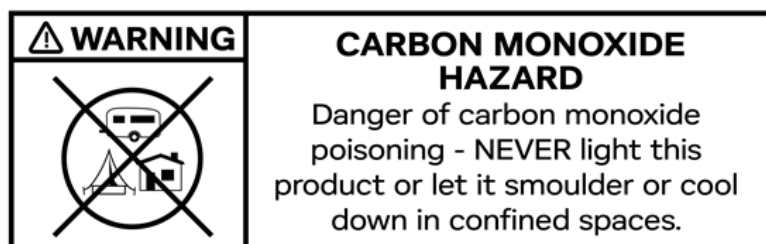


"Do not use the barbecue in a confined and/or habitable space e.g. houses, tent, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality."




Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Parts

 
Please check you have all the panels listed below

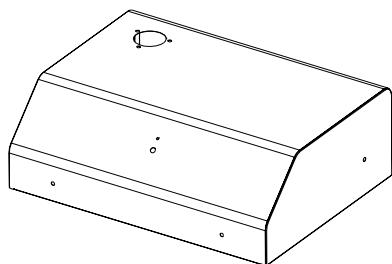

1 Lid x 1

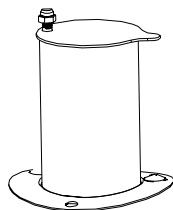 


2 Chimney x 1

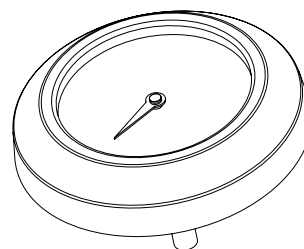 


3 Temperature gauge x 1



 
4 Handle x 2

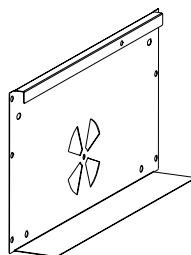


5 Firebox left panel x 1

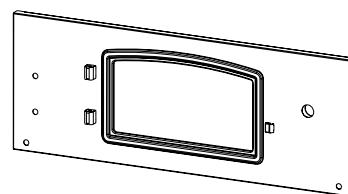 


6 Firebox front panel x 1

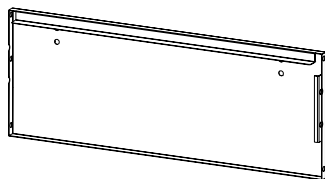 


7 Firebox back panel x 1

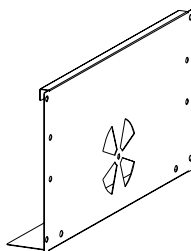 


8 Firebox right panel x 1

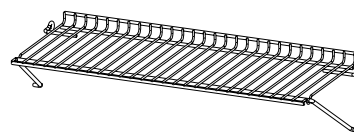 


9 Warming rack x 1

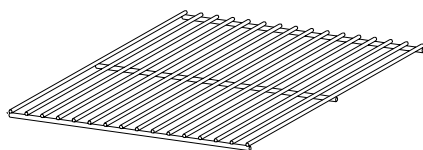 


10 Cooking grill x 2

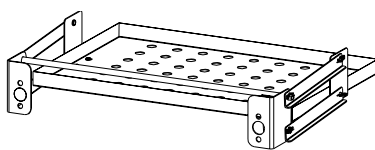 


11 Charcoal tray x 1

 


12 Crank handle threaded mount x 1

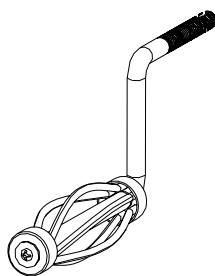 

13 Crank handle x 1

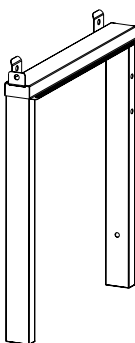 


14 Left cart leg x 1

 


15 Leg cap x 2

Components - Parts

 
Please check you have all the panels listed below

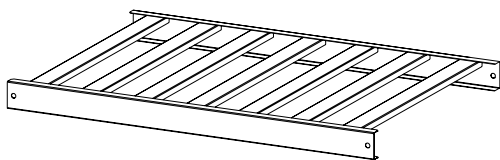


16 Bottom shelf x 1

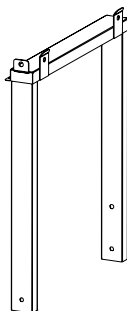 


17 Right cart leg x 1

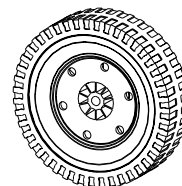 

18 Wheel x 2

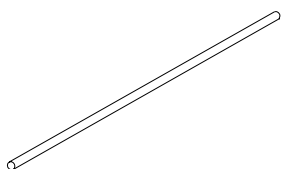 


19 Axle x 1

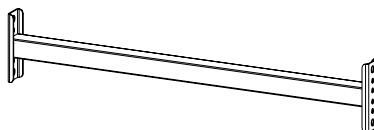 


20 Cart back support X 1



 
21 Bottle opener x 1

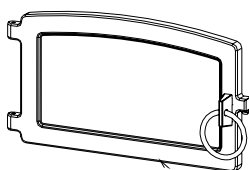


22 Firebowl front door x 1

 


23 Ash pan handle x 1

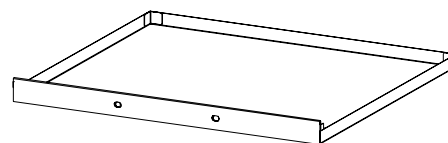 


24 Ash pan x 1

 


25 Air vent x 2

 


26 Side shelf front bracket x 1

 


27 Side shelf back bracket x 1

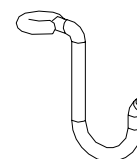 


28 Hook x 4

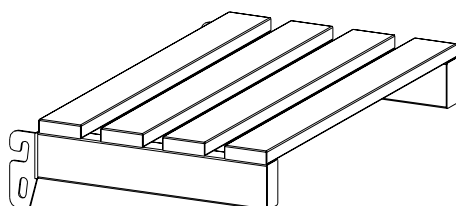 

29 Side shelf x 1

 

30 Lower hinge x 2

 








31 Upper hinge X 2




Components - Fittings

Please check you have all the panels listed below

       Note: The quantities below are the correct amount to complete the assembly.

A  15mm Bolt x 49	B  35mm Bolt x 8	C  30mm Bolt x 4
D  M8 Nut x 2	E  M6 Nut x 5	F  Washer x 2
G  Hinge bolt x 2	H  R pin x 5	I  15mm Shoulder bolt x 4
J  Lid pin x 2		

 Tool required (Do not provided in this product)




Philips screwdriver



Small hammer




 Wrench



Ruler/ tape measure

 Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fix the firebowl front panel **6** and firebowl back panel **7** with firebowl right panel **8** using 15mm bolts **A**.

 
Align the holes and fix the bolts tightly by the screwdriver.

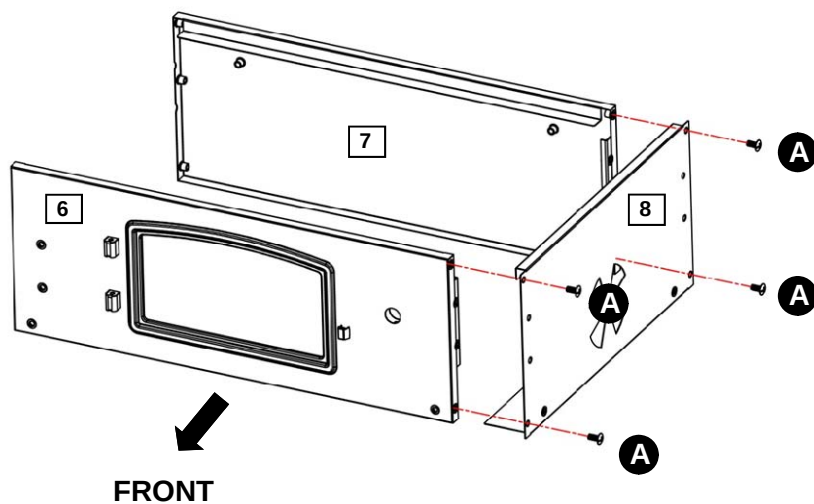

Step 2

Fix the firebowl front panel **6** and firebowl back panel **7** with the firebowl left panel **5** using 15mm bolts **A**.

 
Align the holes and fix the bolts tightly by the screwdriver.

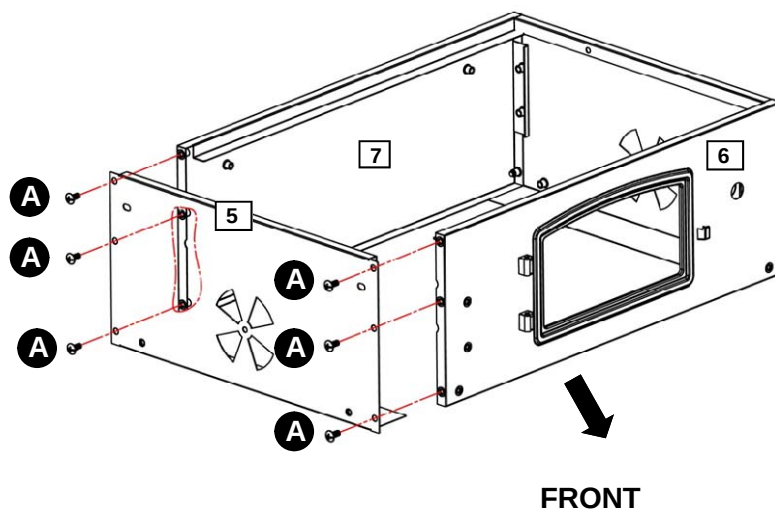

Assembly Instructions


Step 3

 Fix the air vents **25** on the firebowl left panel **5** and firebowl right panel **8** using 15mm bolts **A** and M6 nuts **E**.

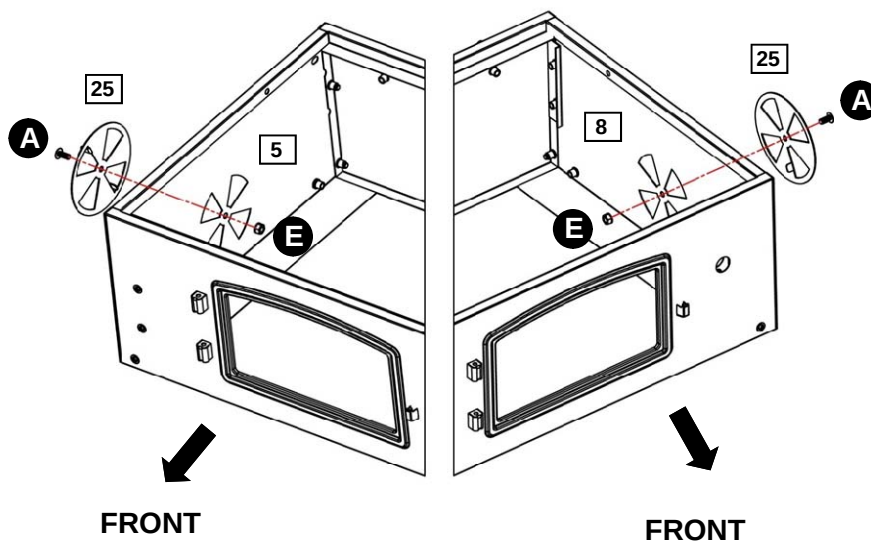

Step 4

 Fix the handle **4** on the firebowl left panel **5** using 15mm bolts **A**.

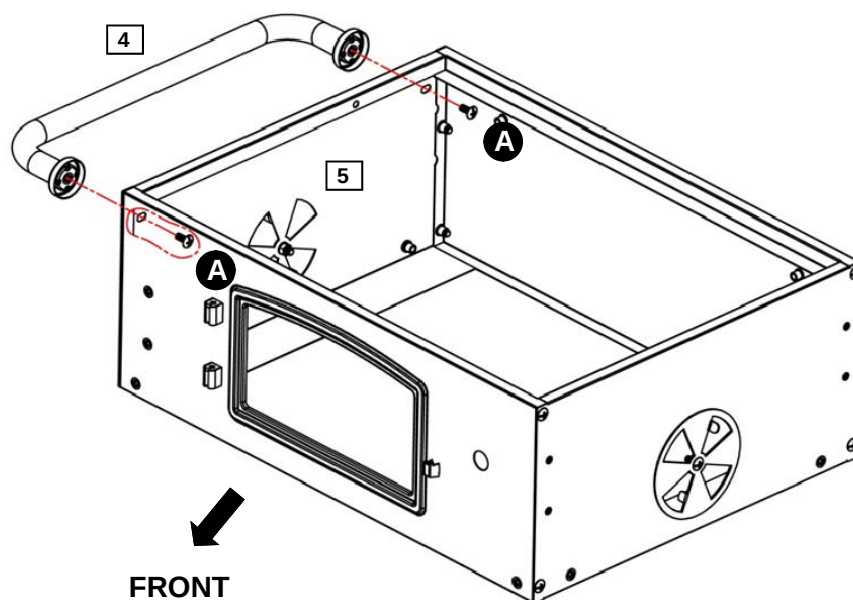


Assembly Instructions

Step 5

Fix the charcoal tray **11** and the crank handle threaded mount **12** on the right side of the firebowl front panel **6** using 15mm bolts **A** .

 
Then fix the charcoal tray **11** on the left side of the firebowl front panel **6** using 15mm bolts **A** .

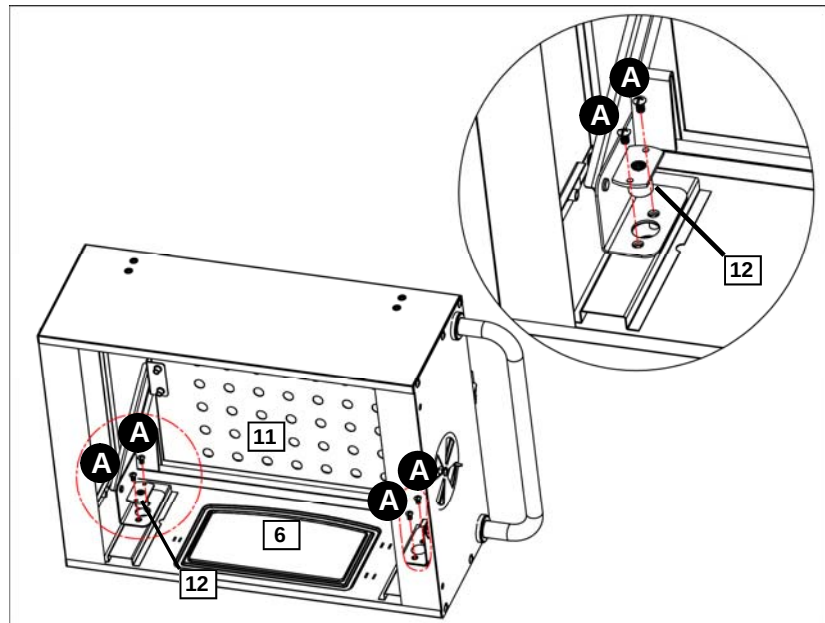

FRONT

Step 6

 Fix the firebowl front door **22** on the firebowl front panel **6** using the hinge bolts **G** and R pins **H** .

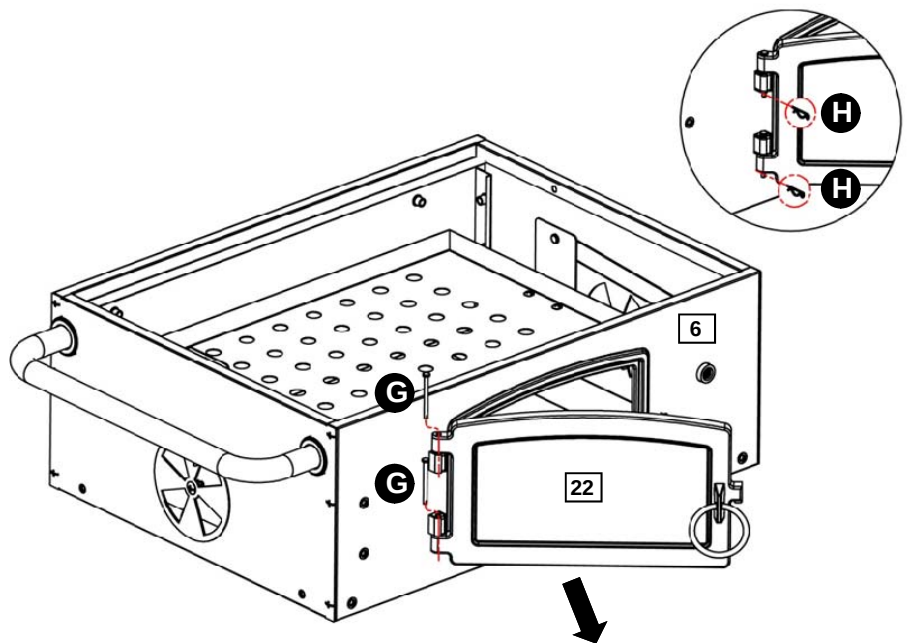


FRONT

Assembly Instructions


Step 7

 Fix the bottle opener **21** on the firebowl front panel **6** using 15mm bolts **A**.

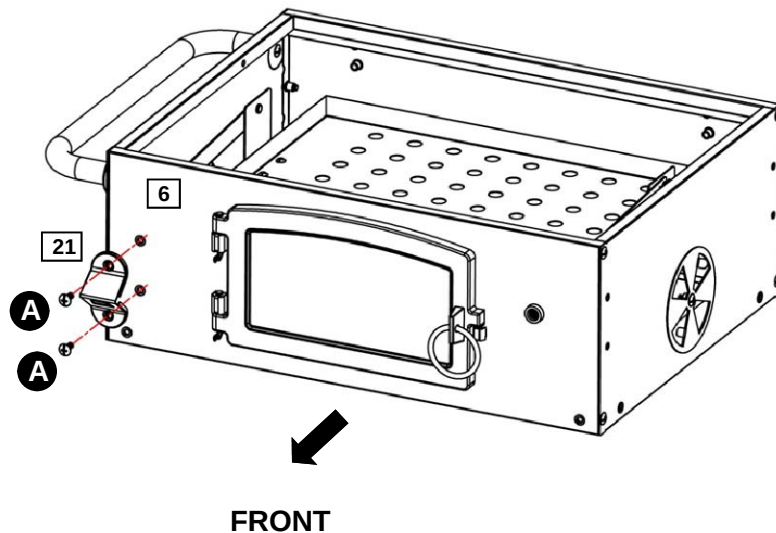

Step 8

 
Thread the crank handle **13** into the hole of the firebowl front panel **6** and fix it using the R pin **H**.

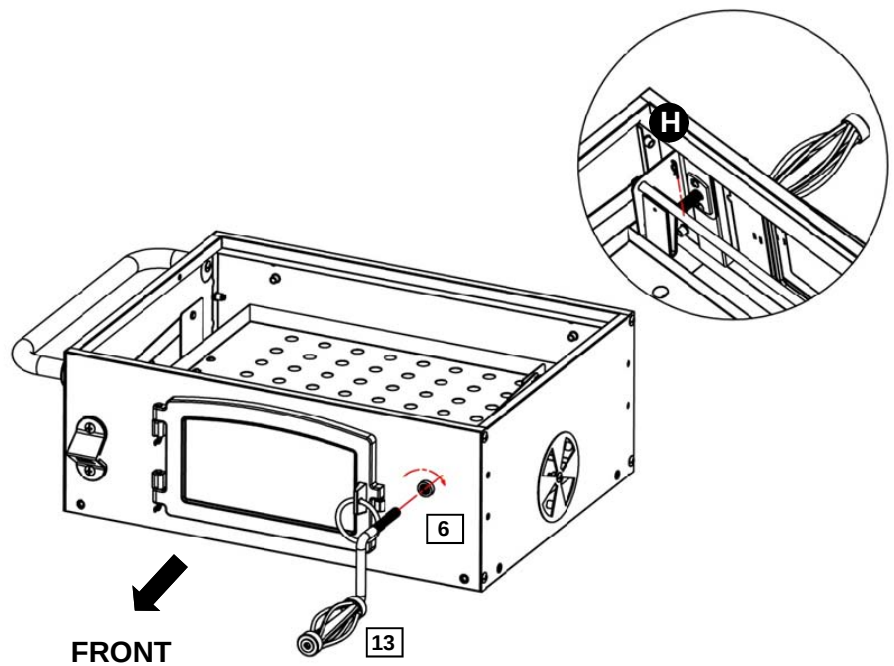

Assembly Instructions


Step 9

 Fix the lower hinges **30** with the firebowl back panel **7** using 35mm bolts **B**.

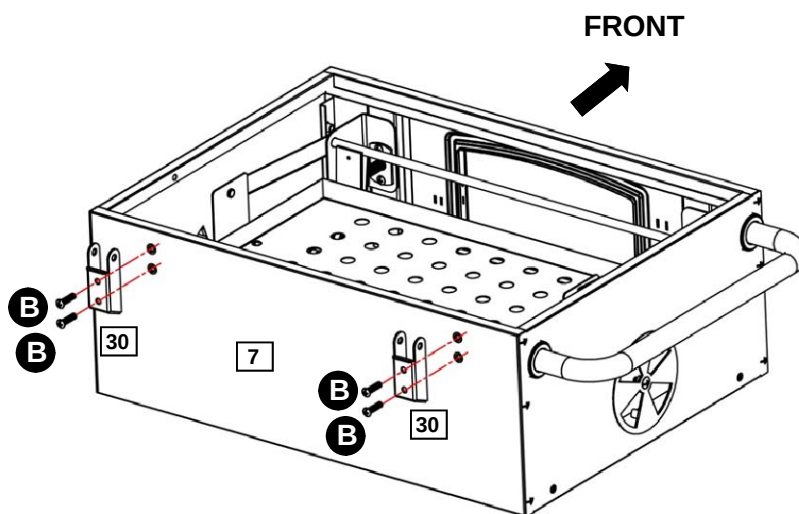

Step 10

 Fix the left cart leg **14** with leg caps **15** using 30mm bolts **C**.

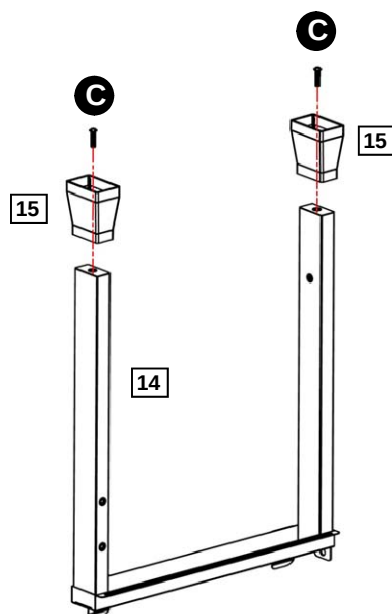

Assembly Instructions

 
Step 11

Insert the axle **19** to the right cart leg **17** .

Then apply the washers **F** and the wheels **18** to the axle end.


Fix the axle **19** by the M8 nuts **D** .

Fix the M8 nuts **D** by the wrench (not included in this product).

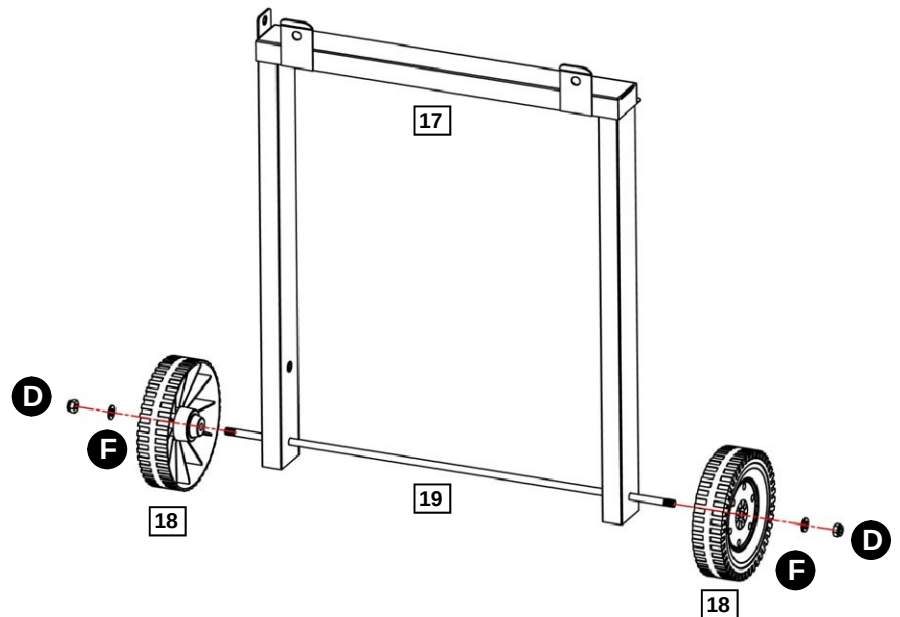

Step 12

 
Fix the bottom shelf **16** on the left cart leg **14** and the right cart leg **17** using 15mm bolts **A** .

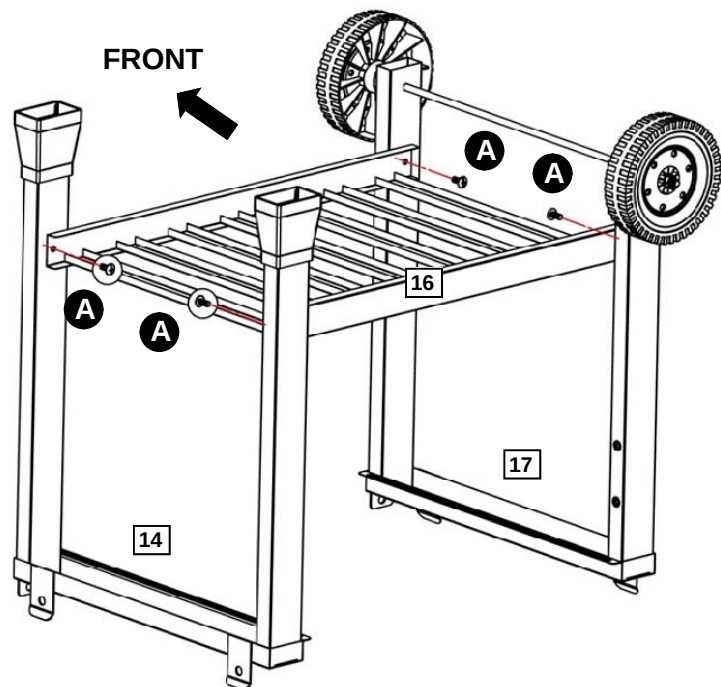

Assembly Instructions


Step 13

 Fix the cart back support **20** on the left cart leg **14** and the right cart leg **17** using 15mm bolts **A** .

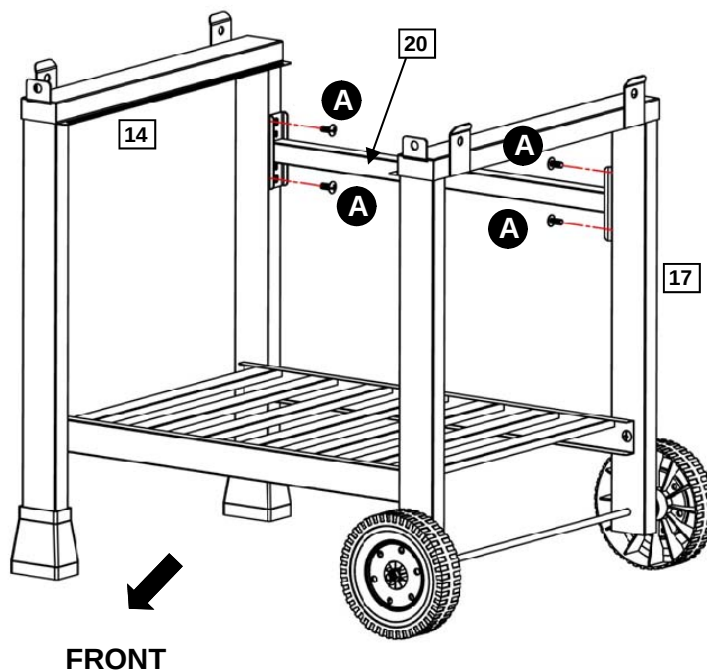

Step 14

 
Fix the firebowl on the cart legs using 15mm bolts **A** .

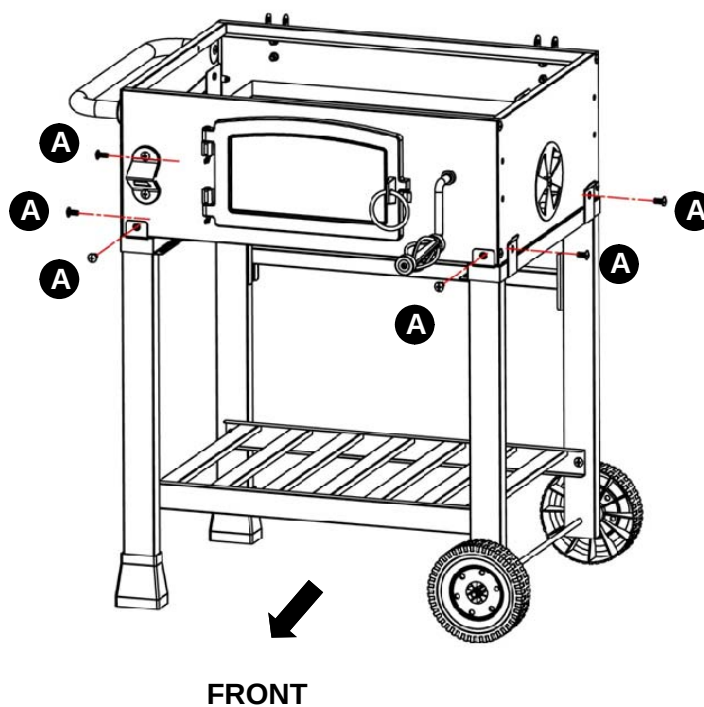

Assembly Instructions


Step 15

 Fix the side shelf front bracket **26** and the side shelf back bracket **27** on the firebowl using 15mm bolts **A**.

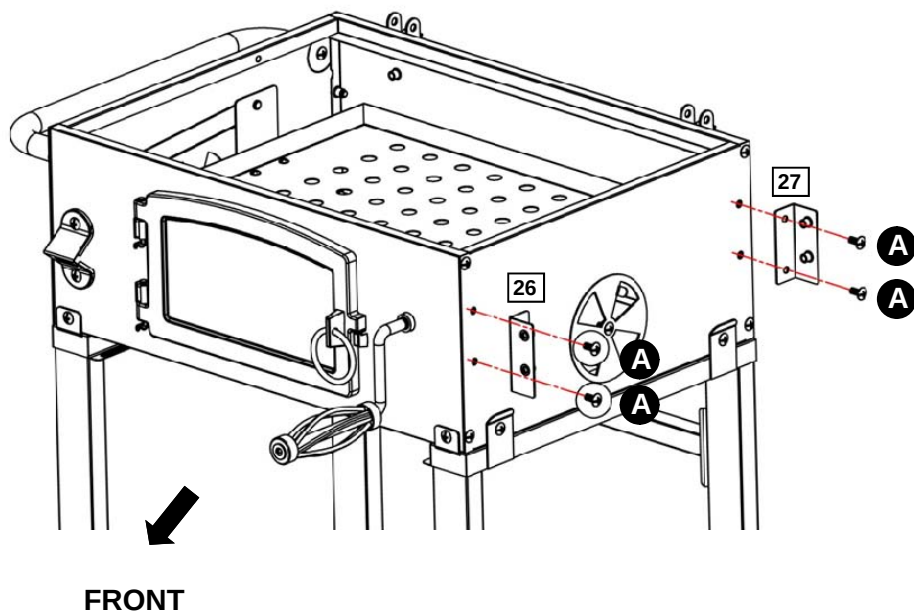

Step 16

 
Fix the hooks **28** on the side shelf **29** using 15mm bolts **A**.

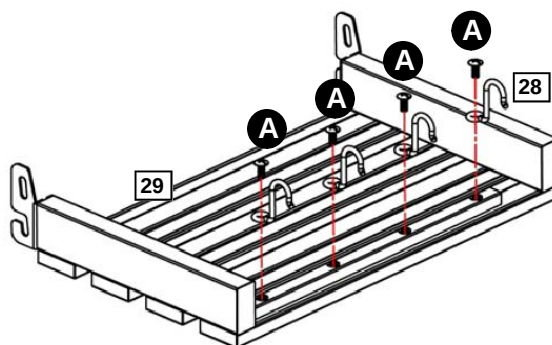

Assembly Instructions


Step 17

 Fix the side shelf **29** on the side shelf front bracket **26** and side shelf back bracket **27** using 15mm shoulder bolts **I**.

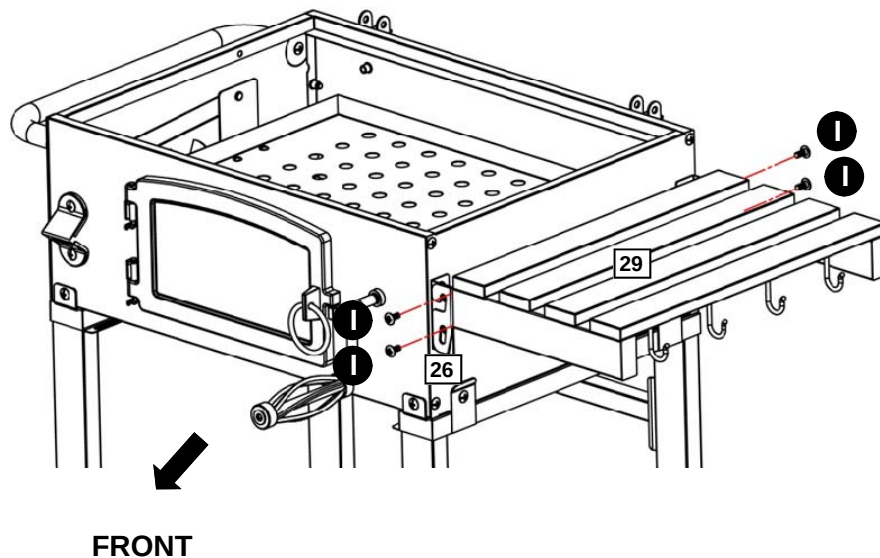

Step 18

 
Fix the handle **4** on the lid **1** using 15mm bolts **A**.

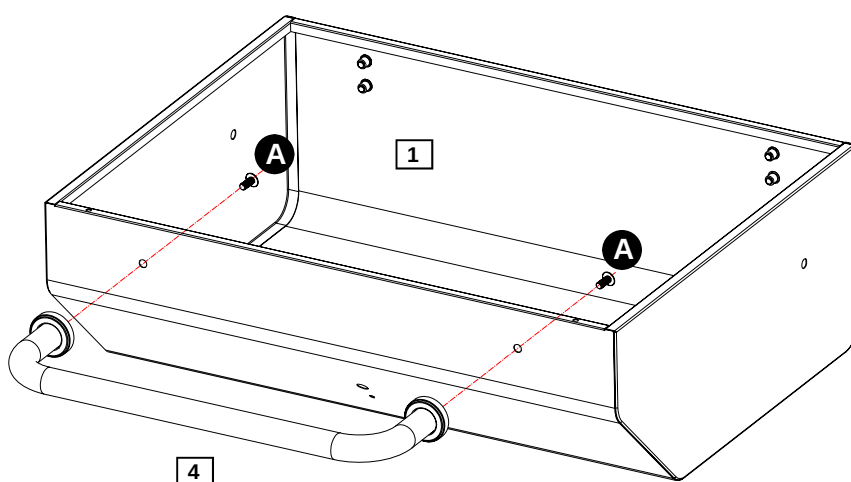

Assembly Instructions


Step 19

 Fix the temperature gauge **3** on the lid **1** .

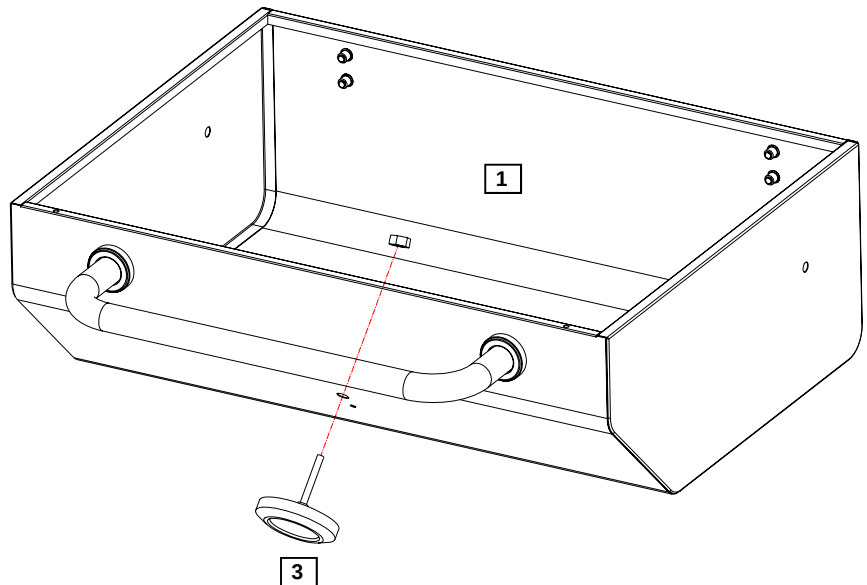

Step 20

 
Fix the chimney **2** on the lid **1** using 15mm bolts **A** and M6 nuts **E** .

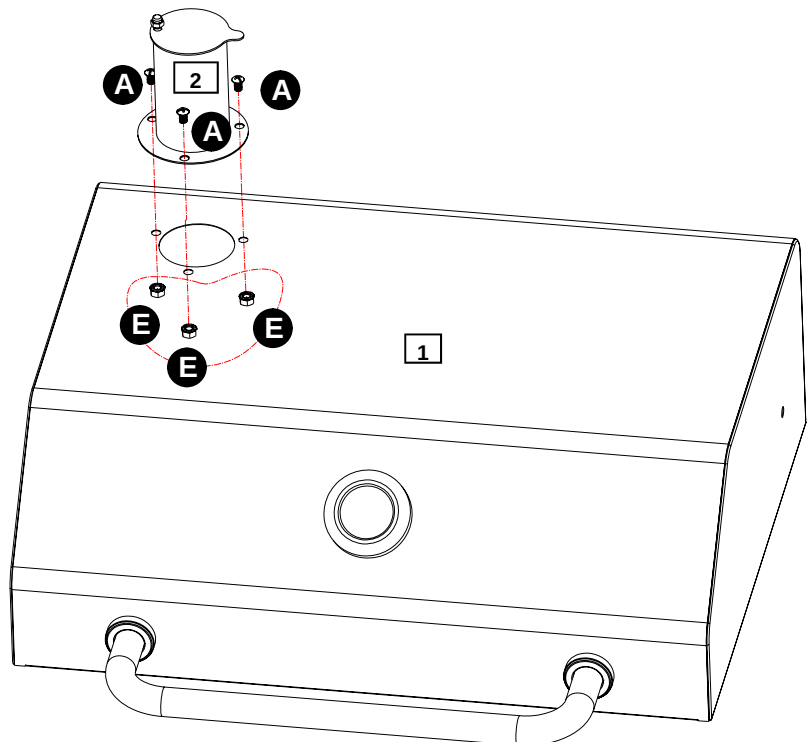

Assembly Instructions


Step 21

 Fix the upper hinges **31** on the lid **1** using 35mm bolts **B**.

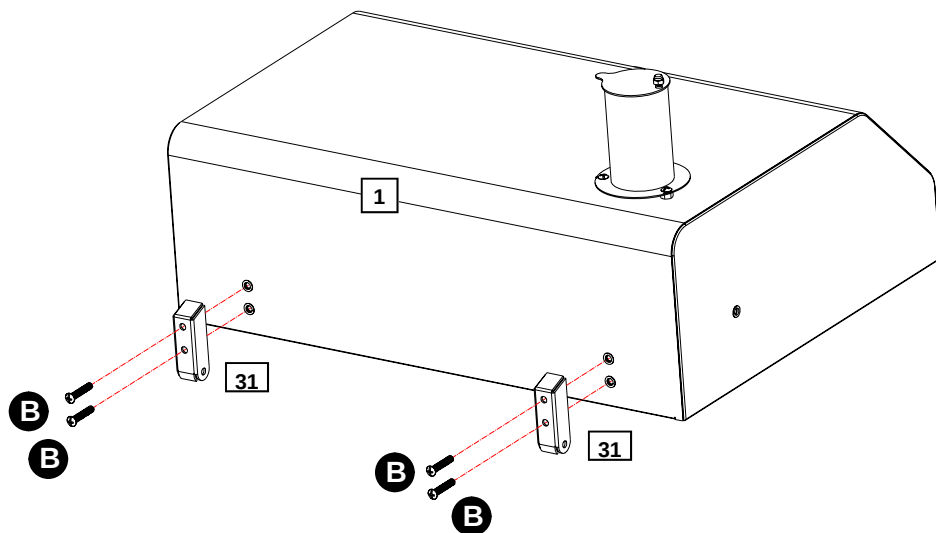

Step 22

 
Fix the upper hinges **31** and the lower hinges **30** using lid pins **J** and R pins **H**.

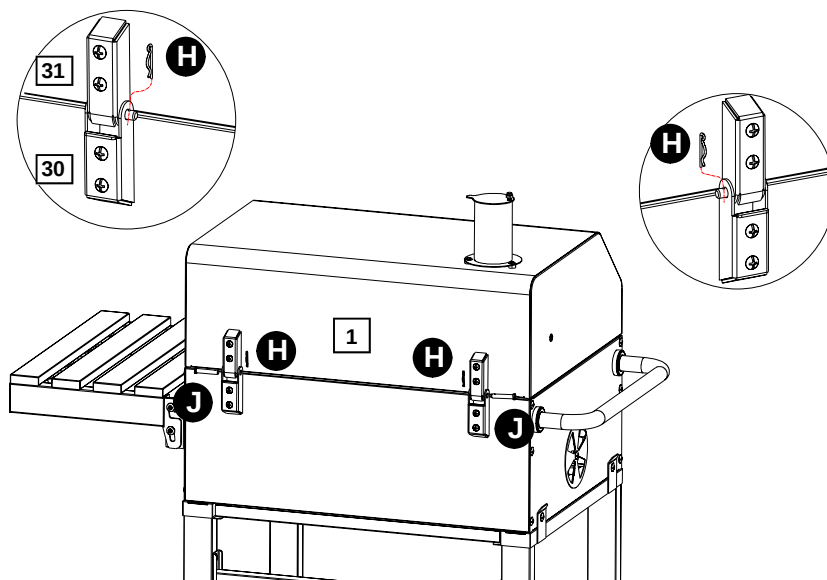

Assembly Instructions


Step 23

 Fix the warming rack **9** on the lid **1** using 30mm bolts **C**.

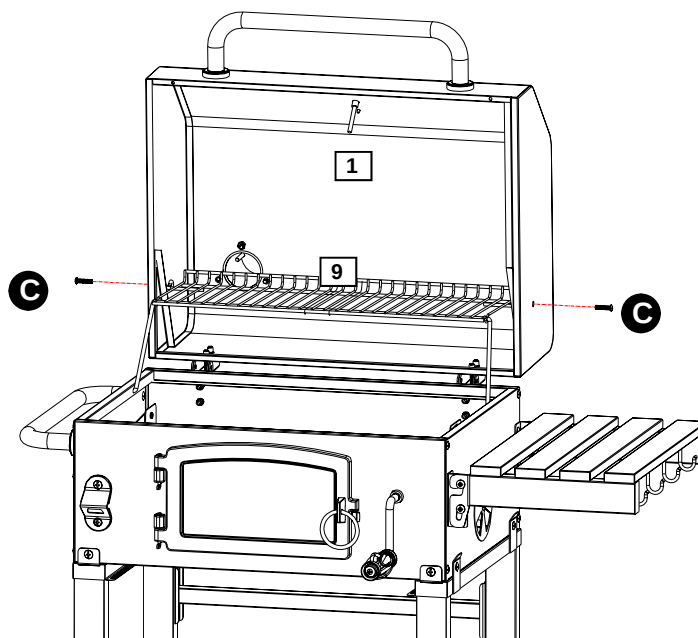

Step 24

 
Place the cooking grills **10** on the firebowl.

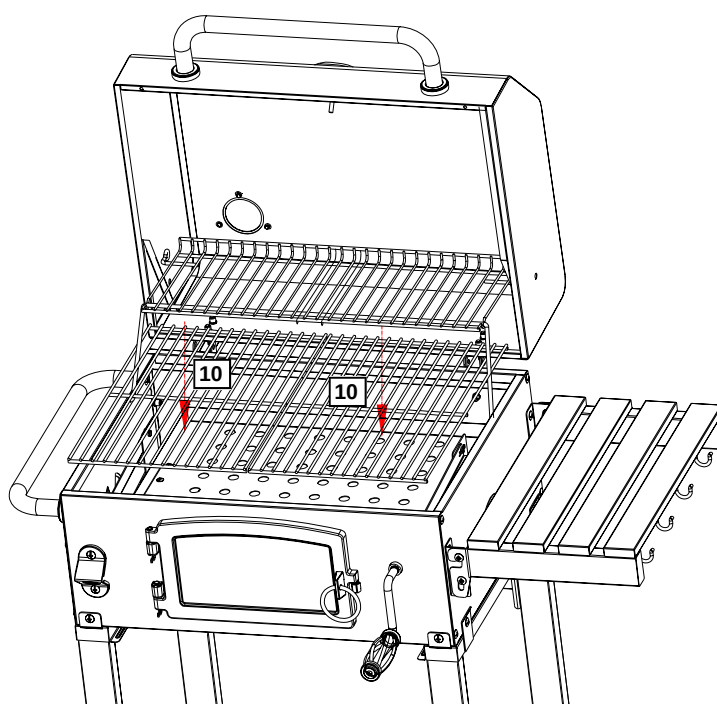

Assembly Instructions


Step 25

 Fix the ash pan handle **23** on the ash pan **24** using 15mm bolts **A**.

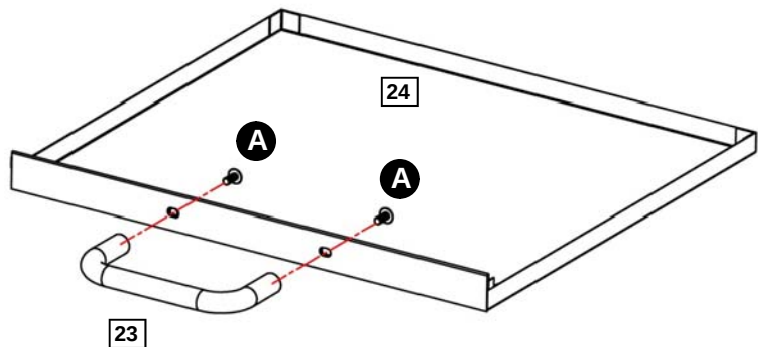

Step 26

 
Put the ash pan **24** under the firebowl.

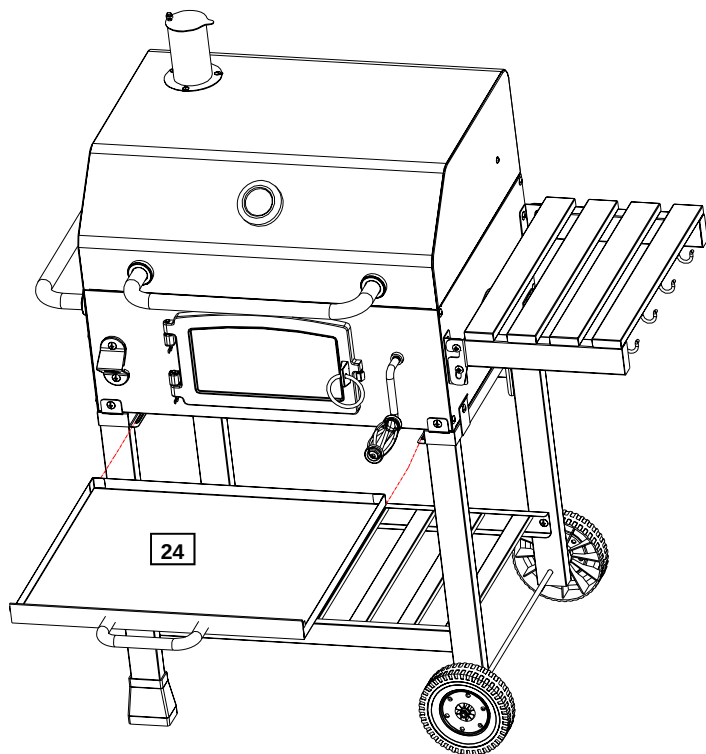

Assembly Instructions

Step 27

 Assembly is complete.

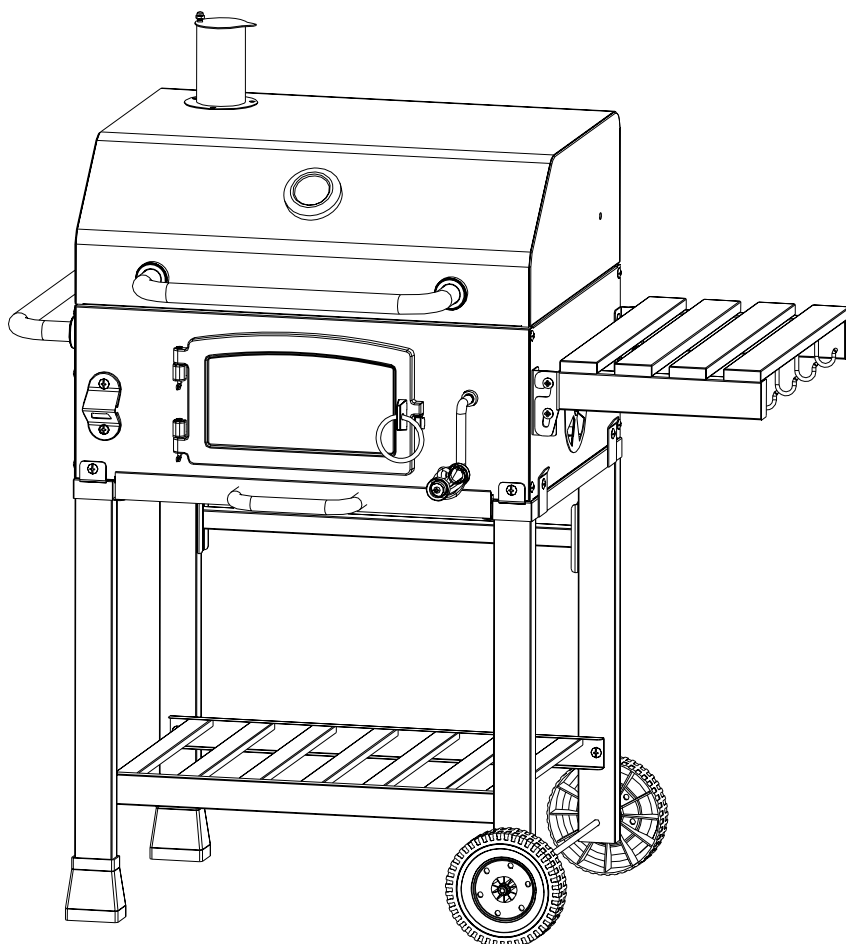

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800.**

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT. Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland