 


Dressing Table Green

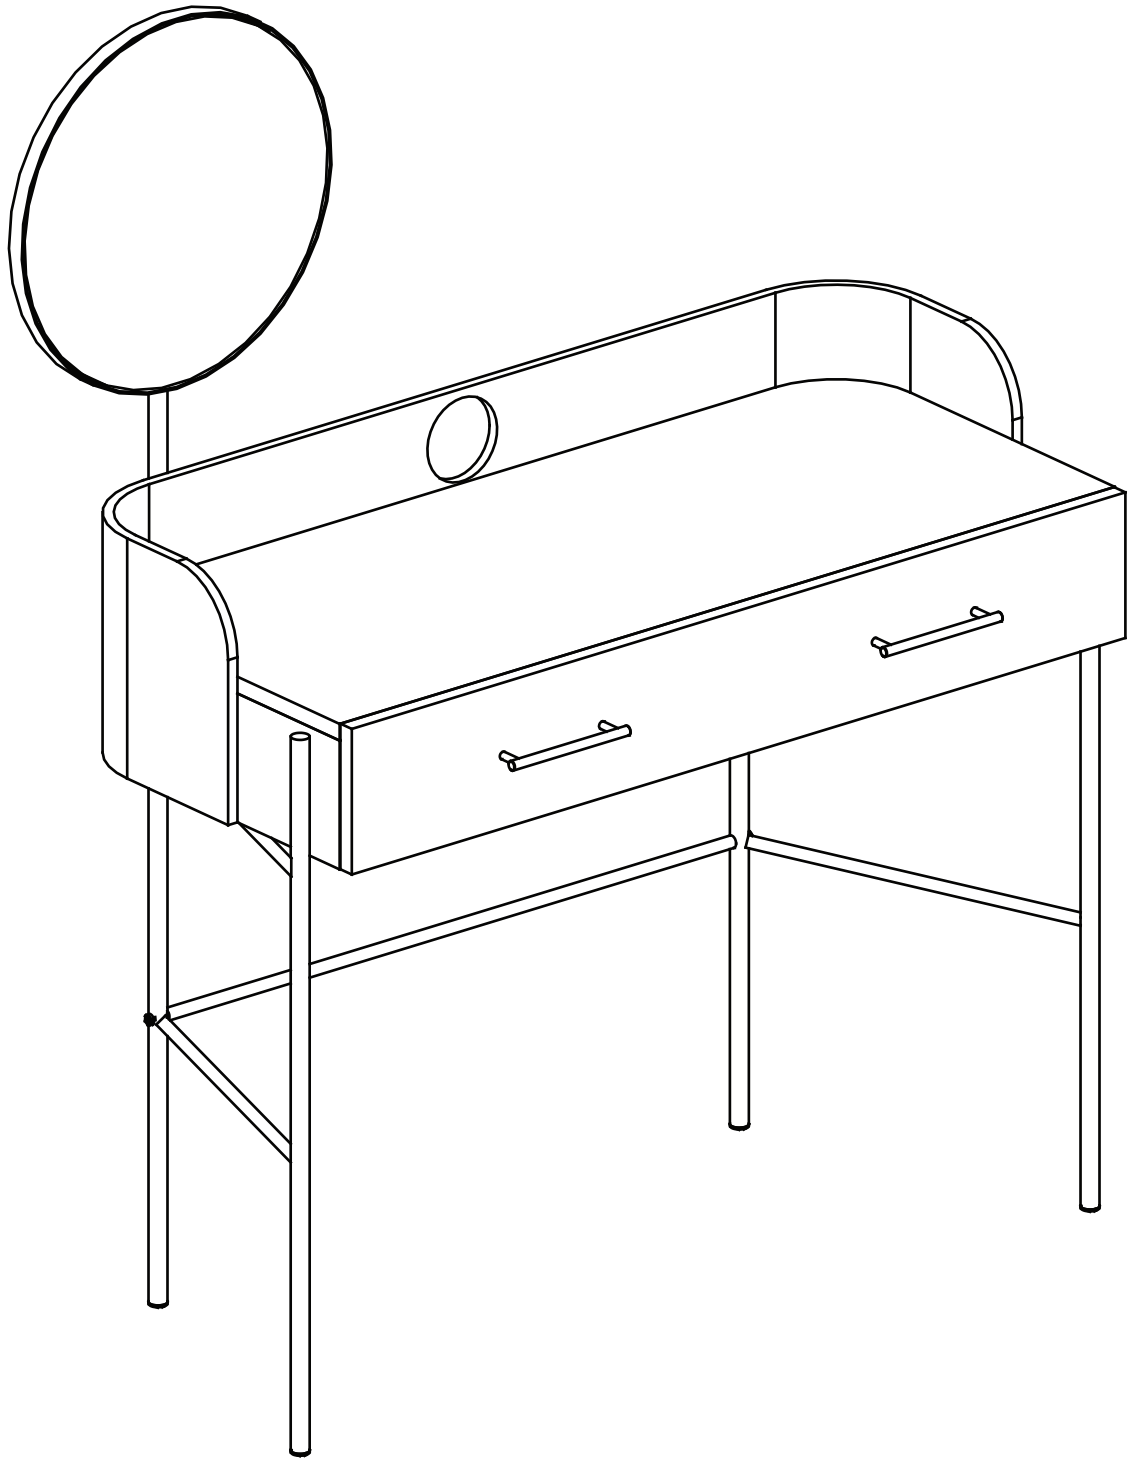

Spare Parts

 www.argos-support.co.uk

 Help@ClickSpares.co.uk

 0370 112 1928

Customer Support

 0345 640 2020



Safety and Care Advice

 
Product Details

Dressing Table Green 869/6571

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

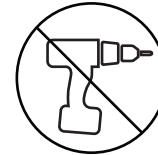

- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Glass Safety

- Keep these instruction for future reference.
- Imported by:
Argos Ltd.
489-499 Avebury Boulevard.
Saxon Gate West.
Central Milton Keynes.
Mk9 2NW
- If the glass is chipped or broken, stop using the product and consult the Manufacturer or Supplier.
- Batch No:
- Date of Manufacture:
- Type of glass used: 5mm glass.

Warnings

- A. Handle with care.
- B. Do not place very hot or very cold items directly on glass surfaces.
- C. Do not sit or stand on glass surfaces.
- D. Do not strike the glass with hard or pointed items, or use the glass as a chopping surface.
- E. Do not use abrasives cleaning agents, as these may scratch the glass.
- F. Always supervise young children around glass products.


Additional Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- This product is compliant EN 12521.


Sainsbury's Argos is a trading name of both: Argos Limited, Registered office: 489-499 Avebury Boulevard, Milton Keynes, United Kingdom, MK9 2NW, registered number: 01081551 (England and Wales); and Sainsbury's Supermarkets Limited, Registered office: 33 Holborn, London, EC1N 2HT, registered number: 03261722 (England and Wales). Both companies are subsidiaries of J Sainsbury's plc.

Fittings (Shown to scale)

 Bag 1

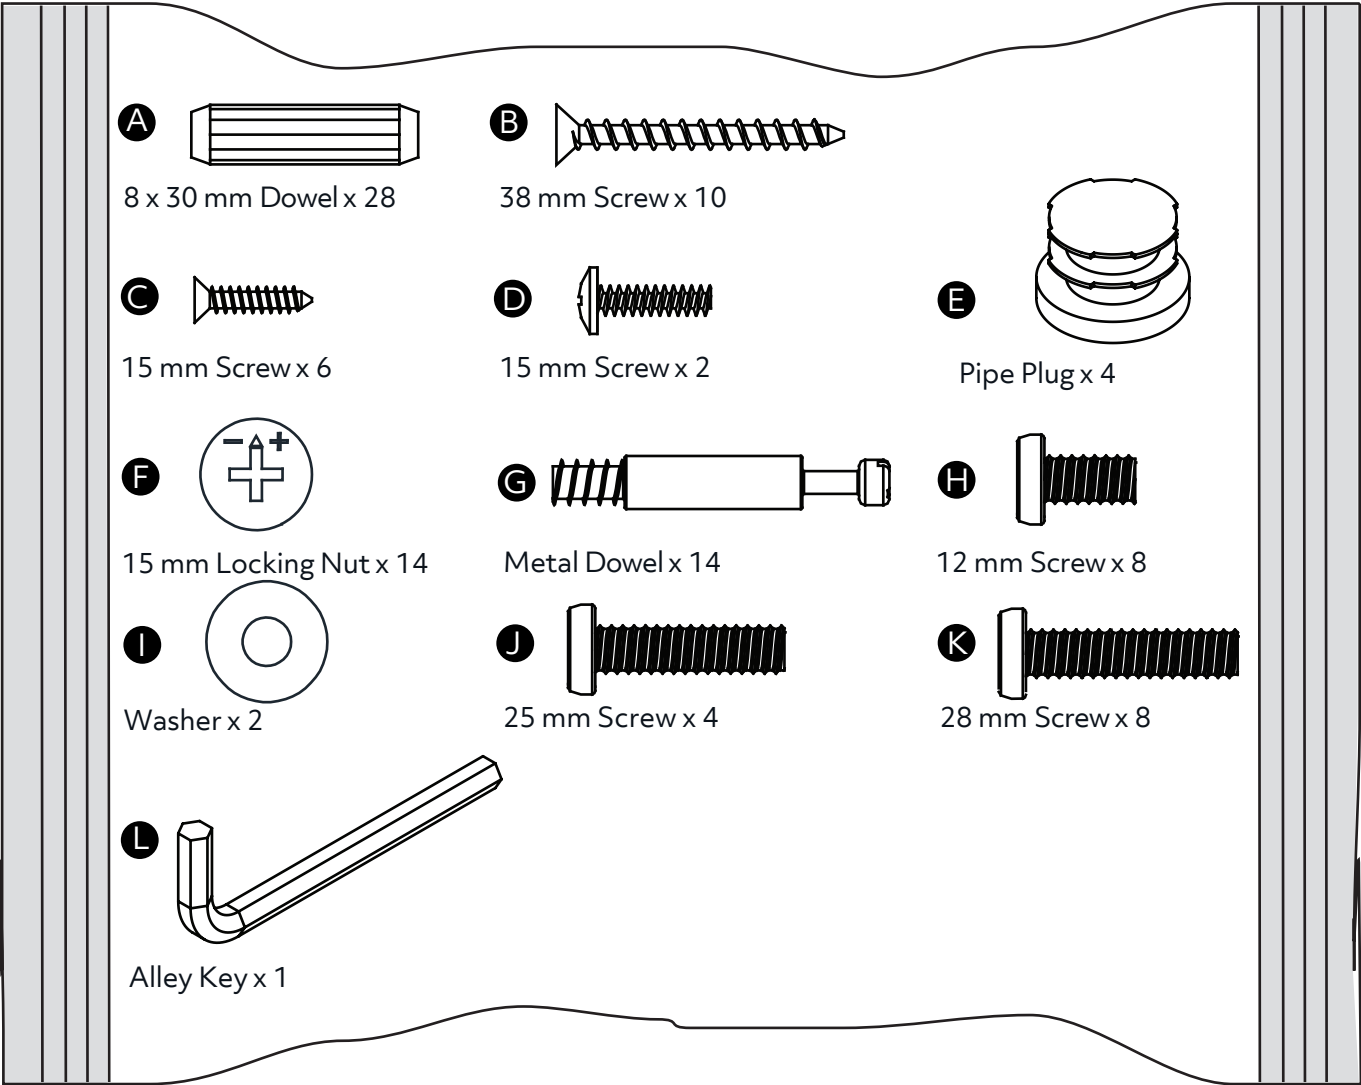


Bag 2

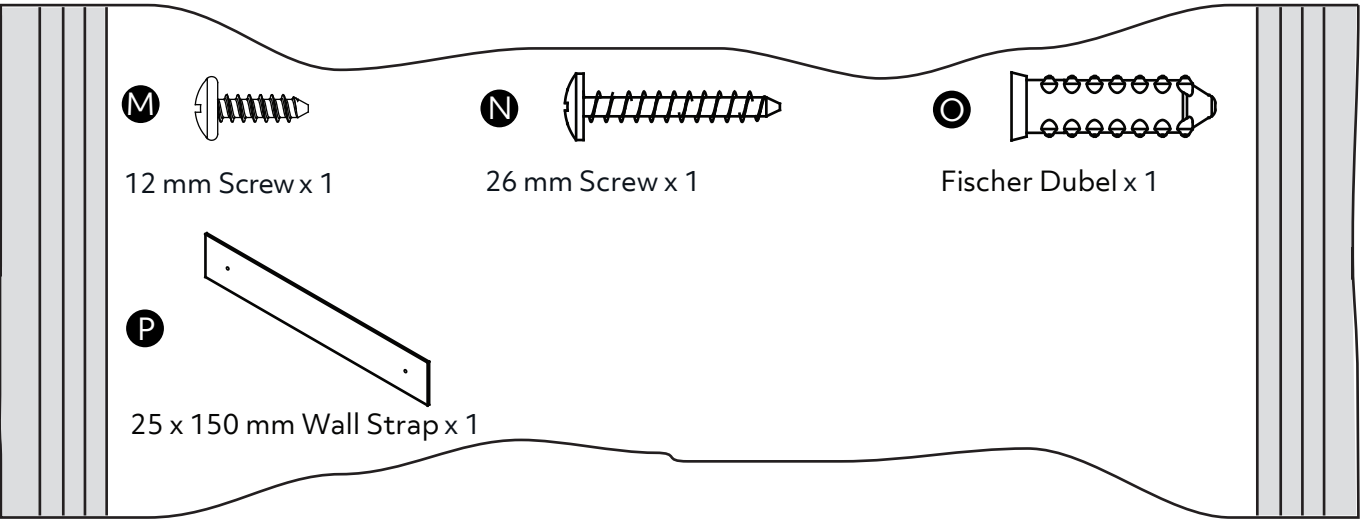 


Fittings (Shown to scale)

 Bag 3

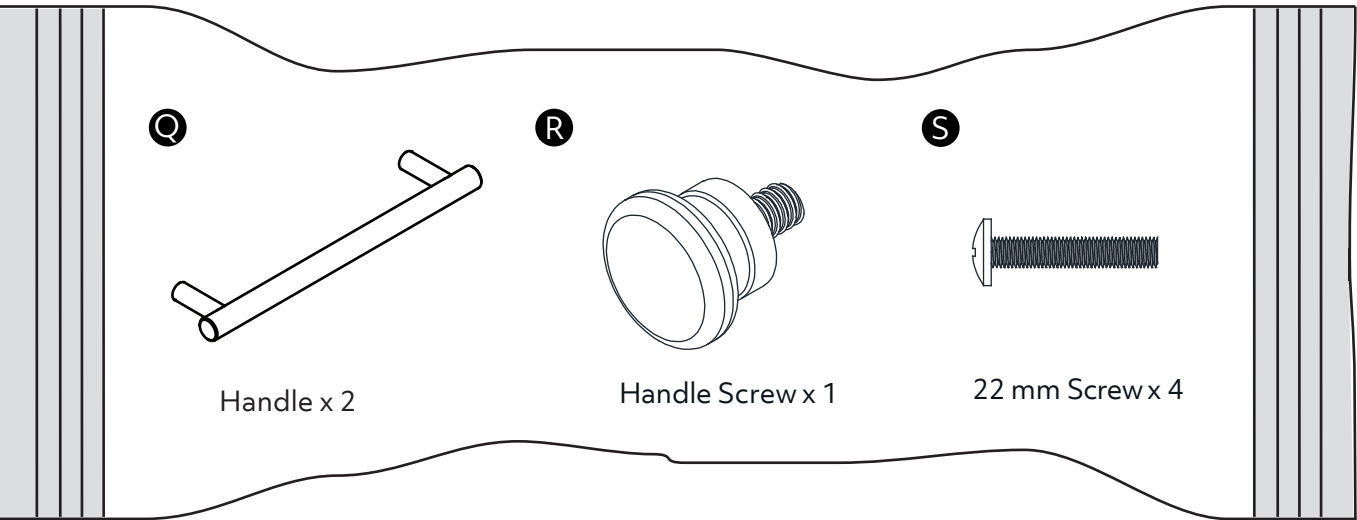


Hardware

 T

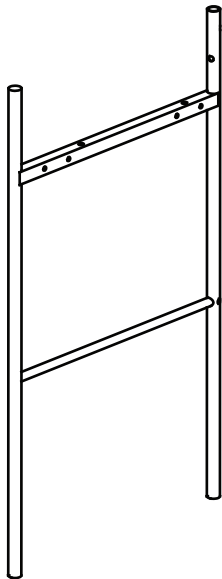


Metal Left Foot x 1

 U

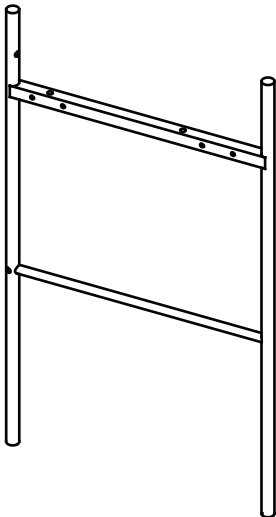


Metal Right Foot x 1

 V

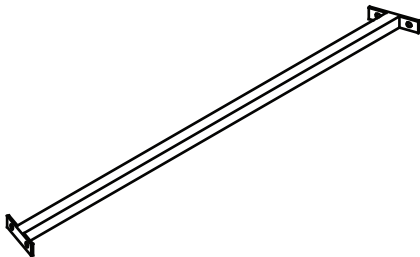


Metal Tube x 1

 W

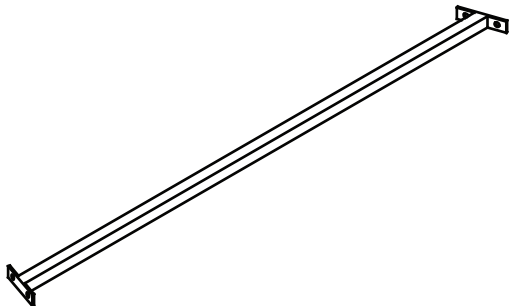


Metal Tube x 1

 X

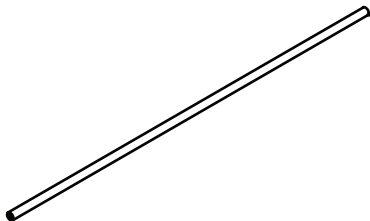


Metal Tube x 1

 Y

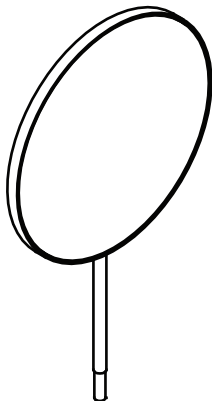


Mirror x 1

 Z

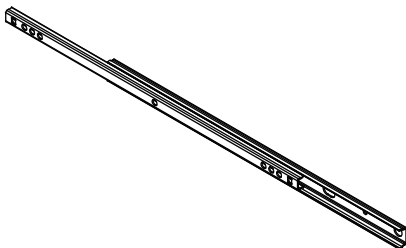


Drawer Runner x 2

 Tools required




Phillips screwdriver
(small & medium)

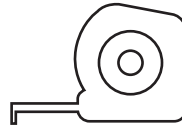 


Ruler/tape
measure



 
Phillips screwdriver
(small & medium)

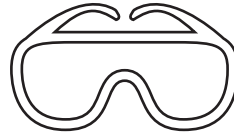

 Eye protection
(when using a
hammer or glue)

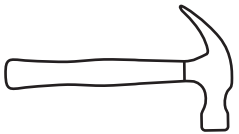

Large hammer

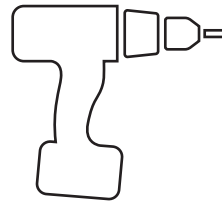 

Power Drill

 


Pencil




Drill Heads


Panels

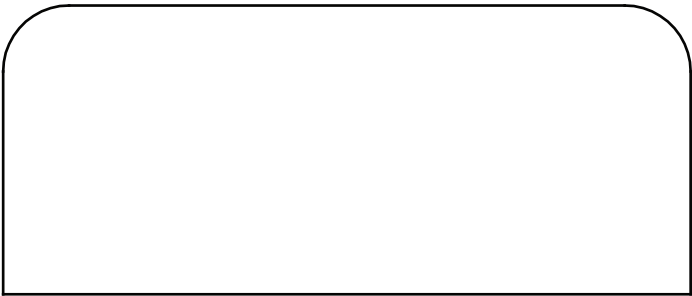


1 Top Panel
(1000 x 420 mm)

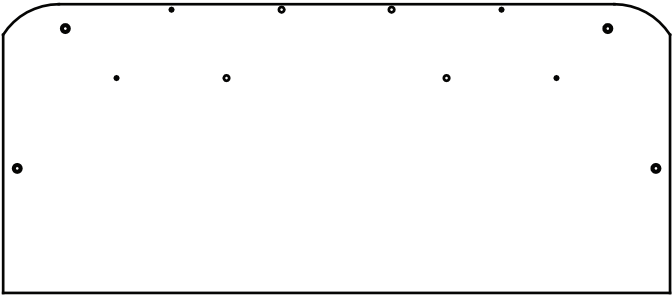 

2 Bottom Panel
(970 x 420 mm)

 


3 Right Side Panel
(320 x 139 mm)

 


4 Left Side Panel
(320 x 139 mm)



 
5 Support Panel
(970 x 124 mm)



6 Back Panel
(630 x 124 mm)

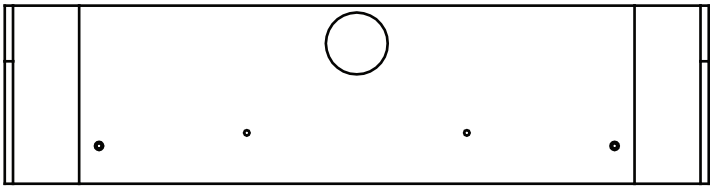 


7 Bent Wood
(1024 x 259 mm)

 


8 Drawer Front Side
(998 x 157 mm)



 
9 Drawer Back Side
(928 x 99 mm)




10 Drawer Right Side
(300 x 99 mm)

 

11 Drawer Left Side
(300 x 99 mm)



 


 12 Drawer Support Panel x 2
(285 x 55 mm)





13 Drawer Bottom
(935 x 292 mm)


 
 
 
1

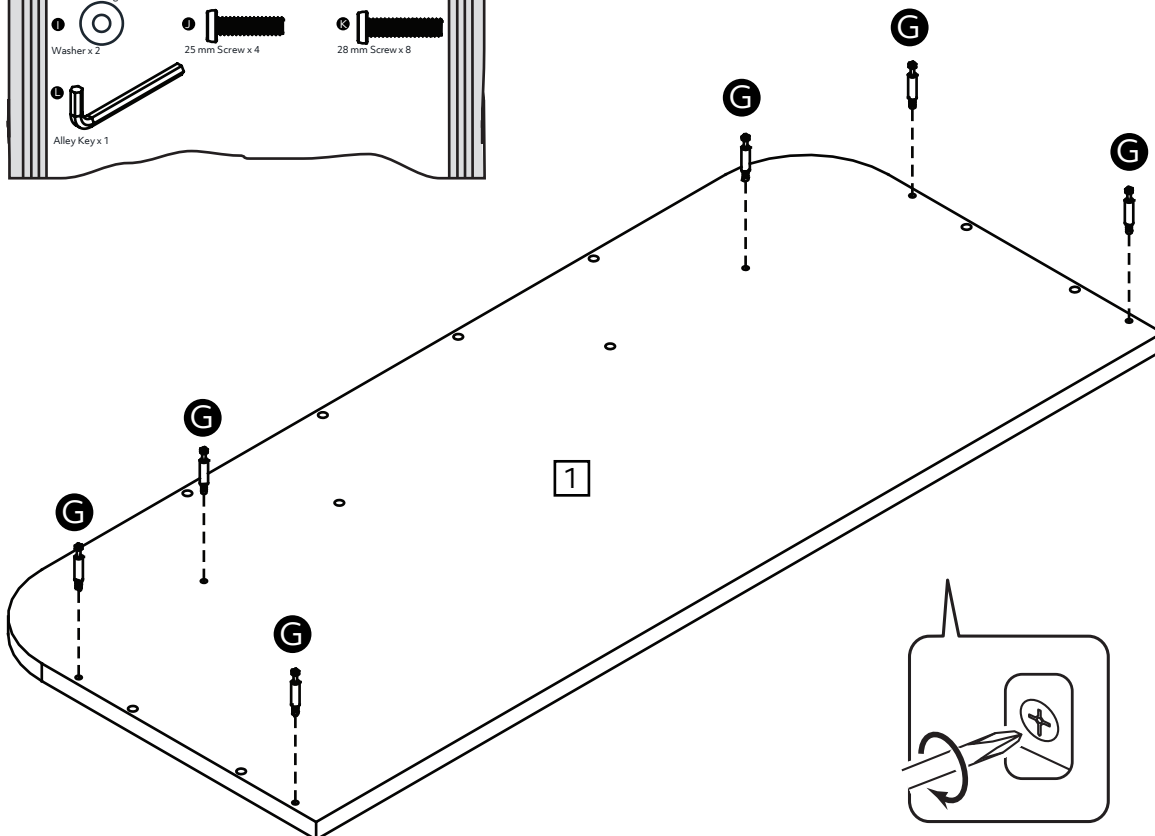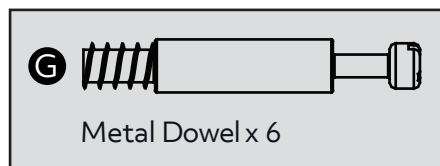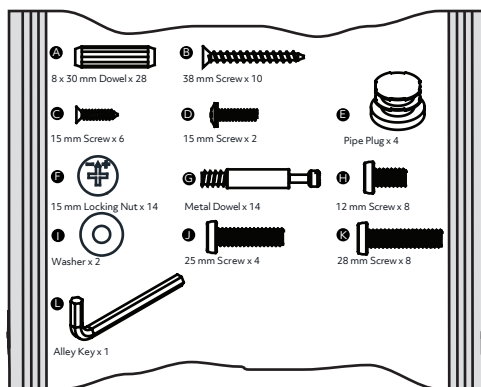



2

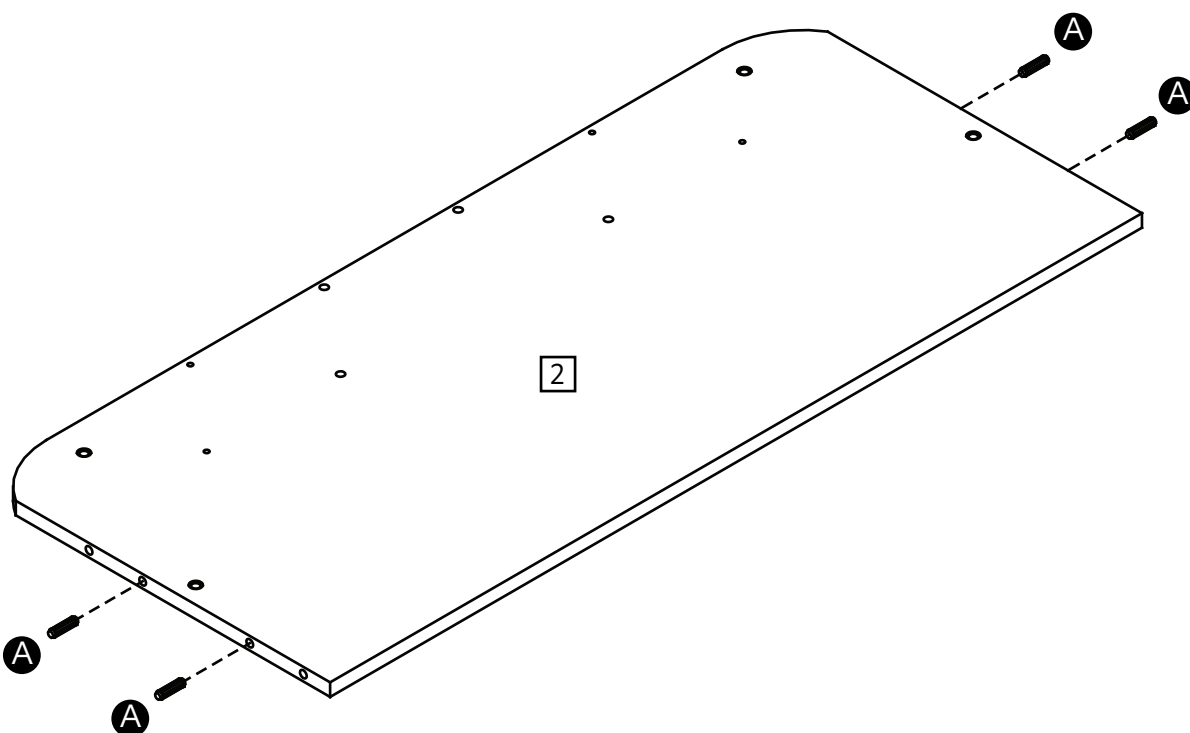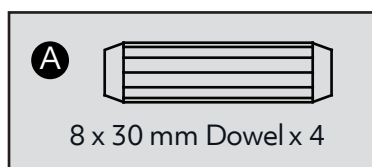  



3

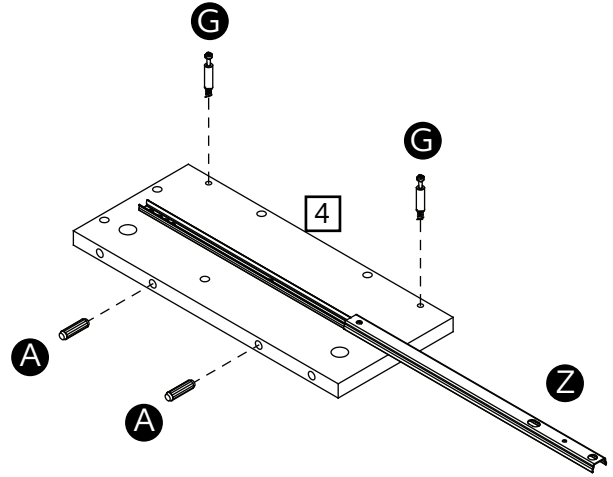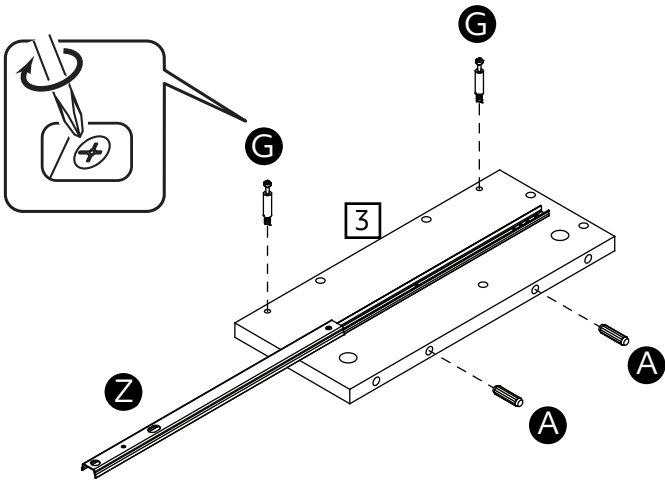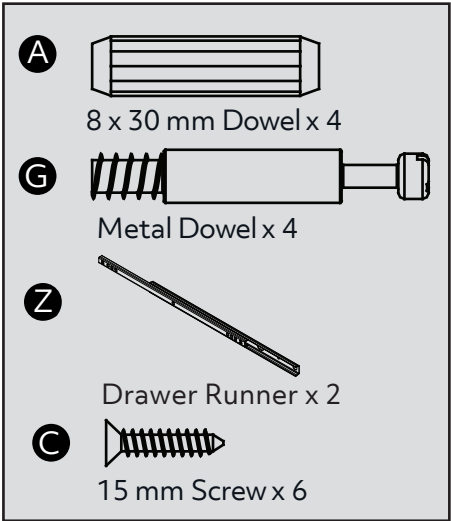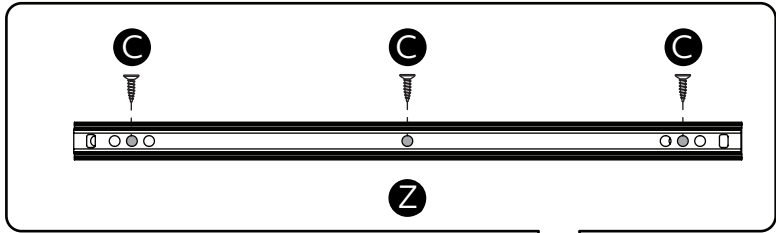    


4

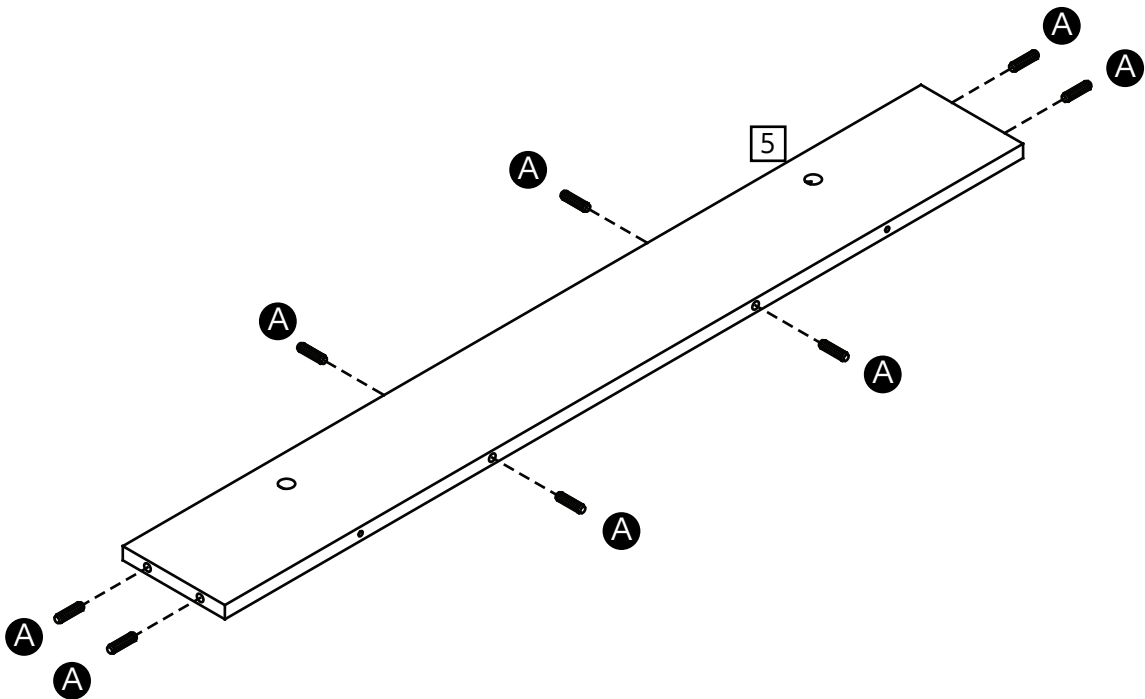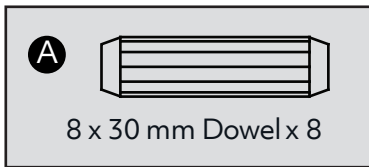  


5

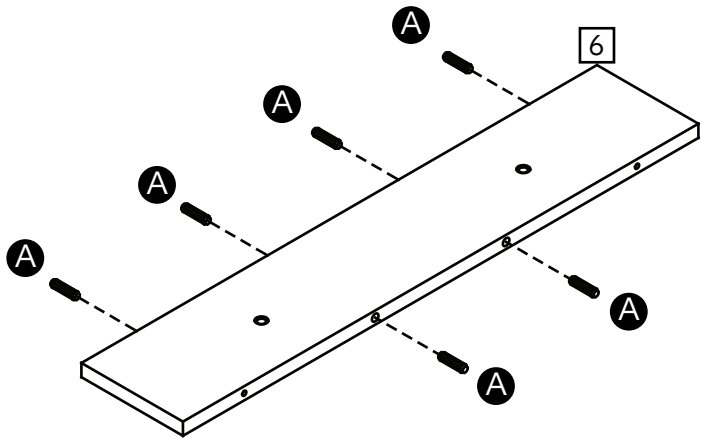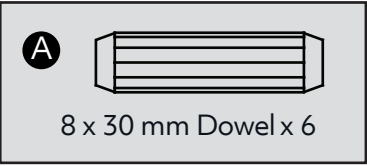  



6

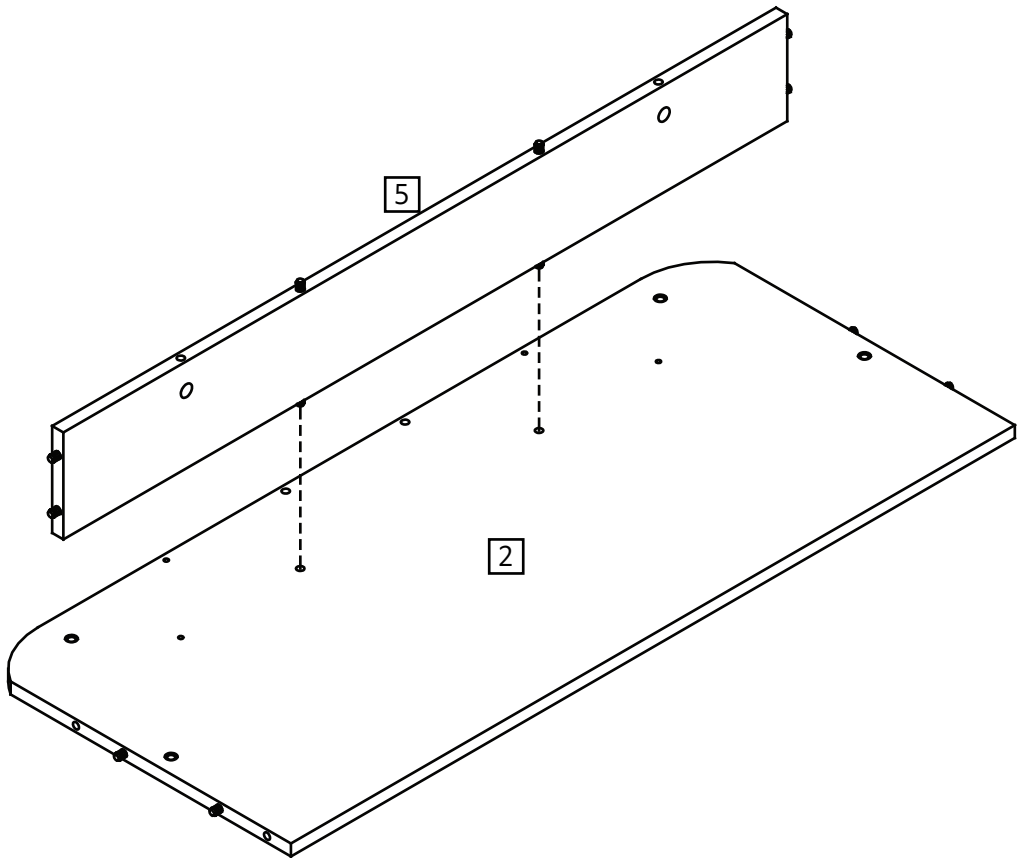 


7

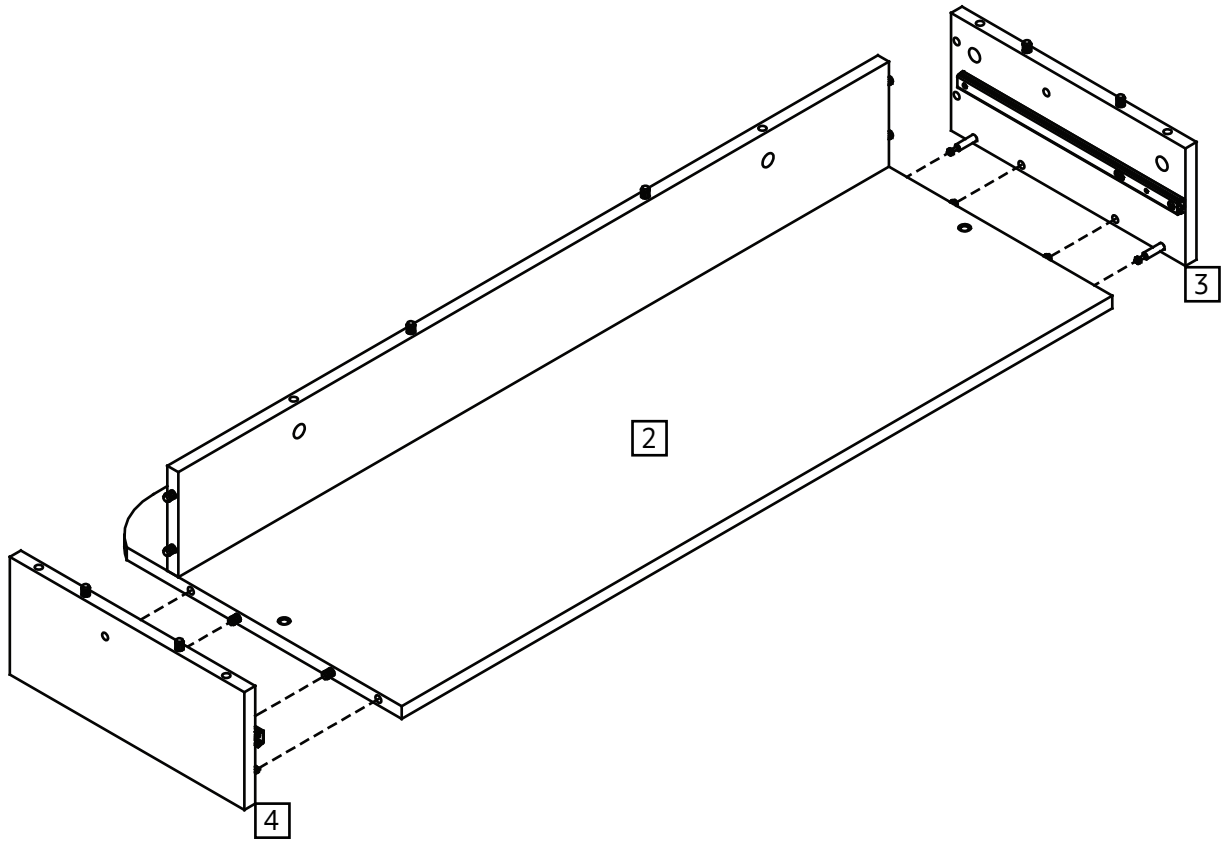 



8

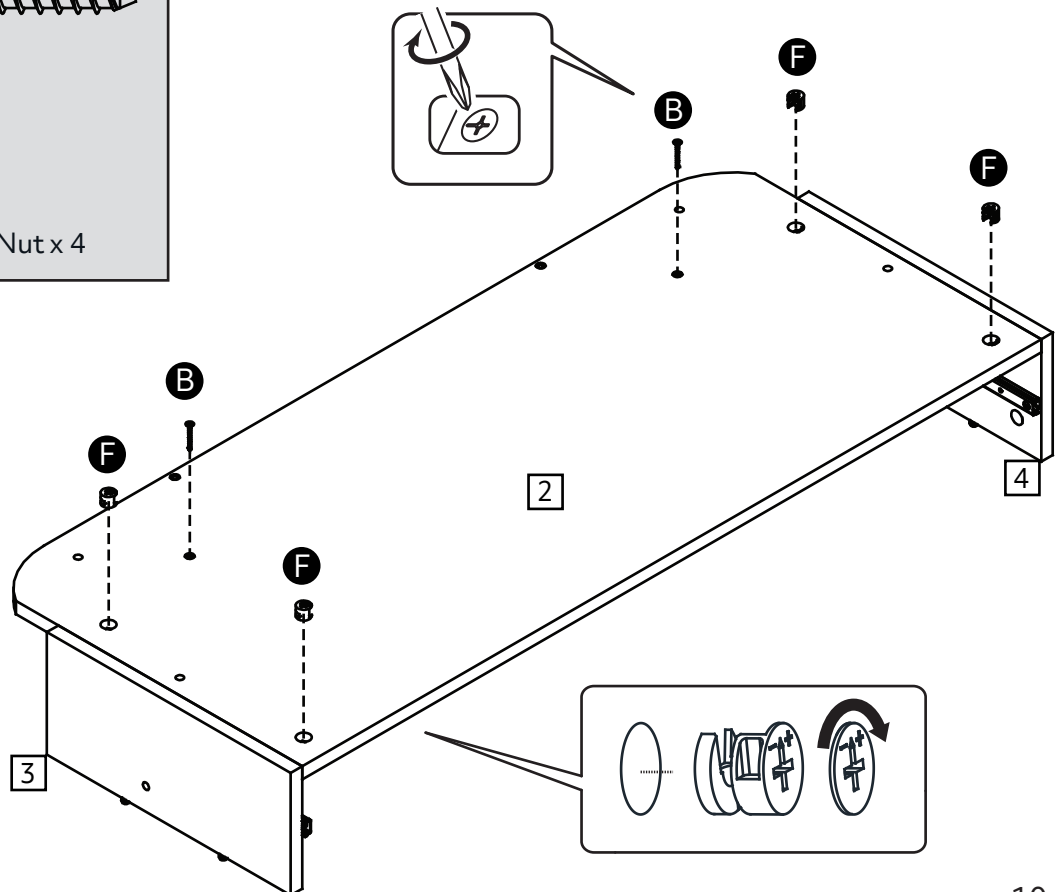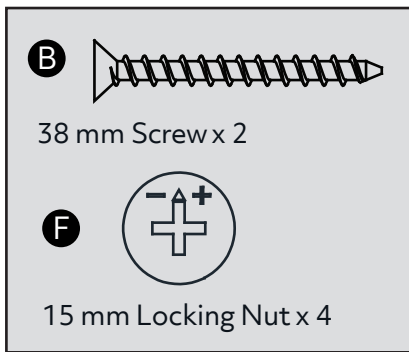  



9

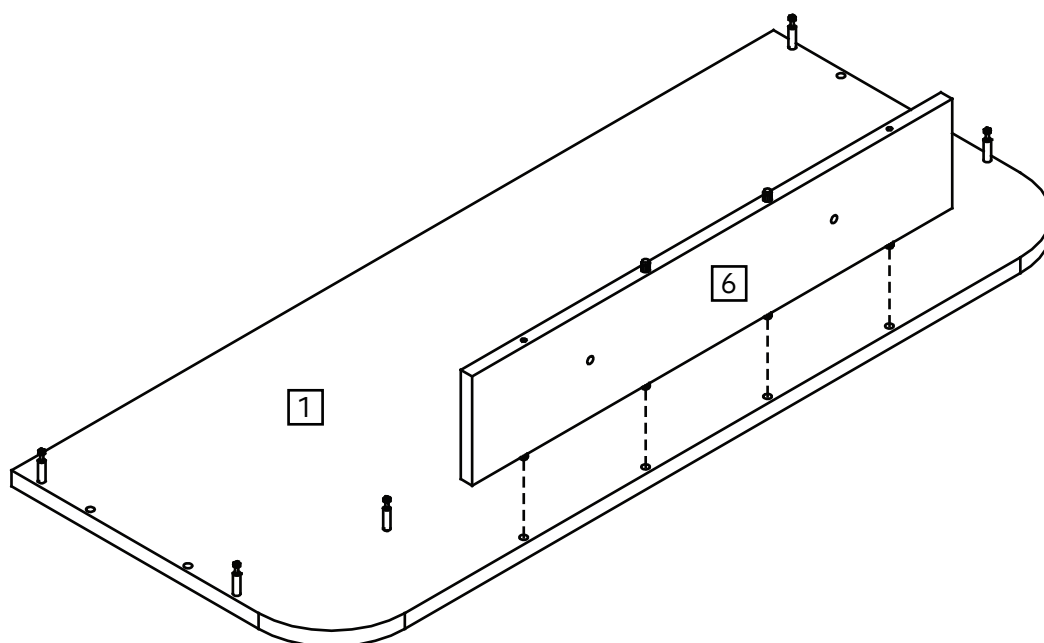 


10

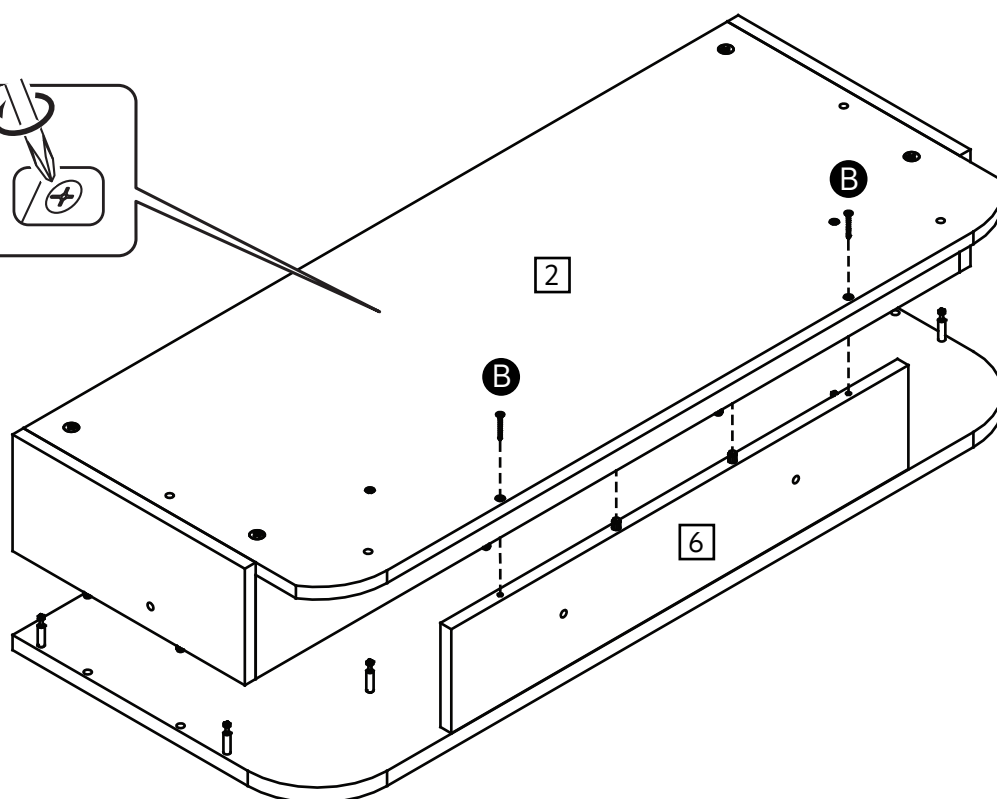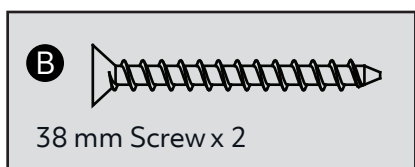  


11

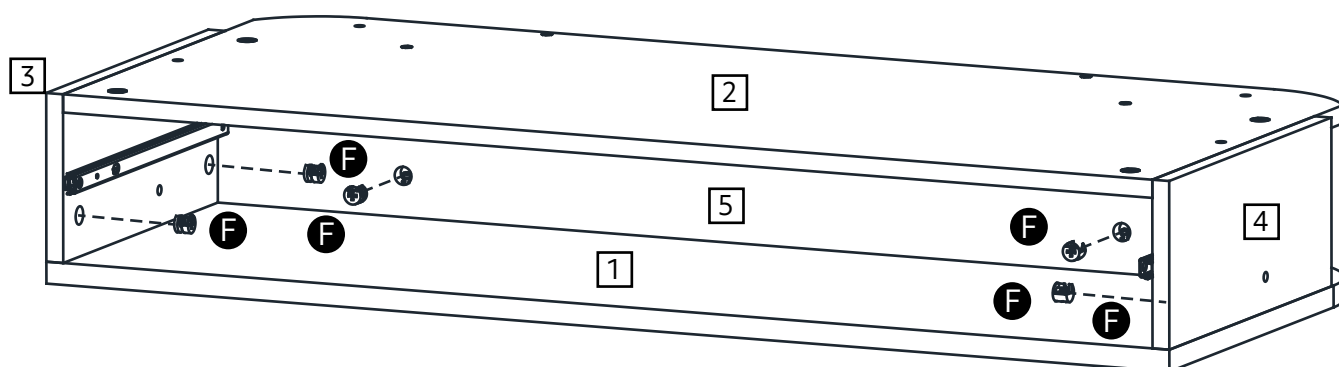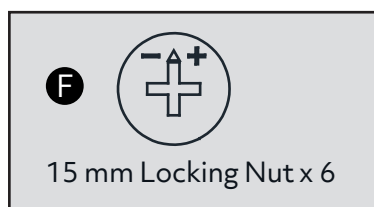  


12

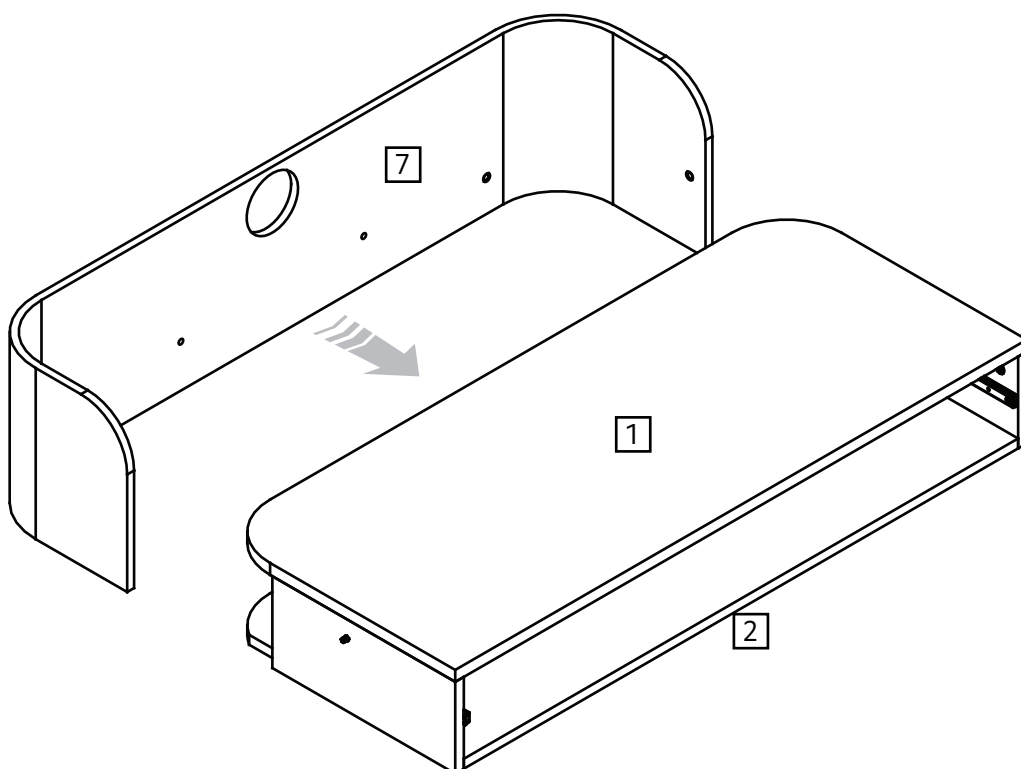 


13

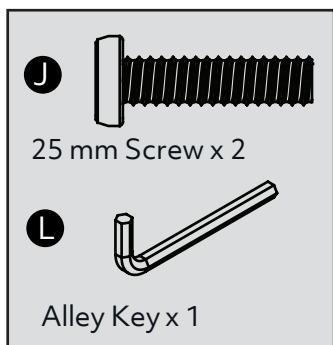 


 
Fasten the bolts using the alley key but do not fully tighten at this stage.

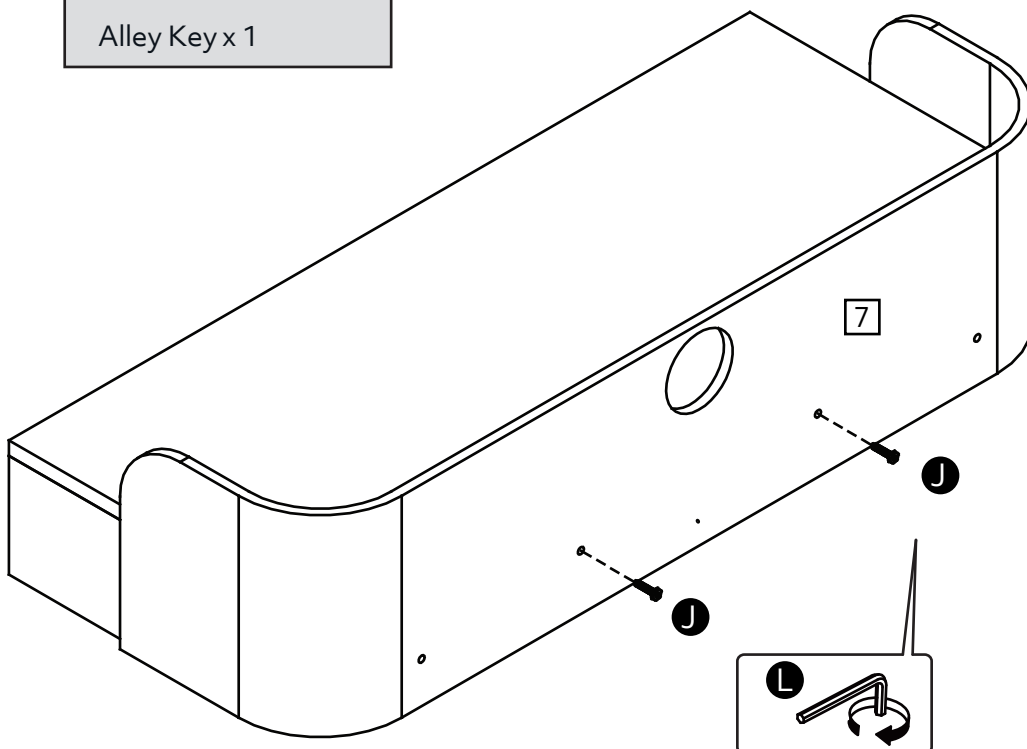



14

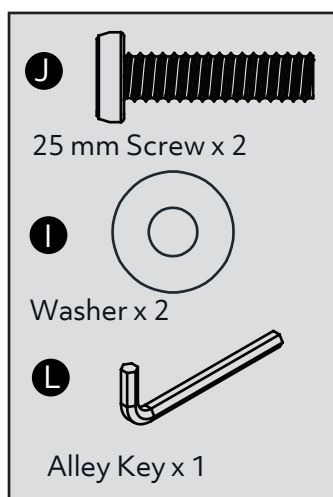 

  Fully tighten all bolts using alley key.

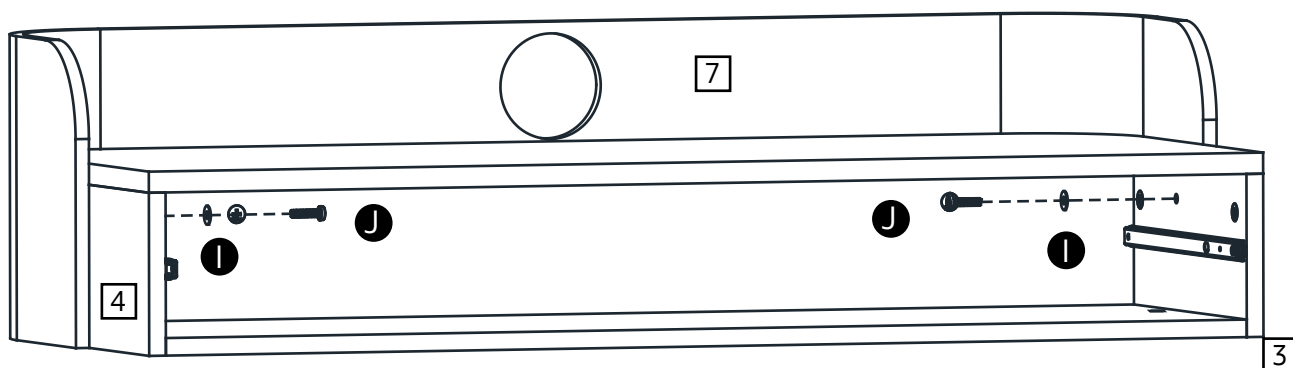
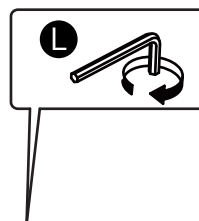


15

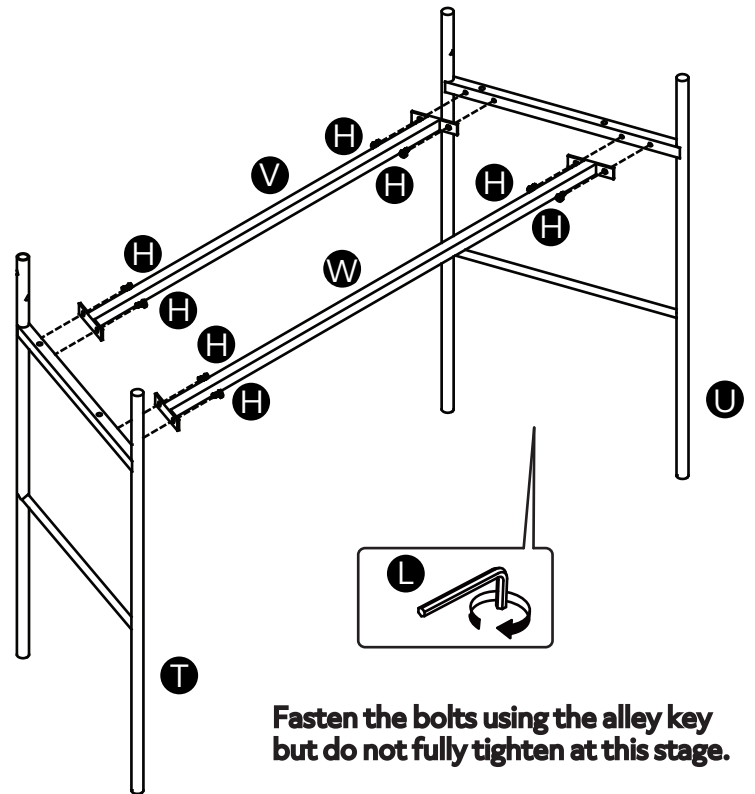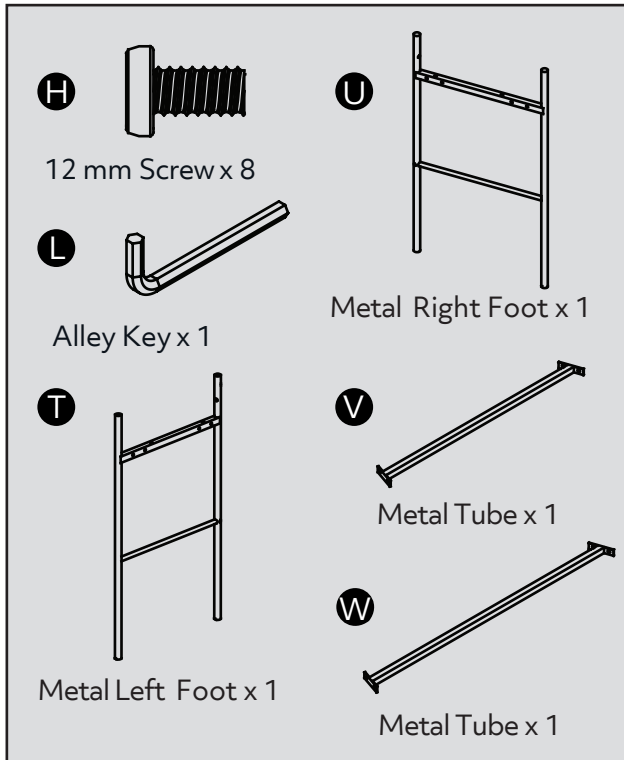  



Fasten the bolts using the alley key but do not fully tighten at this stage.

  16

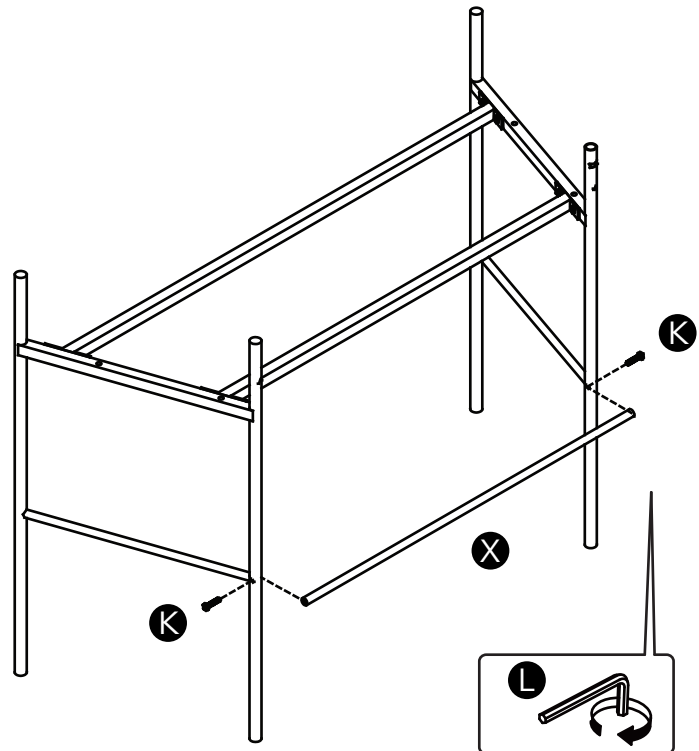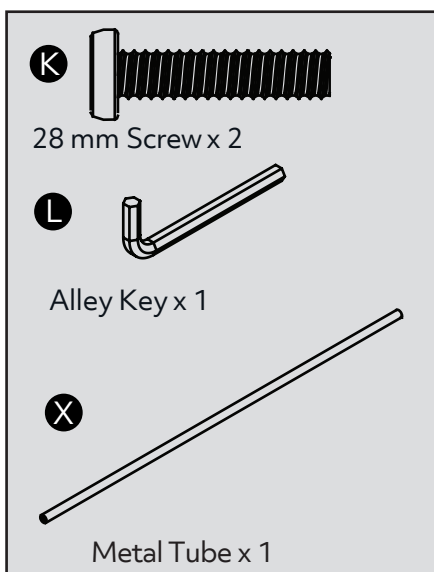


Fasten the bolts using the alley key but do not fully tighten at this stage.

  
17

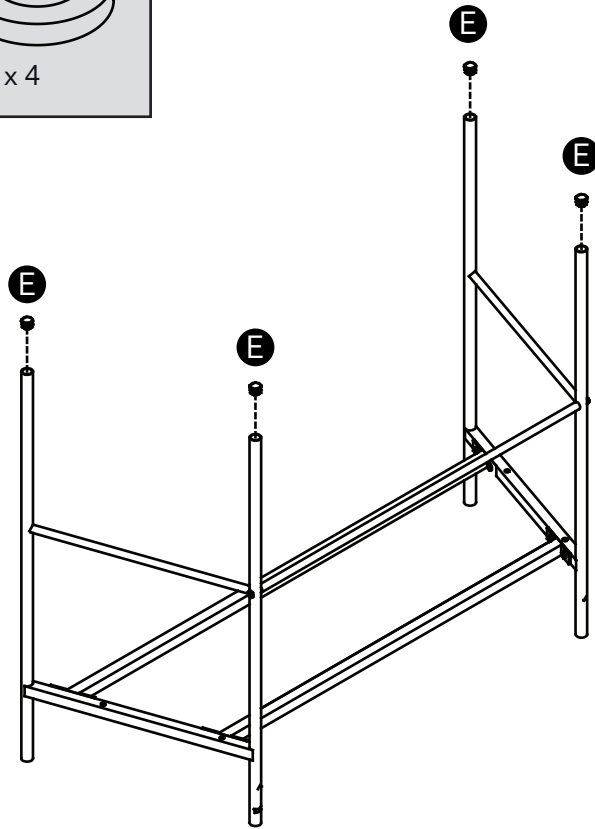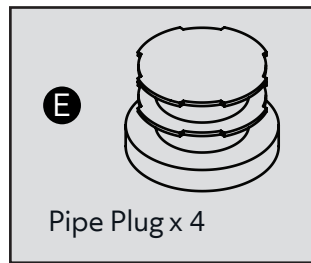


18

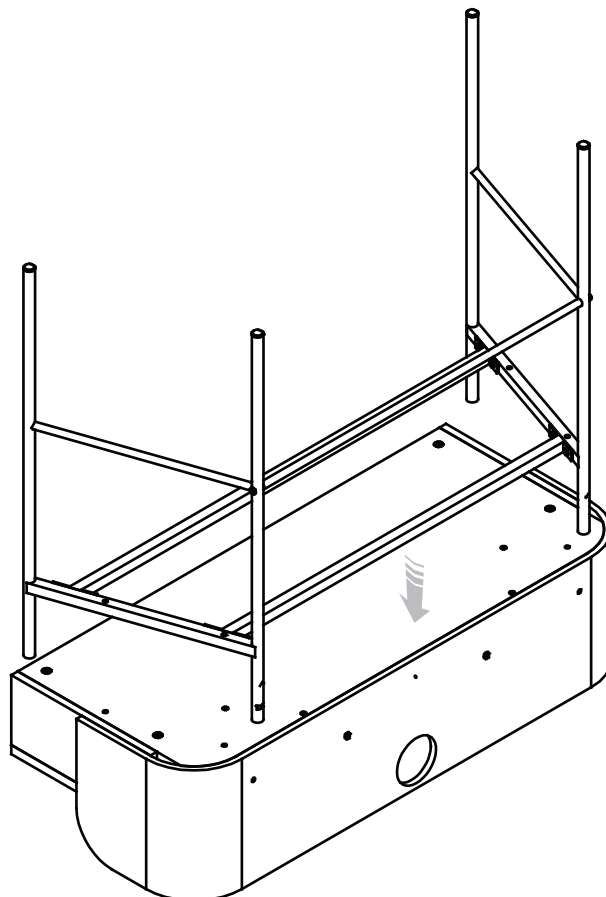 



19

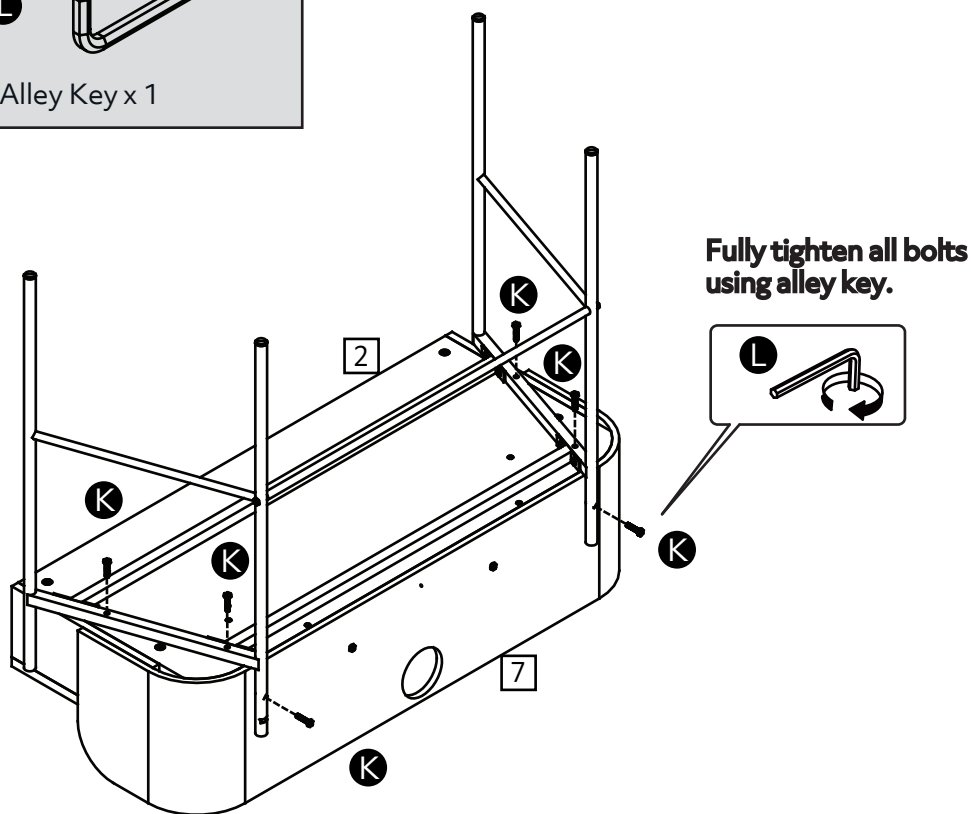 



20

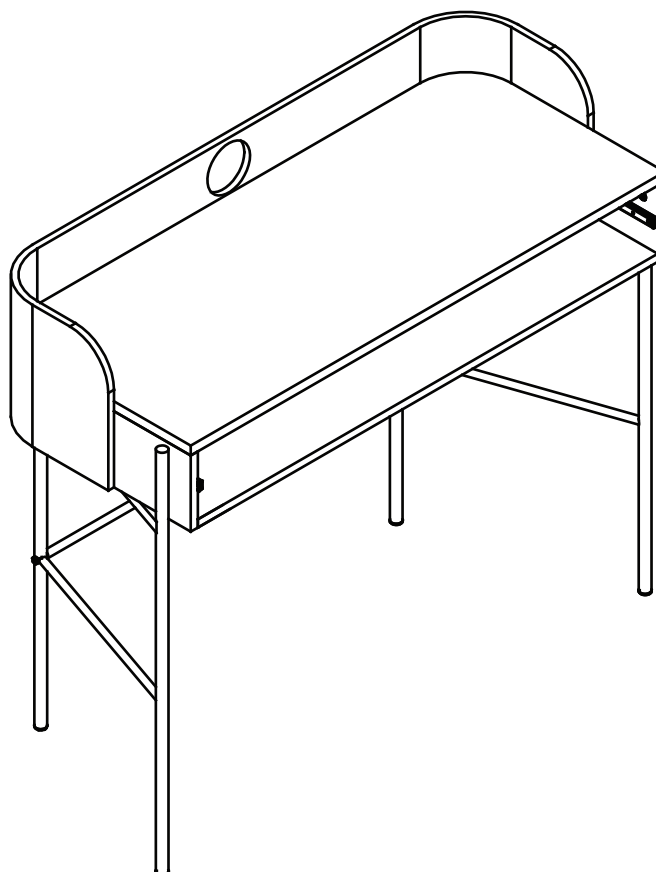 



21

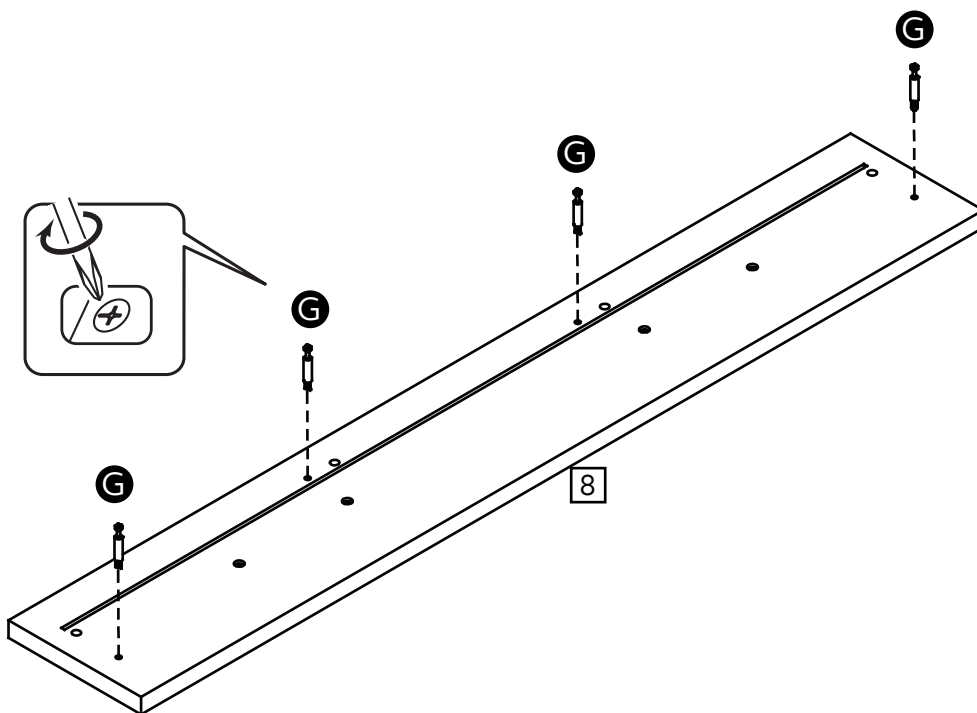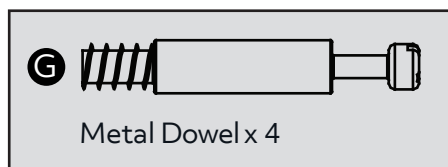  



22

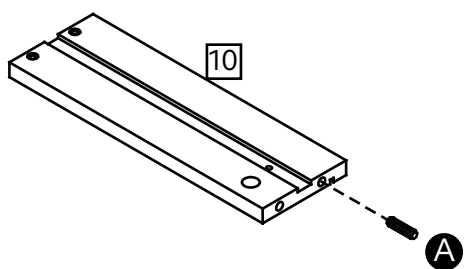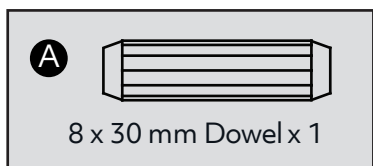  


23

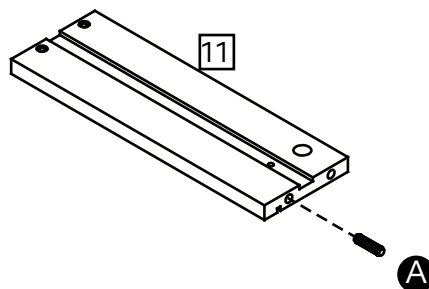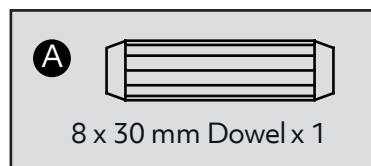  




24

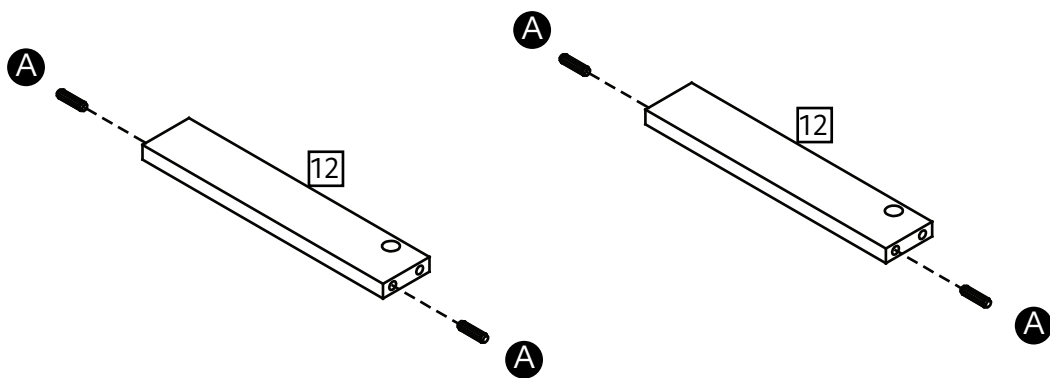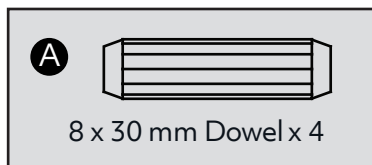  


25

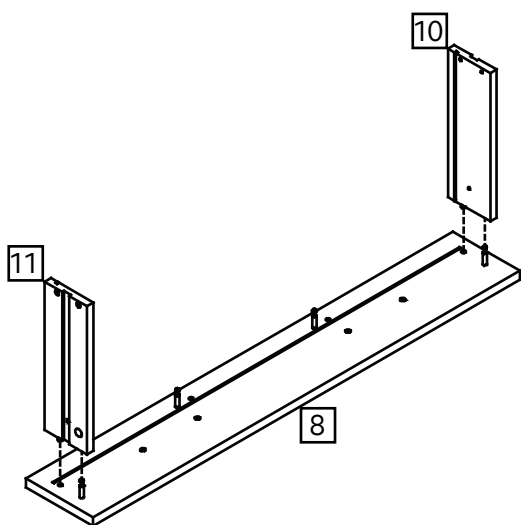 



26

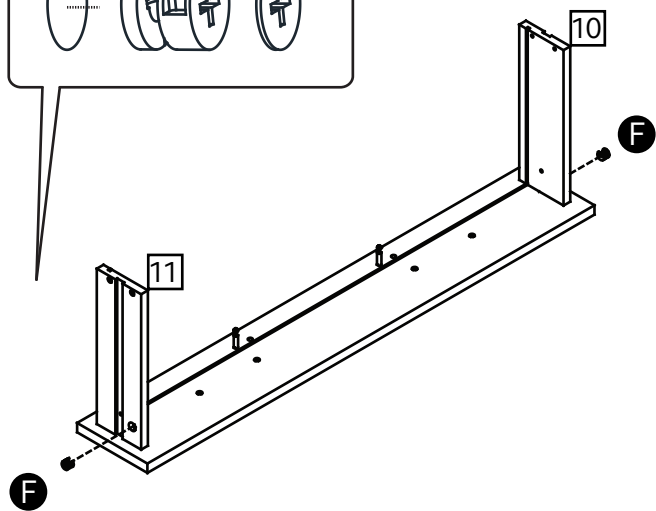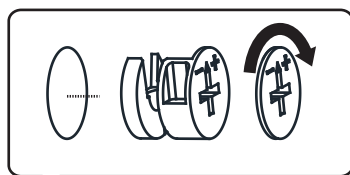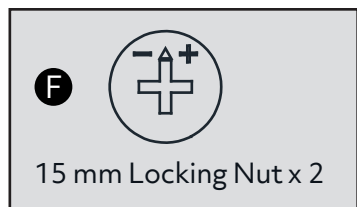   


27

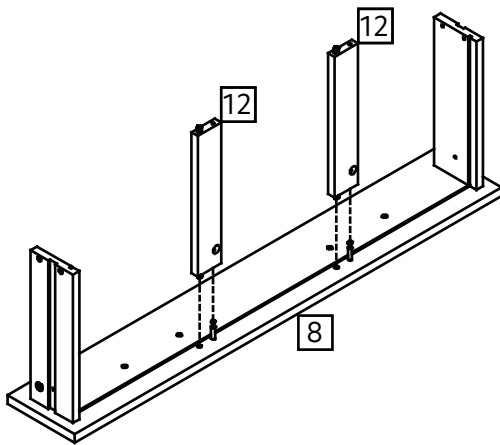 



28

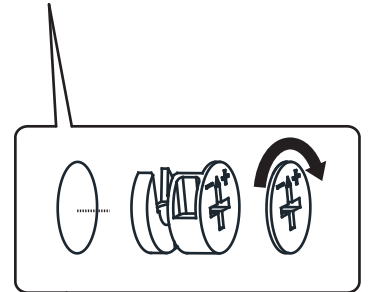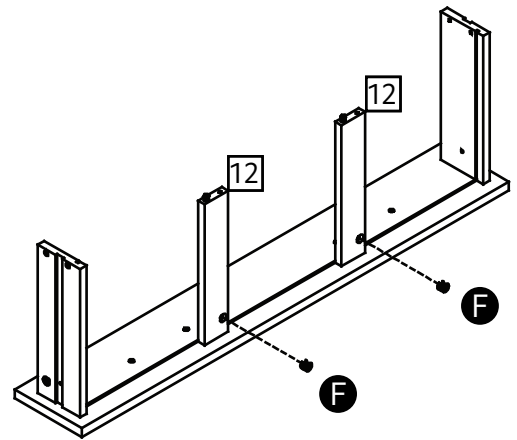  



29

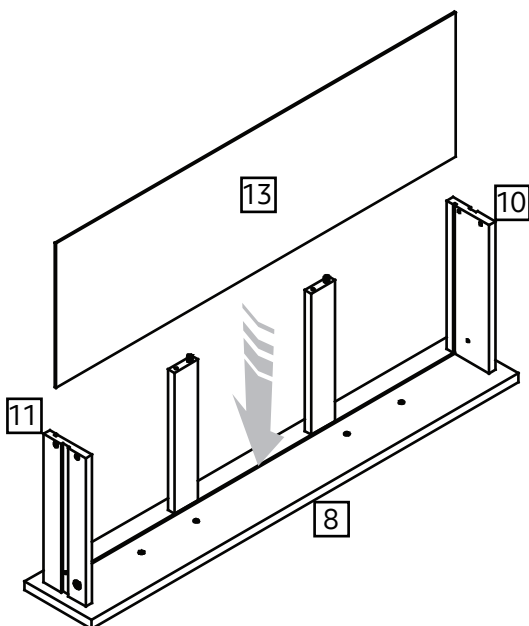 





30

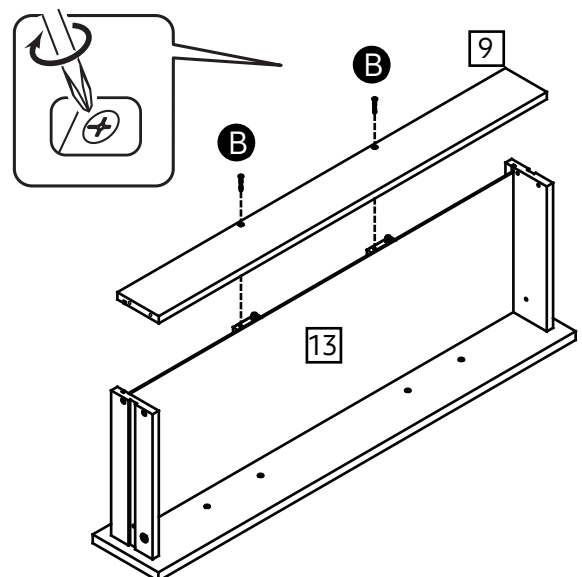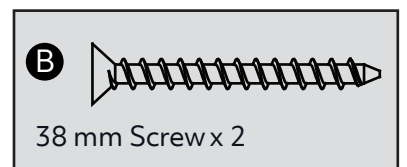  


31

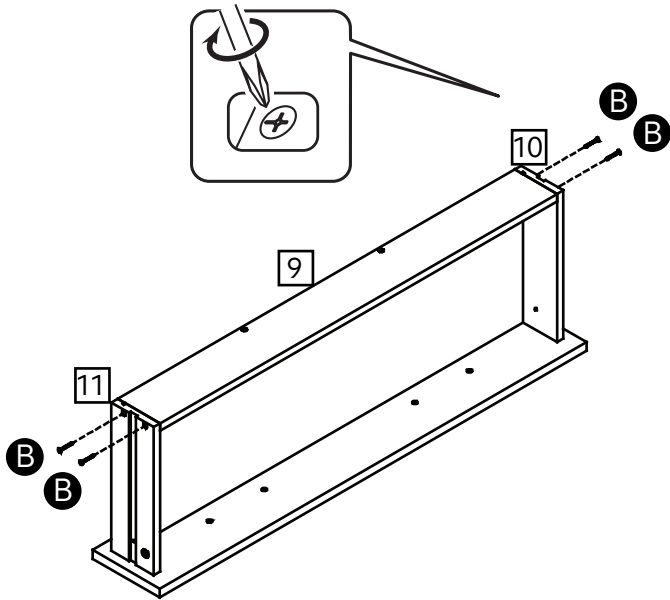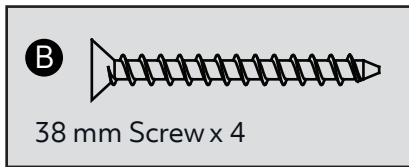  



32

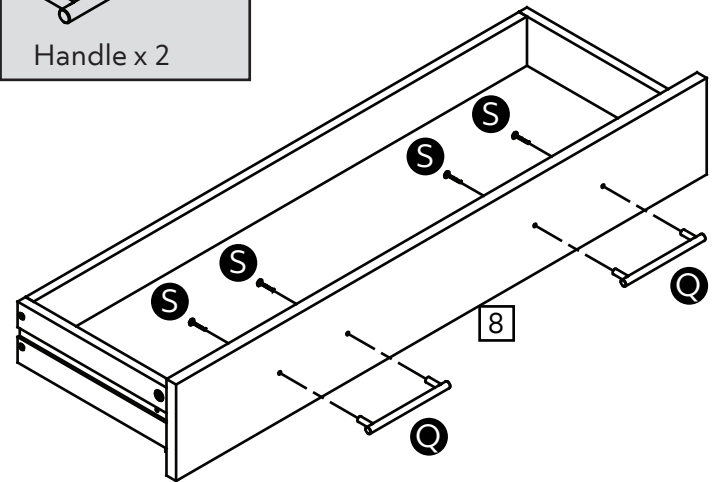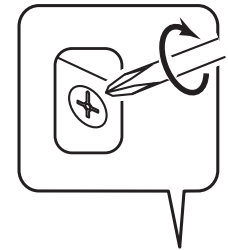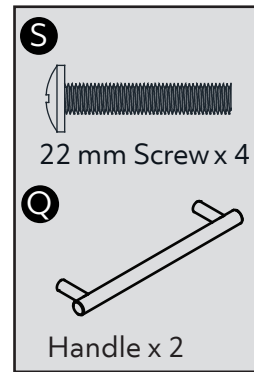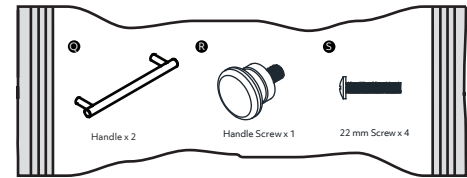    


33

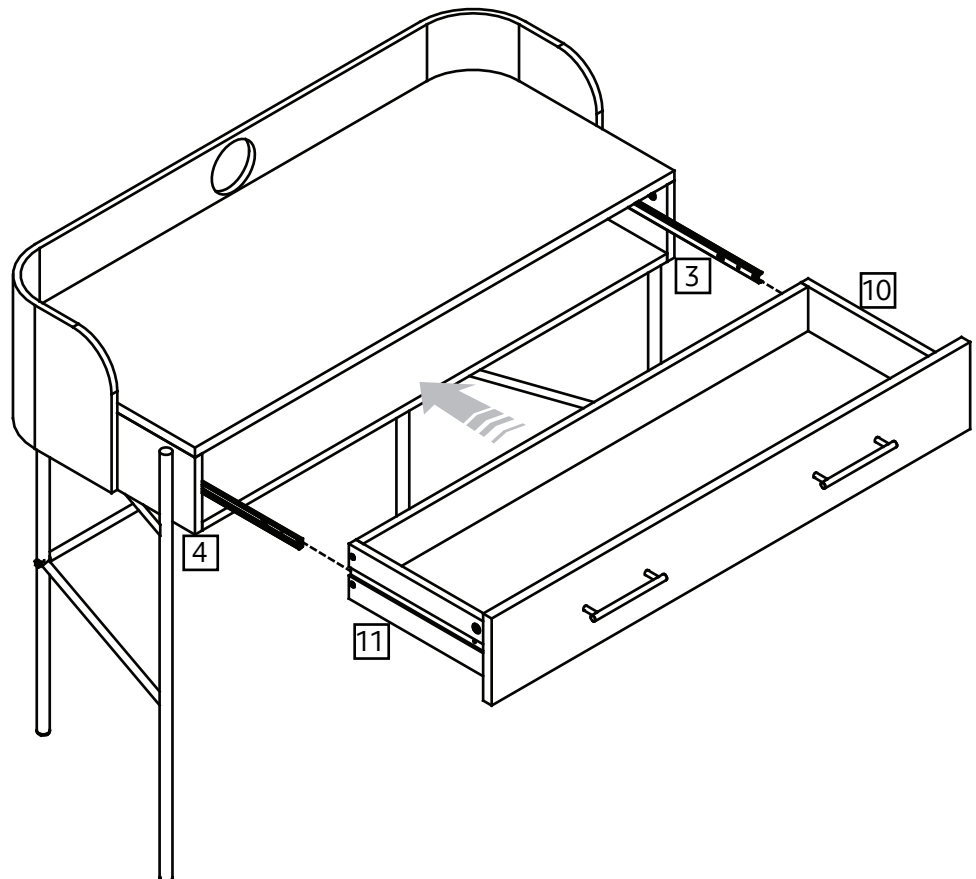 



34

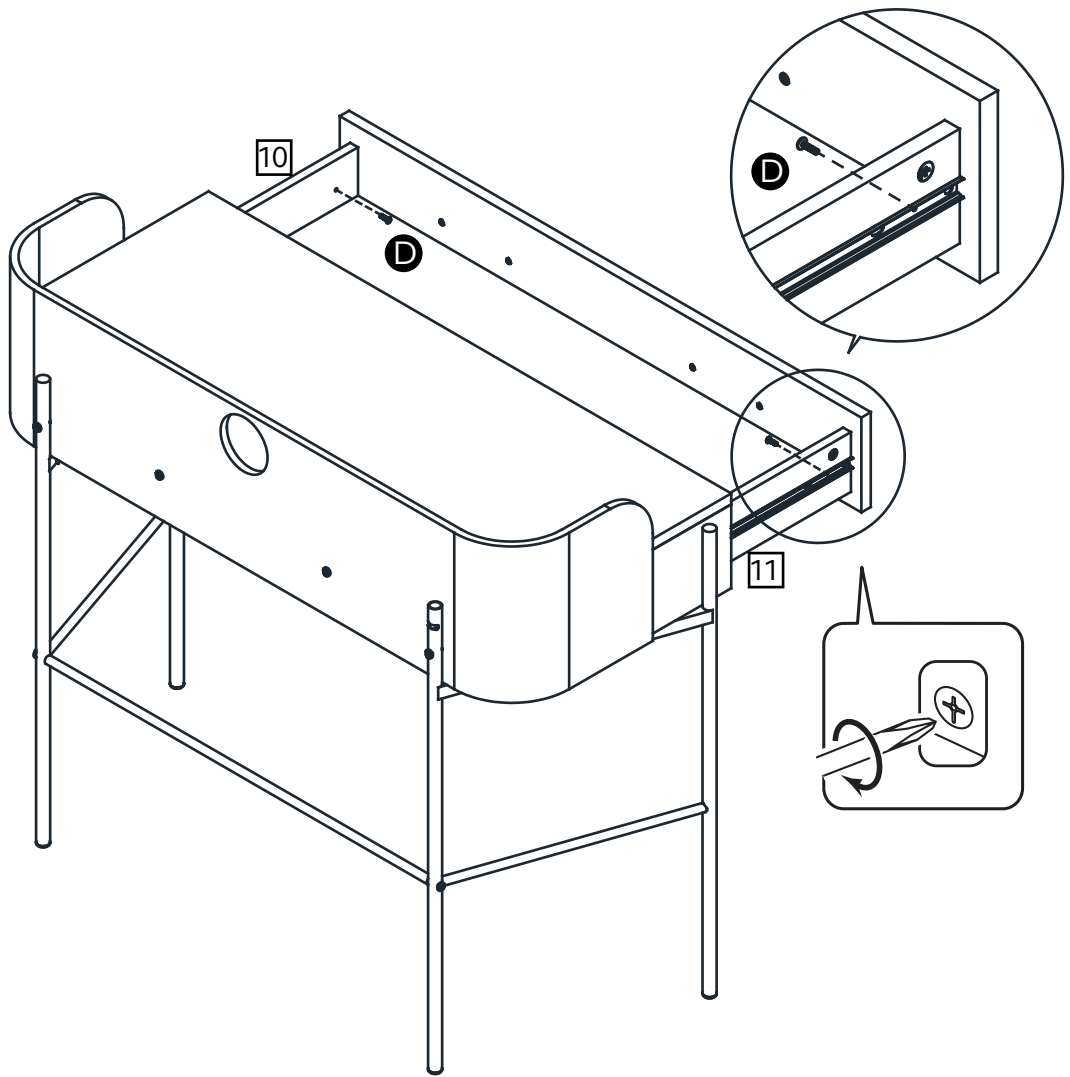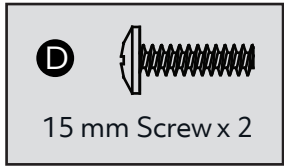  



35

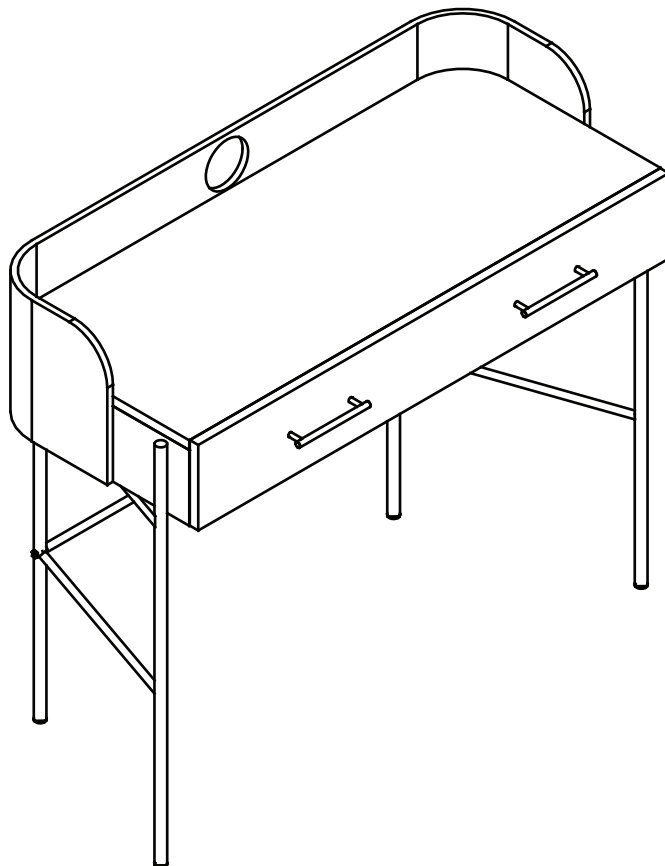 




36

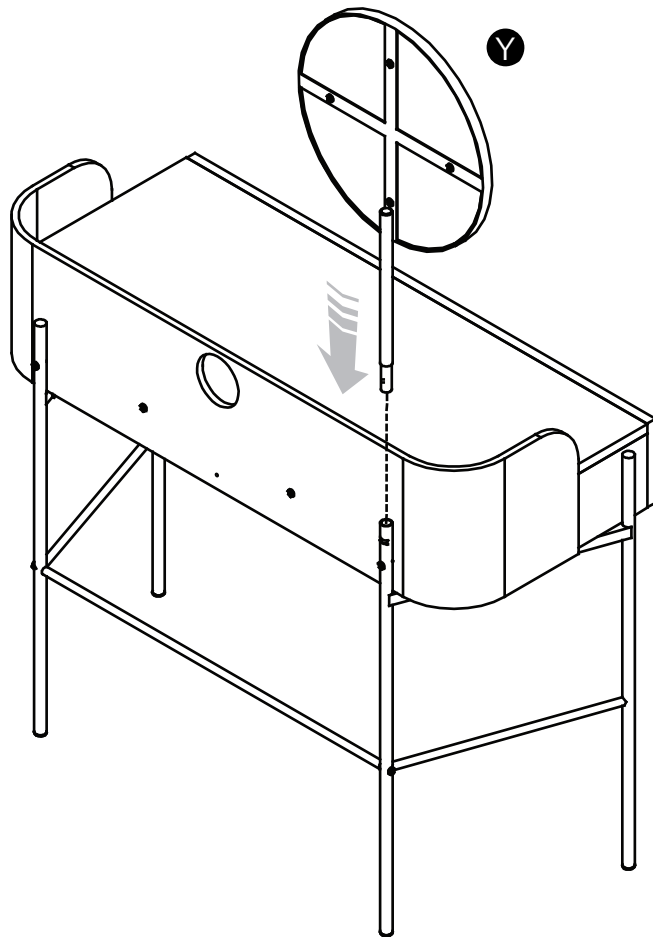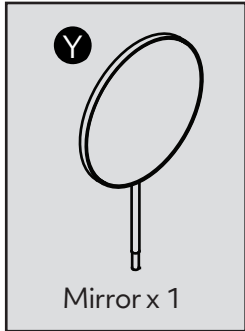  




37

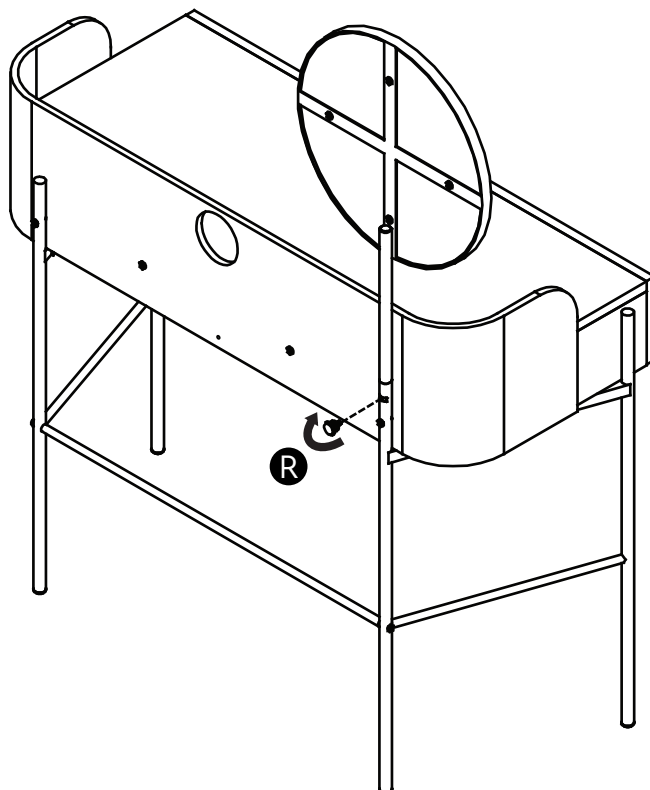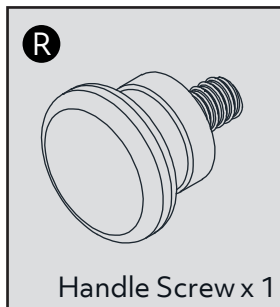  




38

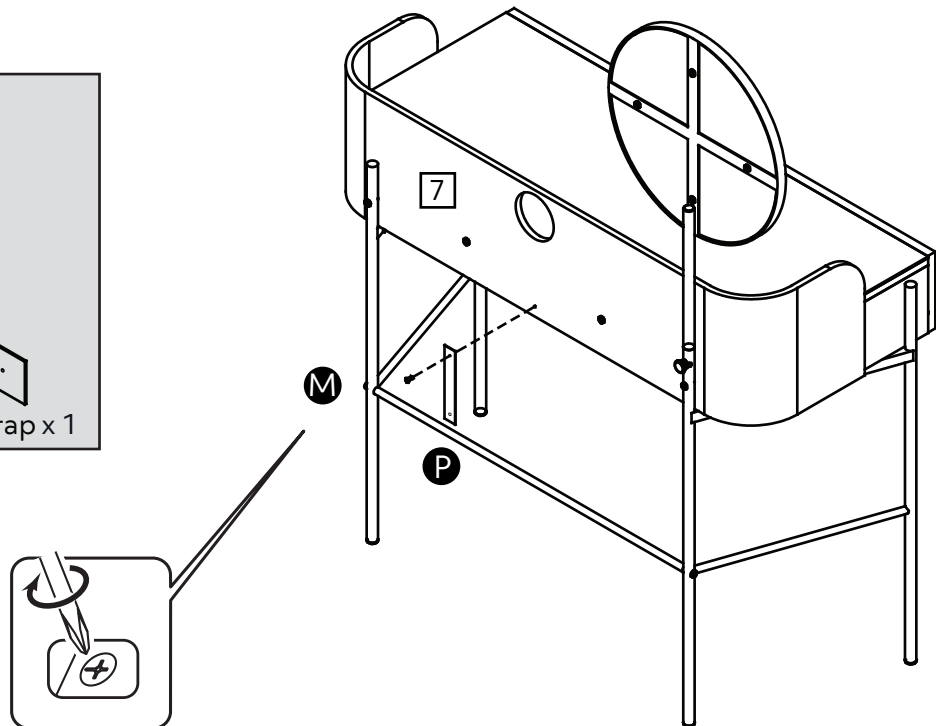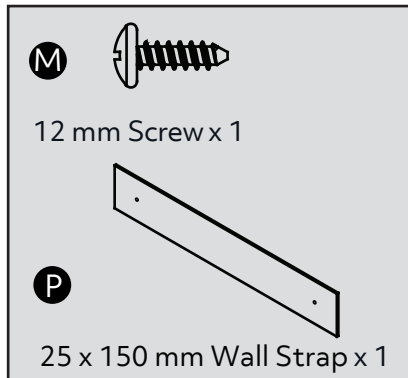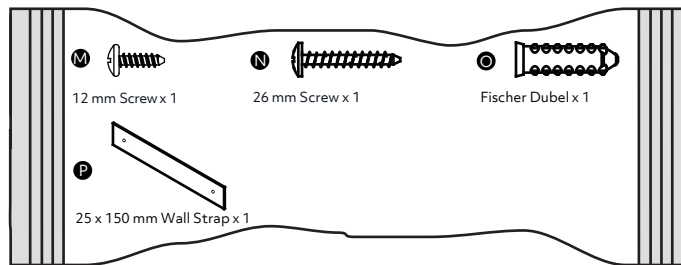   

39

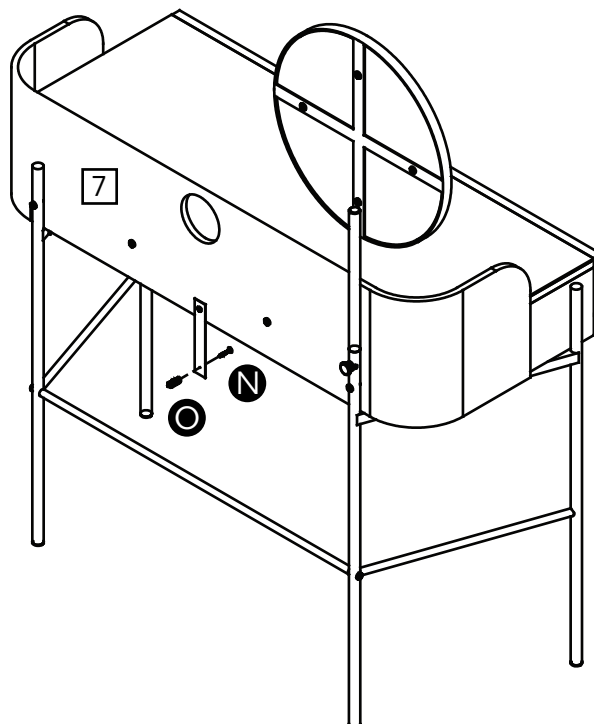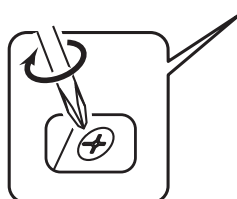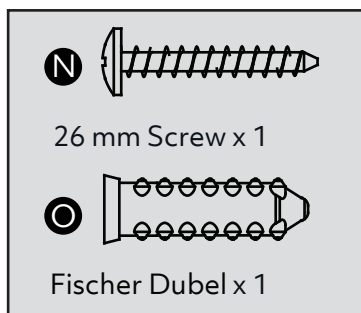   


40

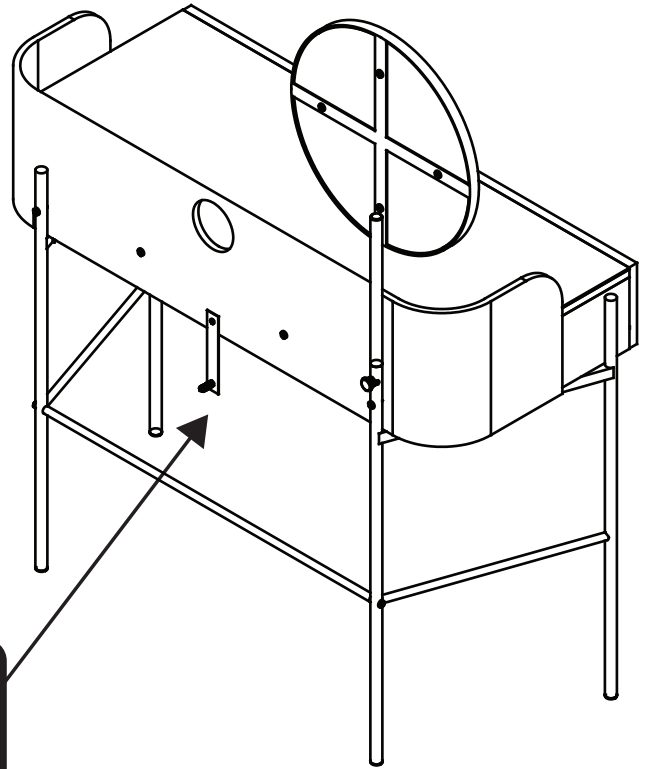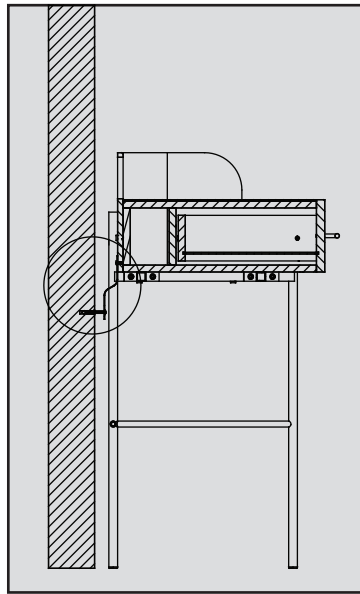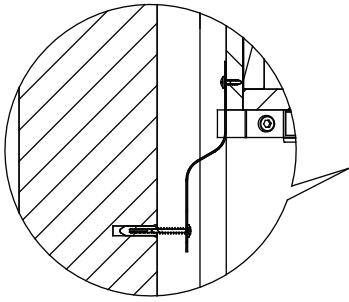   

WARNING!

IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED

 41

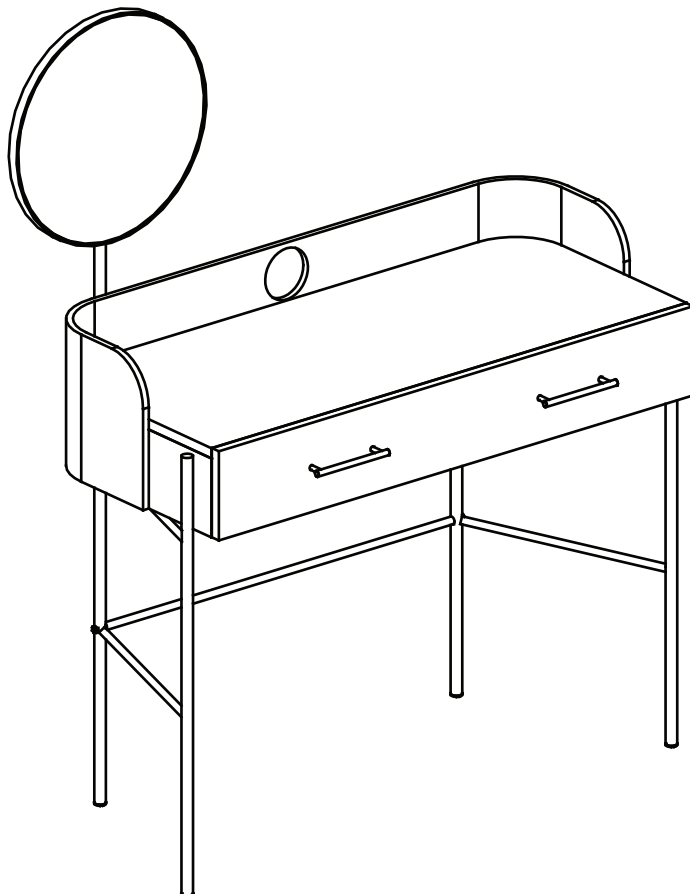

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

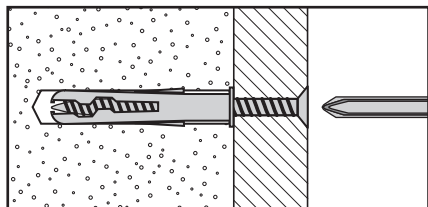


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

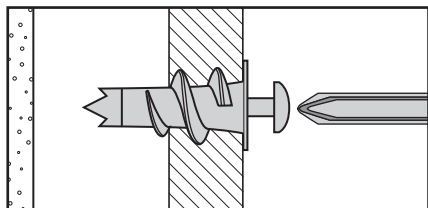


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

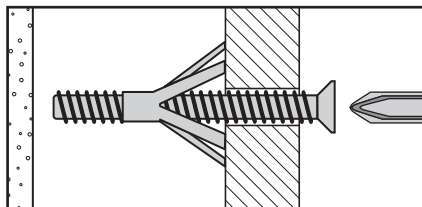


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

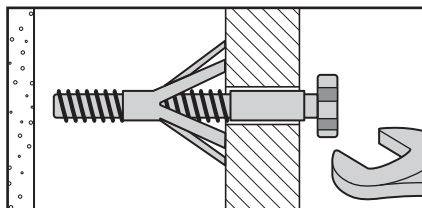


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug

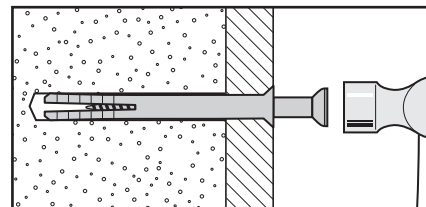

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

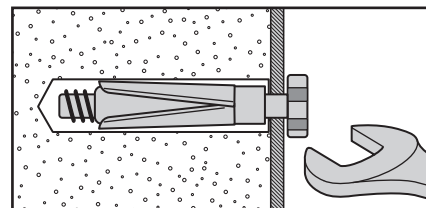

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.