 


BUSH

Instruction manual

mini dehumidifier

Model number DH-CS01

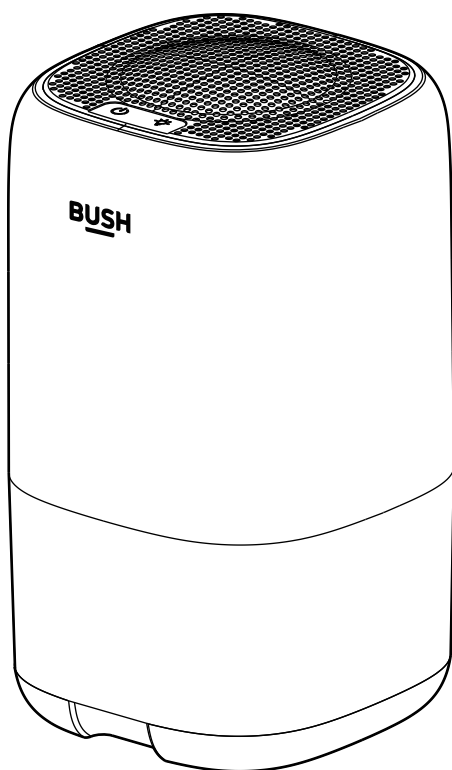

Please read these instructions fully before use



Safety information

Important- please read the instructions fully before operating.

For household and indoor use only.

Read through all the instructions carefully before starting to use the appliance. Keep this manual in a safe place for future reference.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- **Children should be supervised to ensure they do not play with the appliance.**
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.

- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor; household use only.
- Unplug the appliance when not in use, when moving the appliance and before cleaning.
- Do not place the appliance on an unsteady surface.
- Do not cover the appliance as this can block the air flow and cause overheating.
- Do not use the appliance in an area likely to be splashed for instance near a bath, shower or swimming pool.
- Do not use the dehumidifier where water can drip on to the appliance. Dry your bathroom by placing the dehumidifier outside of the room with the bathroom door open. Do not use the dehumidifier inside the bathroom.
- Care must be taken if using an extension cord. Extension cords must be grounded and able to deliver the appropriate voltages to the appliance.
- Never insert your fingers or rods into the air outlet. Take special care to warn children of these dangers.
- Do not use the appliance in an environment with flammable and explosive materials.
- Do not use the appliance in rooms with low-temperature, dust, or acid-based conditions.

Important:

- The appliance must have a minimum 10cm clearance around all sides.
- Do not remove the water tank during operation. Turn off first.

- Do not operate the appliance with the water tank removed.
- Do not cover or obstruct the air inlets and outlets of the appliance to avoid poor exhaust and excessive internal temperature.
- Use the appliance in an environment at 15°C-40°C and less than or equal to 90% humidity. If the indoor temperature is below 15°C the effect of dehumidification is not obvious.
- For best performance use the dehumidifier in a room which has windows and doors closed.

Setting up your dehumidifier

Before first use you will need to access the power adapter which has been packed in the water tank.

- 1.Remove the water tank from the unit, lift away the water tank cover and take the power adapter out.
- 2.Replace the water tank cover and push water tank back into the unit.
- 3.Insert the power adapter at the back jack and connect to the power supply

Before using your dehumidifier

 
Make sure you have read and fully understood the safety instructions before operating. Choose a safe, horizontal and stable surface to place your dehumidifier.

Recommended Room Size:

This dehumidifier is designed for optimal performance in rooms up to 10m²

Using the unit in a larger space may reduce the efficiency.

Getting to know your dehumidifier

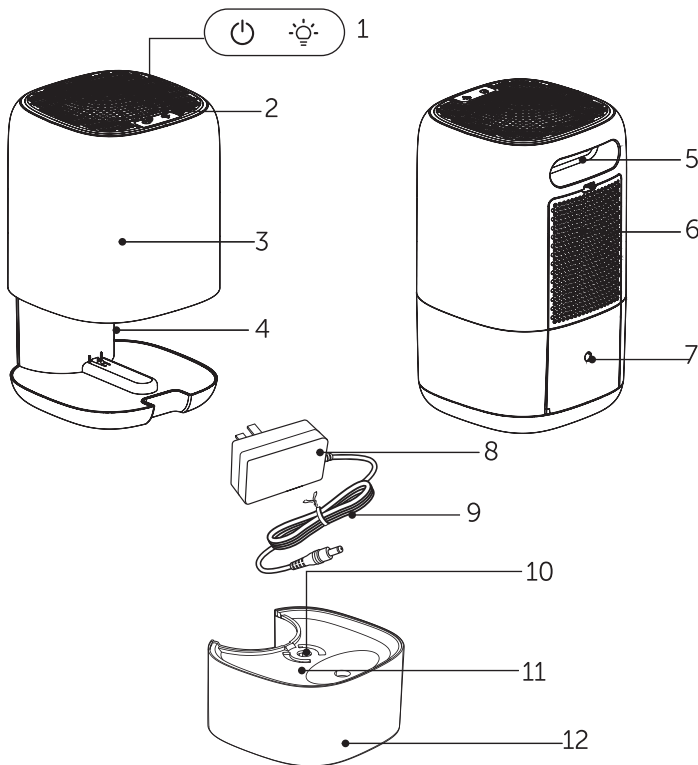

1. Power

2. Air outlet

3. Front cover

4. LED light

5. Handle

6. Air inlet

7. DC Port

8. Power adapter

9. Power cable

10. Float

11. Water tank cover

12. Water tank

Power Button

When you plug in your dehumidifier, you'll hear a long beep – that means it's in standby. Press the power button to get started and you'll hear a short beep as the unit switches on and the light comes on.

Press the power button again at any time to turn it off.

Lights

When the dehumidifier is on, the ambient light cycles through 7 colours. Press the light button to stop on your preferred colour, press it again to turn the light off, and press once more to switch it back on.

 
Water tank full

When the water tank is full, the ambient light flashes red and 3 short beeps will sound. The dehumidifier will enter standby mode until the water tank has been emptied. (Pic 1)


How to empty the water tank.

1. With the appliance turned off, hold both sides of the dehumidifier with both hands and pull the water tank out gently. (Pic 2)
2. Lift the lid of the water tank and pour out the collected water. (Pic 3)
3. Replace the lid and slide the water tank back into the unit.


Note: The water collected is not clean and cannot be used for drinking.

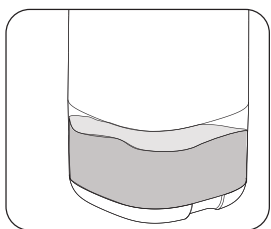

Pic 1

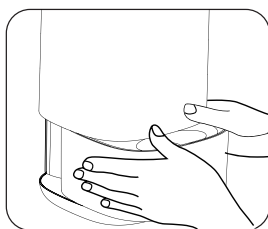 

Pic 2

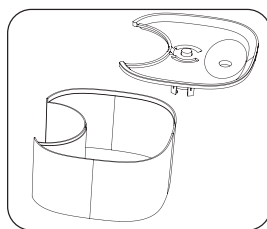 

Pic 3

Cleaning & maintenance

Before performing any cleaning or maintenance, make sure the dehumidifier is switched off, unplugged from the mains power supply and is completely cool.

Cleaning the appliance

Clean the exterior with a soft dry cloth. If the appliance is extremely dirty, use a mild cleaning agent. Wipe the dehumidifier with a slightly damp cloth, then dry with a soft dry cloth.

Never spray the appliance with water.

Do not use acidic or alkaline solvents to wipe the appliance as they may cause discolouration or damage.

Cleaning the water tank

The water tank should be cleaned out at least once a week, using just cold water.

Always empty the water tank, clean, and dry the tank when not in use to prevent mould. Discard the water down a sink or drain.

Never leave water in the water tank when the unit is not in use.

IMPORTANT: Do not remove the float from the water tank. The water full sensor will no longer be able to detect the water level correctly without the float and water may overflow and leak from the tank.

Storing

- When not in use, empty the water tank, clean, and dry the dehumidifier completely.
- Store the appliance in an upright position, in a safe, clean, and dry place, away from direct sunlight and out of reach of children.
- Do not wrap the power cord and plug around the appliance as this may cause the insulation to weaken or split.

Troubleshooting

Problem	Possible Cause	Solution
The unit is not turning on	Not plugged in / power issue	Check the power cable is securely plugged in and the socket is switched on. Alternatively try another power outlet.
Beeps when powering on, then shuts down	Poor adapter connection / the power adapter is damaged.	Do not bend the cable and reinsert it correctly into the machine.If the power adapter is damaged, please contact customer support.
No moisture being collected	Humidity level is already low or room too large	Use in a smaller, enclosed space

Troubleshooting

Problem	Possible Cause	Solution
Weak performance	Airflow blocked or filters dirty	Ensure air inlets/outlets are clear and clean if required
Water tank not filling	Incorrect placement or short run time	Place on a flat surface and allow more time to collect moisture
Unit stops unexpectedly	Tank full or not fitted correctly	Empty the water tank and refit securely
Unusual noise	Unit not level or surface unstable	Place the unit on a stable, flat surface
Machine leaking water	Water tank not installed correctly, causing water to leak.	Reinstall the water tank.
Machine powers on but does not collect water	Obstructions block air intake or outlet, affecting performance	Move the machine so it has a 10cm clearance
	Low humidity (below 10%)	Humidity below 40% is very dry, consider using a large dehumidifier for further reduction.
	Low ambient temperature, condenser is frosting	When frost is detected, the machine will enter defrost mode. Wait or place in a warmer area to speed up defrosting.

Technical specification.

Bush mini dehumidifier	
Model number	DH-CS01
Input rated voltage	12V 
Output rated wattage	40W
Rated frequency	50/60Hz
Cable type	DC adaptor
Water tank capacity	1L
Dimensions (cm)	H25.5 x W15 x D15cm
Rated dehumidifying capacity	300ml/ day (30°C/ RH80%)
Room size	Up to 10m ²
Applicable temperature	15°C - 40°C
Net Weight	1.3kg

Recycling electrical products



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Help and assistance

If you require any technical guidance or find that your dehumidifier is not operating as intended, a simple solution can often be found in the trouble-shooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	DH-CS01	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number	N/A	
Date of purchase		This will be shown on your receipt

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centers may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

Call us now and register your 12-month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.

*Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
 - Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited, London,
EC1M 6HA, UK. [Argos \(N.I.\) Ltd](#), Forestside

Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

BUSH