

# Ignite

## Mini Wand Vibrator

### Care

Clean after use with sex toy cleaner and leave to dry before storing. Store your toy in the bag provided, away from dust, heat, direct sunlight and other sex toys.

### How to Use

- Charge the toy by plugging the USB cable into a USB charging point, and the electrical connector into the side of the toy, piercing the self-healing silicone (don't worry, your toy will remain waterproof after removing the connector).
- The toy will take approximately 60 minutes to fully charge, and will give you up to 80 minutes of play.
- Press and hold the power button to start the vibrations. Press repeatedly to move through the 3 speeds and 17 patterns.
- Press and hold the power button for 3 seconds to turn the toy off.
- Use with water-based lubricant to enjoy your toy at its best.

### Travel Lock

To activate the travel lock, double-click the power button when the toy is switched off. The toy will buzz once the lock is activated. To deactivate, double-click the power button. Alternatively, plugging the toy into a USB port will deactivate the travel lock.