

# Media Storage Tower

**Assembly Instructions** - Please keep for future reference

875/0383

875/1162


875/4451

875/4736

875/5395

932/8563

932/8570

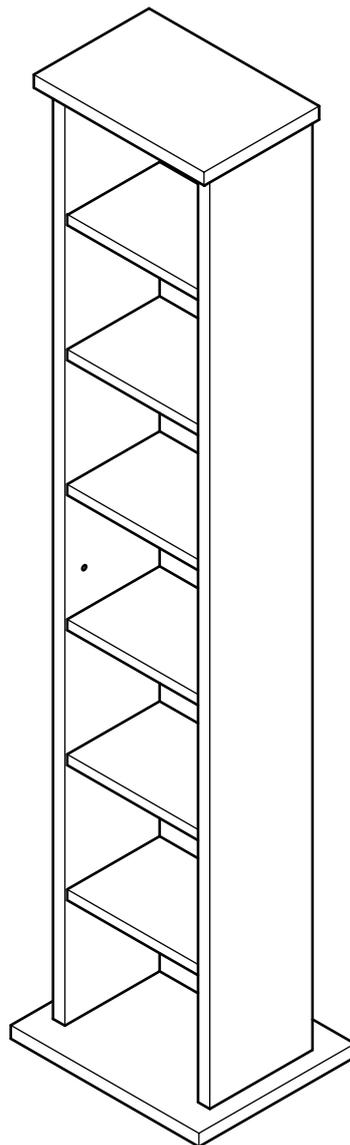

## Dimensions

Width - 23.6cm

Depth - 19.8cm

Height - 109cm

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



# Safety and Care Advice

**Important - Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws,**

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- **Note:** Only apply the glue once you are sure of the assembly.

**Glue safety - Take care when using glue, please follow the advice below**

**Skin contact:** Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

**Eye contact:** Rinse immediately with clean water for 15 minutes and seek medical advice.

**If swallowed:** Seek medical advice immediately.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the panels listed below

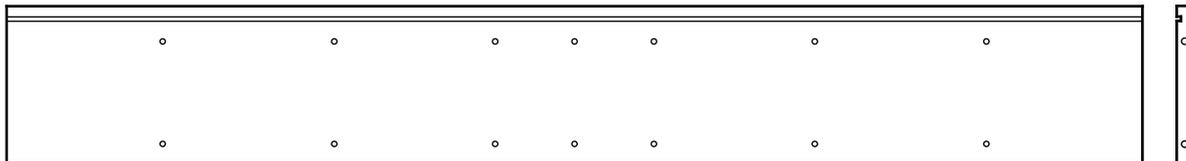


**1** Right side panel (105.9 x 14.7cm)

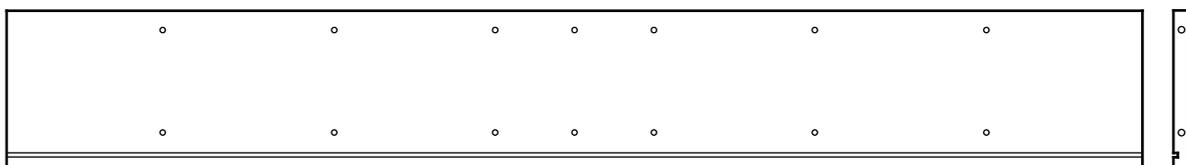


**2** Left side panel (105.9 x 14.7cm)



**3** Back panel (106.3 x 17.2cm)

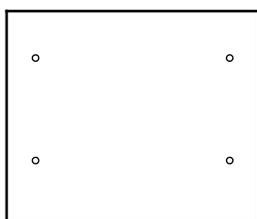

**4** Bottom panel (23.5 x 19.8cm)

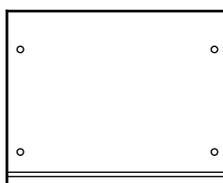

**5** Top panel (20.6 x 16.5cm)





**6** Shelf x 6 (16.5 x 13cm)


# Components - Fittings

  Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

<p><b>A</b> </p> <p>Wooden dowel x 4</p>	<p><b>B</b> </p> <p>Short wooden dowel x 24</p>	<p><b>C</b> </p> <p>14mm Screw x 1</p>
<p><b>D</b> </p> <p>Glue x 1</p>	<p><b>E</b> </p> <p>40mm Screw x 4</p>	<p><b>F</b> </p> <p>Wall plug x 1</p>
<p><b>G</b>  (This screw is included in the bag of wall strap)</p> <p>Wall strap x 1  x 1</p>	<p><b>H</b> </p> <p>Dowel cover x 24</p>	


## Tools required

 

Phillips screwdriver  
(medium & large)



 
Small  
hammer



Flatblade screwdriver  
(medium)




 Ruler/tape  
measure



Eye protection  
(when using a  
hammer or glue)

 Ruler - Use this ruler to help correctly identify the screws





# Assembly Instructions

## Step 1

### Attaching side panels

**a:** Place a small amount of Glue **D** into the dowel holes. Insert Wooden dowels **A** into the Right side panel **1** and Left side panel **2**.




**a:**

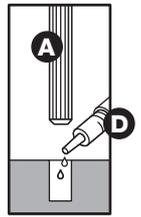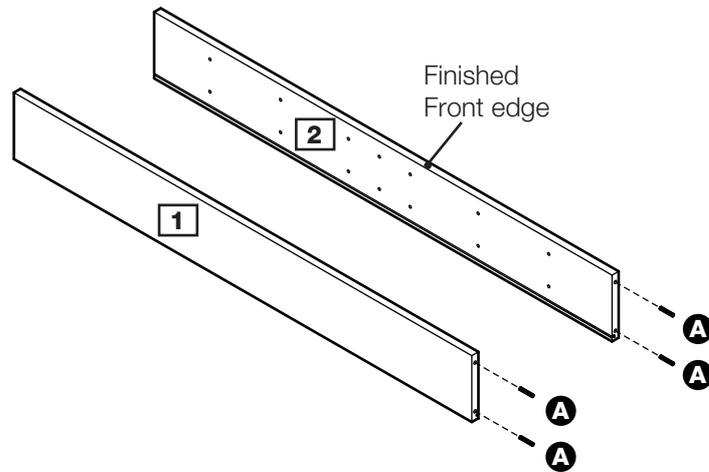

**b:** Place a small amount of Glue **D** into the dowel holes on the Top panel **5**.

Position Side Panels onto the Top panel **5**.

**b:**

 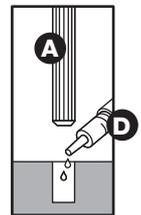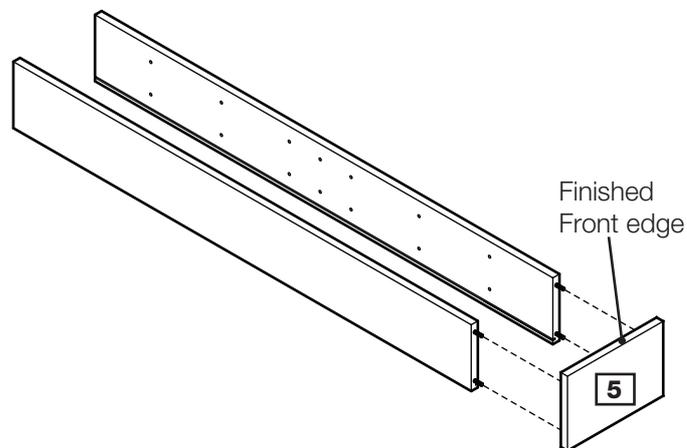


## Step 2

### Fixing back panel

Place a small amount of Glue **D** into the grooves on the Right side panel, Left side panel and Top panel.

Carefully slide the Back panel **3** into the unit.

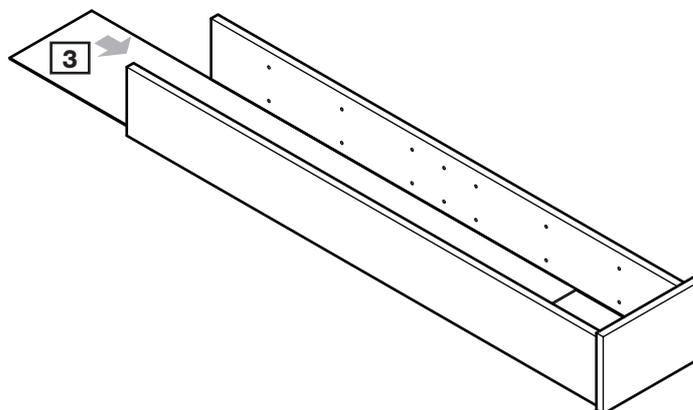


# Assembly Instructions

## Step 3

### Attaching bottom panel

Use Screws **E** to fix the Bottom panel **4** onto the unit.

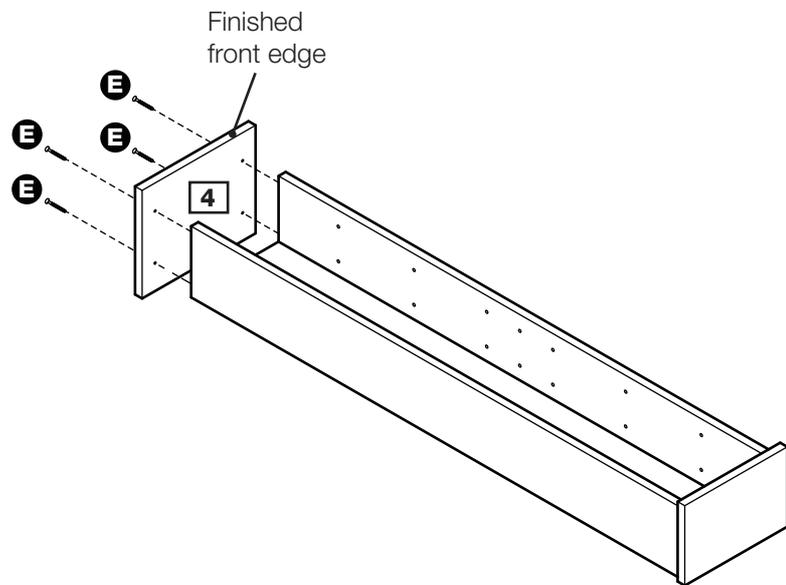


## Step 4


### Setting CD or DVD Compartments

For CD: CD is partitioned into 7 compartments.

For DVD: DVD is partitioned into 4 compartments.

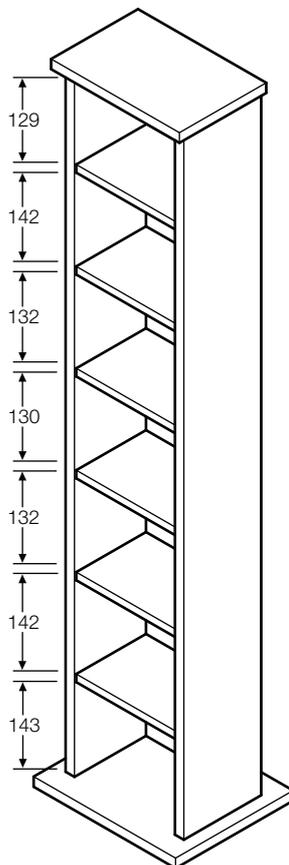

For CD

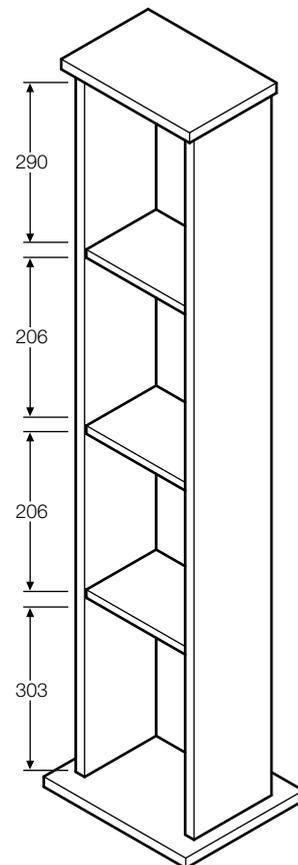

For DVD

Continued on next page.

# Assembly Instructions

## Step 4 - continued

With help, carefully stand storage unit upright.



**Warning:**


 
The storage unit is heavy.

Lift with care.


**a:** Slide Dowel covers **H** onto Short wooden dowels **B**.

Insert the Short wooden dowels **B** (Dowel covers **H** are included) into the unit. Ensure they are well fitted before inserting the Shelves.

**a:**

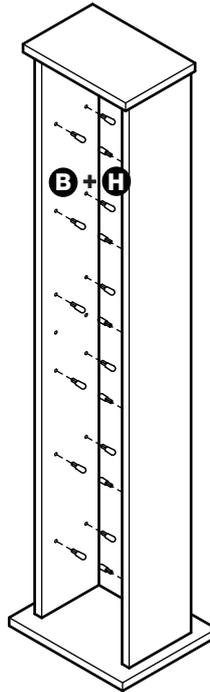


For CD

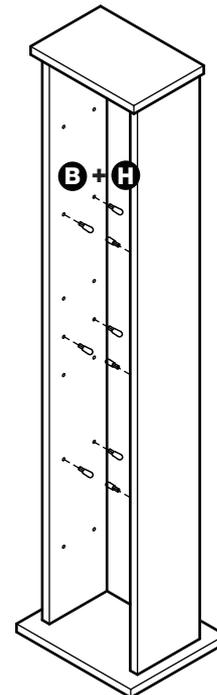


For DVD

**b:** Slide the Shelves **6** the unit.

**b:**

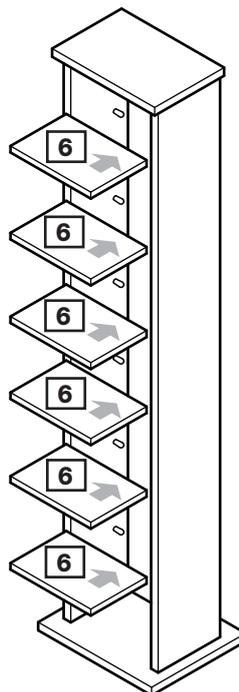

For CD

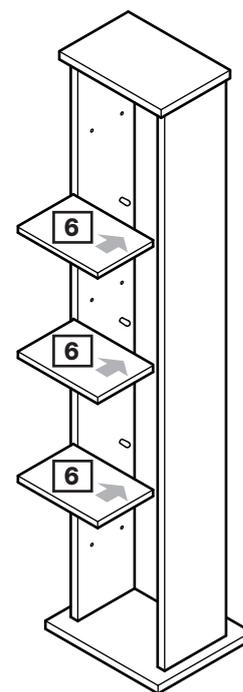

For DVD

# Assembly Instructions

## Step 5

### Fixing to wall

It is recommended that the storage tower is fixed to a wall.

Use Screw **C** to fix the Wall strap **G** onto the back of top panel.

With help, move storage tower into position.



**Warning:**

The storage tower is heavy.

**Lift with care.**

Mark fixing hole on wall and remove storage tower .

Drill a hole and insert Wall plug **F**.




**Warning:**

Before drilling, check wall for hidden pipes and cables.



Reposition storage tower and fix wall strap using Screw **G**.

**Note:** Before use allow the Glue to dry for 24 hours and make sure the unit is secure.

**Assembly is complete.**

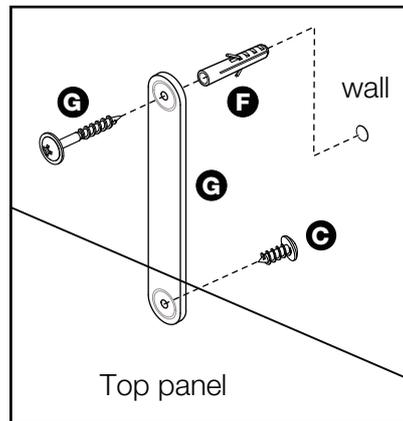

**Note:** Wall plugs supplied are for solid wall only. The correct type of fixing must be used for your wall, seek professional advice if in doubt

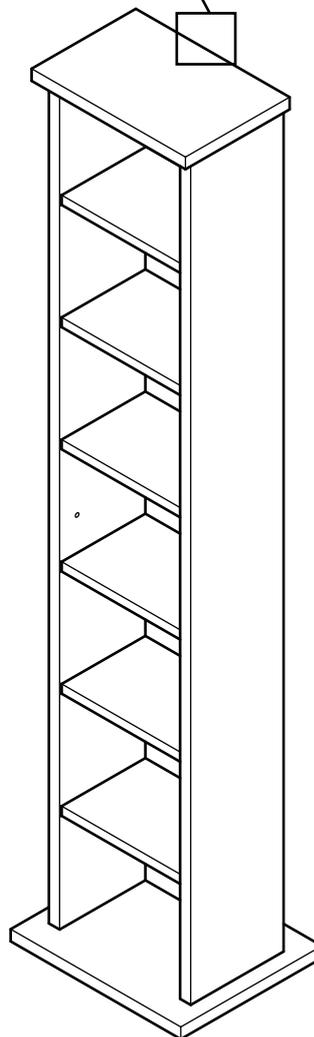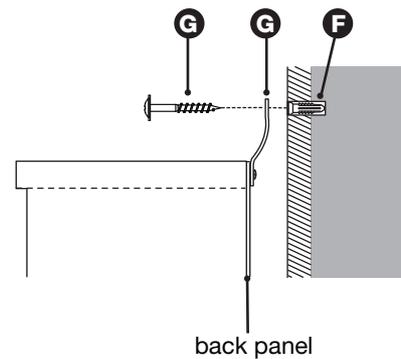


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

# A Guide to - Wall Mounting & Fixings
 
## Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



**Important:** When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


## Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

### No.1 "General Purpose" wall plug

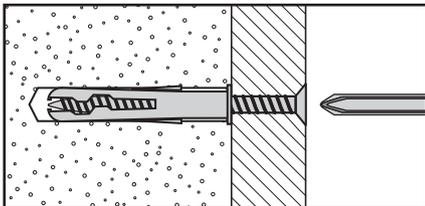


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

### No.2 "Plasterboard" wall plug

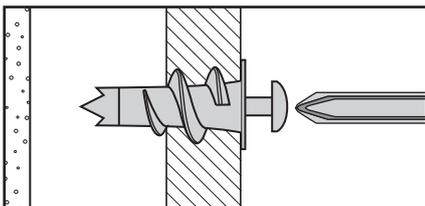


For use when attaching light loads on to plasterboard partitions.

### No.3 "Cavity Fixing" wall plug

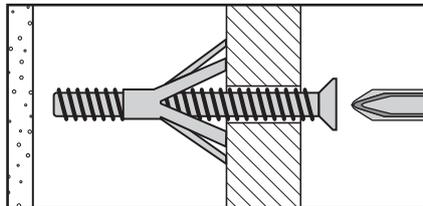


For use with plasterboard partitions or hollow wooden doors.

### No.4 "Cavity Fixing-Heavy Duty" wall plug

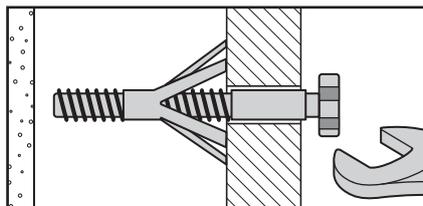


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

### No.5 "Hammer Fixing" wall plug

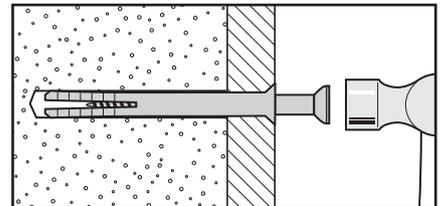

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

### No.6 "Shield Anchor" wall plug Heavy loads

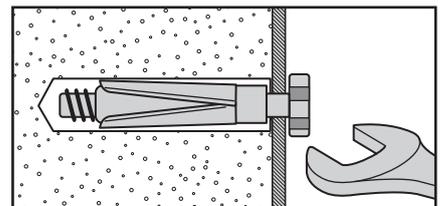

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** Always check the fitting and location to ensure your safety in and around the home.

**Fitting:** From time to time check the fitting to ensure the wall plugs or screws do not become loose.