

Joy

Rechargeable Clitoral Vibrator

How to use your clitoral vibrator

- Charge by plugging the USB cable into a USB charging point. It will take approximately 120 minutes to fully charge, and will give you up to 40 minutes of play. The light will flash while charging. When the flashing stops and the light is solid, your toy is fully charged and ready to use.
- Hold down the power button on the front of the vibrator to begin vibrations. Press repeatedly to move through the 3 speeds and 9 patterns. Press and hold the power button to turn the toy off.
- To activate the travel lock, double click the power button when the toy is switched off. Repeat, or plug into a USB port, to deactivate it.
- Use with water-based lubricant to enjoy your toy at its best.
- Clean after use with sex toy cleaner and leave to air dry until next time.
- Store your toy away from dust, heat, direct sunlight and other sex toys.