


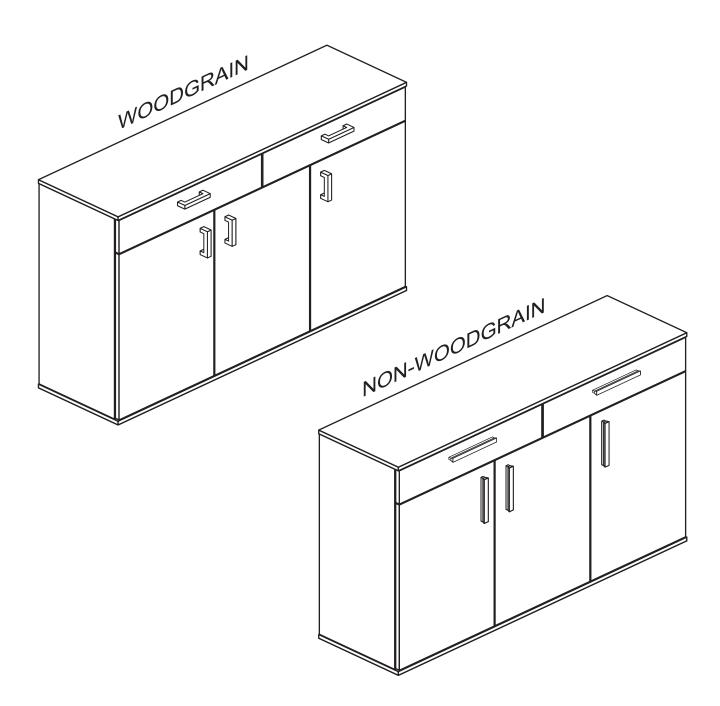

886/8471 886/0967



Spare Parts

Visit: www.argos-support.co.uk Email: Help@ClickSpares.co.uk Call: 0330 016 1114

Customer Support

Call: 0345 640 2020

✓! Safety

Important - Please read these instructions fully before starting assembly

· Warning: This unit weighs approximately 45kgs. Please lift with care.

 During assembly children should be kept away from the product due to possible risk of injury.


 Installation shall only be carried out exactly according to the manufacturer's instructions otherwise a safety risk can occur if incorrectly installed.

 Do not use this item if any components are missing or damaged.

• WARNING: To prevent possible overbalancing this unit must be secured to a wall using the 2 overbalance protector kits supplied.

• A unit that is allowed to topple can cause serious or fatal injury. In addition to wall fixing the unit, place heavy items on the lower shelves, do not put any heavy objects on top of the unit and never allow children to climb or hang on drawers, doors or shelves.

 Refer to guide after section 23 for wall fixing information.

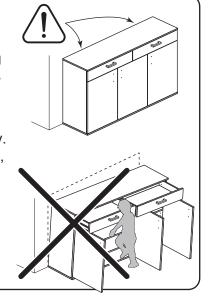

Care Advice

 Check you have all the components and tools listed on relevant pages.

• Remove all fittings from the specified plastic bag and separate them into their groups.

· Parts of the assembly will be easier with 2 people.

 Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

 Assemble the item as close to its final position (in the same room) as possible.

 Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



 Assembly videos are available throughout these instructions by scanning in the QR codes.




• We do not recommend the use of power drill/drivers for inserting screws,


as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.
- · Only clean with a damp cloth.


Cabinet Panels

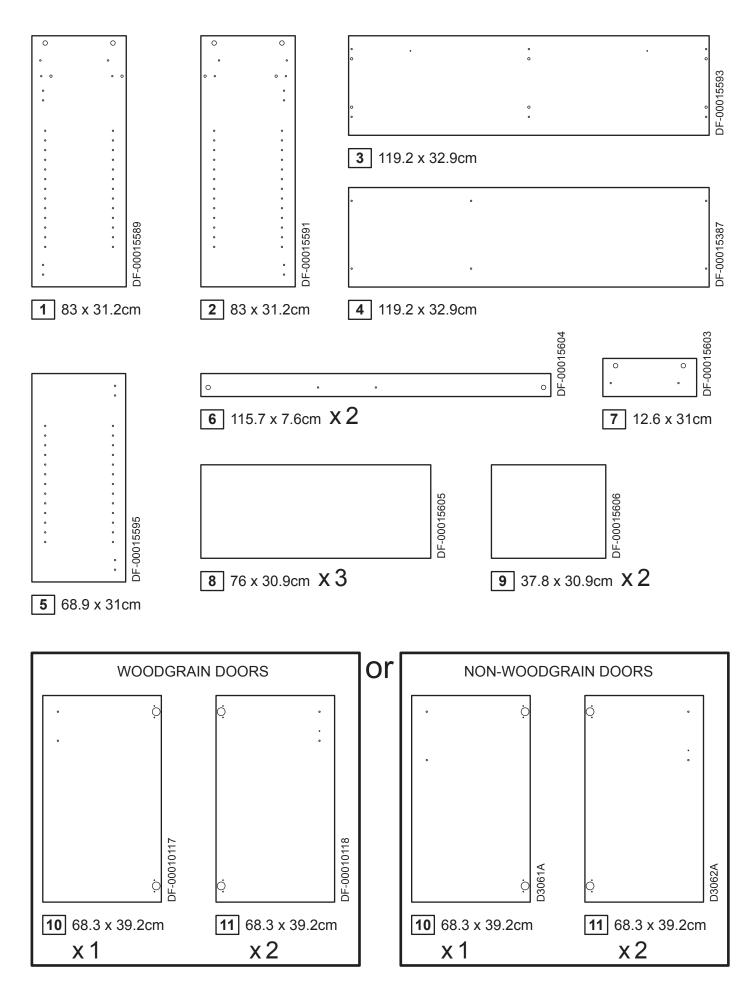

Cabinet Panels

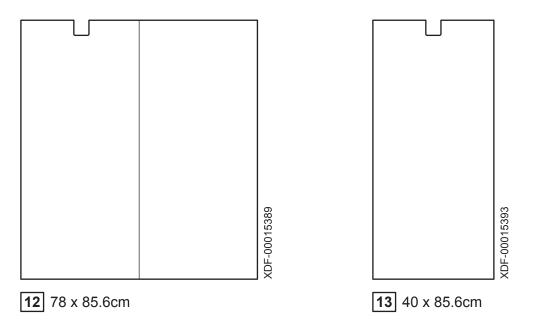


Drawer Panels

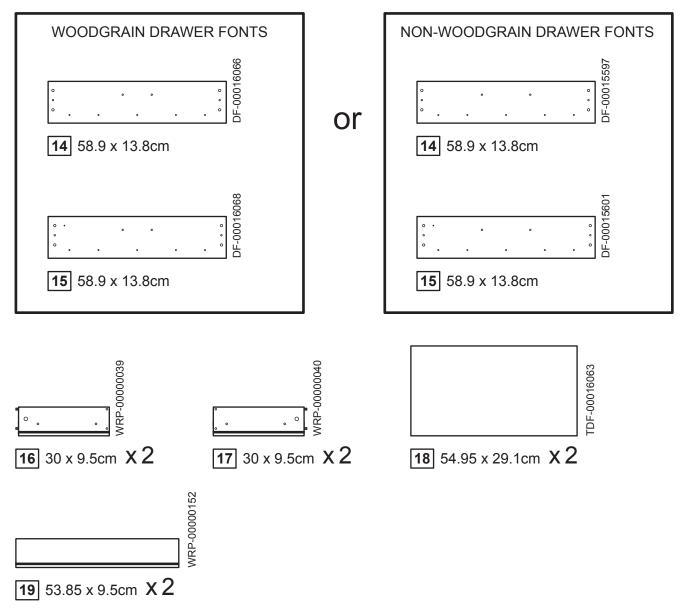


Fittings


Use these drawings to correctly identify the fittings

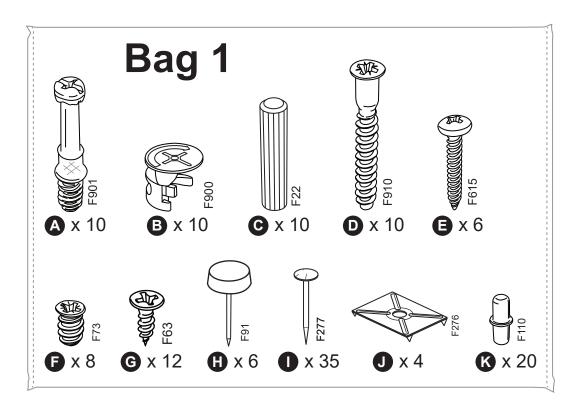




Fittings

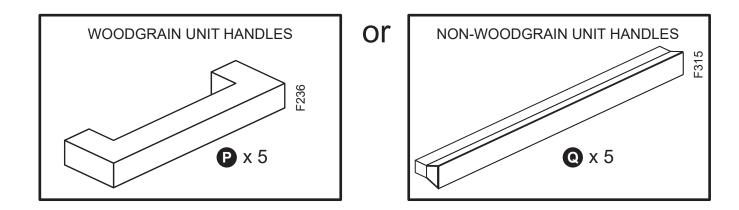


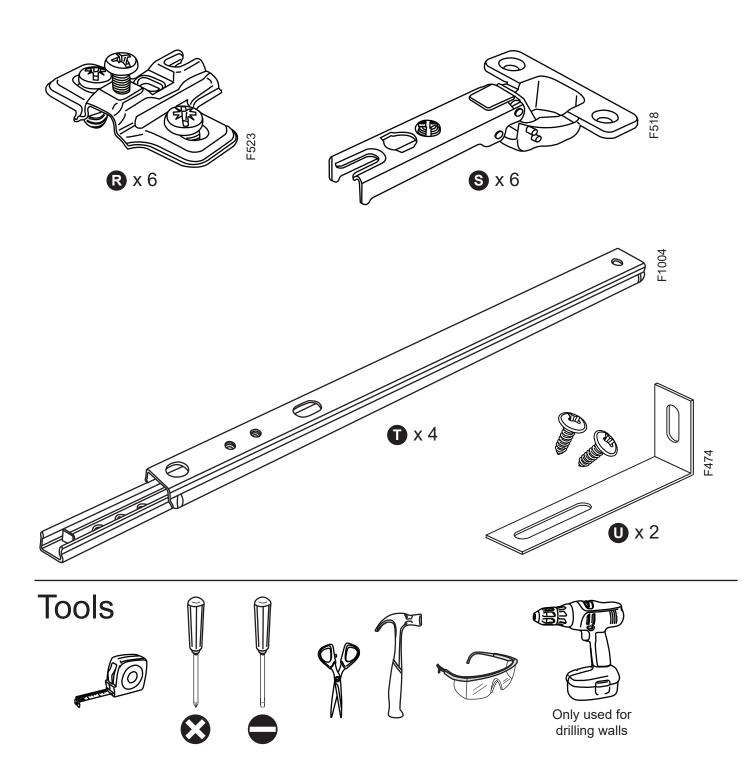



Fitting Ball Bearing Runners


www.youtube.com/watch?v=yG4xtiJJeSg

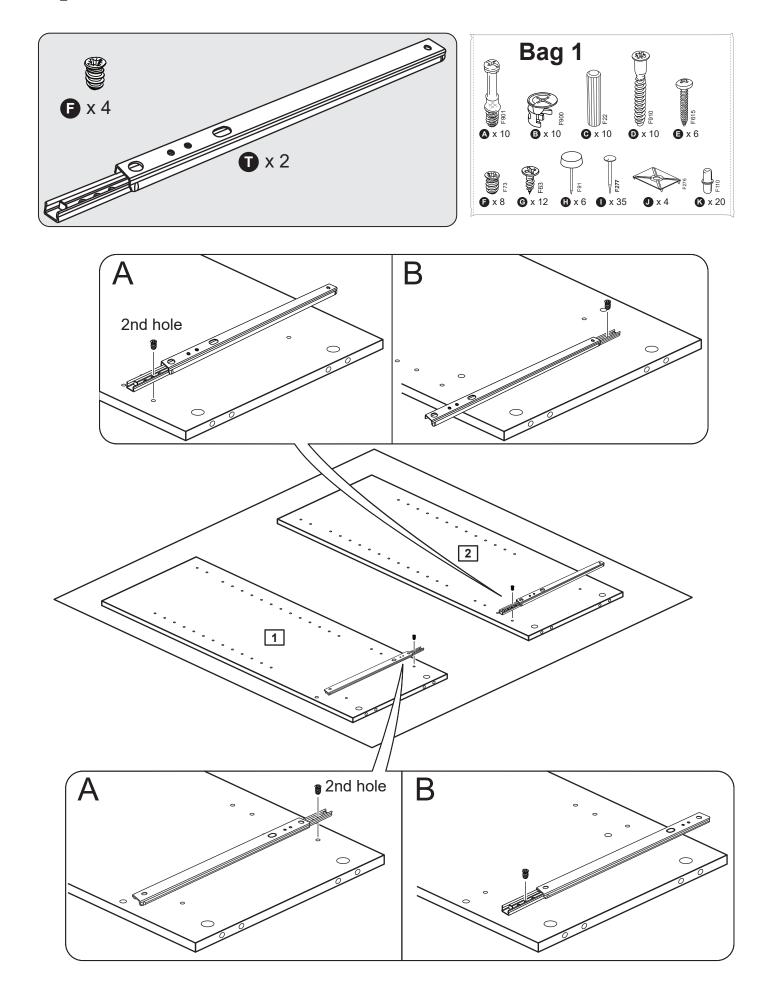


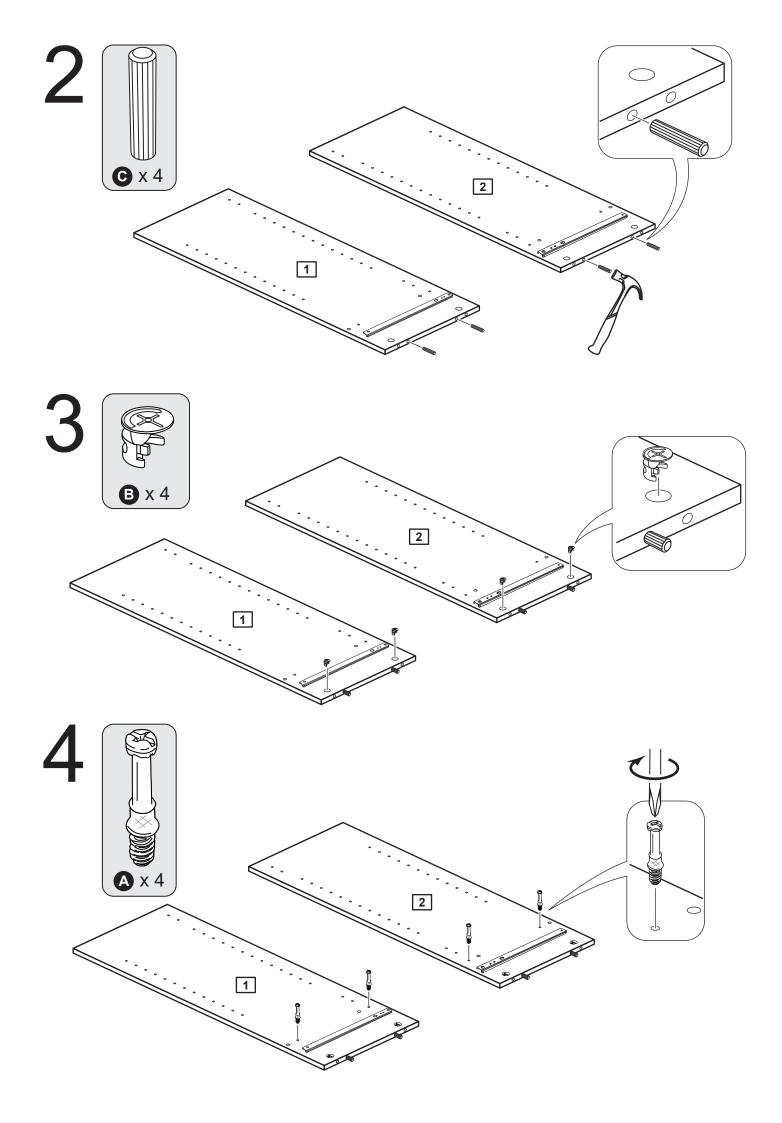


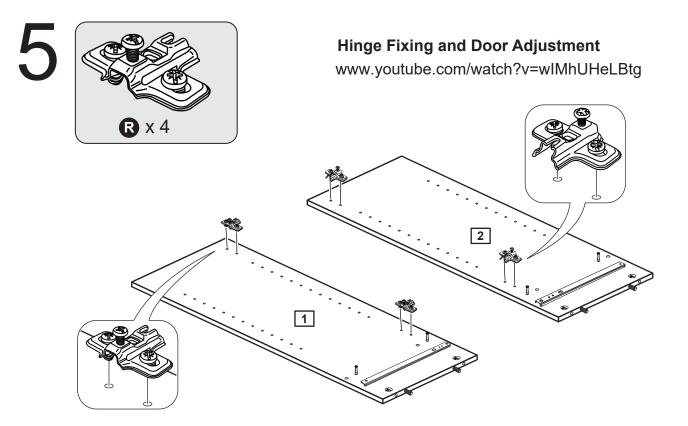


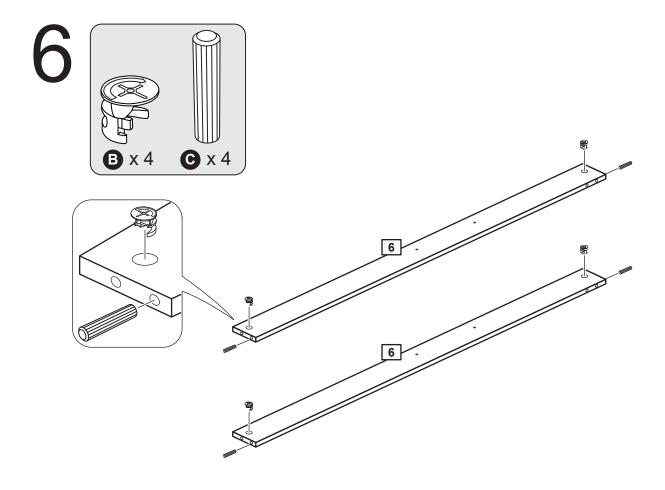


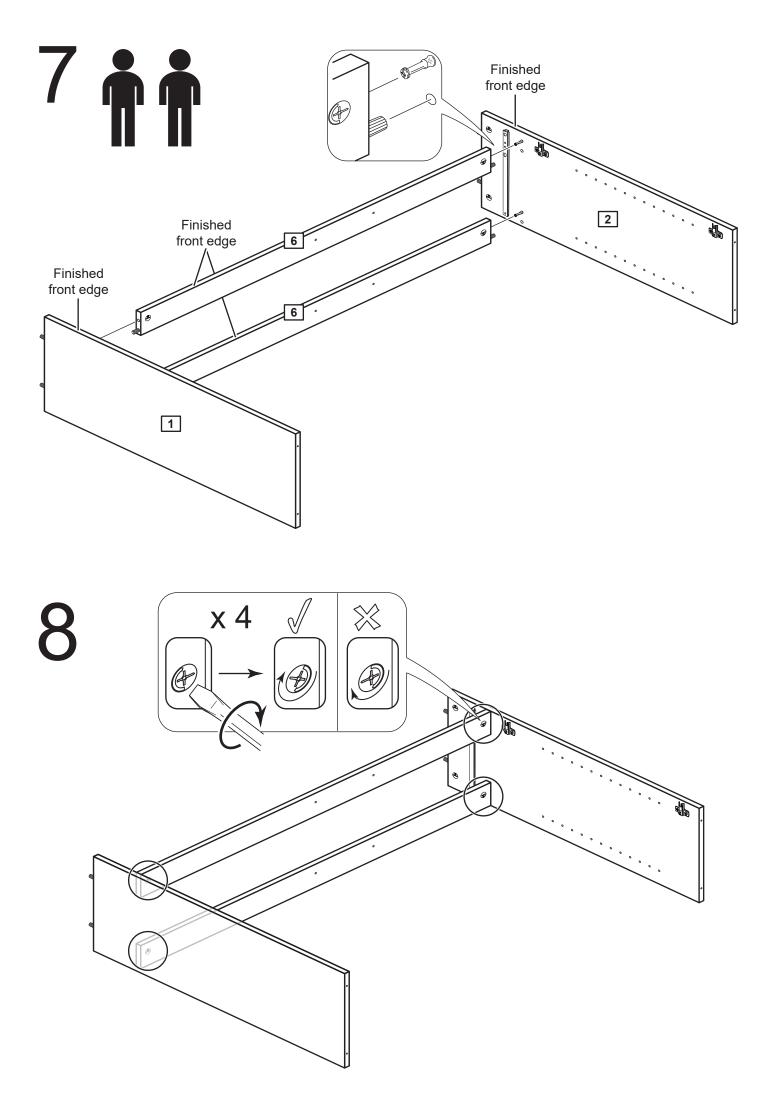

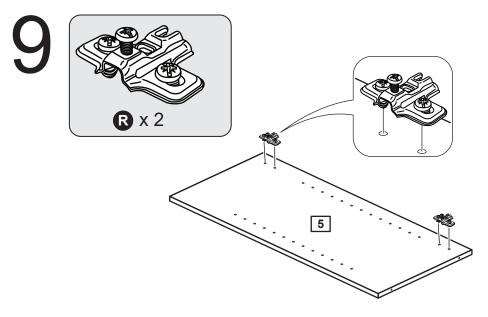

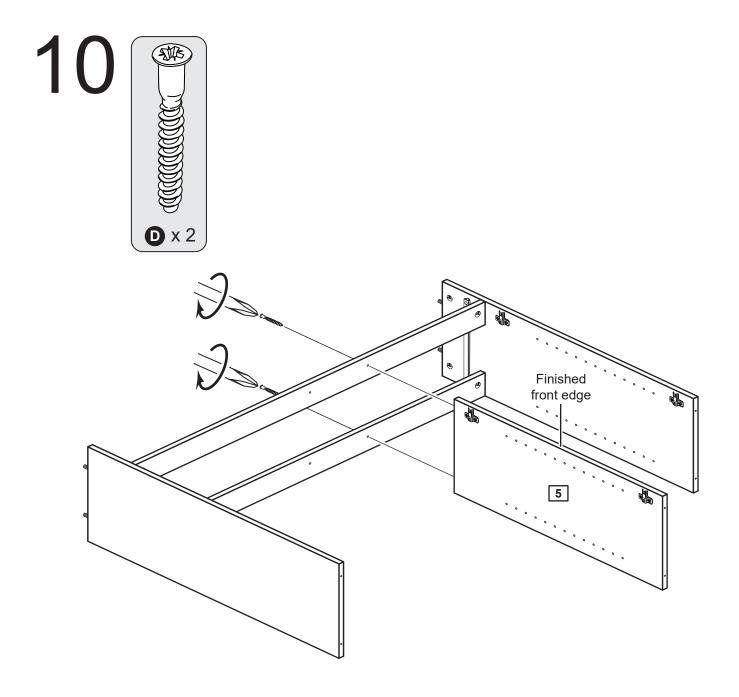

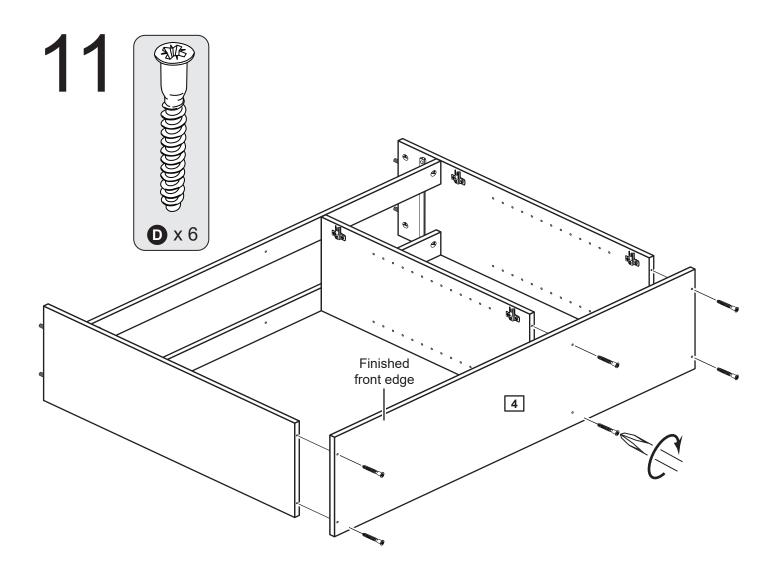


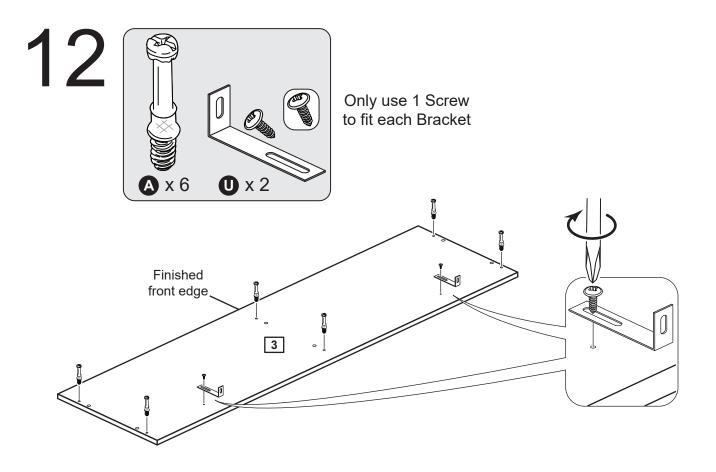



13


Fitting Ball Bearing Runners www.youtube.com/watch?v=yG4xtiJJeSg


G x 4 **T** x 2 В A 2nd hole É NOTE: Due to the manafaturing process, the 2 large 15mm holes Finished front edge can be on either surface Turn the panel over Finished front edge A В 2nd hole

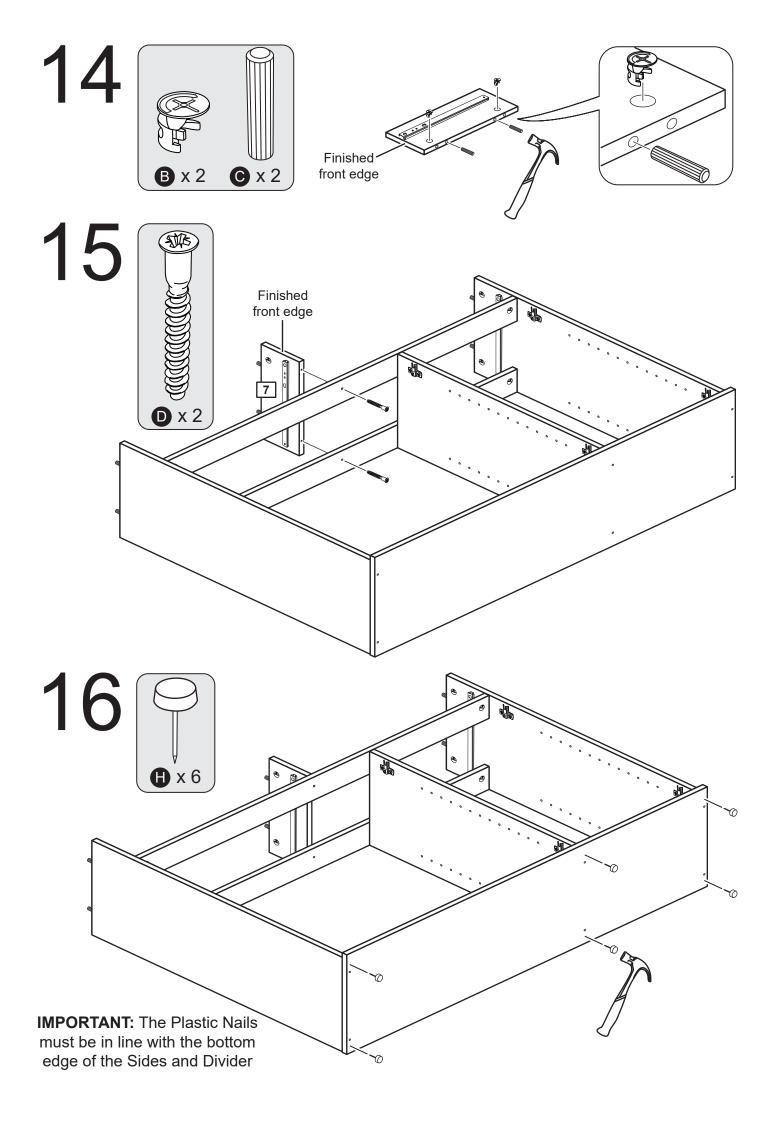

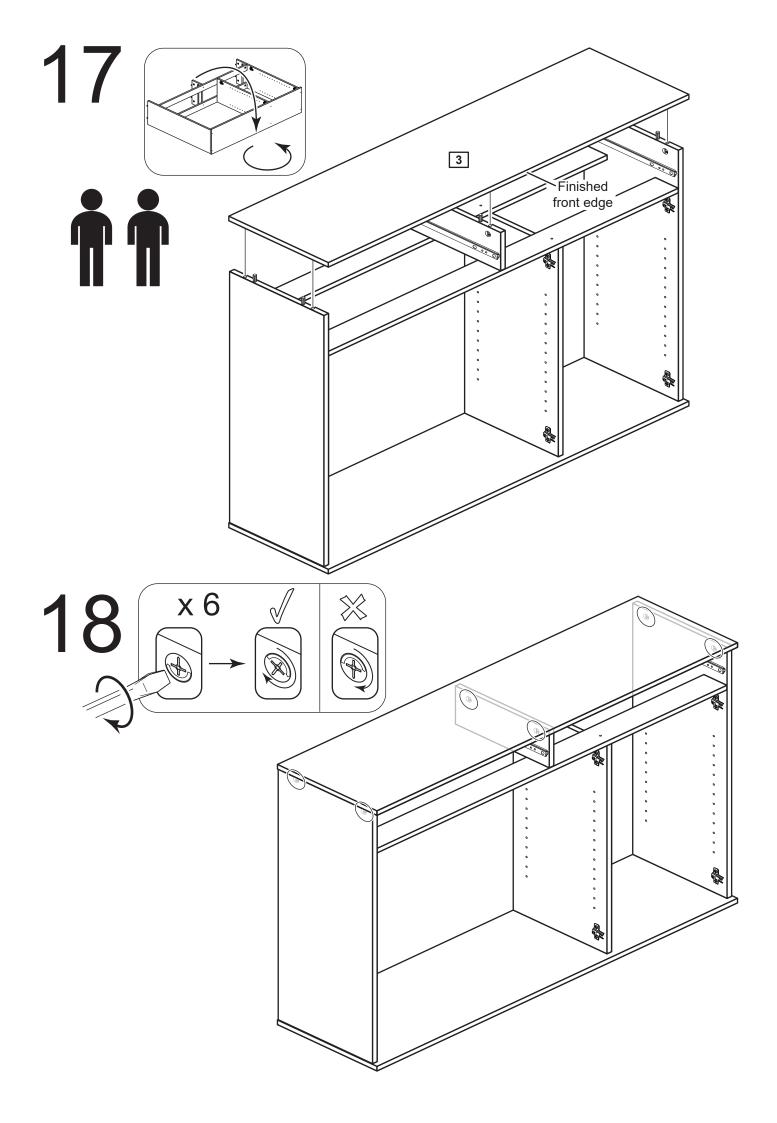

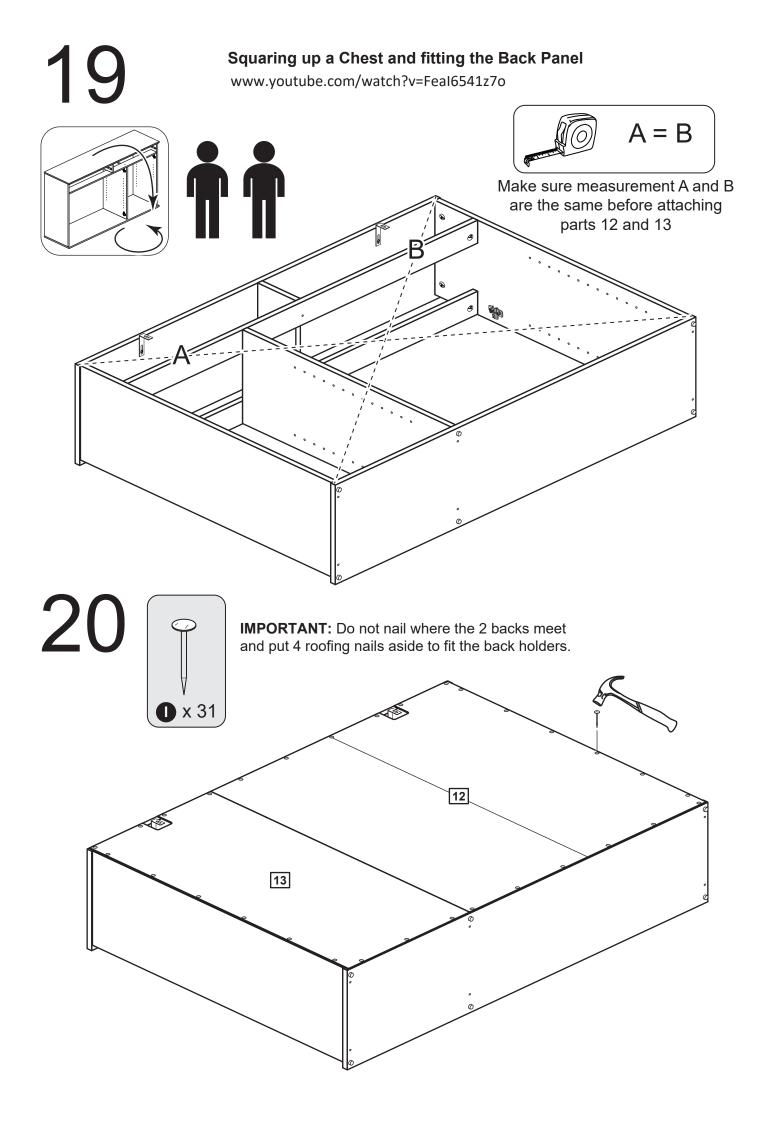


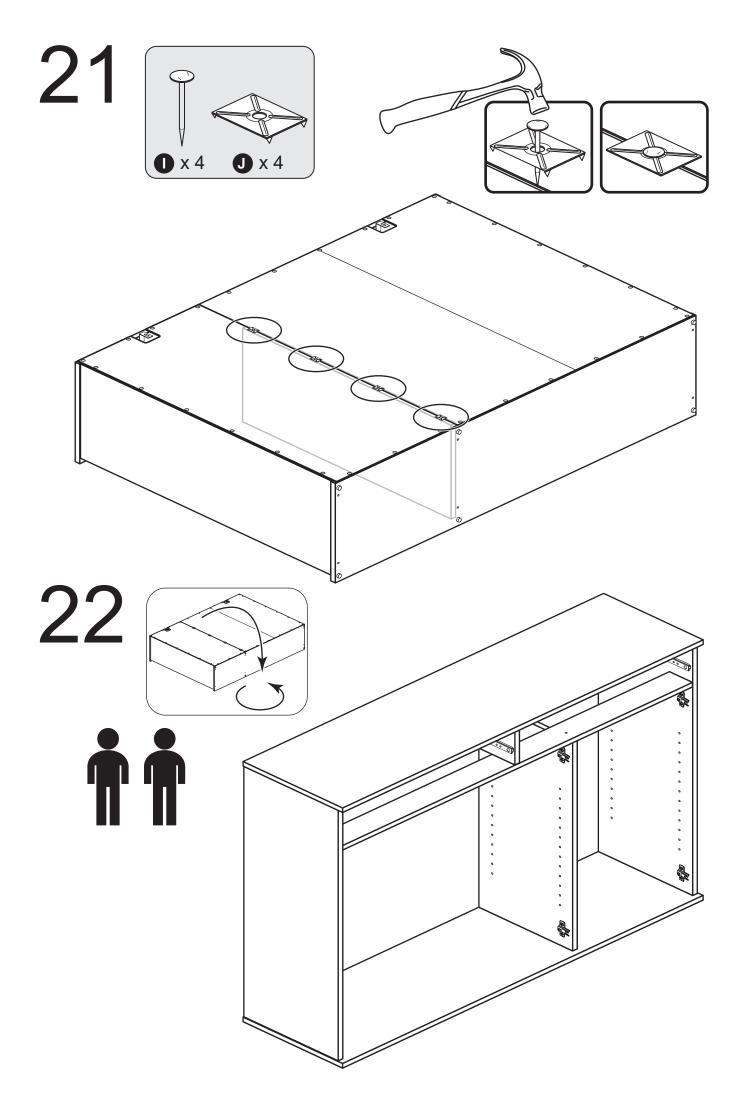

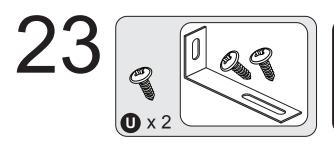

WARNING! In order to prevent overturning this product must be used with the 2 wall attachment devices provided

See the next section for a guide to wall mounting and fixings

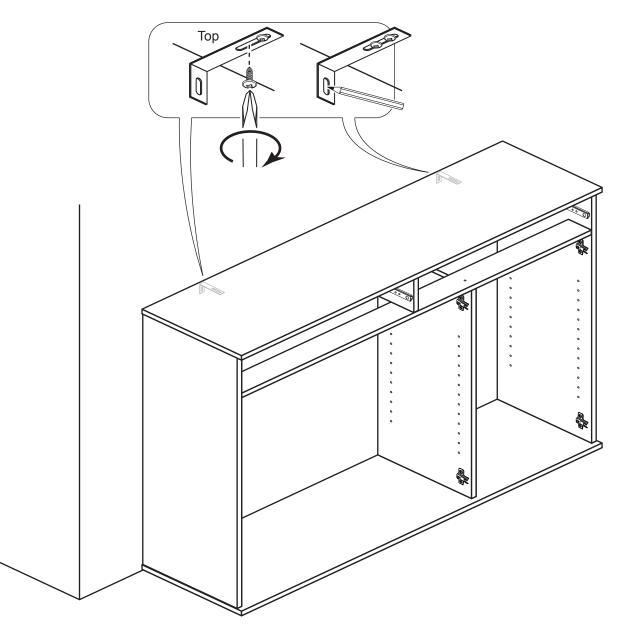

Slide the Brackets against the wall. Fit the 2nd screws supplied with the Brackets into the underside of the Top panel.

Mark the slot at the back of the Brackets for drilling into the wall.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:




- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.

Types of walls

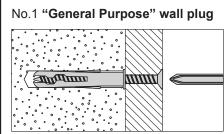

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

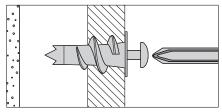

For use when attaching light loads on to plasterboard partitions.






Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:


- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

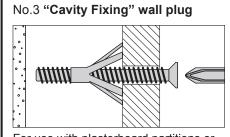

For use with plasterboard partitions or hollow wooden doors.

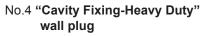

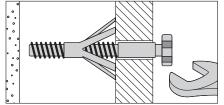


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

Safety: Always check the fitting and location to ensure your safety in and around the home.

No.5 "Hammer Fixing" wall plug


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.


No.6 "Shield Anchor" wall plug Heavy loads

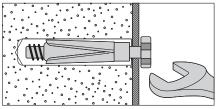

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

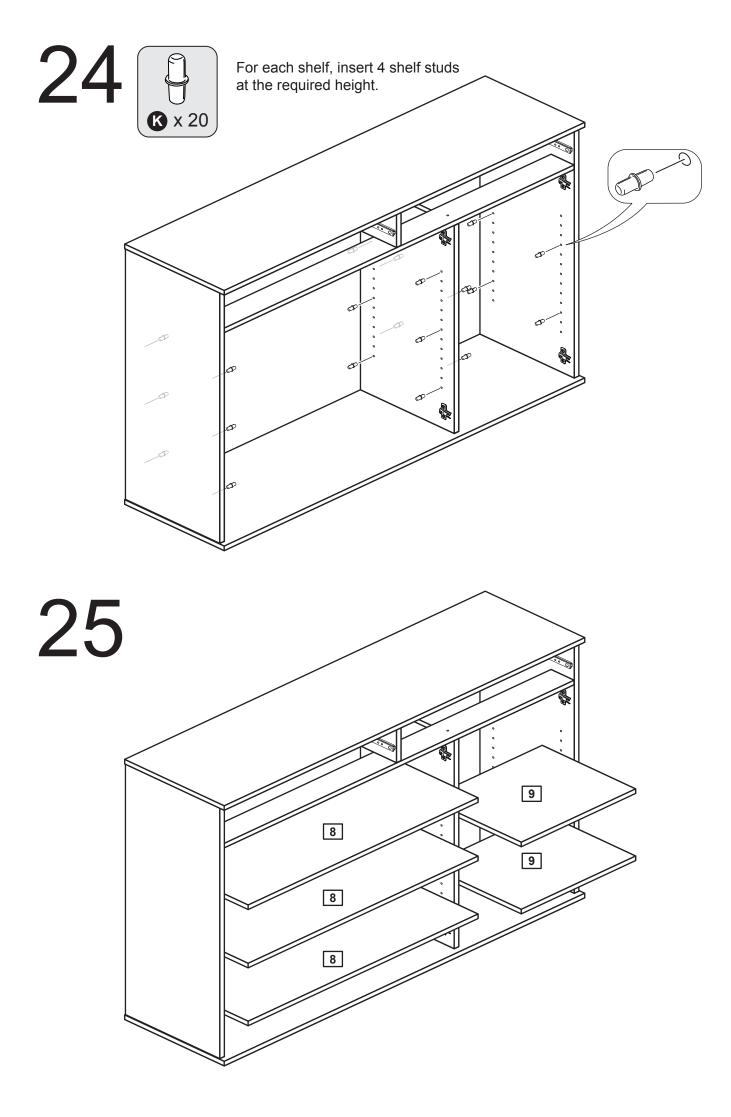


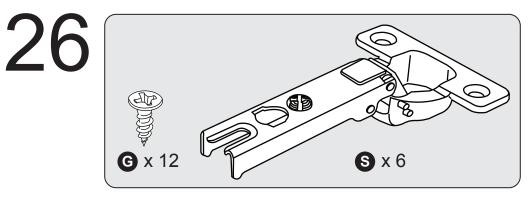




Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

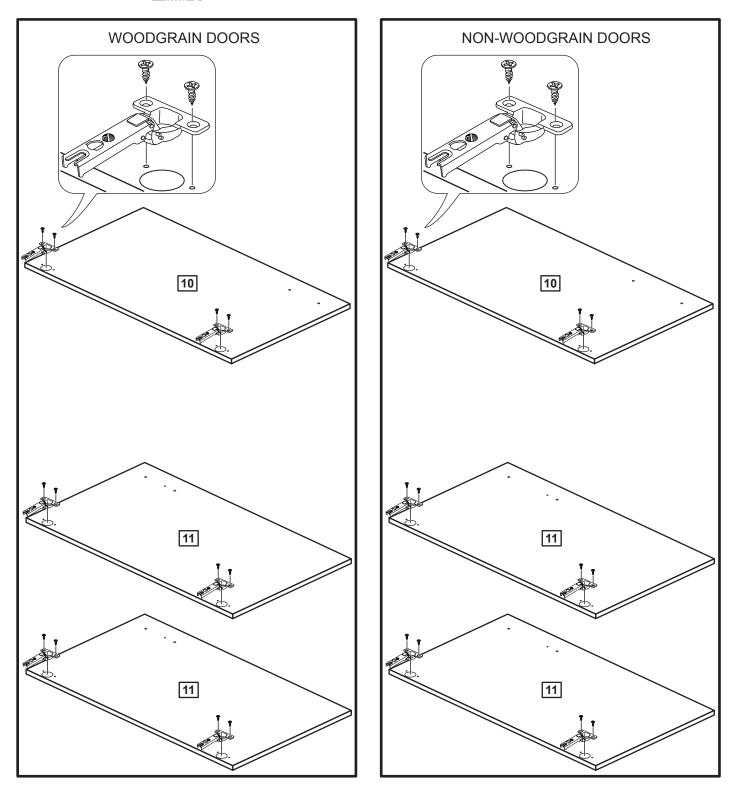

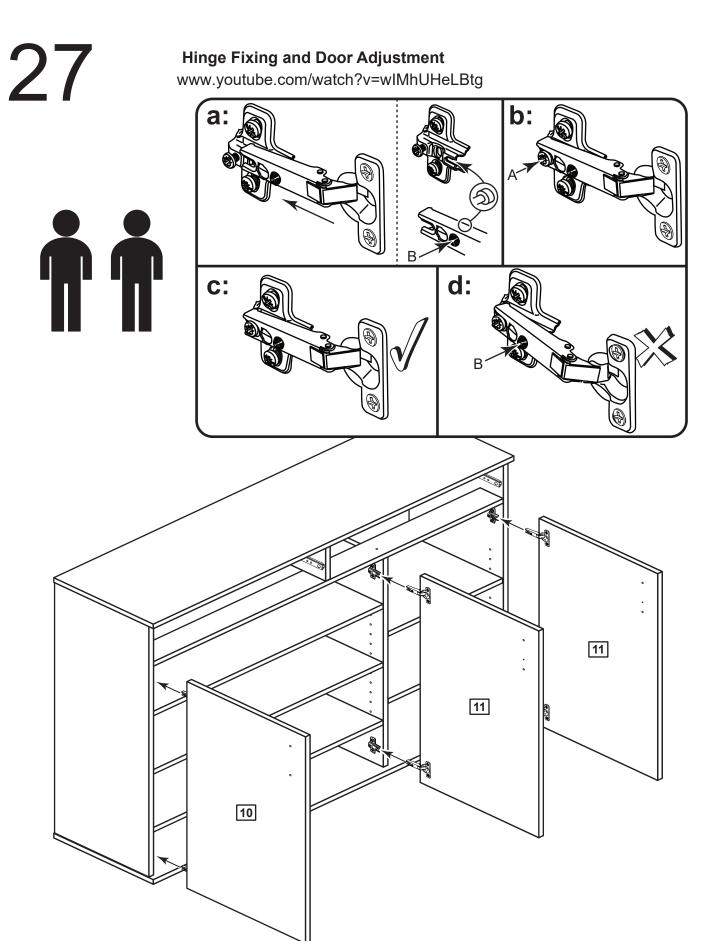

Fit the top Hinge Arm 1st, then align and fit the other Hinge Arm.

a: The recess at the bottom of screw B on the Hinge Arm goes into the slot in the Hinge Plate.


b: Keep the Hinge Arm flat and slide it across the Hinge Plate as far as it will go, then tighten screw A.


c: The Hinge Arm must be flat against the Hinge Plate prior to any adjustment.

d: The Hinge Arm must not be at an angle to the Hinge Plate when assembled.

This indicates that the recess at the bottom of screw B is not located in the slot in the Hinge Plate.

Remove the Hinge Arm and re-assemble carefully following instructions a to c.

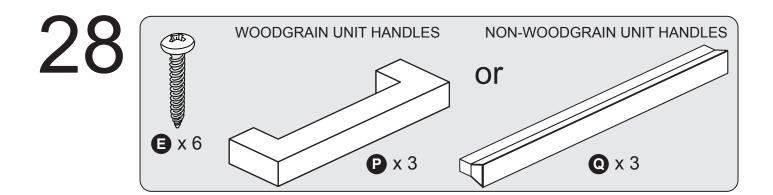

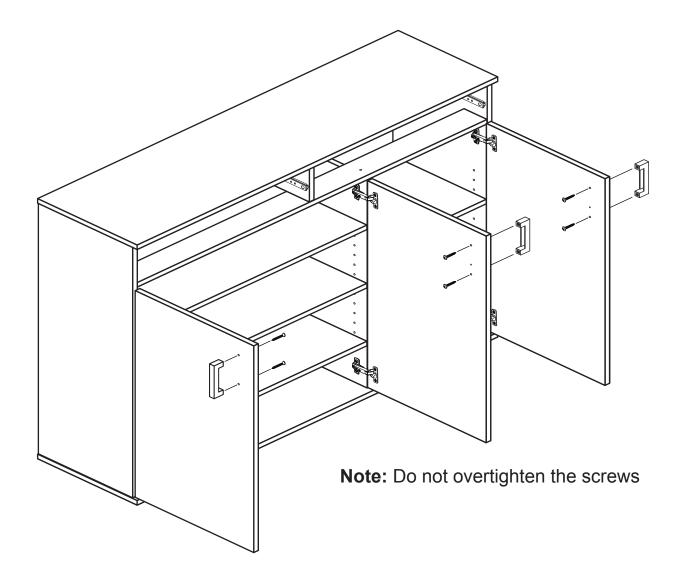



Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

C: Forward and Back adjustment.


Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.

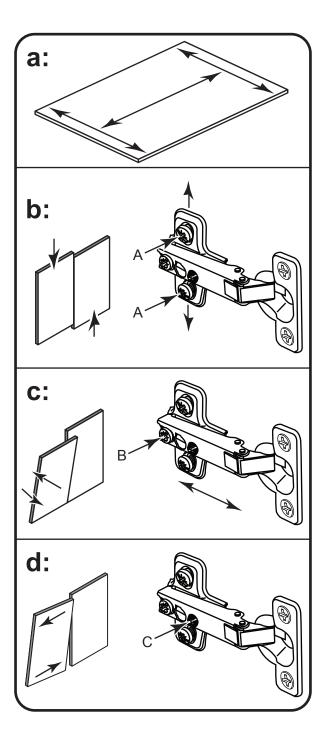


Drawer Assembly

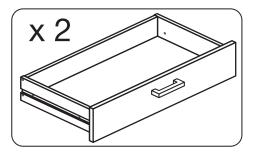






Drawer Assembly www.youtube.com/watch?v=InNBV_uuMmo

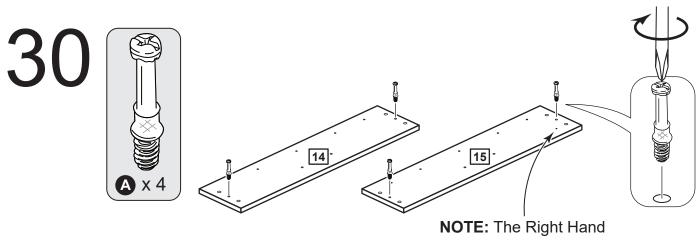



NOTE: The Right Hand Drawer Front has a small identification hole

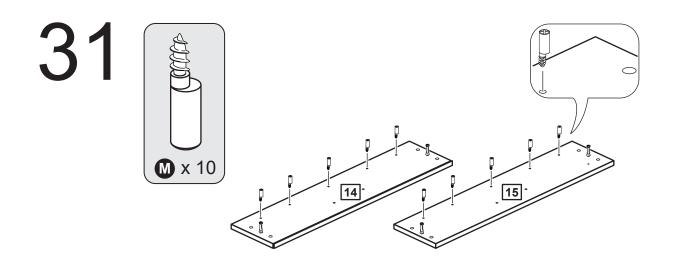

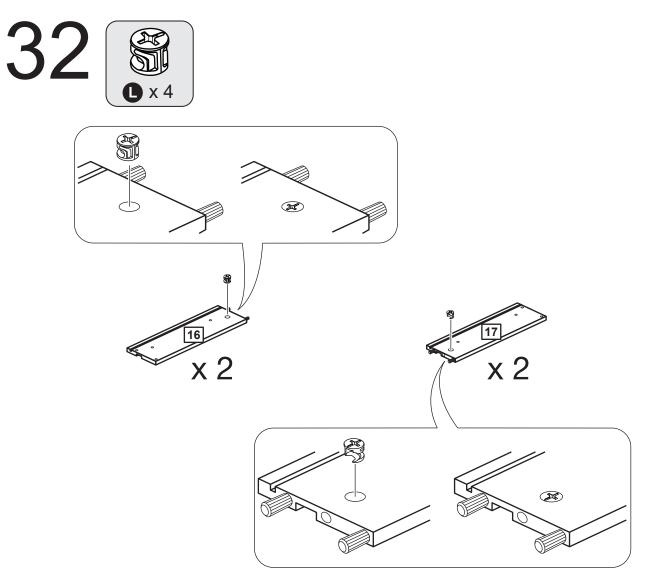


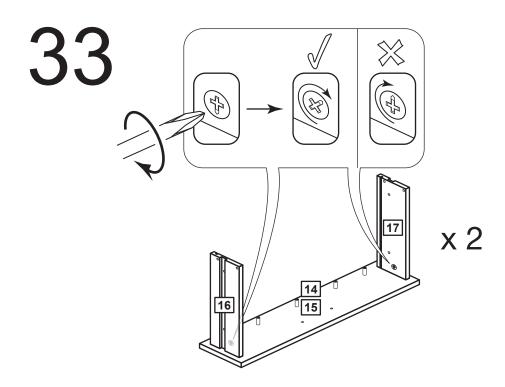


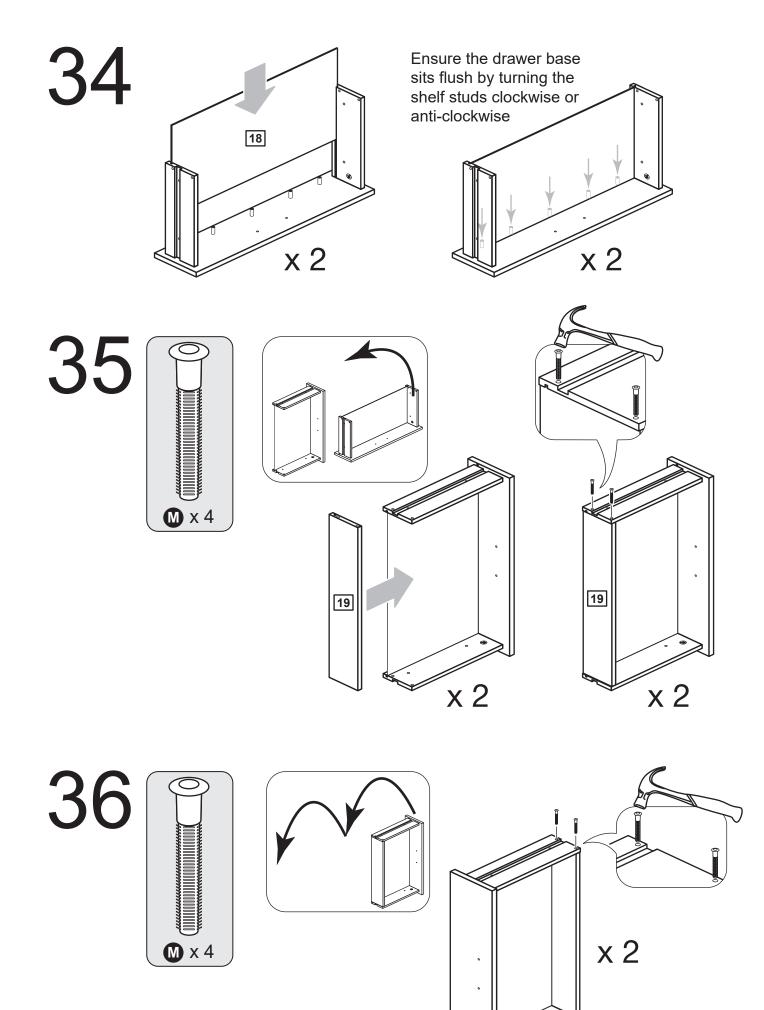


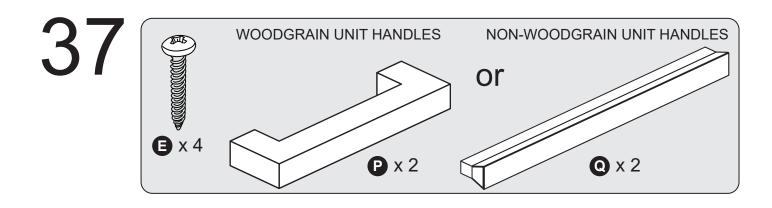

Note: Do not overtighten the screws

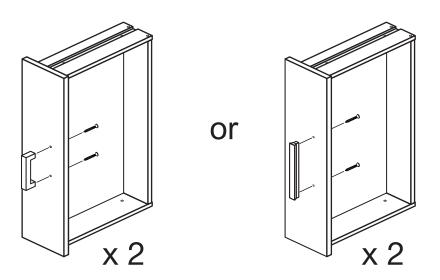

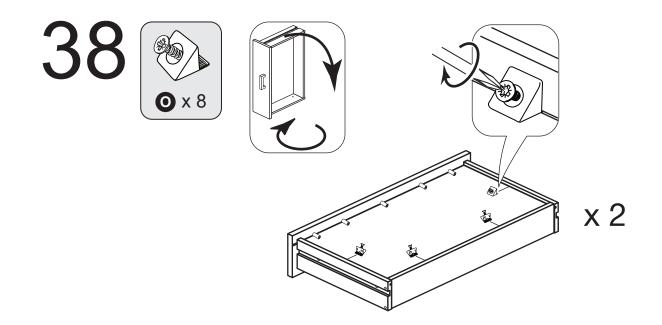


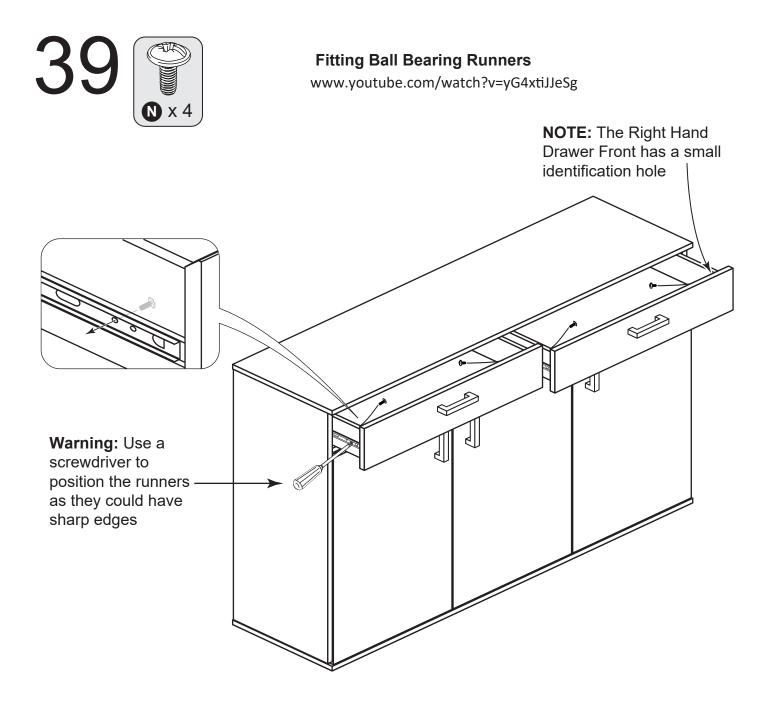

For each drawer, slide both the runners forward and locate the drawer sides between them, lining up the holes in the drawer sides with the 2nd 'threaded' holes in the runners.

Working from the inside of the drawer, insert 2 screws through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws. If they catch on the runner you may need to loosen them slightly.

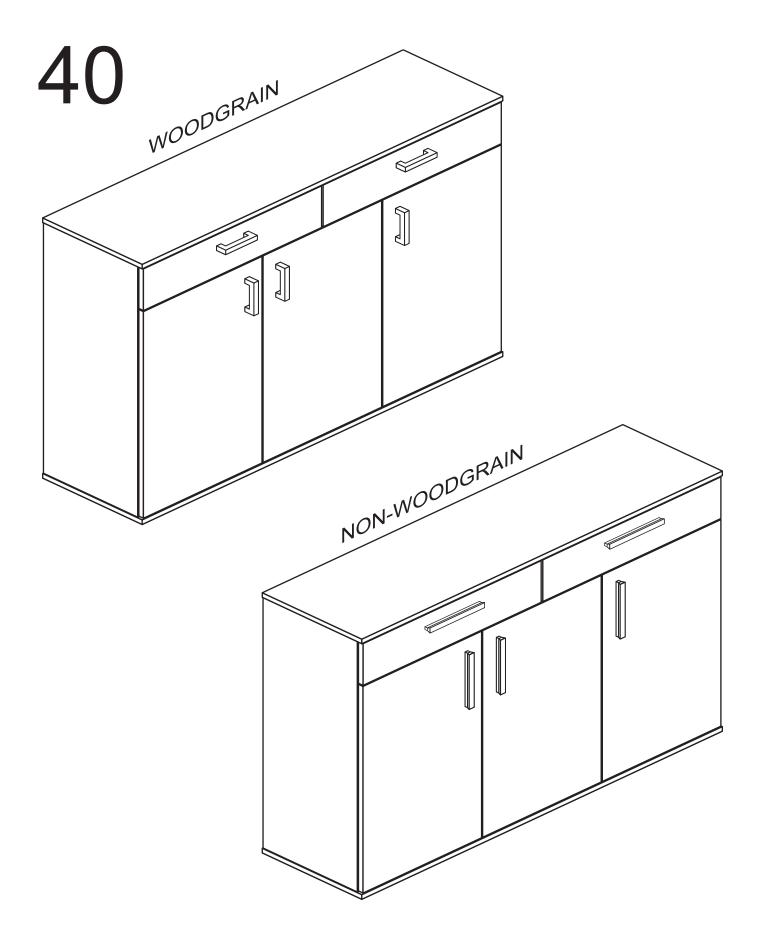

Assembly is complete

Please remove any blue protective film from panel edges and clear protective film from panel surfaces