

BUSH

Instruction manual

Large LED Alarm Clock Radio

Model: CR-338PL

SKU: 133376765



You'll soon be enjoying your new Bush Large LED Alarm Clock Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Bush Large LED Alarm Clock Radio. Should you require any guidance; call our Careline on 0345 604 0105.

Further contact details can be found online at: www.bush-support.com .

 
Contents

1	Safety information	
	Power source	6
	Ventilation heat and moisture	7
	Battery safety	8
	Care and maintenance	8
2	Getting to know your clock radio	
	Clock radio	11
	Fitting the back up batteries	12
3	Using your clock radio	
	Setting the time	14
	Using the radio	14
	Programmed station function	15
	Setting and using the alarm	15
	Setting and using the sleep function	16
	Setting and using the nap function	16
	Dimming the display	16
4	Other information	
	Technical specification	18
5	Product support	
	Troubleshooting	20
	Help and assistance	21
	Recycling electrical products	22
	Declaration	22
	Guarantee	23

Or by calling one of our experts on **0345 604 0105**

This page is left intentionally blank

Safety information 1

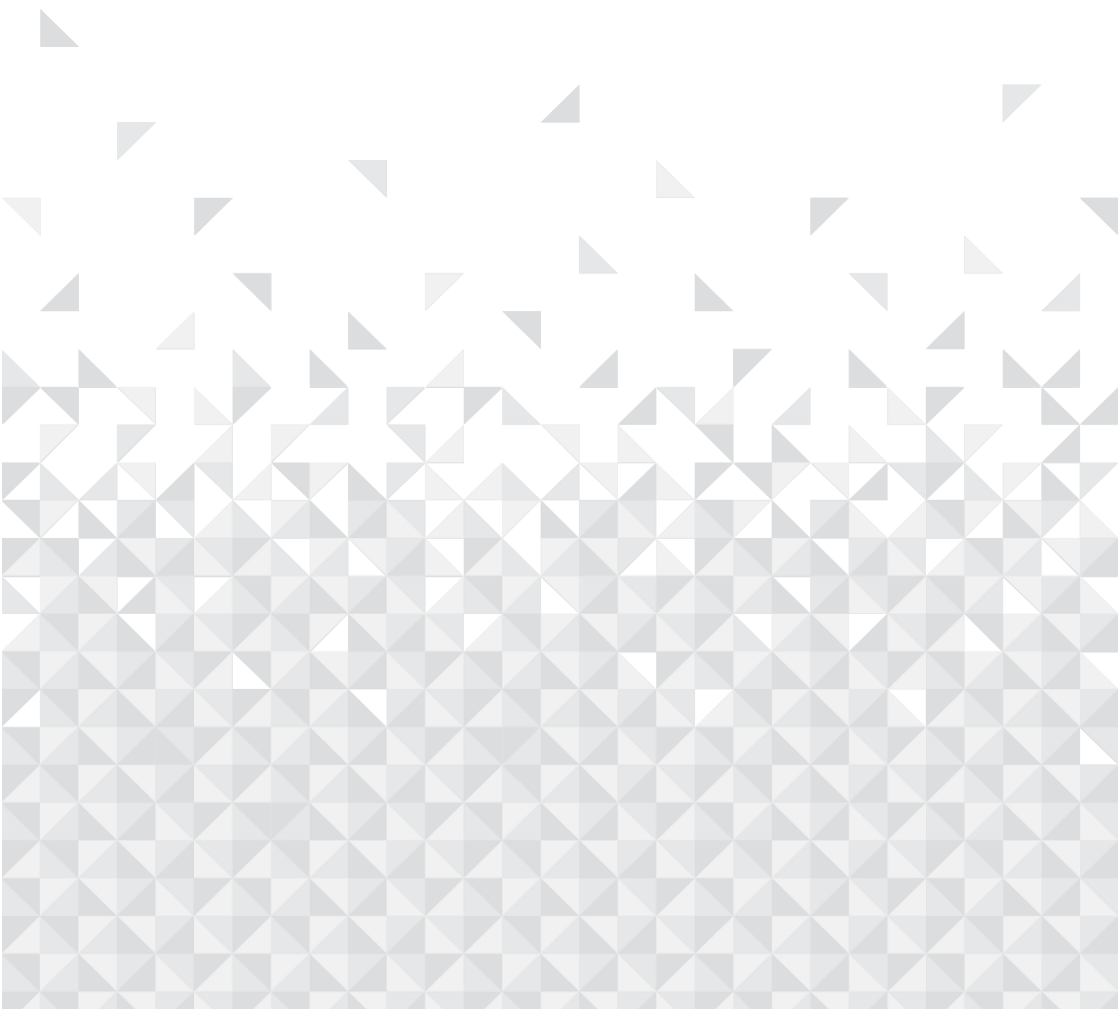



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- For household and indoor use only
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Fully unwind the cable before plugging in and ensure the cable is positioned away from areas where it is likely to get damaged or cause a trip hazard.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, it must only be replaced by a qualified service engineer, with a suitably approved part.
- Do not pull on the cable to disconnect from mains supply.
- Switch off and unplug when not in use and before cleaning or servicing the appliance. Servicing of this appliance must only be carried out by a qualified electrician.
- Always ensure the mains plug is readily unpluggable – do not use with 'lockable' sockets or permanently wire to mains.



Safety information

Important - Please read these instructions fully before installing or operating

Ventilation, heat and moisture

- Keep appliance, cable, mains plug dry and away from areas where it is likely to get splashed. Avoid using in hot, humid environments.
- Place the appliance on a flat, stable surface with adequate ventilation and away from other sources of heat. Minimum distances around the appliance for adequate ventilation is 5cm. Do not cover or restrict ventilation openings.
- Do not place items with naked flames or containers with liquids on this appliance.



The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

Warning: to reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside, refer servicing to qualified service personnel.

Or by calling one of our experts on **0345 604 0105**



Safety information

Important - Please read these instructions fully before installing or operating


Battery Safety

- CAUTION – Danger of explosion if batteries are incorrectly fitted / replaced.
- Batteries should be installed by an adult. Keep new and used batteries away from children.
- Only use 'AAA' 1.5V batteries in this appliance.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from appliance before recharging.
- Never mix old and new batteries (replace all batteries at the same time).
- Never try to dismantle batteries.
- Do not short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.
- Dispose of used batteries responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode.

Care and maintenance

Wipe with a soft cloth. If the cabinet is very dirty, unplug from the mains and dampen the cloth with a weak solution of washing up liquid and water and wipe clean. Allow it to dry thoroughly before using.

Getting to know your clock radio 2

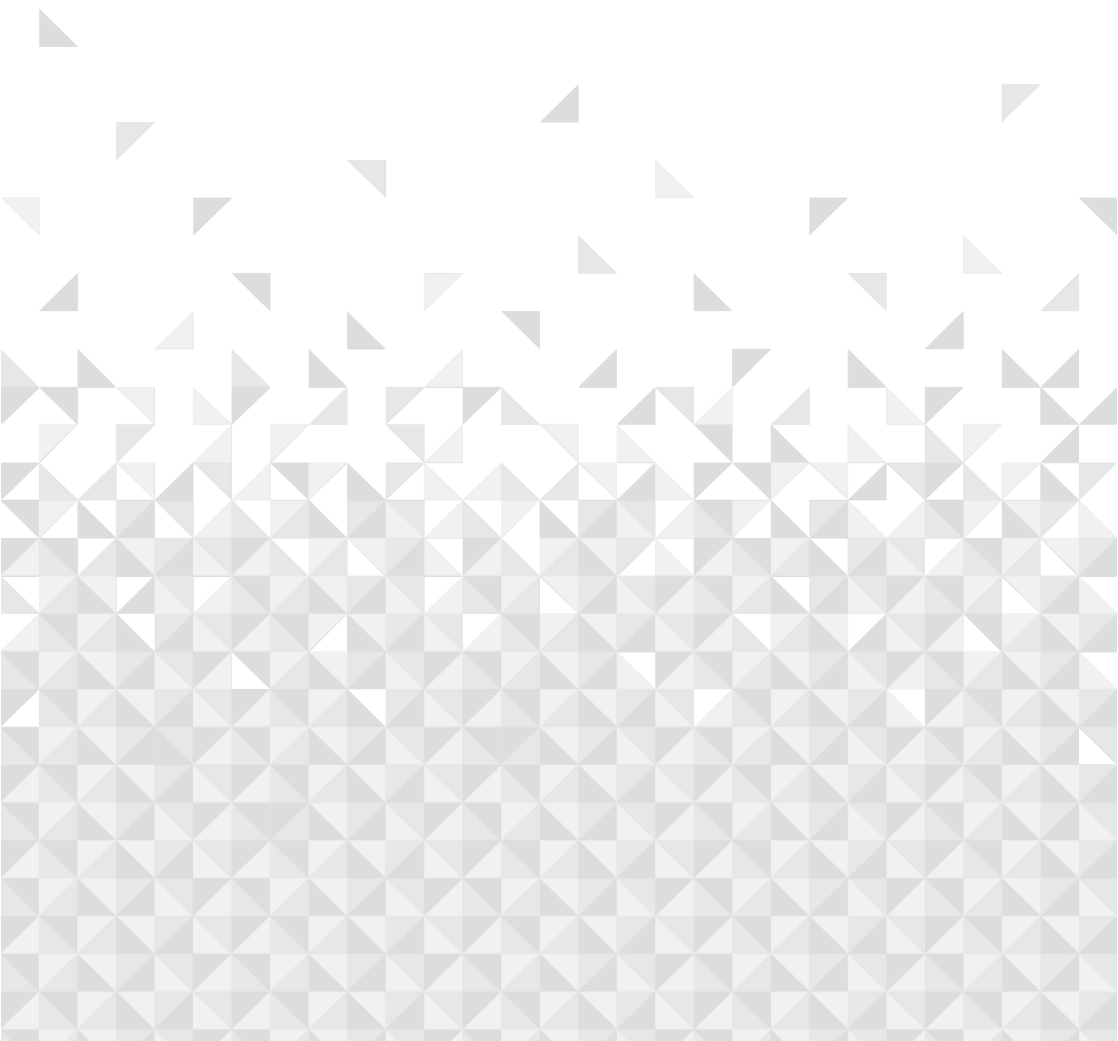

Getting to know your clock radio

You'll be up and running in no time

Ready? Let's begin...


Please read these instructions carefully. They contain important information which will help you get the best from your clock radio and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Getting to know your clock radio

You'll be up and running in no time

Clock radio

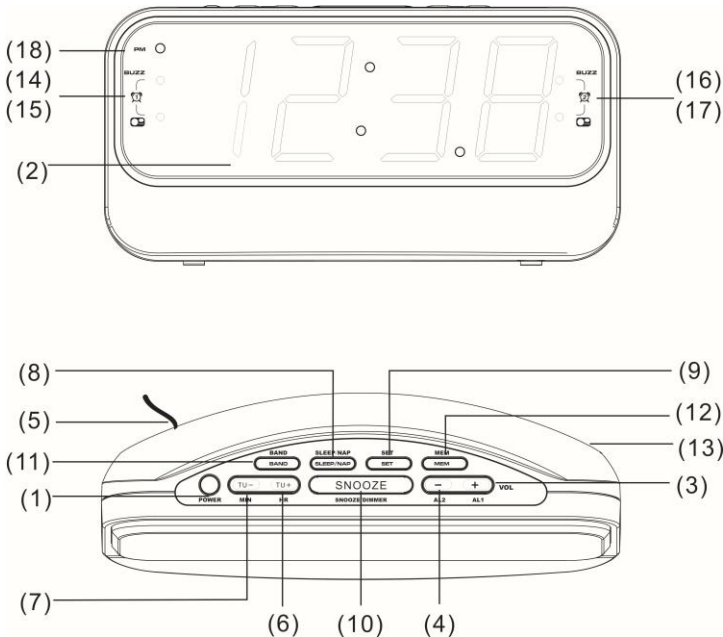

- | | |
|--------------------------------------|---------------------------------------|
| 1. Power (ON / OFF) button | 11. Band button |
| 2. Display | 12. Memory button |
| 3. Volume up (+) / Alarm 1 button | 13. Battery compartment (not visible) |
| 4. Volume down (-) / Alarm 2 button | 14. Alarm 1 buzzer indicator |
| 5. FM antenna | 15. Alarm 1 radio indicator |
| 6. Tuning up (Tu+) / Hour button | 16. Alarm 2 buzzer indicator |
| 7. Tuning down (Tu-) / Minute button | 17. Alarm 2 radio indicator |
| 8. Sleep / Nap button | 18. PM indicator |
| 9. Set button | |
| 10. Snooze / Dimmer button | |

 
Or by calling one of our experts on **0345 604 0105**

Getting to know your clock radio


You'll be up and running in no time

Fitting the back up batteries

1. It is advisable to fit batteries (not supplied) in the battery compartment to prevent the loss of the display time and settings during a power failure.
2. To install the batteries, lift off the battery compartment cover from the underside of the unit.
3. Insert 2 x AAA 1.5V alkaline batteries in accordance with the diagram in the battery compartment. Take care to observe the correct polarity (+/-).
4. Refit the battery compartment cover.
5. Do not expose the batteries or the installed batteries to excessive heat (e.g. fire, sunshine or position close to radiators etc.).

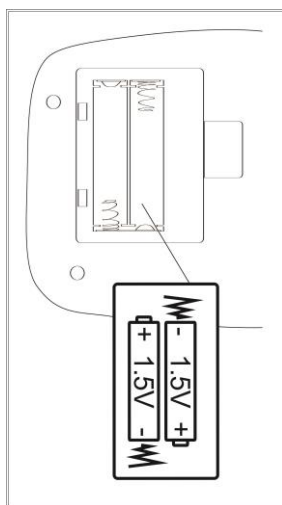

Using your clock radio 3

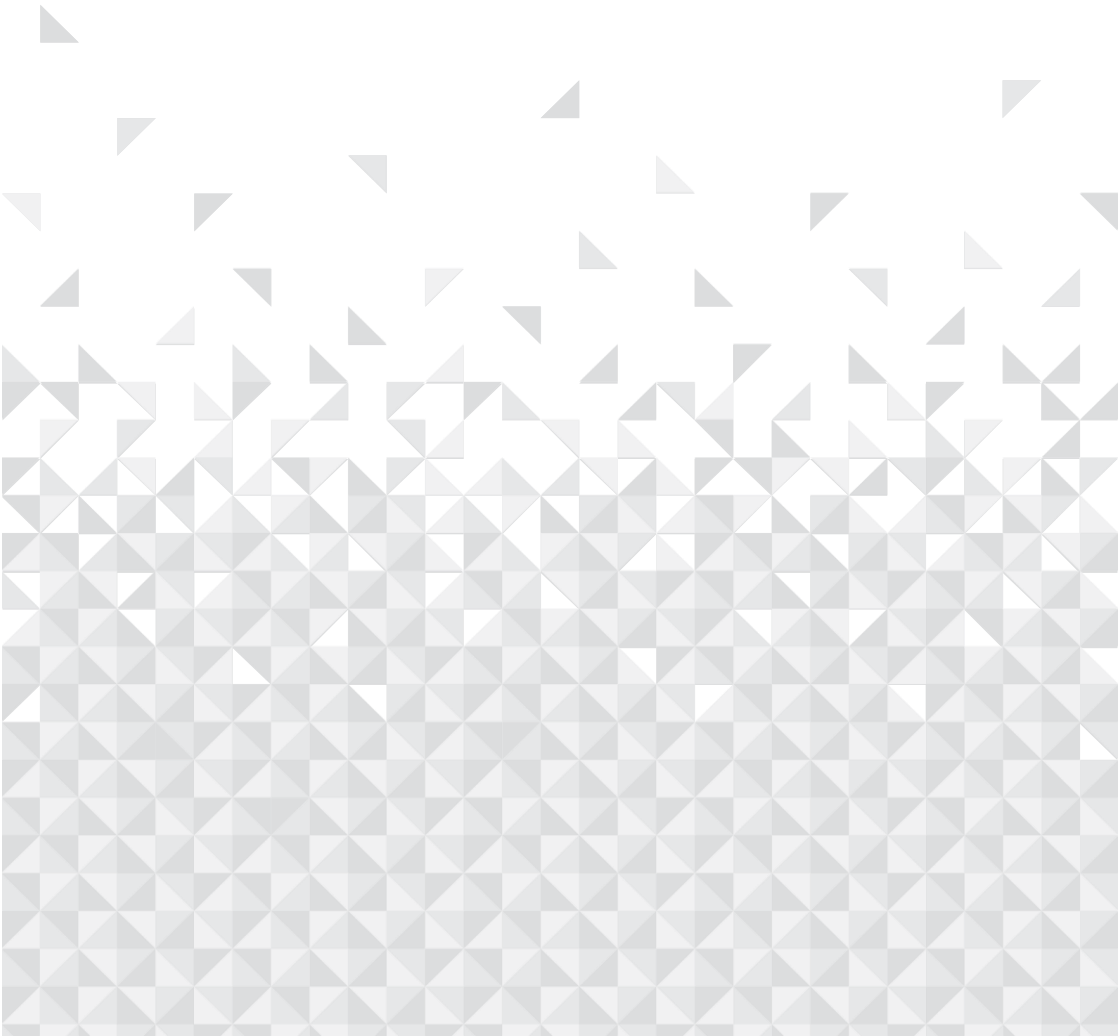 

Using your clock radio

Let's get started

Setting the time

1. Plug the mains power cable into the household socket and '12:00' will flash in the display. Press the SET button to stop the display flashing.
2. Press and **hold** the SET button for a few seconds until the display flashes.
3. Press the HOUR (HR) button repeatedly until the correct hour is displayed. If setting the time after midday, press the hour button until the PM indicator is illuminated. After setting the hour, press the MINUTE (MIN) button repeatedly until the correct minute is displayed.
4. Once the time has been set, press the SET button again to store the time and the display will become static.

Using the radio

1. Plug the mains power cable into the household socket and switch on.
2. Ensure the FM wire antenna at back of unit is fully unwound.
3. Press the POWER button to turn the radio on and the radio will initially tune to 87.5 MHz FM.
4. To activate auto tune, press and briefly **hold** the TUNING (TU+ / TU-) button. To start scanning up the frequency, press and **hold** the TUNING up (TU+) button and to scan downwards, press and **hold** the TUNING down (TU-) button. The radio will stop automatically once the next station up or down has been found.
5. To tune the radio manually, press the TUNING up (TU+) or down (TU-) button repeatedly until the desired frequency is displayed. Each press increments the frequency by 0.1MHz.
6. To change to AM radio, press the BAND button and select the frequency as described above. Press the BAND button again to return to FM radio.
7. Adjust the volume to the desired level by pressing the VOLUME up (+) or down (-) button.
8. To turn off the radio, press the POWER button. The radio will silence but the clock will continue to be displayed.

Note

- The built in AM and the external FM antennas are directional. If tuning into a FM station extend or move the antenna for a better reception. If tuning into an AM station rotate the whole unit after tuning to obtain the best reception.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions

Using your clock radio

Let's get started

Programmed station function

This function allows up to 10 stations to be programmed into the memory and stored in the FM and AM modes.

1. Follow the directions above to select a radio station.
2. Press and **hold** the SET button until the display shows a flashing preset location e.g. 'P01'. Press the SET button again to store the station in the displayed location.
3. **Repeat the above steps to store further stations.**
4. To listen to the preset stations, press the Memory (MEM) button repeatedly to scroll through the stored locations. When the storage location of choice is displayed release the button. The display will briefly show the frequency of the station stored and then revert to the clock.

Setting and using the alarm

1. In STANDBY mode press and **hold** the ALARM 1 (AL1) button for a few seconds until the display flashes.
2. Press the HOUR (HR) button repeatedly until the correct alarm hour is displayed. After setting the hour, press the MINUTE (MIN) button repeatedly until the correct alarm minute is displayed.
3. Once the time has been set, press the ALARM 1 (AL1) button again to store the alarm time. The display will be static and return to the current time.
4. To activate the alarm, press the ALARM 1 (AL1) button repeatedly until the required alarm indicator is illuminated. To wake up to a buzzer ensure that the alarm 1 buzzer indicator is illuminated and if the radio is the wake up option of choice ensure the corresponding radio indicator is illuminated.
5. When the time on the clock is the same as the alarm time that has been set, the alarm will sound.
6. The alarm will continue to sound and stop automatically after 1 hour. To silence the alarm, press the POWER button. The alarm indicator will remain illuminated and the alarm will sound again the same time the following day.

Using your clock radio

Let's get started

7. To activate the snooze function, press the SNOOZE button when the alarm sounds. The alarm will silence, but the alarm indicator will continue to flash to show that the alarm is in SNOOZE mode. The alarm will sound again after approximately nine minutes.
8. To turn off the alarm permanently, press the ALARM 1 (AL1) button until no alarm indicators are illuminated.
9. To set the second alarm, follow the above sequence using the ALARM 2 (AL2) button.

Setting and using the sleep function

This function will switch off the radio automatically after a preset time interval.

1. **With the station of choice playing**, press the SLEEP/NAP button repeatedly to scroll through the preset times (minutes) in the sequence below (fig.1).



Fig.1

2. When the display shows the sleep interval of choice, release the button.
3. The unit will switch off automatically after the time interval selected has lapsed.
4. To check the sleep interval remaining, press the SLEEP button briefly and the interval remaining will be displayed.
5. To cancel the sleep timer, press the SLEEP button, until 'OFF' is shown in the display or alternatively press the POWER button and turn off the radio.

Setting and using the nap function


This function will switch on the radio automatically after a preset time interval to allow the user to take a nap without changing the alarm settings.

1. **With the radio in standby mode**, press the SLEEP/NAP button repeatedly to scroll through the preset times (minutes) in the sequence above (fig. 1).
2. When the display shows the nap interval of choice, release the button.
3. The unit will switch on automatically after the nap interval selected has lapsed.

Dimming the display

The light level for the display can be changed from high to low brightness by pressing the SNOOZE / DIMMER button. Press the button again to return to high.

Other information 4

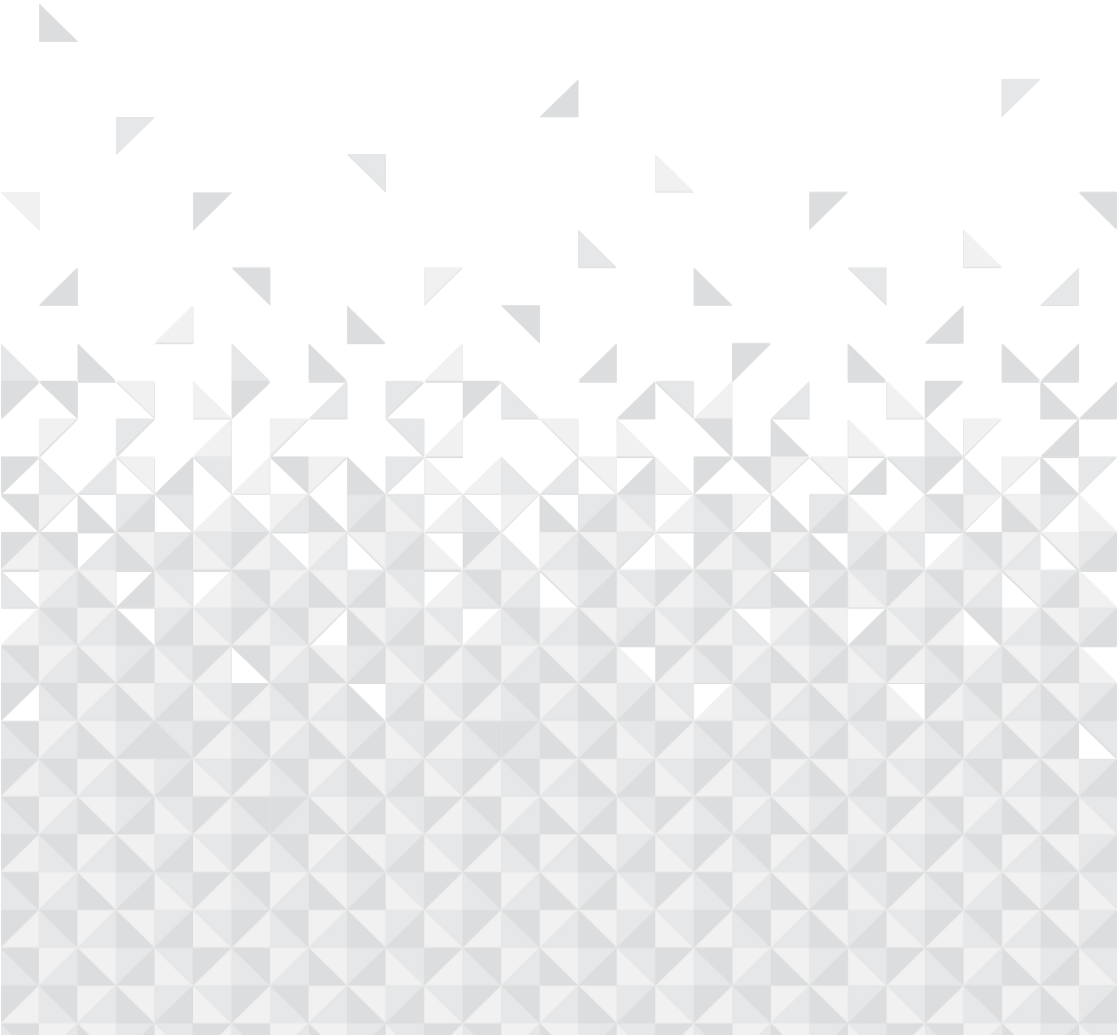


Other information

Technical Specification

Model	CR-338PL
Rated voltage (transformer)	230 - 240V~ 50Hz
Power consumption	5W
Power consumption (clock only)	<1W
Class rating	II (double insulated)
Back up batteries required	2 x AAA (1.5V)
BS 1362 Fuse fitted	3A
Audio output	0.4W RMS
Radio	AM 522 – 1620 kHz FM 87.5 – 108 MHz
Operating conditions	Temperature: 5°C to 35°C Humidity 5% to 90%
Operating position	Horizontal

 Product support 5

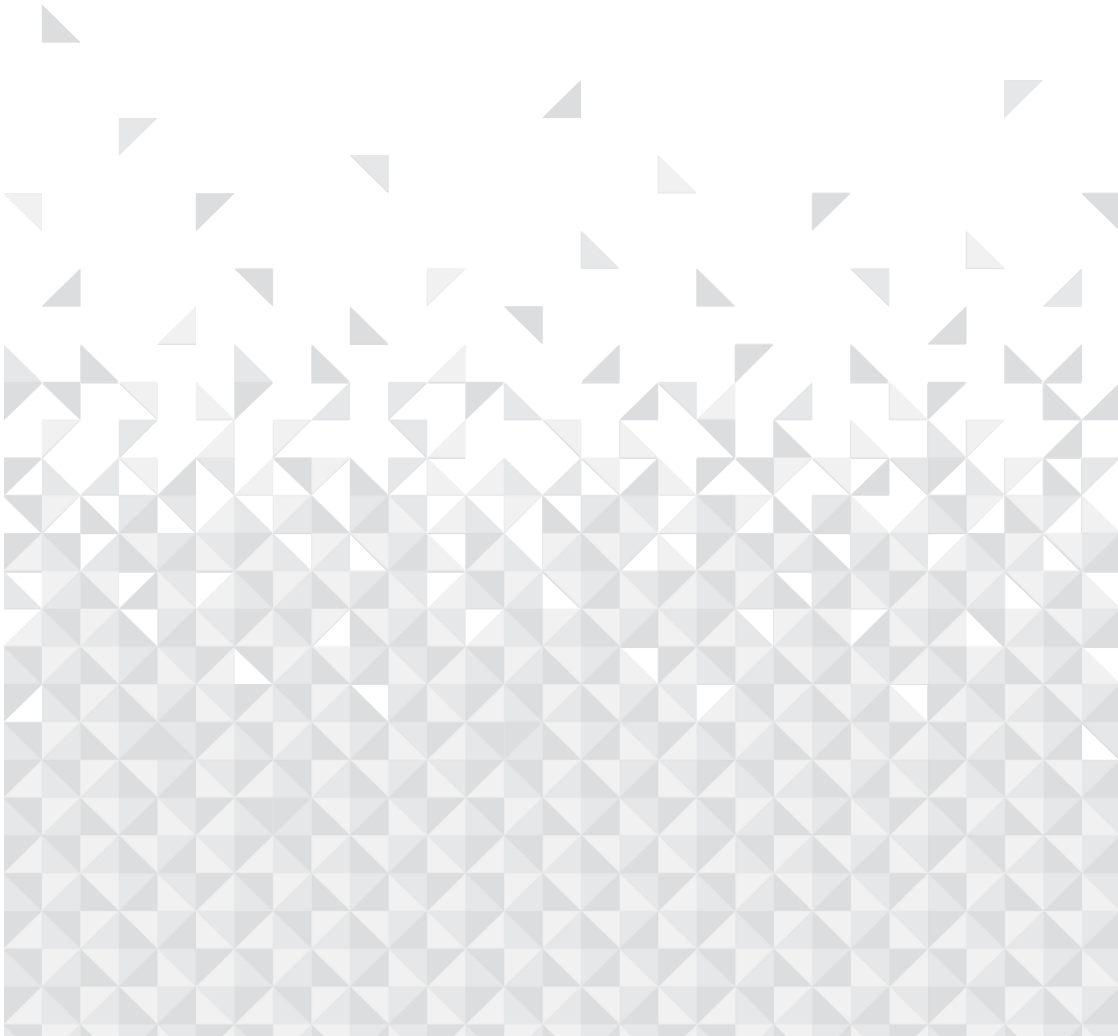

Product support

Help is always at hand

Troubleshooting

Observation	Potential cause / solution
The unit does not work	Does the socket that is being used have power? Is the unit switched on at the plug and the POWER button pressed?
No sound	Is the volume control set at minimum?
Radio reception weak	Extend or adjust the position of FM antenna or adjust the position of the AM radio.
Alarm function does not work	Has the alarm been activated? See page 15
Sleep function does not work	Has the sleep function been activated by pressing the SLEEP /NAP button when radio is in play mode ? See page 16
Nap function does not work	Has the nap function been activated by pressing the SLEEP /NAP button when radio is in standby mode ? See page 16

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bush alarm clock radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref:

You can find this information on the rating plate – a small sticker (usually a sticker or metal plate on the rear of your product)

Serial number

Date of purchase

This will be shown on your receipt

Local call rate applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan / tariff. Mobile and providers costs may vary, see www.bt.com/pricing for details

For security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Or by calling one of our experts on **0345 604 0105**

Product support

Help is always at hand

Recycling electrical products



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Declaration



Argos Ltd. hereby declares that this alarm clock radio is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting www.bush-support.com

Product support

Help is always at hand



Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines open 8am-8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

Or by calling one of our experts on **0345 604 0105**

23 **BUSH**

BUSH



**Produced for Bush
489-499 Avebury Boulevard, Milton Keynes MK9 2NW
Made in China.**

Bush is a registered trademark of Argos Ltd.

Issue 1a 02/18