 
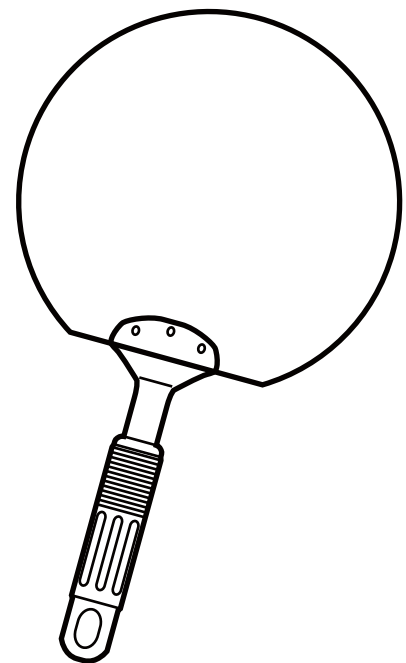 
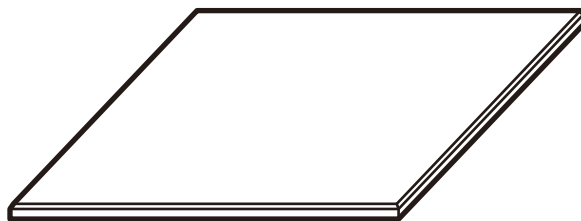 


Pizza oven BBQ Topper with Paddle

Assembly Instructions - Please keep for future reference

8924119

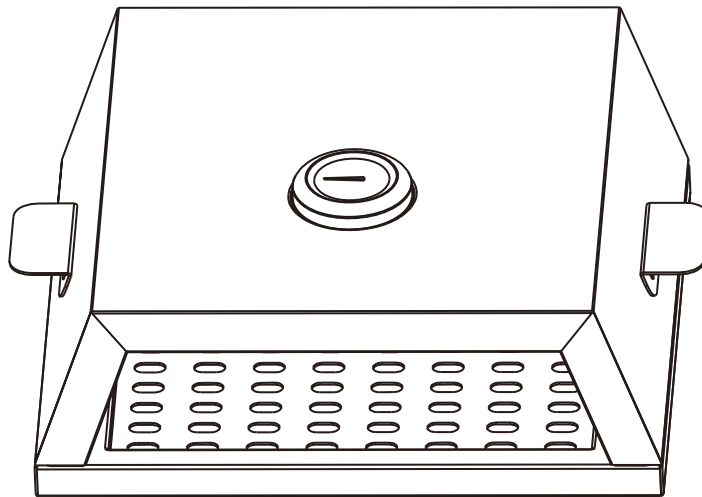

Dimensions

Width - 40 cm
Depth - 35 cm
Height - 15 .5 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**



Safety and Care Advice

Important - Read and follow instructions carefully before use.

 
- Failure to follow instructions could result in death, serious bodily injury and/or property loss.
- For household outdoor use only, not for commercial use.
- Some parts may have sharp edges-especially where noted in this manual.
- Wear protective gloves if necessary.
- These instructions must be kept with the consumer and retained for further use.
- Never touch metal parts which may be not.
- Do not use or pour gasoline methylated spirits or paraffin onto burning charcoal.
- Do not use indoors.
- Do not attempt to move this barbecue oven while in use with hot charcoal.
- Never handle charcoal or kindling wood after lighting.
- Keep children and pets clear of this barbecue oven.
- For outdoor use Only. DO NOT use indoors. Place in well-ventilated areas.
- DO NOT use gasoline, kerosene or alcohol for lighting!
- DO NOT touch metal parts of barbecue oven until it has cooled to avoid burns, unless you are wearing protective gear (ex. Potholders, gloves, etc.)
- DO NOT use this barbecue oven unless it's completely assembled and all parts are securely fastened and tightened.
- Never leave the barbecue oven unattended during operation or cleaning.
- Never allow children to operate or play near this or any barbecue oven.
- DO NOT move this barbecue oven when in operation or hot.
- DO NOT remove the pizza stone tray until coals are completely extinguished.
- WARNING! DO NOT wear loose clothing and tie back long hair around a barbecue while in use or hot.
- Keep out of reach of children & pets
- Never take out the charcoal grid while in use.
- Always place the barbecue oven on a level surface and far away from combustibles and children.
- DO NOT move the barbecue oven once the barbecue is lit.
- DO NOT use the barbecue oven in high wind.
- Never dismantle this appliance while in use or hot.
- DO NOT use barbecue oven indoors, on recreational vehicles, or on a boat.
- This barbecue oven is for outdoor use only and should be placed on a firm, level surface. The unit should be placed centrally on top of the existing heat source / cooking grid.
- Combustible or flammable material should NEVER be used or stored within 6 feet of your barbecue.
- DO NOT use this barbecue oven in a fully or partially enclosed area such as garage, breezeway, carport, and porch or under a surface that can catch fire.

Assembly

- While every effort has been made in the manufacture of your barbecue to remove any sharp edge, you should handle all components with care to avoid accidental injury.
- Dispose of all packaging carefully and keep out of the reach of children.
- Please read the section on barbecue safety prior to using your barbecue oven.

Instructions for use

- Make sure the assembly instructions have been followed correctly.
- The unit should be placed centrally on top of the existing heat source / cooking grid.. The base of the barbecue oven will get hot so ensure it stands on a stable surface.
- Make sure that the cooking grid it sits on is fully situated into the grid supports so that the cross bar supports lock behind the retaining edges.
- ALWAYS WEAR OVEN GLOVES WHEN HANDLING.

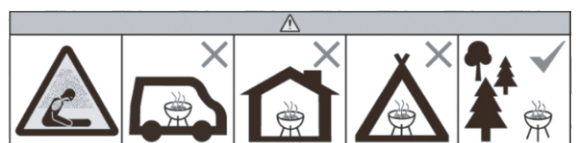

Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality.



Safety and Care Advice

How to start your barbecue

- Make sure the assembly instructions have been followed correctly.
- Set the barbecue up in a suitable position, on a level surface away from areas likely to catch fire. The base of the barbecue will get hot so ensure it stands on a suitable surface.
- Always stand your barbecue outdoors and level ground away from trees and wooden fencing. Ensure there is at least 1 metre clearance around all sides of the barbecue, keep away from fences, over hanging branches and other combustible materials.
- The barbecue shall be heated up and the fuel kept red hot for at least 30 min prior to cooking.
- Do not cook before the fuel has a coating of ash.

- Use Charcoal and a suitable lighting method:
Method.1 Charcoal & Lighting Fluid/Gel
 - a) Set up your barbecue in a safe place. Place enough charcoal in the bowl. Max. 1.2KG.
 - b) DO NOT spill any liquid/gel onto your hands or clothes. Apply carefully the lighting fluid/gel over the charcoal.
 - c) If using lighting fluid, wait for 30 seconds to allow the liquid to soak into the charcoal.
 - d) DO NOT light the charcoal if you have spilt fluid or gel onto your clothes. Light the charcoal using a long tape or safety lighter. The charcoal will then burn for a period with flames.
 - e) When the flames die down, check the charcoal is beginning to glow red. If your coals are going out you should open all the vents and allow to cool down before trying to apply more liquid.
- CAUTION: Apply carefully lighting fluid/gel in small amount. Over application can be dangerous.
- f) DO NOT squirt liquid onto burning charcoal.

Method 2 Lighting Blocks

- a) Place three or four lighting blocks in the centre of the barbecue bowl and light with a match.
 - b) Place piece of charcoal around each burning block. Add more charcoal as required, in a pyramid formation.
 - c) When burning is established, spread the fuel out evenly. After lighting, the fire should be ready, or when even white ash is visible by day, or an even red glow is visible by night.
- ALWAYS WEAR OVEN GLOVES WHEN HANDLING THE BARBECUE.
 - Recommended charcoal 1.2KG max to be used.

Care and Maintenance

- When you have finished using the barbecue oven, never pour cold water directly onto the pizza stone to cool it as this may damage your barbecue oven.
- Wait for it to fully cool down before cleaning.
- To clean your barbecue oven, wash with hot soapy water once it has fully cooled down. Dry thoroughly and store in a dry place. Do not leave your barbecue oven outside unprotected.



Safety and Care Advice

Important: please read these instructions fully before starting assembly

- **WARNING** any braziers/barbecue should not be left unattended.
- Keep the barbecue oven away from homes, garages and flammable materials/ fluids or vehicles while in use.
- Barbecue oven is not to be used by children.
- Do not use in windy conditions.
- Use caution when using in combustible surface and avoid wearing flammable clothing while barbecue oven is in use.
- Always remember ashes can remain hot for long periods.
- Do not overload or use to burn leaves, trash or paper.
- Use caution and heat resistance gloves when handling or moving.
- When in use, surfaces will be hot.
- All fires must be completely extinguished before retiring. Do not store hot or with ashes inside.

- Never overload the barbecue with too many charcoals. Don't use the barbecue as an incinerator, and never burn garbage, Christmas trees, or piles of paper.
- Keep a fire extinguisher on hand. See that the extinguisher is in good working order and that all family members know how to operate it.
- Indoor use can be fatal.
- Do not use the barbecue oven under windy conditions, not to burn trash, leaves, cardboard in the barbecue.

Attention! This barbecue oven will become very hot. DO NOT move it during operation. DO NOT move it during operation. DO NOT use indoors. Warning! Keep children and pets away. CAUTION! DO NOT use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3.

 
Safety notes

- Keep away from flammable material and fluids such as gasoline, alcohol, diesel fuel, kerosene and charcoal lighter fluid or vehicles while in use.
- Do not use flammable fluids such as gasoline, alcohol, diesel fuel, kerosene and charcoal lighter fluid to light or relight fires.
- Exercise the same precautions you use with an open fire.
- Do not allow children to use barbecue. Keep Children and pets away from barbecue.
- Do not wear loose or flammable clothing when using the barbecue.
- Do not burn trash, leaves, paper cardboard or plywood in barbecue. Avoid using soft wood such as pine or cedar that likely to throw sparks. Use of seasoned hardwood is suggested.
- Do not store barbecue with ashes or combustible materials inside. Do not store barbecue until the fire is completely out and all surfaces are cold.
- Use heat resistant gloves when handling barbecue and tending the fire. Use long handled, sturdy barbecue equipment when adding or moving charcoals.
- Do not move barbecue while in use.
- Always use in accordance with all applicable local and national fire codes.
- Use only on non-combustible surfaces such as concrete, brick, rock, etc.. Do not use on a wooden deck unless screens are in place and barbecue is under constant supervision. Do not leave unattended. Keep all bolts, nuts and screws tight to make sure barbecue is in safe working condition. Inspect on a routine basis to ensure your barbecue is functioning reliably.
- Stand your barbecue on a safe, level surface, away from flammable items such as wooden fences or over-hanging tree branches. NEVER USE your barbecue indoors or in confined areas.
- DO NOT use gasoline, paraffin, methylated spirit or lighter fuel to light your barbecue.
- Once lit DO NOT move your barbecue or leave it unattended.
- Keep children and pets a safe distance away from the barbecue.
- Keep a fire extinguisher handy.
- During use the barbecue will get hot, please use oven gloves.
- Ensure that the barbecue has completely cooled before removing the ash.


Components

If you have damaged or missing components,
call the Customer Helpline: 0845 0778888


Please check you have all the components listed below

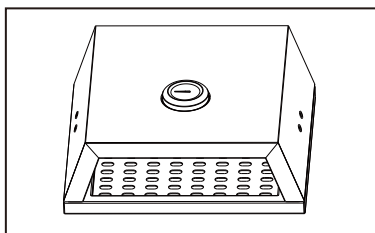


1 Pizza Oven x 1

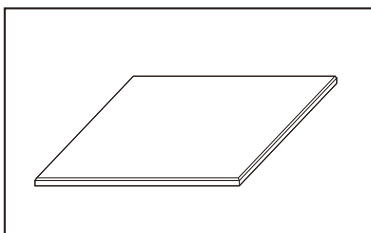 

2 Ceramic Stone x 1

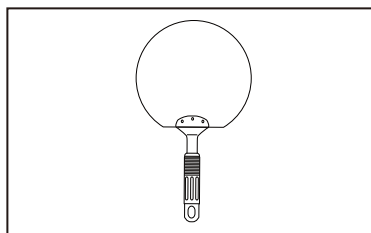 

3 Pizza Paddle x 1

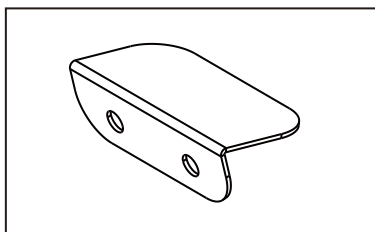 


4 Handle x 2

Components - Fitting

Please check you have all the components listed below

 
A M4 X 6mm x 3pcs




B M4 X 6mm x 3pcs



 C M6 X 10mm x 4pcs




Tools required

 

Phillips screwdriver
(medium & large)



 Adjustable wrench



Flatblade screwdriver
(medium)



Pliers

 
Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Attached handle 4 to oven by hardware M6 x 10mm (C)

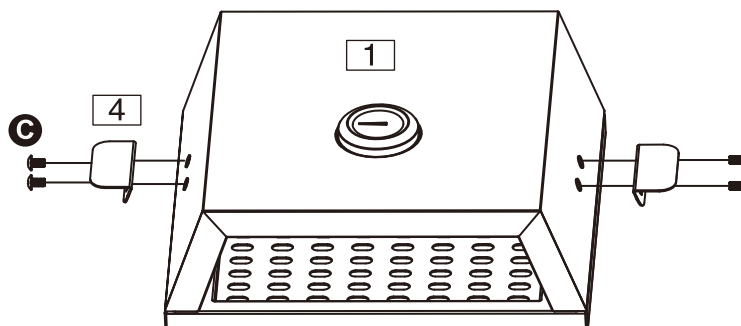


Step 2

 Put pizza stone 2 into pizza oven 1.

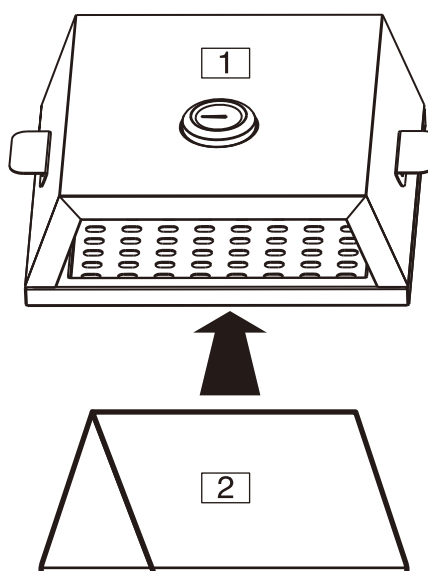

Step 3

 Attach the pizza paddle handle to the paddle using three M4 screws "A" and three M4 nuts "B"

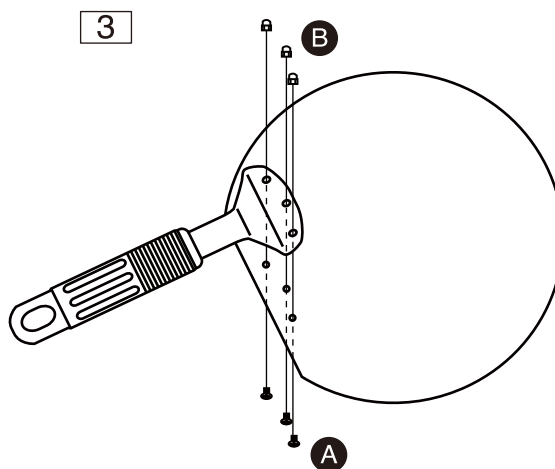

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Made in China for Argos Limited. Sainsbury's Supermarkets Ltd., London, EC1N 2HT, UK. Argos (N.I.) Ltd. and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast. BT8 6FX, UK.