



# USER MANUAL

Thank you for wearing this Limit watch. To help prolong the life of your Limit watch, we recommend you read the following.

For free bracelet adjusting service, return the watch to the address below:

T.P (UK) Ltd,  
Alexander House,  
Chartwell Drive,  
Wigston,  
Leicester LE18 2EZ

For maximum protection, please keep your watch in its presentation box when not in use.

**IMPORTANT:** It is important to identify your watch correctly. If, after reading this User Manual, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.

## **SERVICE AND REPAIRS**

Your Limit watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components.

### **IMPORTANT - NOT COVERED BY GUARANTEE**

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetration except in watches marked as 'Water Resistant' (see page 2).

## **SERVICING AND REPAIRS UNDER GUARANTEE**

Please post your watch, together with the retailer's sales receipt or proof of purchase, the completed guarantee slip found at the end of this document and a brief note to explain the nature of the fault, by registered post or recorded delivery to the address shown. Do not send the presentation box as this will not be returned.

## **SERVICING AND REPAIRS OUTSIDE OF GUARANTEE**

Available at a reasonable charge after an estimate has been sent by Limit. Send your watch to us by registered post or recorded delivery to the following address:

T.P (UK) Ltd,  
Alexander House,  
Chartwell Drive,  
Wigston,  
Leicester LE18 2EZ

## **SETTING THE CORRECT TIME (AM/PM) - DATE WATCHES**

- If the DATE changes when the hands are turned past 12 o'clock, the time shown is 'AM'.
- If the DATE does not change, the time shown is 'PM'.

## **WATER RESISTANCY**

If your watch is water resistant, it will clearly state 'Water Resistant' or have a static water pressure indication (e.g. '30/50/100 metres') on the dial and/or case back. If it is NOT marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (e.g. washing, heavy rain etc). Certain chemicals in water may damage the watch seals. To maintain its water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by Limit.

**IMPORTANT:** Buttons must not be operated while in contact with water.

### **WATER RESISTANT OR RESISTANT TO 30 METRES**

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used while bathing or swimming.

### **WATER RESISTANT TO 50 METRES**

As 30 metres plus bathing or swimming.

### **WATER RESISTANT TO 100 METRES**

As 50 metres plus poolside diving and snorkelling, but NOT high board diving.

### **MODELS WITH A SCREW-DOWN CROWN (BUTTON)**

Unlock the crown by turning it anti-clockwise until free. Lock it by pressing in while turning clockwise. WATER RESISTANCE is lost when the crown is in the UNLOCKED position.

## **OPERATING AND ADJUSTING YOUR WATCH**

Your quartz analogue watch is powered by a battery which was inserted at the time of manufacture and will require periodic replacement. New batteries can be supplied and fitted by your nearest Limit stockist.

**Quartz analogue watches do NOT require winding.** The button is used for hand/function setting only. When in use, ensure that the button is pushed FULLY IN to position 'A'. Failure to do so can result in excessive battery drain or damage to the hand setting/date mechanism.

The following instructions and diagrams are designed to demonstrate the adjustment of all the models within our range.

**Your watch may not have all of the characteristics shown and may have other buttons and dials in addition to those shown on individual diagrams.**

## **QUARTZ NON-DATE WATCH TIME SETTING**

- Pull button out to position 'B'.
- Advance hands to correct time.
- Return button to position 'A'.

 
## **QUARTZ DATE WATCH TIME SETTING**

- Pull button out to position 'C'.
- Advance hands to correct time.
- Return button to position 'A'.

## **QUARTZ DATE WATCH DATE SETTING**

- Pull button out to position 'B'.
- Turn clockwise or anti-clockwise to set correct date.
- Return button to position 'A'.

NOTE: Do not use this function between 8.30pm and 1.30am as date change cycle is in progress.

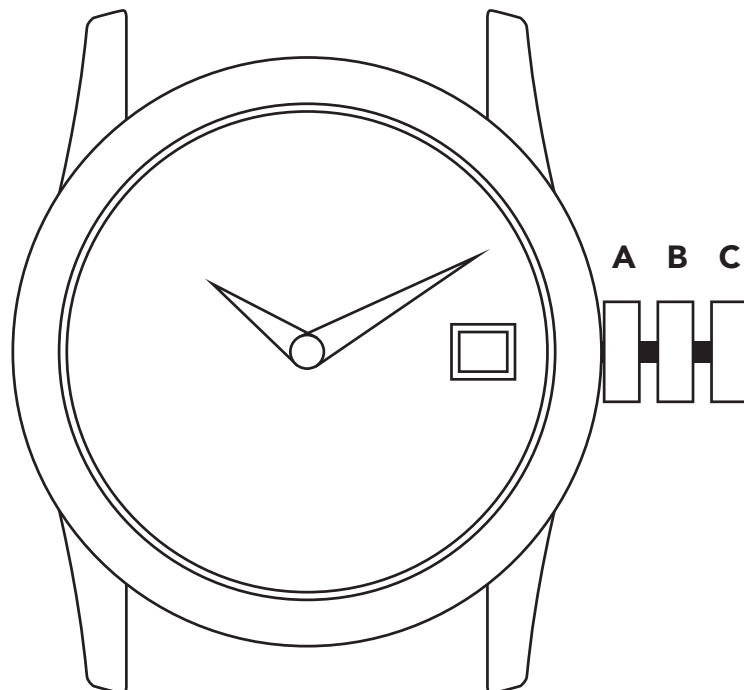

## **QUARTZ DAY/DATE WATCHES - 2 VERSIONS**

### **TIME SETTING**

- Pull button out to position 'C'.
- Advance hands to correct time.
- Return button to position 'A'.

### **DAY/DATE SETTING - VERSION 1**

- Pull button out to position 'B'.
- Turn clockwise or anti-clockwise to set correct date.
- Turn clockwise or anti-clockwise to set correct day.

 
### **DAY SETTING - VERSION 2**

- Pull button out to position 'C'.
- Turn button clockwise to advance hands.
- Continue until correct day is shown.

**NOTE:** Days of the week can be set in English or Spanish. Once set the watch will automatically indicate the day in the chosen language.

- Return button to position 'A'.

**NOTE:** Do not set day/date between 8.30pm and 5.00am as day/date change cycle is in progress.

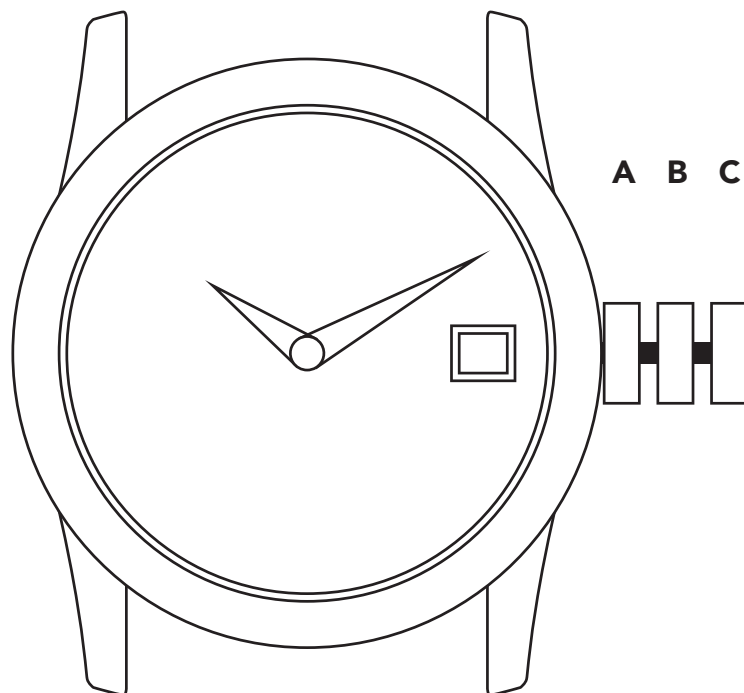

## **QUARTZ 3-EYE WITH DAY/DATE 24HR FUNCTIONS**

### **DAY SETTING**

- Pull button out to position 'C'.
- Turn button clockwise to advance hands.
- Continue until correct day is shown.
- Return button to position 'A'.

**NOTE:** Date change takes place between approximately midnight and 5.30am.

 
### **TIME/24 HOUR FUNCTION SETTING**

- Pull button out to position 'C'.
- Turn button clockwise to set the hour, minute and 24 hour hands to the correct time.  
When setting the hour hand, be sure to check that the 24 hour hand is set properly (e.g. 12 midnight = 24.00 hrs).
- Return button to position 'A'.

**NOTE:** When setting the minute hand first advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute.

### **DATE (QUICK CHANGE FUNCTION) SETTING**

- Pull button out to position 'B'.
- Turn button anti-clockwise to advance date hand to correct date.
- Return button to position 'A'.

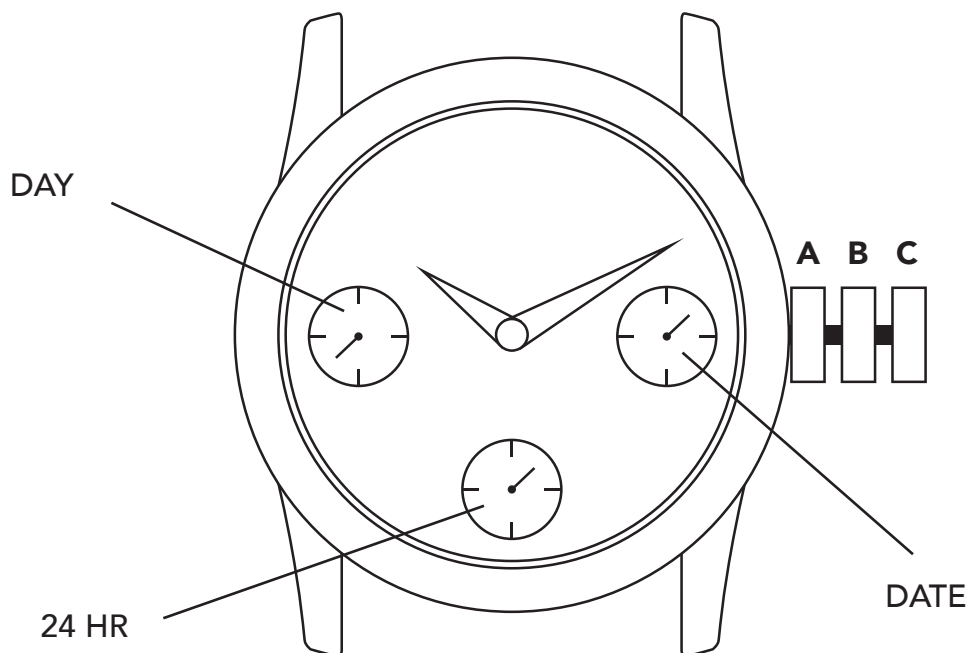

## QUARTZ 3-EYE CHRONOGRAPH WITH DATE

### TIME SETTING

- Pull button out to position 'C'.
- Advance hands to correct time.
- Return button to position 'A'.

### DATE SETTING

 
- Pull button out to position 'B'.
- Turn clockwise or anti-clockwise to set correct date.
- Return button to position 'A'.

### OPERATING CHRONOGRAPH

- Push PB1 to start/stop chronograph.
- Push PB2 to reset.

### CHRONOGRAPH ZERO RESET

- Pull button out to position 'C' (chrono second hands return to zero position).
- Push PB1 to set chrono second hand to 12.00 (zero) position.
- Push PB2 to set chrono minute to 12.00 (zero) position.
- Return button to position 'A'.

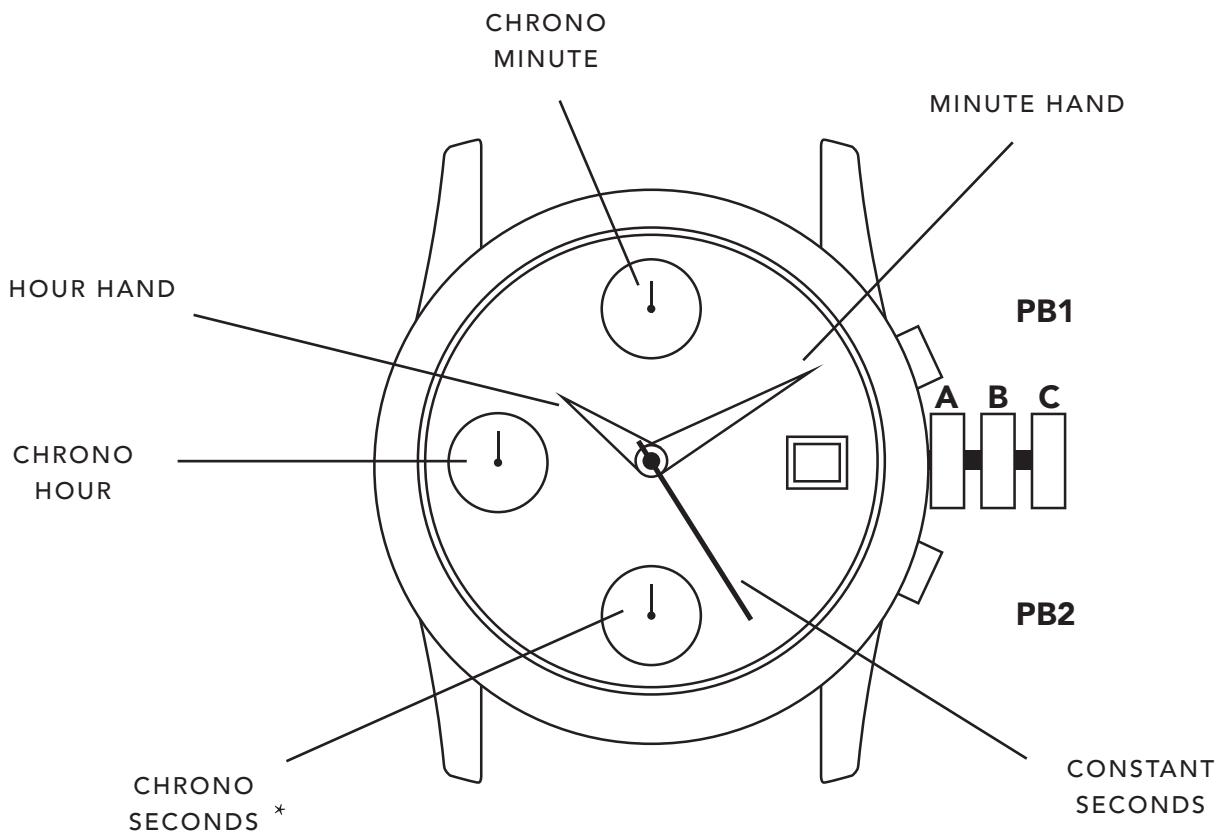

\* **NOTE:** This hand should be at zero (12 o'clock position) when chrono is not in use.

# **QUARTZ 3-EYE CHRONOGRAPH WITH SPLIT TIME & 24HR INDICATOR**

## **TIME SETTING**

- Pull button out to position 'B'.
- Advance hands to correct time.
- Return button to position 'A'.

**NOTE:** 24 hour indicator is synchronised with hour hand.  
**IMPORTANT:** Do not press PB1/PB2 when setting hands.

## **OPERATING CHRONOGRAPH**

 
- Push PB1 to start/stop chronograph.
- Push PB2 to reset.

## **SPLIT TIME**

- Press PB1 to start chronograph.
- Press PB2 to hold count.
- Press PB2 to recommence.
- Press PB1 to stop count.
- Press PB2 to reset chronograph.

## **CHRONOGRAPH 'ZERO' RESET**

- Pull button out to position 'B'.
- Press PB1 to adjust chrono hands (counter clockwise).
- Press PB2 to adjust chrono hands (clockwise).
- Return button to position 'A'.

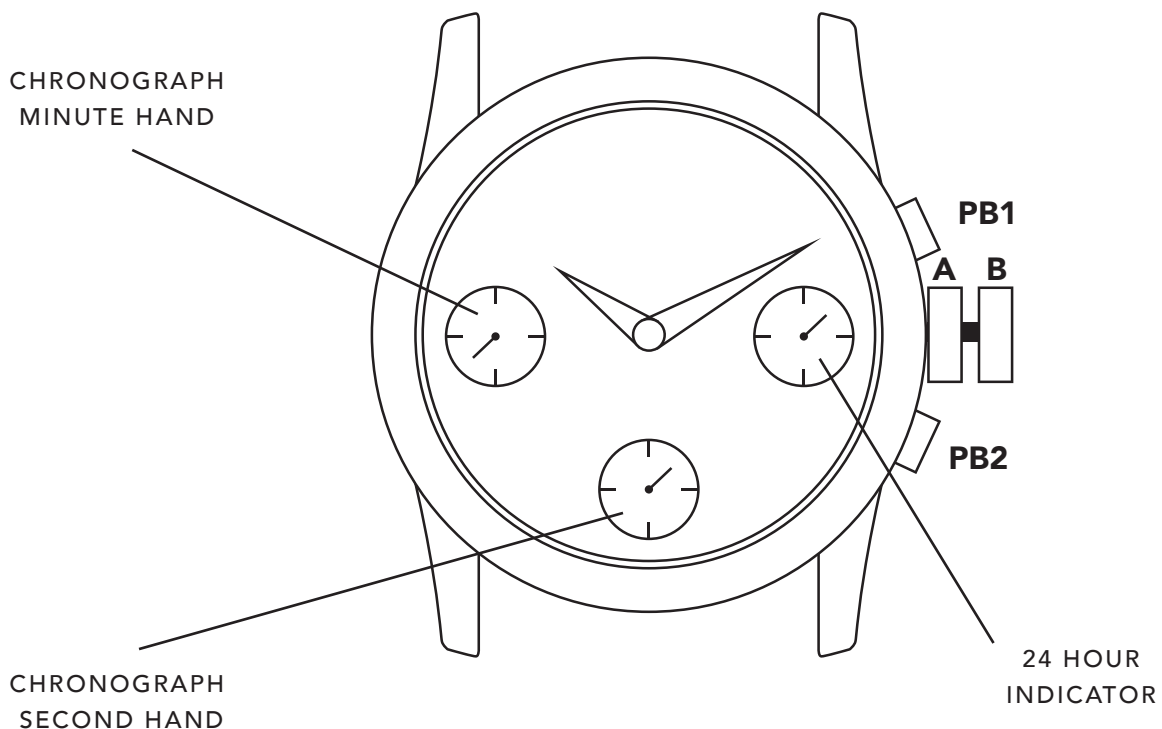




# QUARTZ 2-EYE (DAY/DATE) WATCH WITH SUN & MOON INDICATION

## TIME/DAY SETTING

- Pull button out to position 'C'.
- Turn hands in a clockwise direction until correct time and day are set.
- Return button to position 'A'.

## FAST DATE CHANGE

 - Pull button out to position 'B'.
- Turn button to set correct date.
- Return button to set position 'A'.

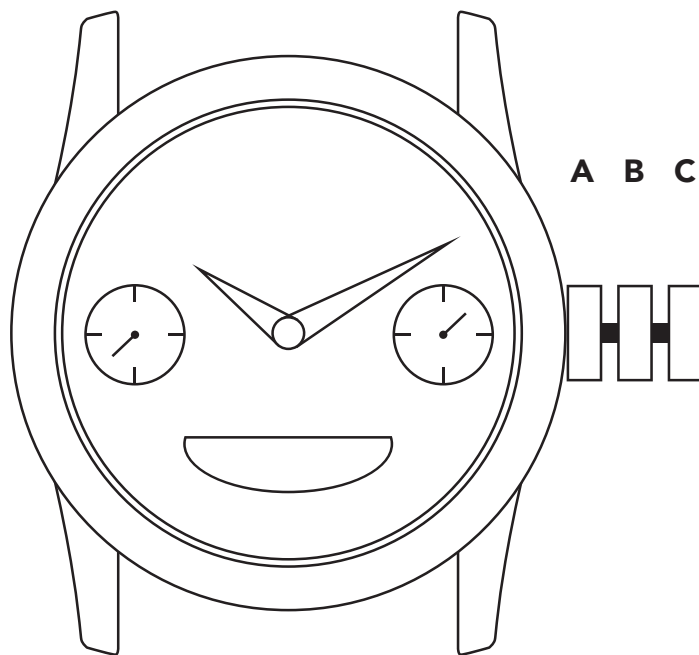

## GUARANTEE

Block Capitals

Name \_\_\_\_\_

Address \_\_\_\_\_

Post Code \_\_\_\_\_

Phone \_\_\_\_\_

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester LE18 2EZ

**IMPORTANT:** This guarantee should be retained by the owner of the watch and should be sent to Limit together with the watch and £6.00 to cover handling and postage when service under guarantee is required. Please refer to page 1 of the User Manual for further information on service under guarantee. This guarantee does not affect your statutory rights.