

Hisense

life reimagined

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference.

WF7I1248BWR

WF7I1248BBR/BLX

WF7I1248BBR

WF7I1248B*R

EN

English

Thank you very much for choosing our company's products.

- Please correctly install and use this product, and do not use this product to wash clothes that are not suitable for machine washing.
- The images in the manual are for illustration purposes only. The appearance, printing, etc. shall be subject to the actual product.
- Our company emphasizes technology updates. In order to enhance the overall performance of this appliance, we will make technical changes to it without further notice. Your understanding is appreciated.
- This product is for household use only.

The following symbols in this manual are indicated as follows:



Information, suggestions, prompts, or advice



WARNING - GENERAL HAZARD



WARNING - ELECTRIC SHOCK HAZARD



WARNING - BURN HAZARD



WARNING - FIRE HAZARD



Please read the user manual carefully.

CONTENTS

4 SAFETY PRECAUTIONS	INTRODUCTION
10 PRODUCT DESCRIPTION 11 Specifications	
12 INSTALLATION AND CONNECTION 12 Packing/packaging 14 Removing the transport screws 15 Installation location 15 Adjustable feet 15 Installation clearance 16 Connecting to water supply 19 Connecting and securing the drain hose 20 Connect to the power mains 21 Transportation after installation	PREPARATION BEFORE FIRST USE
22 BEFORE THE FIRST USE	
26 THE FIRST USE 27 Program and Function Interface 28 Program table 30 Additional settings and functions 33 Function selection table 34 Connect Life interface 35 Setting Options 39 Smart networking 41 Start the program 41 End of the program	WASHING STEPS
42 PROGRAM INTERRUPTIONS AND CHANGES	
44 MAINTENANCE AND CLEANING 44 Cleaning the detergent drawer 45 Cleaning the water inlet hose, detergent drawer outer compartment, and rubber door gasket 46 Cleaning the draining pump filter 47 Cleaning the inlet filter 47 Cleaning the outside of your washer	CLEANING AND MAINTENANCE
48 TROUBLESHOOTING 51 FAULT CODES AND TROUBLESHOOTING 52 SERVICING	TROUBLE-SHOOTING
52 USAGE RECOMMENDATIONS 53 RECOMMENDATIONS FOR SPECIFIC STAIN REMOVAL 55 EUConformityStatement 56 TYPICAL CONSUMPTION TABLE	MISCELLANEOUS

SAFETY PRECAUTIONS



Please read the manual carefully before using this appliance.

Do not use this appliance if you have not read or understood this manual.

This manual is applicable to multiple models. Therefore, this manual may contain functions not covered by this model.

Failure to follow the instructions or improper operation may damage clothing or the appliance, or cause injury to you. Please place the manual near the appliance for easy access.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

If the appliance is used for professional, for-profit purpose or purpose exceeding normal use in a household and similar applications, or if the appliance is used by a person who is not a consumer, the warranty period shall be equal to the shortest warranty period required by relevant legislation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Children of less than 3 years should be kept away unless continuously supervised.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The maximum capacity in some cycles for dry clothes to be used is Wash (12 kg).

The recommended maximum capacity may vary among different programs. For best results, see "PROGRAM TABLE".

To connect the appliance to water supply, make sure to use the supplied water supply hose and gaskets. Water pressure has to be between 0.1-1 MPa (1-10 bar; 1-10 kp/cm²; 10-100 N/cm²).

Always use a new water supply hose to connect the appliance to water supply, do not reuse an old water supply hose.

For appliances with ventilation openings in the base, the ventilation openings must not be obstructed by a carpet.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ELECTRICAL SAFETY

This appliance complies with relevant safety standards.

Before connecting the appliance to the power supply, please wait at least 2 hours to ensure it reaches room temperature.

This appliance must be repaired by an authorized service center, and only spare parts recognized by the authorized manufacturer shall be used.

Any repairs and maintenance related to safety or performance should be conducted by trained professionals.

Do not attempt to repair this appliance yourself. Repairs by unprofessional personnel may cause personal injury or more serious malfunctions. Please consult your local service center and always use original spare parts.

Do not attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or damaged parts, including damaged wires or plugs.

Do not bend the power cord excessively or place heavy objects on it.
Do not spray water to clean inside or outside the device.
In case of flooding, please disconnect the power plug and contact the after-sales service center.

Models with drying functions have automatic heating device shutdown protection to prevent overheating. If the temperature exceeds the protection temperature, the system will automatically shut down the heating device, and when the temperature drops below the protection temperature, the heating device will resume operation.

Do not use multiple outlets, extended power cords, or dual adapters on the appliance. Do not use an extended cord to connect the appliance to the power supply.

Do not connect the appliance to the electrical socket of an electric shaver or hair dryer.

Do not connect the appliance to an electrical outlet specifically designed for low-load appliances.

Before connecting the appliance to the power supply, ensure that the electric voltage specified on the rating plate matches the Voltage of your socket.

The power socket must be safely grounded, and the water supply must remain unobstructed.

Do not connect the appliance to the power supply with an external switching appliance (such as a program timer) or connect it to a power supply that is turned on and off regularly by the power supplier.

The exhaust gas must not be discharged into the flue used to discharge combustion gases or other fuel exhaust gases.

INSTALLATION

Before using the appliance, be sure to remove the packaging (sponge, polystyrene foam, etc.) attached to the bottom of the appliance.

Please install the appliance correctly according to the instructions and connect the water and electricity (see "INSTALLATION AND CONNECTION"). The connection of water and electricity should be carried out by fully trained technicians or professionals.

Do not install this appliance in places where door opening is restricted.

Do not install the appliance in an area where the temperature may drop to 5°C below, otherwise, the parts may be damaged when water freezes.

Place the appliance on a sturdy flat surface. If the appliance is installed on a high platform, it must be secured to prevent it from tipping over.

The end of the drain hose should be placed in the drainage system.

This appliance must not be stored or used in any outdoor locations.

Avoid lint accumulation near the appliance.

Do not install the appliance near heaters or any flammable items.

Do not install the appliance in locations where gas leakage may occur.

Please ensure good ventilation conditions to avoid the gas generated by this appliance from flowing back into the room, thereby causing a fire.

USAGE

Before the first use, remove the transport screws; Otherwise, serious damage may occur when the machine is turned on (see "INSTALLATION AND CONNECTION/REMOVAL OF TRANSPORT BOLTS"). Such damage is not covered under warranty.

Inspect the appliance to see if it has been damaged during transportation. Never operate the appliance in a damaged condition.

Use detergents suitable for the appliance cleaning and clothes washing. We are not responsible for damage or discoloration of seals and plastic parts caused by the use of bleach or dyes.

Do not attempt to separate any panels or disassemble the appliance.

Do not use sharp objects like pins, knives, or fingernails to press the button.

Do not use wet hands to touch the power plug or operate the appliance.

This appliance is only suitable for ordinary washing or drying of clothes (models with drying function), not for dry cleaning.

Because the appliance is heavy, you may injure yourself trying to lift it. Do not lift the appliance yourself; your hands may be cut by its sharp edges.

Do not grasp the appliance by its protruding parts. The protruding parts on the appliance may break when lifting or pushing the appliance.

Do not wash clothes with large buttons or other heavy metal items. Make sure all the pockets in the laundry are empty. To prevent odors and mildew, open the door after the wash cycle ends and let the drum air dry.

Do not leave metal objects in the drum for a long time.

The door glass may break due to strong impact, so be careful when using the appliance.

Place the laundry completely inside the drum so that the clothes will not be caught by the door.

When the appliance is not in use, turn off the water supply and unplug the power cord from the power socket.

Do not put animals (such as pets) into the appliance.

TRANSPORTATION/TRANSPORT AFTER INSTALLATION

If you plan to move the installed appliance, install the transport screws (See "INSTALLATION AND CONNECTION/MOVING AND TRANSPORTING AFTER INSTALLATION"). Before installing the transport screws, unplug the power plug!

After the washing program ends, turn off the tap and unplug the power plug. Never unplug an appliance by pulling on the power cord. Always firmly grasp the power plug and pull it directly out from the socket.

 **DO NOT USE DETERGENTS CONTAINING SOLVENTS, AS THESE MAY RELEASE TOXIC GASES, DAMAGE THE APPLIANCE, AND CAUSE FIRE OR EXPLOSION HAZARDS.**

Do not force the door open while the appliance is in operation (high temperature washing/dehydrating).

Do not use the appliance after cleaning with industrial chemicals.

 The wastewater discharged during high-temperature washing is hot, so do not touch it to prevent burns.

Clothes stained with substances such as cooking oil, acetone, alcohol, gasoline, kerosene, stain removers, turpentine, wax and wax removers should be washed first with hot water and plenty of detergent, then washed in the drum.

Use softeners or similar products according to the instructions for use with the softener.

Please remove all items from the garment pocket, such as lighters and matches.

BURN HAZARD

The door may become hot during washing and drying. Be careful to avoid burns. Do not let children play near the door. Do not touch the door glass during the operation of the appliance.

WATER LEAKAGE PROTECTION (while the appliance is on)

If the water level in the appliance exceeds the normal level, the water level protection function will be activated. This function will stop the water supply and start draining. The current program is interrupted and an error message is reported.

Do not wash or dry items such as foam rubber (latex foam), shower caps, waterproof fabrics, rubber products, clothes with foam rubber pads, or pillows in the drum.

WARNING

If your appliance has a drying function, do not stop the program before the drying cycle ends. If you need to interrupt the program for any reason, carefully remove the clothes to avoid burns. Quickly remove the clothes and spread them out to cool down quickly.

CHILD SAFETY

Before you close the appliance door and run the program, please ensure that there is only clothing in the drum. Make sure that no children climb into the appliance and close the door from the inside.

Do not let the appliance door stay open. Children may hang on the door or climb inside the appliance, causing damage or injury.

Keep all packaging materials in a place out of the reach of children, as these may be dangerous.

Keep detergent and softener out of the reach of children.

SERVICING


The user shall be responsible for the repair costs of damage caused by improper connection, improper installation and use, or repair by unauthorized personnel, as such damage is not included in the warranty.

The warranty does not include consumables, slight color deviations, increased noise due to appliance aging (which does not affect the functionality of the appliance), and cosmetic defects of parts (which do not affect the functionality and safety of the appliance).

PRODUCT DESCRIPTION


Front

- 1 Control panel
- 2 Knob
- 3 Detergent drawer
- 4 Door
- 5 Drain pump filter door cover

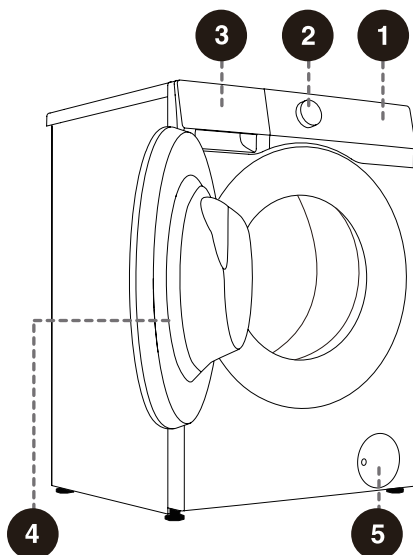

Back

- 1 Water inlet hose
- 2 Power cord
- 3 Drain hose
- 4 Adjustable feet
- 5 Transport screw

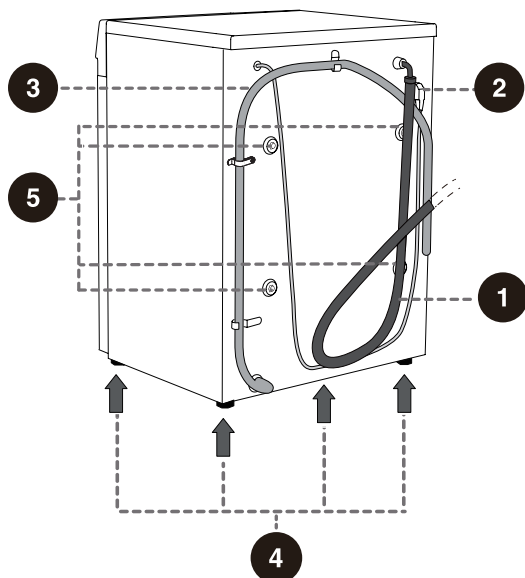

 The illustrations in this manual are for demonstration purposes only. Due to product improvements and series expansion, the product appearance, color, and functional components you receive may differ from the illustrations in this manual. Please refer to the actual product.


SPECIFICATIONS

(depending on the model)



Maximum load	12 kg
Net weight	76 kg
Rated voltage	220-240 V~
Frequency	50 Hz
Rated power	1900 W

DIMENSIONS (MM)

Index	Dimensions (mm)
A	595
B	845
C	570
D	595
E	630
F	1125
G	360

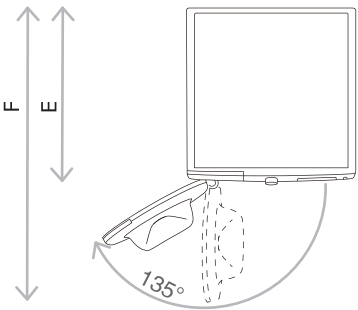

E = Appliance depth
F = Depth with door open

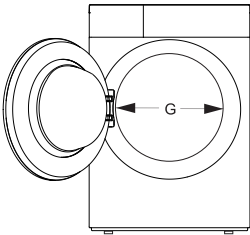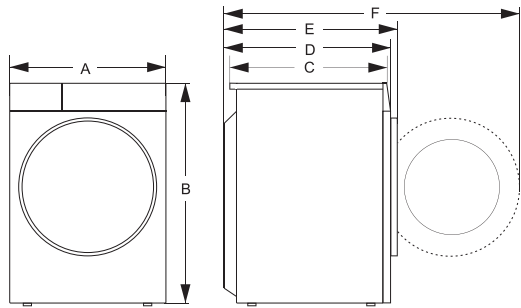


G = Diameter of the laundry opening

INSTALLATION AND CONNECTION

PACKING/PACKAGING

💡 Please first remove all the packaging and foam, especially the foam base. When unpacking the device, please do not use sharp objects to damage it. Keep packaging materials (plastic bags, other plastic parts, etc.) out of reach of children.

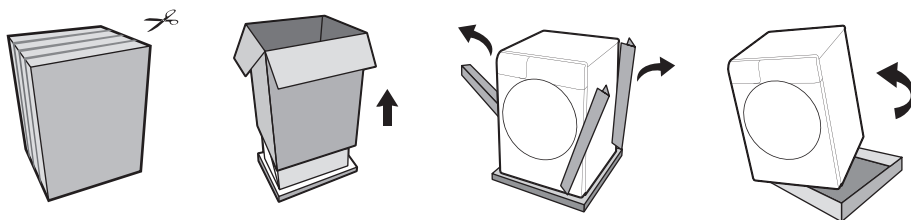

💡 The process of packing the machine is just the opposite of unpacking above.


💡 Please check the device for any damage. If damaged, do not use it, and immediately contact after-sales service.

The accessories included with this appliance include one or more of the following:

- User Manual;
- 4 transport screw covers;
- Water inlet hose;
- Water drain hose bracket;
- Wrench;
- Noise reduction board/sponge strip/none (subject to the actual model).


Different models have different configurations, and the accessories included with this device are subject to the actual configuration of the model.

INSTALLATION METHOD OF THE NOISE REDUCTION BOARD:

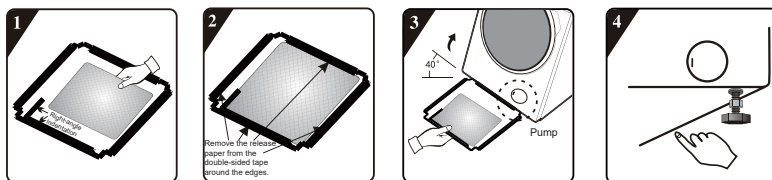

- 1** Before installing the noise reduction board, align and attach the sound-absorbing cotton along the right-angle crease on the bottom cover (this step can be skipped for some models without sound-absorbing cotton).
- 2** Peel off the release paper from the double-sided tape around the bottom cover.
- 3** Tilt the appliance at a 40° angle, with the right-angle notch facing the front of the appliance as shown in the illustration. Insert the oblique-angle notch between the two foot screws at the rear of the appliance until fully inserted. Close the bottom panel so that it fits tightly against the bottom of the appliance.
- 4** Use your hand to press the double-sided tape around the edges firmly, ensuring the noise reduction board is securely attached to the appliance body.


INSTALLATION METHOD OF THE SPONGE STRIPS:

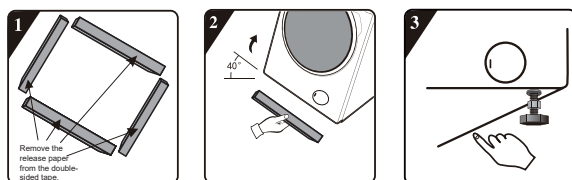

- 1** Peel off the release paper from the double-sided tape on the sponge strips.
- 2** Tilt the appliance at a 40° angle, stick 2 long sponge strips on the front and rear support positions at the bottom of the appliance body, and stick 2 short sponge strips on the left and right support positions.
- 3** Use your hand to press and firmly attach the sponge strips.

REMOVING THE TRANSPORT SCREWS

⚠ After removing all packaging, remove the transport screws. Otherwise, this equipment may be damaged during use. Such damage is not covered under warranty.

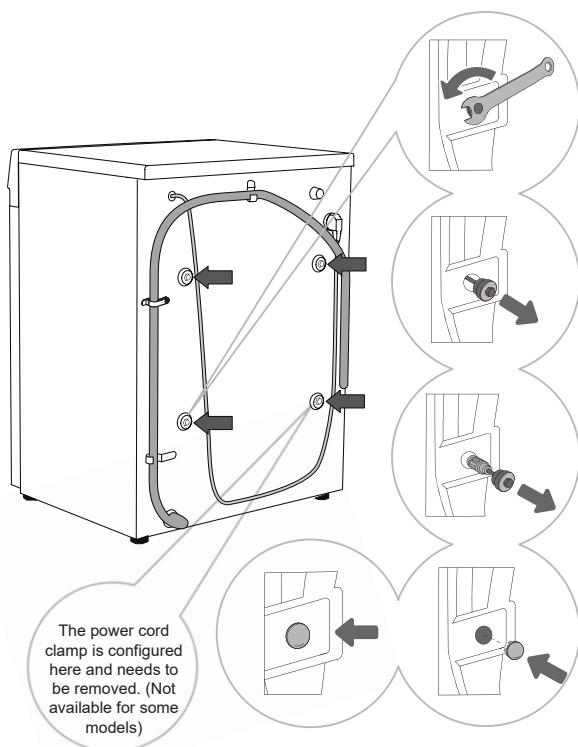

1 Place the drain hose aside. Using a suitable wrench to loosen the 4 screws on the back by turning counterclockwise in the direction indicated by the arrows. Loosen each screw by approximately 30 mm.

2 Pull out the 4 transport screws horizontally.

3 Horizontally pull out the transport screws together with the rubber and plastic parts.

4 Use transport screw covers to cover the screw holes. (Transport screw covers and instruction manual are included in the supplied accessories.)


💡 Please keep the transport screws for future transportation. If reinstallation of the transport screws is required, follow the above steps in reverse order.

INSTALLATION LOCATION

💡 Please place the appliance on a solid surface and keep it steady. The flat surface should be kept clean and dry; otherwise, the appliance may slip. Also, clean the bottom of the adjustable feet.

ADJUSTABLE FEET

Use a spirit level and a suitable wrench.

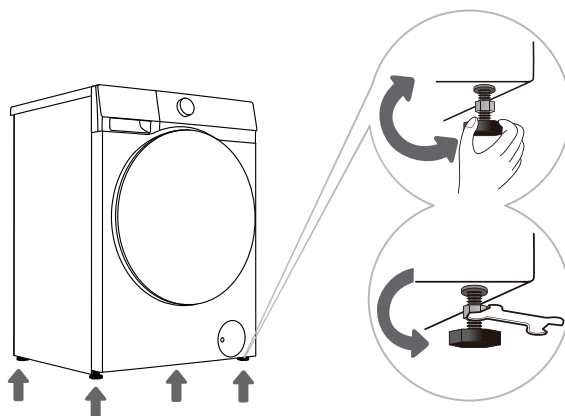



1 Adjust the level by rotating the adjustable feet. The adjustable feet allows for 2 cm of level adjustment.

2 After adjusting the height, tighten the lock nut anticlockwise using a suitable wrench (see the figure).

💡 If the equipment is not placed steadily, it may cause vibration, sliding, and noise. The damage caused by improper level adjustment is not covered by the warranty.

💡 During appliance operation, abnormal or noisy sounds may occur, which are mainly caused by improper installation.

INSTALLATION CLEARANCE

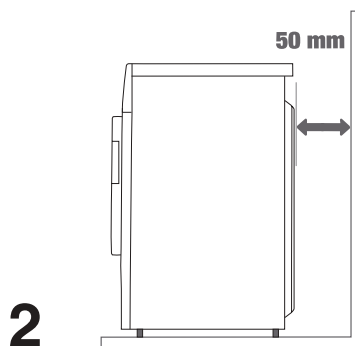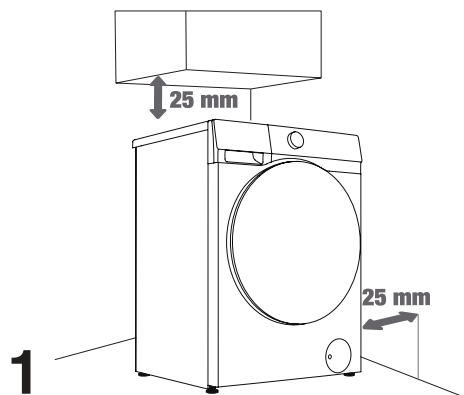


💡 Space should be left between the appliance and the walls or furniture. To ensure optimal operation of the appliance, leave some clearance on all sides as shown in the figure.

Failure to maintain the minimum required clearance may result in safety hazards, abnormal operation. Overheating may also occur (Figures 1 and 2).

CONNECTING TO WATER SUPPLY

Different models have different water inlet hoses. Connect the inlet hose to the tap properly according to the actual hose.

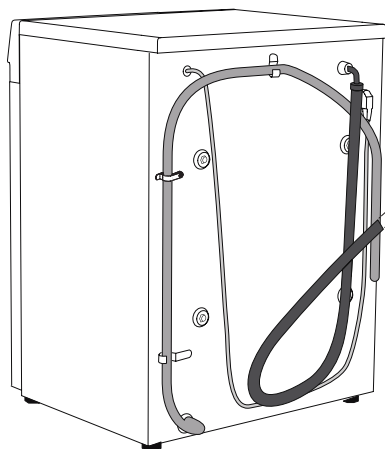


A European water inlet hose connection



B AquaStop connection



 C Chinese water inlet hose connection



- 💡 To ensure normal operation, the inlet water pressure must be between 0.1-1 MPa (1-10 bar, 1-10 kp/cm², 10-100 N/cm²). The minimum dynamic water pressure can be determined by measuring the water flow. Open the tap fully and 3 liters of water should flow out within 15 seconds.
- 💡 Use the new water hose that comes with the appliance. Do not use old water hoses or other water hoses.
- 💡 Ensure the water hoses are not damaged. If the water hose is aged, brittle or cracked, it must be replaced.
- 💡 The appliance can only be connected to a cold water inlet and cannot be connected to a hot water inlet.

EUROPEAN WATER INLET HOSE CONNECTION

Gently tighten the water hose by hand to ensure a good seal (maximum torque: 2 Nm). Check whether there is any water leakage at the seal.

Do not use pliers or similar tools to avoid damaging the threads of the nut.



AQUASTOP CONNECTION

If the internal pipes or water hoses are damaged, the shutdown system will be automatically activated to cut off the water supply to the appliance. In this case, the control window (a) will turn red. Please replace the water hose.




 The AquaStop system contains an electric valve; therefore, do not immerse the water hose equipped with the AquaStop system in water.

 The water hose can also be connected without using a check valve.

CHINESE WATER INLET HOSE CONNECTION

1. Select a suitable water tap; the front end length of the water tap must be greater than 10 mm. The outlet end face must be kept flat. If it is uneven, file it flat with a file to prevent water leakage after installation, as shown in Figure 1.
2. Push the slider downward to detach the water inlet hose connector from the water inlet assembly, as shown in Figure 2.
3. Loosen the 4 screws on the water inlet hose connector, then connect the water inlet hose connector to the water tap (if the water tap diameter is too large and cannot connect to the water inlet hose connector, loosen the 4 screws and remove the bushing), as shown in Figure 3.
4. Evenly tighten the 4 screws on the water inlet hose connector, then tighten the nuts, as shown in Figure 4.
5. If the appliance is to be used once or multiple times within a week, push down the slider and do not disassemble the water inlet hose connector to prevent damage to the fixing screws.

 Note: The exposed thread length before tightening the fastening nut is approximately 4 mm; after tightening, the exposed thread length is less than 2 mm, as shown in Figure 4.

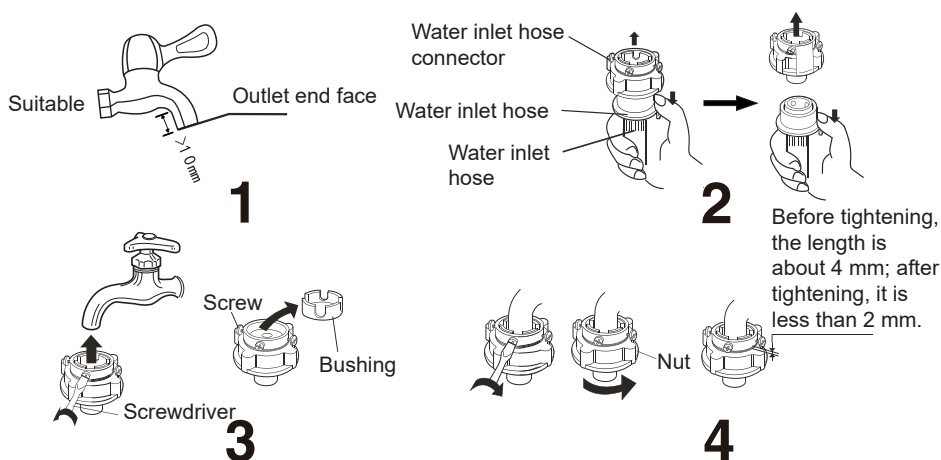


CHECK THE CONNECTION BETWEEN THE WATER INLET HOSE AND THE WATER TAP

1. Gently pull the water inlet hose to check if the connection is secure.
2. Open the water tap to check for any leaks.
3. The water inlet hose should be free of twists and bends.
4. Before each use, check the water inlet hose connection to prevent improper connection.



CONNECTION BETWEEN THE WATER INLET HOSE AND THE APPLIANCE

Connect the water inlet hose nut to the appliance water inlet valve connector, tighten the nut, and gently shake it to check if it is tightened, as shown in the right figure.

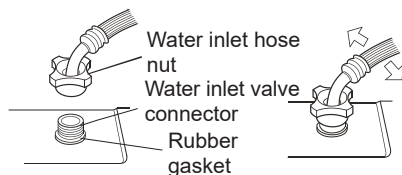


 Note:

1. Tighten evenly and do not screw into the water inlet hose, otherwise the water inlet hose joint will be damaged.
2. Do not remove the rubber gasket. Check whether the rubber gasket is detached or damaged every time you use the appliance. If there is any damage, contact after-sales immediately.

CONNECTING AND SECURING THE DRAIN HOSE


Put the drain hose into the washbasin or bathtub, or connect it directly to the drain outlet (the minimum diameter of the drain hose is 4 cm). The vertical distance of the drain hose from the ground is 70-100 cm. There are three ways to connect the drain hose (A, B, C).

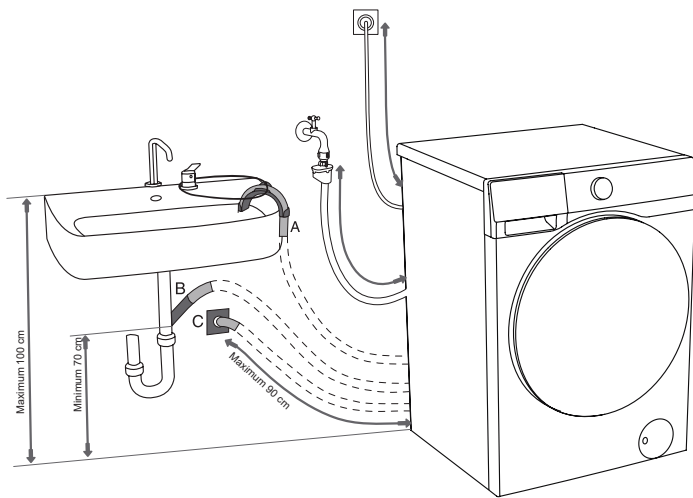

A Put the end of the drain hose into the sink or bathtub. Use cable ties to secure the drain hose through the elbow bracket to prevent it from slipping.

B Place the drain hose directly into the sink drain outlet. Do not use a small sink. Note that the drained water may be hot.

C Connect the drain hose to the drain outlet on the wall with the water storage bend, and install it correctly for cleaning.

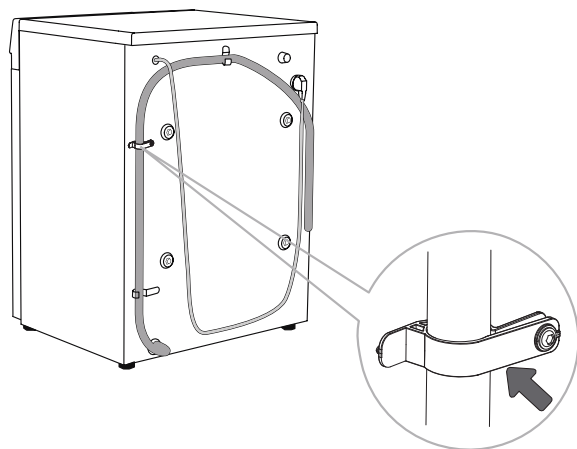


D The drain hose must be fixed to the hose clamp on the back of the appliance as shown.

⚠ The hose clamp is not allowed to be removed, otherwise, it will cause improper washing.

💡 Make sure the drain hose is not damaged.

💡 Failure to properly install the drain hose may result in safety hazards or abnormal operation.

CONNECTING TO POWER MAINS

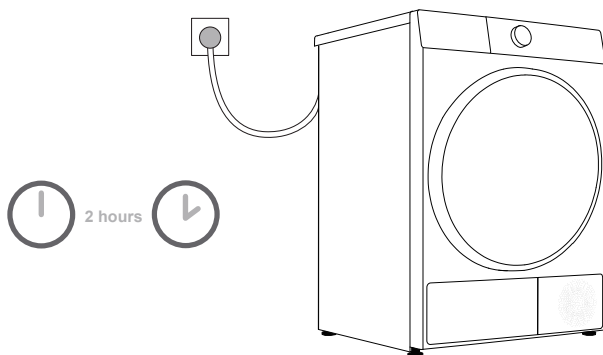

 **Before connecting the appliance to the power supply, please wait at least 2 hours to ensure it reaches room temperature.**

This appliance is connected to a grounded power socket, and there should be no obstructions between the appliance and the socket. The power socket should have compliant grounding protection. For basic information about the appliance, please refer to the nameplate.

 **It is recommended to use overvoltage protection devices to protect this appliance from lightning strikes.**

 Do not use an extension cord to connect the appliance to the power supply.

 Do not connect the appliance to a power outlet designated for light-load appliances.

 Please do not plug or unplug the appliance with wet hands.

 The repair and maintenance of this appliance should be handled by professionally trained personnel.

 Only personnel authorized by the manufacturer can replace a damaged power cord.

TRANSPORTATION AFTER INSTALLATION


💡 If you need to transport an installed device, first unplug the power plug, turn off the tap, remove the water inlet and drain hoses, and make sure the detergent box and door are closed properly.

Be sure to reinstall the transport screws to prevent vibrations during transport from damaging the device (see "INSTALLATION AND CONNECTION/REMOVING THE TRANSPORT SCREWS"). If you accidentally lose the transport screws, you can order them from the manufacturer.

Pack all packaging materials (plastic bags, other plastic parts, etc.).

- ⚠️ The device is heavy. Please use at least two people to move it. When transporting, do not hold protruding parts such as the door, top cover, etc., to prevent them from falling off or being damaged.
- ⚠️ After transport, let the device sit for at least 2 hours before connecting it to the power supply. The device should be installed and connected by trained technicians.
- ⚠️ Please read the instructions carefully before reconnecting the device. Damage caused by improper connection or use is not covered by the warranty.

Transport and Handling Method

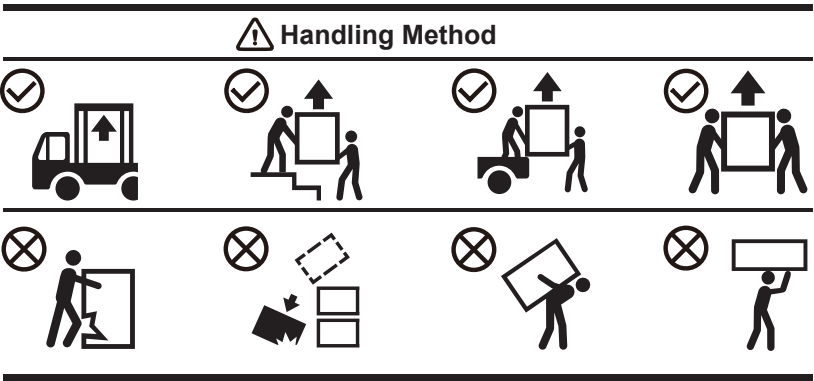

BEFORE THE FIRST USE

The appliance has been tested before leaving the factory, and there may be a small amount of water residue. It is recommended to run the "Drum Clean" (or other high-temperature) program before use to clean the residual water in the drum.

- Connect the power and turn on the tap. Do not put clothes in the drum. Select and start the program.


 Do not use solvents or cleaning agents that may damage the appliance (please follow the recommendations and warnings provided by the cleaning agent manufacturer).

PAY ATTENTION TO CLOTHING LABELS


Washing	Maximum water temperature 95°C  	Maximum water temperature 60°C  	Maximum water temperature 40°C  	Maximum water temperature 30°C  	Hand wash only 	Do not wash 
Rinsing	Rinse in cold water 			Do not rinse 		
Dry cleaning	It can be dry cleaned. No restrictions on detergent 		Dry clean with petroleum solvent R11 and R113 	Dry clean with kerosene, pure alcohol, and R113 	Do not dry clean 	
Ironing	Maximum ironing temperature 200°C 		Maximum ironing temperature 150°C 	Maximum ironing temperature 110°C 	Do not iron 	
Drying	Dry flat (placed on a flat surface) 		Drip dry  Line dry 	High heat  Low temperature 	Do not dry 	

PREPARATION FOR WASHING

1. Classify clothing according to its type (cotton, blended fiber, silk, wool, etc.), label requirements, color (white, colored, etc.), degree of soiling, etc.
2. Empty all pockets. Remove metal items that could damage clothing or the appliance. Fasten buttons and turn garments with buttons or embroidery inside out. Zip up and tie any drawstrings.
3. Place sensitive clothing and small, lightweight clothing into a mesh laundry bag and wash them together with other clothing.
4. For clothes with pilling surfaces or long pile fabrics, please turn them over before washing.
5. Stains will be difficult to clean after being left for a long time. Please pre-treat the soiled areas such as the cuffs and collars of your clothes before washing (refer to "RECOMMENDATIONS FOR SPECIFIC STAIN REMOVAL").
6. Do not wash heavy quilts, plush toys, or clothes in laundry bags separately to avoid unbalance error.

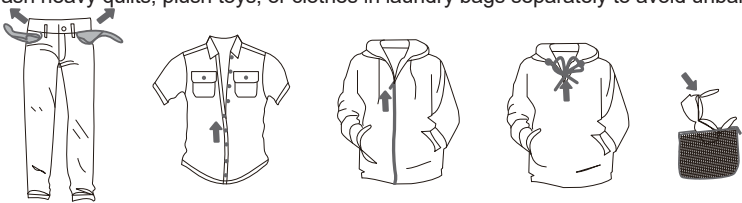

 CLOTHES THAT ARE UNSUITABLE FOR BOTH WASHING AND DRYING

 Leather or fur products (may cause deformation)	 Rayon and its blended fabrics (may cause discoloration or deformation)	 Rubber-made or large-sized thick mats (may cause damage or malfunction)
 Hats containing hard materials (may damage the washing machine and cause malfunctions)	 Seat cushions, pillows, items containing cotton wool, foam, and other sponge materials, and carpet covers (may cause damage or malfunction)	Others: Wrinkled or embossed processed clothing; coated down clothing; crepe fabrics; Clothing prone to deformation (suits, jackets, ties, dresses, etc.); Clothes prone to pilling (silk velvet or cotton velvet).

CLOTHES THAT ARE UNSUITABLE FOR DRYING (APPLICABLE TO MODELS WITH A DRYING FUNCTION)


 Any clothing marked with any of the above symbols (may damage the clothing)	 Woolen clothing (may cause shrinkage and pilling)	 Tights and stockings (may cause damage or deformation)	 Starched clothing
 Mats and fur clothing (may cause damage or malfunction)	 Quilt (may cause damage or malfunction)	 Clothes with lace and embroidery and new synthetic fibers (ultra-fine fibers) (may cause deformation)	 Silk

-  Non-washable. Dryable/Non-dryable clothes include, but are not limited to, the above-mentioned clothes.
-  Check the clothing label to confirm that the garment has a machine-washable/dryable symbol.
-  Wet clothes that are still dripping are not suitable for drying and may cause the appliance to alarm.

ADD DETERGENT/SOFTENER

Detergent drawer

- 1. The automatic dispensing model has the function of automatically dispensing detergent/softener, which can automatically add the appropriate amount of detergent/softener. When used for the first time, the system defaults to turning on the automatic dispensing function of detergent and softener.
- 2. When the automatic dispensing function is selected, the appliance will automatically dispense detergent/softener, and you can adjust the automatic dispensing gear according to the amount required. The appliance will remember the dispensing gear setting when the last wash was completed.
- 3. If you do not want to use the automatic dispensing function, you can turn it off in the settings and add detergent and softener manually when washing clothes.
- 4. Softener/detergent can be added to "Dispenser 2"; please ensure it is added according to the function settings. Users can also choose the same or a different detergent as in "Dispenser 1" according to their needs.
- 5. If the amount of detergent/softener in the detergent/softener box is insufficient, the corresponding liquid shortage reminder icon on the display screen will light up or flash red, please add detergent/softener in time. The maximum capacity of "Dispenser 1" is 0.8L, and that of "Dispenser 2" is 0.55L. Do not add more than the MAX scale mark. Please close the detergent box drawer completely after adding.

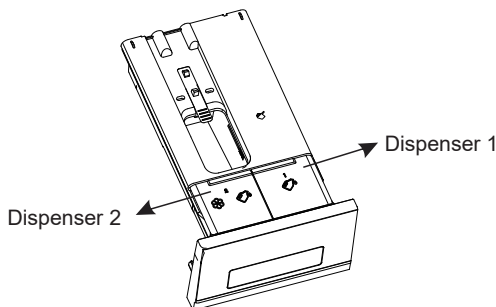

Detergent drawer structure diagram (please refer to the actual product for details)

Detergent drawer	
	Manual Detergent compartment
	Liquid Detergent compartment
	Fabric Softener/Liquid Detergent compartment

PRECAUTIONS FOR USE

1. Always use a high-efficiency neutral low-foaming detergent suitable for this appliance. Do not use clumpy powder detergent.
2. Do not add detergent manually when using the automatic dispensing function.
3. Do not overfill the detergent/softener box to prevent the detergent/softener from overflowing. After filling the detergent/softener, make sure the detergent box drawer is completely closed before starting the washing program.
4. Before installing, moving, transporting or adjusting the appliance, remove or secure the detergent box to prevent the detergent and softener from overflowing.
5. Corrosive descaling agents may damage the appliance. Do not use solvents. Do not wash clothing that has been cleaned with solvents or flammables.
6. If manual dispensing is required, you can turn off the automatic dispensing function and add detergent manually:
 - 6.1 The amount of detergent to be used depends on the type of clothing, degree of soiling, color of clothing, and washing temperature. Please add an appropriate amount according to the detergent manufacturer's instructions.
 - 6.2 Excessive detergent may cause foaming, which will affect the washing performance. If the appliance detects too much foam, it may pause the program for defoaming.
 - 6.3 If insufficient detergent is used, it may result in poor washing performance and could also lead to the formation of limescale in the drum and water hoses.
 - 6.4 When adding powder detergent manually, it is advisable to add it right before the washing program begins. If you add it in advance, make sure that the detergent box compartment is completely dry; otherwise, the powder detergent may harden and clump before the washing program starts.
7. Do not use concentrated or highly concentrated detergent or softener (maximum permissible viscosity is 800mpa.s). Use only after diluting with water.
8. Do not put powder detergent in the automatic dispensing detergent compartment.
9. To prevent the detergent/softener in the detergent box from drying up, do not open the lid of the detergent box for a long time. Pull out the compartment only when filling or changing the detergent.
10. Keep detergent and softener out of the reach of children.
11. The detergent dispenser drawer is not designed for adding disinfectants. It is not recommended to use disinfectant. If disinfectant must be used, be sure to select a product suitable for clothing. Avoid using disinfectants containing strong corrosive or bleaching agents. Use only after thorough dilution (added into the drum), and strictly control the concentration and frequency of use (it is recommended not to use it more than once a month) to prevent damage to the device or clothing.


PUT IN THE LAUNDRY

Open the machine door, make sure there is no foreign matter in the drum, and put the clothes loosely into the drum.

Close the door until you hear a "click" indicating it is securely closed.


⚠ Do not overload the drum! Refer to the "PROGRAM TABLE" for the maximum load. If the drum is too full, the clothes may not be cleaned effectively.

⚠ Please put the laundry into the drum completely to prevent the clothes from getting caught in the door.

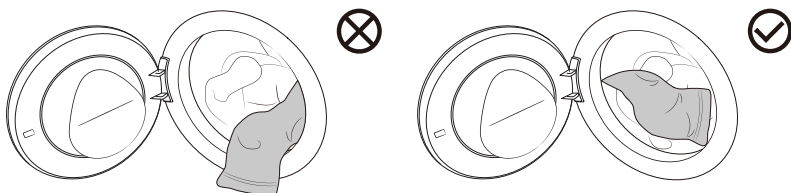

THE FIRST USE

Tap "⏻" to power on and enter the startup navigation.

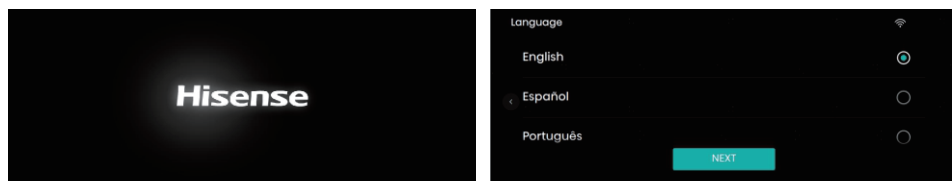

Configure preferences for Language, Country and Region, Time Zone, User Agreement, and Policy according to the initial setup wizard and the user's actual needs. (Different countries and regions have different energy efficiency requirements. If the selected countries and regions do not match the actual situation, the energy efficiency rating and energy efficiency data will be different.)

Language

Set the language, the default is English.

Country and Region

Set the country or region.

Time Zone

Set the time zone, different countries and regions correspond to different time zones.

User Agreement

Instructions for users, select Agree and click "NEXT".

Policy

Data Protection Policy, select Agree and click "NEXT".

WLAN

Configure the device for network binding


- Choose WLAN or WPS to configure the network. Follow the on-screen prompts to complete settings such as App and Pairing, Remote Control, and Voice Assistant, then enter the main interface.
- Skip this step and go directly to the Date And Time settings (after skipping the network configuration, you can reconfigure the network in the system settings later). After completion, click "NEXT" to enter the main interface.

📶 This product supports software updates via Wi-Fi (OTA). After the update, some user interfaces (UI), functions, or operation procedures may differ from those described in this manual.

THE MAIN INTERFACE

This appliance uses a touch display combined with a rotary main knob for control. The Power and Start/Pause buttons are operated by touching the corresponding icons. Program selection can be done by swiping and touching the display or by turning the main knob. Program parameters and other settings are adjusted by swiping and touching the display. Swipe left or right on the display to switch between the program and function interface and the Connect Life interface.

Please refer to the actual situation for the final display

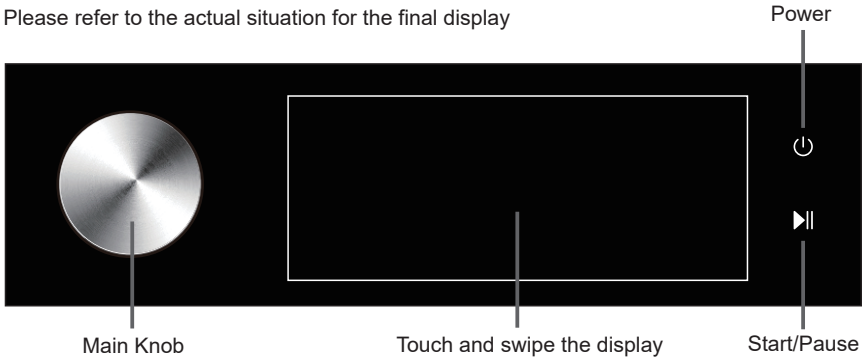

PROGRAM AND FUNCTION INTERFACE

Icon description

Icon	Name	Description
	Power	Used to turn on/off the device.
	Start/Pause	Used to start/pause a program.
	Back	Used to return to the previous interface.
	Setting Options	You can access the quick switch and function card interface for settings.
	WLAN	When the device is connected to the network, this icon is displayed.
	Child Lock	Used to lock operations during program running to protect the safety of children.
	Favorites	Tap this icon to save the current program to Favorites.
	Delay End	Tap this icon to enter the reservation settings interface.
	Door Lock	When the door lock is engaged, this icon is displayed.
	Power Indicator	Displays the estimated power consumption for the rated capacity of this program.
	Water Level Indicator	Displays the estimated power consumption for the rated capacity of this program.

PROGRAM TABLE

Tap the power button to turn on the machine. According to the type of laundry and the degree of soiling, rotate the main knob or slide and touch the program area on the display to select the appropriate program. During operation, the main knob will not turn automatically.

Program	Maximum load (kg)	Maximum speed (rpm)	Program description
Eco 40-60 —	12	1400	It is suitable for washing cotton clothes with a normal degree of soiling.
Cotton (Cold, 20°C, 30°C, 40°C, 60°C, 90°C)	12	1400	This program is suitable for washing cotton or linen fabrics that are moderately and heavily soiled.
Synthetics (Cold, 20°C, 30°C, 40°C, 60°C)	6	1400	This program is suitable for washing synthetic fabrics with a moderate soil level.
AI Super Wash —	8.5	1400	This program can intelligently identify the weight and dirtiness of clothes and is used for washing cotton, linen, and chemical fiber clothes.
Easy Care (Cold, 20°C, 30°C, 40°C)	7	1400	This program is suitable for washing lightly soiled clothes.
Refresh (40°C, 60°C)	1	/	It is used for sterilization, wrinkle removal, and odor removal of a small amount of dry clothes. It requires turning on the faucet, and detergent/softener cannot be added.
Baby Care (40°C, 60°C, 90°C)	2	1400	This program is suitable for washing baby clothes, underwear, etc., and sterilizes them through high temperature. It is not recommended to add softener for this program.
Allergy Care (60°C)	2	1400	It is suitable for washing clothes that are resistant to high temperatures and not easy to fade, and removes allergens such as pollen, mites, and parasites through high temperatures.
Full load 49' (Cold, 20°C, 30°C, 40°C)	12	1400	It is suitable for washing daily clothes such as cotton, synthetic fibers or blended fabrics in a short period of time.
Power 30' (Cold, 20°C, 30°C, 40°C)	6	1400	This program is a short, intensive washing program designed for a small load of medium soiled garments.
Quick 15' (Cold, 20°C, 30°C, 40°C)	2	800	It is suitable for washing a small amount of laundry or lightly soiled laundry. If you change the default setting, the washing time will be longer.
Pets (Cold, 20°C, 30°C, 40°C, 60°C)	6	1400	It is suitable for washing clothes with pet hair.
Bedding (Cold, 20°C, 30°C, 40°C, 60°C)	3	1400	It is suitable for washing large-sized clothes, such as curtains, sheets, quilt covers, etc.
Delicate (Cold, 20°C, 30°C, 40°C)	3	600	This program is suitable for washing machine washable silk fabrics (refer to the laundry label requirements). It is not recommended to add softener for this program.
Wool (Cold, 20°C, 30°C, 40°C)	3	600	This program is suitable for washing machine washable woolen clothes (refer to the laundry label requirements).

Program	Maximum load (kg)	Maximum speed (rpm)	Program description
Down (Cold, 20°C, 30°C, 40°C)	3	600	This program is suitable for washing machine-washable items filled with down, such as pillows, mattresses, and bedspreads, and is also suitable for washing items filled with synthetic fiber.
Sportswear (Cold, 20°C, 30°C, 40°C)	5	1000	It is suitable for washing sportswear and casual clothes made of microfiber fabrics.
Shirts (Cold, 20°C, 30°C, 40°C, 60°C)	3	1400	This program is suitable for washing shirts made of cotton, linen, synthetic fabrics or blends.
Jeans (Cold, 20°C, 30°C, 40°C, 60°C)	6	1400	This program is suitable for washing machine washable denim items. It is not recommended to add softener for this program.
Rinse+Spin –	12	1400	This program is for separate rinsing and spinning of laundry. Do not add detergent for this program.
Spin –	12	1400	This program is used for separate spinning of laundry. Do not add detergent/softener for this program.
Drum Clean (90°C)	/	800	This program is used to clean the drum and remove detergent residues, as well as bacteria that accumulate and grow when washing at low temperatures. Do not add detergent/softener for this program.

Note

- (1) Water temperature: Select the appropriate water temperature according to the selected washing program. When washing, follow the clothing manufacturer's washing label or instructions to avoid damaging the clothing.
- (2) The actual water temperature may differ from the stated program temperature.
- (3) Test results depend on water pressure, water hardness, inlet water temperature, room temperature, type and amount of laundry, degree of soiling, detergent used, power supply fluctuations and other options selected.
- (4) Put all the detergent in the detergent drawer if the corresponding compartment of the detergent drawer is large enough to hold it. If the corresponding compartment of the detergent drawer cannot accommodate all the detergent, the detergent should be filled to the MAX scale mark of the drawer and the remaining detergent should be placed at the bottom of the washing drum before loading the test load.
- (5) If you add too much laundry during the wash cycle, the laundry may be washed less efficiently because the machine initially detects a lower weight and adds less water. Insufficient water can also cause damage to the laundry and the wash time will be longer.
- (6) Drum Clean (if available): The drum must be emptied before using the Drum Clean program. It is recommended to run it at least once a month.
- (7) For descaling, use a descaling agent with corrosion protection (only use non-corrosive descaling agents and follow the instructions for use of the descaling agent). Run the "Drum Clean" (or other high temperature) program several times to remove any descaling agent residues and complete descaling. It is recommended to descale at least once every six months.

 For better washing performance, we recommend that you fill no more than 2/3 of the drum volume when using the Cotton program.

 The maximum or nominal load applies to laundry prepared in accordance with the relevant provisions of standard IEC60456.

ADDITIONAL SETTINGS AND FUNCTIONS

After powering on, the screen will display the default program and parameters. If no adjustments are needed, simply tap the **"Start/Pause"** button to start running. Users can select the appropriate program and parameters as needed and add additional function(s): tap the parameter or function to be set to turn the corresponding setting on/off; the icon lights up to indicate that the additional function is enabled.

Touch the selected program to enter the settings interface for Temp., Spin, Favorites, and Delay End, as well as the settings for additional functions such as PreWash, Extra Rinse, Steam, Quicker, Cold Wash, Intensive, UV, Quiet Mode, Anti Crease, and Stain Removal. Additional functions can be selected by swiping left or right. The range of additional functions and gears supported varies by program, and some functions cannot be enabled simultaneously.

Most functions can only be set in standby mode. After launching the program by tapping the **"Start/Pause"** button, some pre-defined functions will be unchangeable. If you need to adjust the settings, you can touch the "<" button to exit the program or press and hold the "Power" button to turn off and restart, then reselect the program and functions.

Power

Used to turn on/off the device.

If you need to shut down the program during operation, press and hold the "Power" button to shut down.

If no operation is performed for a period of time, the screen will automatically turn off and enter power-saving mode; at this time, turning the main knob or tapping the screen will wake the screen.

When in standby mode or after the program ends, if no operation is performed for a period of time, the device will automatically turn off the screen; if there is still no operation for an extended time after the screen is off, the device will automatically shut down.

In alarm status, the device screen will not turn off.

Start/Pause

Tap to start/pause the program.

The device cannot be started if the door is not closed or the door lock is not locked.

Temp.

Used to select the washing temperature before starting the program.

Tap this option to enter the temperature selection interface. Swipe your finger through the display to cycle through the selectable gears. The heating temperature options are: Cold / 20°C / 30°C / 40°C / 60°C / 90°C (the range of heating temperature options varies depending on the selected program).

After making your selection, tap the "OK" button to confirm; tap the "CANCEL" button to cancel the selection.

Spin

This function allows you to adjust the spin speed of the program.

Tap this option to enter the spin speed selection interface. Swipe your finger through the display to cycle through the set gears. The spin speed options are: No Spin/400/600/800/1000/1200/1400 (when "No Spin" is selected, the device only drains water and does not spin).

After making your selection, tap the "OK" button to confirm; tap the "CANCEL" button to cancel the selection.

Prewash

This function adds a prewash process before the main wash stage, suitable for heavily soiled laundry.

Tap this option to enable/disable this function.

Extra Rinse

This function can add extra rinse cycles.

Tap this option to enable/disable this function.

Steam

This function can add a steam wash program to the washing process.

Tap this option to enable/disable this function.

Quicker

This function can shorten the washing time and speed up the washing process.

Tap this option to enter the Quicker selection interface. Tap the certain option to select the "Close/Fast/Super Fast" gears. After making your selection, tap the "OK" button to confirm; tap the "CANCEL" button to cancel the selection.

The selectable acceleration gears may vary depending on the model and program.

Different gear settings correspond to different maximum load capacities of the programs. Select "Close" to turn off this function. The program time and the maximum load capacity will then return to their initial settings.

For programs with automatic weighing, turning this function on will cancel automatic weighing; turning it off will restore the automatic weighing function.

Cold Wash

This function uses cold water for washing, and can automatically adjust the washing intensity and water level to achieve energy-saving and environmentally friendly washing performance. Tap this option to enable/disable this function.

Intensive

This function increases the main wash time, effectively removing stubborn stains and improving overall washing performance.

Tap this option to enable/disable this function.

UV

This function sterilizes clothes to ensure cleanliness and safety.

Tap this option to enable/disable this function.

Under certain conditions, the UV sterilization function is automatically disabled.

Quiet Mode

This function reduces the drying spin speed and automatically enables mute, gently washing garments, and reducing noise.

Tap this option to enable/disable this function.

Anti Crease

This function adds an anti crease mode, which rotates the inner drum gap after the program ends to prevent wrinkles from forming when clothes are not taken out for a long time.

Tap this option to enable/disable this function.

After the function is enabled, the program will automatically enter the anti-crease mode at the end (Note: The anti-crease mode cannot be used when the drying spin speed is set to "No Spin").

The anti-crease mode can be manually ended by turning the knob, tapping the Start/Pause button, or pressing the Power button during operation. If no action is taken, it will automatically end after a maximum runtime of 12 hours by default. In case of a power outage during operation, the device will enter the ending phase immediately after power is restored.

Stain Removal

This function is used for washing special stains.

Tap this option to enter the stain type selection interface: after selecting the stain, tap the "OK" button to confirm, or tap the "CANCEL" button to cancel.

When changing the program, the selected stain type will be automatically canceled.

Delay End

This function allows you to schedule laundry at your convenience.

After selecting the program and function, tap the icon to make a reservation.

The reservation time is the program end time (including running time), which must be greater than the program running time and no longer than 24 hours.

After the reservation time is set, tap the "Start/Pause" button to enable the reservation function.

If the reservation function has been selected before the program starts, you can cancel the reservation by selecting another program or setting a function (the total duration must exceed the reservation time), except for the Anti Crease function.

After the program starts, if you need to cancel the reservation, you can do so by pressing the Back button to cancel the operation or by turning off and restarting the machine.

Favorites

Tap this icon to add the current program and function parameter settings to favorites.

Child Lock

To prevent children from operating the device accidentally and protect their safety, this device is equipped with a Child Lock function.

Tap the icon to enable, press and hold the icon to disable.

After the child lock is enabled, only the Power button's on/off operation and the child lock release function are available; all other functions and knob operations are locked.

When the program ends or the appliance is powered off and restarted, the Child Lock function is automatically canceled.

Washer-Dryer link

This function can achieve the intelligent interconnection of washing machine and dryer.

Tap the "" icon and follow the on-screen prompts to proceed.

This function is applicable to some programs.

FUNCTION SELECTION TABLE

Program	Temp.	Spin	Prewash	Extra Rinse	Steam	Quicker	Cold Wash	Intensive	UV	Quiet Mode	Anti Crease	Stain Removal	Delay End
Eco 40-60	-	•	-	-	-	-	-	-	•	-	-	-	•
Cotton	•	•	•	•	•	•	•	•	•	•	•	•	•
Synthetics	•	•	•	•	•	•	•	•	•	•	•	•	•
AI Super Wash	-	-	•	-	-	-	-	-	-	-	-	-	•
Easy Care	•	•	•	•	-	-	-	-	•	•	•	-	•
Refresh	•	-	-	-	-	-	-	-	•	•	-	-	•
Baby Care	•	•	•	•	◦	•	-	•	•	•	•	-	•
Allergy Care	-	•	•	•	◦	-	-	•	•	•	•	-	•
Full load 49'	•	•	•	•	-	-	-	-	•	•	•	-	•
Power 30'	•	•	•	•	-	-	-	-	•	-	•	-	•
Quick 15'	•	•	-	•	-	-	-	-	•	-	•	-	•
Pets	•	•	•	•	•	-	•	•	•	•	•	-	•
Bedding	•	•	•	•	-	-	•	•	•	•	•	-	•
Delicate	•	•	-	•	-	-	-	-	•	•	-	-	•
Wool	•	•	-	•	-	-	-	-	•	•	-	-	•
Down	•	•	-	•	-	-	-	-	•	•	•	-	•
Sportswear	•	•	•	•	-	-	•	•	•	•	•	-	•
Shirts	•	•	-	•	-	-	-	•	•	•	•	-	•
Jeans	•	•	•	•	-	-	-	•	•	•	•	-	•
Rinse+Spin	-	•	-	•	-	-	-	-	-	•	•	-	•
Spin	-	•	-	-	-	-	-	-	-	•	•	-	•
Drum Clean	-	-	-	-	-	-	-	-	-	-	-	-	•

- The function is optional
- The function is not optional
- Default function that cannot be cancelled

CONNECT LIFE INTERFACE

This interface displays devices under the account when connected; in offline status, only devices discovered via Bluetooth are shown.

Supports device viewing and control functions.

Dual Control on One Screen

For the first connection, press and hold the " icon on the washer to enter the binding interface, enable the "Washer-Dryer Link" option, then search for and bind the dryer.

After a successful binding, tap the corresponding device to control its start/pause, switch programs, operate certain functions, and view status.

Click the " icon on the right to return to this device with one click.

Note:

By default, Bluetooth is enabled to allow the washer and dryer to communicate and automatically coordinate their cycles.

Voice Control

When connected to a network, you can use voice commands to control cycles or check information like the weather and energy usage. Just say "Hi, Vidaa" to activate it.

The voice prompt volume is based on the system volume and can be adjusted in the Settings menu.

Note:

The appliance has a built-in microphone for hands-free operation. Say "Hi, Vidaa" to activate the Voice Assistant and open the voice interface. Your voice commands are securely uploaded to the cloud for real-time recognition, and instantly translated into control commands. To protect your privacy, voice data is not stored.

You can enable or disable the Voice Assistant at any time in the Settings menu. When disabled, the microphone is turned off to safeguard your privacy. Once the voice interface is closed, the microphone also stops collecting voice input.

SETTING OPTIONS

On the homepage or running page, tap/pull down the top of the display to show the " " icon, enter the quick switch interface, and select options such as Detergent/Softener, WLAN, Remote Control, Notifications, Drum Light, Mute, Accessibility, and Settings as needed. The corresponding icon is lit to indicate that this function is enabled. Swipe the screen from right to left on this interface to enter the function card interface.

Quick operation:

- Swipe down from the top left half of the display screen to show the quick switch interface.
- Swipe down from the top right half of the display screen to show the function card interface.

QUICK SWITCH INTERFACE

Detergent/Softener /

Tap the " " option to enable/disable the smart dispensing function.

Tap the "/  " icon to quickly enter the "Auto Dose Settings" interface.

Tap the text area to adjust the corresponding dispensing amount: cycle through Less/Standard/More as needed, with the default gear set to Standard.

If you need to add manually, tap the corresponding icon to turn off smart dispensing, and pour the single-dose amount into the detergent drawer's "Manual Detergent" compartment.

Note: This page displays the current Detergent/Softener levels. When the purchase reminder feature is enabled and the remaining amount is insufficient, the device will send a notification.

Please keep the detergent drawer closed while the program is running.

WLAN

Tap this option to turn the device's WLAN on or off. Press and hold to enter WLAN network settings. After the device is connected to the network and the pairing/binding is completed, it can be remotely controlled via the mobile app.

Remote Control

Tap this option to turn the device's remote control module on or off.

Note: Before enabling, ensure that WLAN is turned on and properly connected, and that the door is securely closed.

- When the WLAN connection is normal but the " " icon is not lit: You can use your mobile phone to view the status or set program parameters and function items (depending on the model's permissions), but you cannot remotely start the program.
- When the WLAN connection is normal and the " " icon is lit: You can use your mobile phone to set program parameters and function items, and remotely start the program.

Once remote control is started, if the device pauses the program, the remote control function will be automatically canceled and must be re-enabled to start the program remotely again.

After this function is enabled, children should be closely supervised to prevent them from climbing into the drum and causing danger.

After activation, if there is no operation on both the machine and the app for an extended period, the device will enter Energy Saving mode and will automatically shut down after 7 days of inactivity.

Notifications

Tap to enter and view current messages and clear them with one click.

Drum Light

This option allows manual turning on/off of the drum light.

The Drum Light will automatically illuminate when the machine is turned on, the program is paused, and the program ends.

Mute

This function can mute all prompt sounds except the alarm sound.

Tap this option to enable/disable this function.

Accessibility

Tap this option to enter the corresponding function page in Settings.

- Set "Font Size".
- Enable/disable the "Voice Reading" function.

When "Voice Reading" is turned on, the "" function icon appears in the upper left corner of the screen; program selection and program start are announced by voice. Double-tap the screen to start a program. This function does not support parameter adjustment. Temporarily exiting can turn off the function switch in the upper left corner of the screen (it will be enabled by default the next time the device is powered on); to completely disable this function, go to "Accessibility" to configure the settings.

Settings

Tap this option to enter the system settings interface.

Users can configure various settings as needed, including General, WLAN, Display, System Volume, Time Out, Water Hardness, Auto Dose Settings, Reminder, User Program, Voice Assistant, Accessibility, User Manual, Evaluate, Washer-Dryer Link, App and Pairing, and System.

Name	Description
General	Set language, weather, temperature, time zone, and time and date format; view the User Agreement; enable/disable Store Mode, etc. • After Store Mode is enabled, the program cannot start. Tap the upper-left corner of the screen several times to exit demo playback; to completely disable Store Mode, enter "General" to change the setting.
WLAN	Configure device network connection.
Display	Adjust screen brightness, configure the default display page.

System Volume	Slide to set system volume.
Time Out	Set the screen-off time, lock screen time, and drum light illumination duration.
Water Hardness	Test water hardness.
Auto Dose Settings	Set the standard dispensing amount, Amount Left, and Pump Clean functions for Dispenser 1/Dispenser 2. • Dispenser 1: Set the standard dispensing amount for this compartment. The default dose is 50 ml (suitable for 4–5 kg of laundry), adjustable within the range of 10–100 ml. • Dispenser 2: Set the Liquid Type and standard dispensing amount for this compartment. The default dose is 50 ml (suitable for 4–5 kg of laundry), adjustable within the range of 10–100 ml. • Amount Left: When enabled, the cloud will push a purchase reminder if the remaining count is less than 10. Note: Remaining level detection is an estimate and may vary; please refer to the actual situation. • Pump Clean: This function removes residue from the compartment to ensure optimal washing performance. Operation instructions: Be sure to empty the compartment before starting (to avoid foam formation inside the drum). Keep the detergent drawer closed during operation and follow the on-screen prompts.
Reminder	You can set functions such as Drum Clean Reminder, Filter Clean Reminder, and Stage Reminder.
User Program	You can customize the homepage display programs (some programs do not support removal) and download/delete cloud programs.
Voice Assistant	Voice control, language, and sound effects can be configured.
Accessibility	Set font size and voice reading function.
User Manual	Check the electronic User Manual.
Evaluate	Check the last run record, and you can also add comments to this record.
Washer-Dryer Link	Set up the washer and dryer smart interconnect function.
App and Pairing	Supports app binding, remote control, and unbinding.
System	View device information, perform system updates, and restore factory settings.

System Update

Tap the upper-left area of the display to open the settings menu, tap "Settings", then tap "System", followed by "System Update", and perform the system upgrade according to the on-screen prompts.

Reset

Tap the top-left area of the display and pull down to access the Settings options. Tap "Settings", then tap "System", then tap "Reset", and follow the on-screen prompts to restore factory settings. After the reset is complete, user data stored on the device will be deleted.

FUNCTION CARD INTERFACE

Evaluate

This card displays the most recent evaluation result. Click to view or add an evaluation.

Device statistics

This card displays total electricity consumption and total water consumption, supports switching between week/month/year views to check energy consumption and program rankings, and requires an Internet connection to update the data.

Drum Clean

This card shows the remaining number of drum cleaning reminders. Tap the card to enter the drum cleaning reminder function settings interface.

Weather

This card displays the location, temperature, and weather when connected to the cloud; if the location is not set or the device is not cloud-connected, it prompts you to configure the corresponding settings.

User Manual

This card displays a thumbnail of the User Manual. Click to view details after connecting to the cloud and completing bind; if not connected to the cloud, it prompts the user to connect to the network.

SMART NETWORKING

Connecting your appliance to the application ConnectLife

ConnectLife is a smart home platform that connects people, devices, and services.

The **ConnectLife** application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features vary depending on your appliance and your region/country).

To connect your smart device, you need a home Wi-Fi network and a smartphone with the application **ConnectLife**.



To download the **ConnectLife** application, scan the QR code or search for **ConnectLife** in your favorite app store.

1. Install the **ConnectLife** application and create an account.
2. In the **ConnectLife** application, go to the "+" menu and select the appropriate type of device. Then scan the SN code (you can also enter the SN code manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

Do you have more questions?

Visit us at www.connectlife.io or contact us at hello@connectlife.io.

Network configuration description

1. Enabling WLAN on the appliance

Click on the "**WLAN**" button in the top left corner of the dropdown menu to enable or disable the Wi-Fi Function.

2. Connection setup

For first start up: follow the boot to complete device Settings and App account binding.

If you have reject to finish the WLAN setting and binding, you can start like below:

2.1. Click on the "**Settings**" button in the top right corner of the dropdown menu to enter the "**Settings**", and go to "WLAN" settings to set up the WLAN;

2.2. Or Long press on the "WLAN" button in the top left corner of the dropdown menu to enter the "WLAN" directly.

3. Pairing

Click on the "**Settings**" button in the top right corner of the dropdown menu to enter the "**Settings**" page.

- 3.1. Click on "**App and Pairing**" to enter the pairing page.
- 3.2. Click on "**Bind A New Account**" to start the pairing process for a new user.
- 3.3. Click "**Next**" and the dedicated QR code will be shown up for device pairing.

4. Unpairing

4.1. On the appliance side:

- A. Click on the "**Settings**" button in the top right corner of the dropdown menu to enter the "**Settings**" page.
- B. Click on "**App and Pairing**" to enter the pairing page.
- C. Click on "**Unbind**" to unbind the connected account.
- D. Tick the accounts that you want to unbind and click "**Unbind**" to disconnect.

4.2. On the smartphone side:

- A. Select and click the device you want to unbind in "**Devices**" page.
- B. Click "**Settings**" to enter the Settings page.
- C. Click "**Remove Device**" to unbind the device on the **ConnectLife** app.

5. Remote start

Click on "**Remote Control**" button in the top left corner of the dropdown menu to enable or disable this function.

UNLOCK SCREEN

Auto screen lock supports multiple time settings. After the device remains inactive for the set time in standby mode (except for specific interfaces), it automatically enters the screen lock interface. Press and hold the screen for 3 seconds to exit the screen lock.

START THE PROGRAM

Select the program and function parameters, and confirm that the detergent has been added to the detergent box, and tap the **"Start/Pause"** button to start the program.

END OF THE PROGRAM

When the program ends, the device will emit a prompt tone, and the screen will display the end interface. At this time, press and hold the Power button to turn off the device.

You can also enter the following interface by tapping the icon. If no operation is performed for a period of time, the device will automatically shut down.

Report

Tap "" to view the current program's power consumption, running time, water consumption, number of rinses, and more.

Favorites

Tap "" to add the current program and function parameter settings to favorites.

Home

Tap "" to return to the home page.

Evaluate

Tap "" to give a star rating for the washing performance of this cycle. The system will automatically optimize subsequent wash parameters based on the rating to help users obtain a washing experience that better matches their personal needs.

 After the program, please turn off the power of the device, turn off the tap, unplug the power cord from the socket, open the door and remove the laundry from the drum.

PROGRAM INTERRUPTIONS AND CHANGES

Add or remove laundry during operation

The door unlocking conditions that must be met for adding clothes midway:

- The temperature in the drum must be lower than the set safety value;
- The water level in the drum must be below the set safety value.

To add or remove clothes during a program, follow these steps:

1. Tap the "**Start/Pause**" button, the program pauses.
2. If the door unlock conditions are met, the door will unlock automatically. Open the door and add or remove clothes from the drum.
3. Close the door.
4. Tap the "**Start/Pause**" button to resume program operation.

 If additional laundry is added during the washing process, insufficient water volume may affect the cleaning performance (the device calculates the water intake based on the initial laundry weight); insufficient water volume may also cause damage to the laundry due to friction, and the washing time will be correspondingly extended to ensure cleanliness.

 After the washing/drying program is paused and restarted, it will continue from the interruption point; if paused during the spin phase and restarted, it will begin again from the start of the spin phase.

Cancel the program

During the program operation, if you need to cancel the program, you can choose any of the following methods to operate:

- Touch the Back button (<) in the upper left corner of the display;
- Press and hold the "Power" button to turn off the machine.

Change the program

While a program is running, if you need to change the program, first cancel the current program using the method described above, then select the new program.

Fault

If the device malfunctions, the program will automatically stop. At this time, the device will emit a prompt sound alarm and display the fault information on the display.

- Some abnormal alarms occurring on the device can be canceled by pressing the "**Start/Pause**" button to resume operation;
- Some alarms may prevent the system from switching to running mode; troubleshooting is required (see "FAULT CODES AND TROUBLESHOOTING").

Power failure

If a power failure (power outage) occurs, the program will be interrupted. After power is restored, the program will continue running from the point of interruption.


 **If there is still water in the appliance after a power outage, do not open the door before manually draining the water using the drain pump filter.**

EMERGENCY DOOR OPENING

If the door cannot be opened due to special reasons such as power failure, please use the door lock lever at the door cover of the pump to open the door urgently.

 Note:

1. Please do not use this function when the device is operating normally.
2. Before operation, make sure that the inner drum has stopped rotating, that the water temperature is not high and that the water level is below the feeding port to avoid danger. If the water level is too high, drain the water through the drain hose (if any) or by slowly unscrewing the drain pump filter.
3. Operation method: Open the door cover of the drain pump, use the tool to pull down the door lock lever, and then open the door (as shown in the figure). After opening the door, please restore the door lock lever in time.

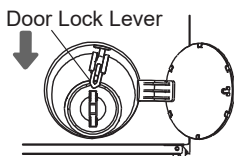


MAINTENANCE AND CLEANING

 Regular maintenance can extend the appliance's service life. Before maintenance, please be sure to cut off the power supply and turn off the faucet.

 Children are not allowed to clean the appliance or perform any maintenance on it without supervision.

CLEANING THE DETERGENT DRAWER

 Please clean the detergent box regularly.

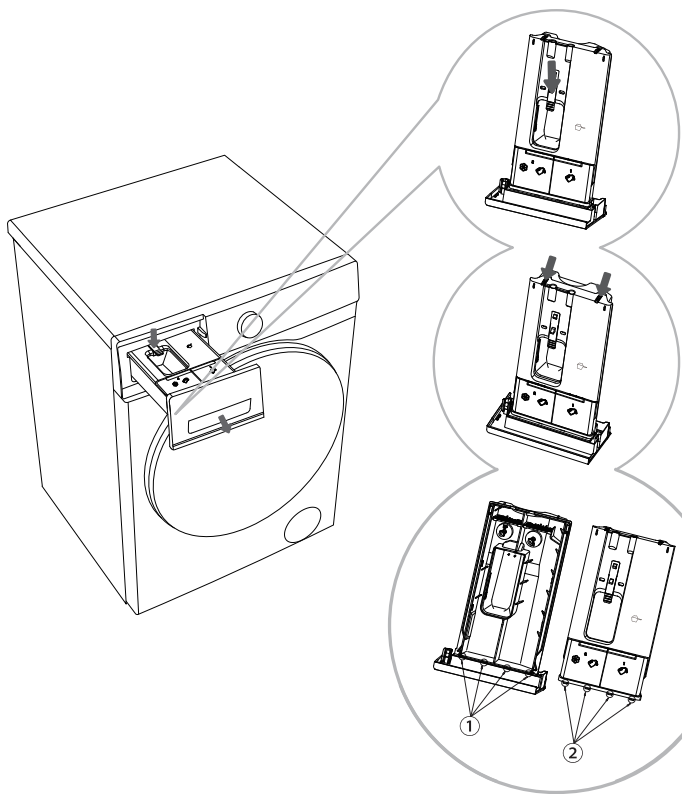

1 Open the detergent dispenser drawer, press the limit rod as shown in the figure, and pull out the detergent box.

2 Peel back the two bending ribs at the positions shown in the diagram, and pull upward to remove the box cover.

3 Empty the residual detergent and softener from the detergent box, clean the detergent and box lid with running water, and dry it off.

4 Insert the limiting rib ② of the cover into the corresponding slot ① of the detergent box, and press down on the cover until you hear a "click" sound, which means the bending ribs at the back of the cover are secured. Put the detergent box back in its original place.


 Push the automatic dispensing detergent box all the way in. Otherwise, the appliance will not be able to draw detergent/softener from the detergent box during operation. If the automatic dispensing detergent box is not completely closed, the appliance will not function properly and water may leak through the detergent box handle.

 When cleaning the automatic dispensing detergent box, be sure to remove any detergent and softener residue, and clean the bottom of the container casing; otherwise, it may cause automatic dispensing abnormalities.

 Do not leave detergent or softener in the storage chamber for long periods of time as they may harden and cannot be dispensed automatically.

 Do not place the detergent box in the dishwasher for cleaning.

CLEANING THE WATER INLET HOSE, DETERGENT DRAWER OUTER COMPARTMENT, AND RUBBER DOOR GASKET

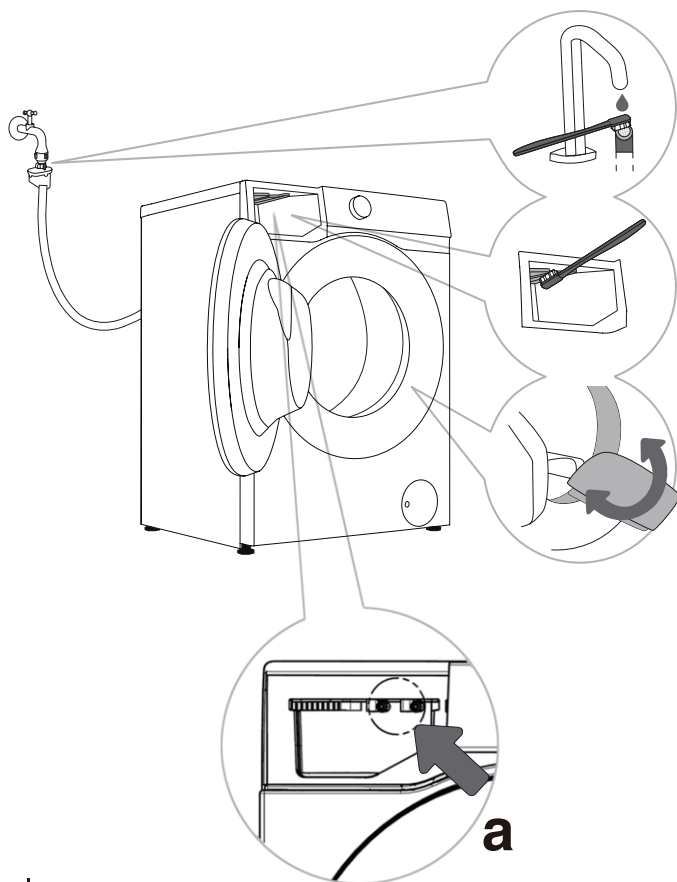

1 Clean the water inlet hose filter regularly.

2 Use a brush to clean the detergent drawer outer compartment, especially the nozzle on the upper side of the compartment.


3 After each wash, wipe the rubber door gasket to extend its life. After washing, keep the appliance door slightly open to release moisture before closing it, to prevent the door seal from getting moldy.

 When you suspect that the detergent/softener is not being dispensed, the following methods can be used to check:

1. Make sure the automatic dispensing setting for the detergent/softener is activated.
2. Pull out the automatic dispensing detergent box and check whether the bottom sealing ring is loose or damaged (Figure a). If it is loose or damaged, please contact after-sales service for repair or replacement.
3. Reinstall the automatic dispensing detergent box and determine whether it dispenses normally by following the steps below.
 - Pull out the detergent box and check if there is any detergent/softener visible in the compartment.
 - Check whether the detergent is dispensed normally: Select and run the Quick 15' program, press the pause button after running for about 2 minutes, and open the appliance door. Check whether the water in the drum contains foam and has a detergent smell.
 - Check whether the softener is being dispensed normally: Confirm that the dispensing setting for "Dispenser 2" is set to Softener. Select and run the Rinse+Spin program, press the pause button after running for about 15 minutes, and open the appliance door. Check whether the water in the drum contains foam and has a softener smell.
 - If the water in the drum contains foam and has a detergent/softener smell, the automatic dispensing function of the appliance is normal. Otherwise, please contact after-sales service for repair or replacement.

CLEANING THE DRAINING PUMP FILTER

💡 When cleaning the pump filter, water may spill out. Therefore, it is recommended to place an absorbent cloth on the floor.
Before draining the water, make sure the water has cooled down.

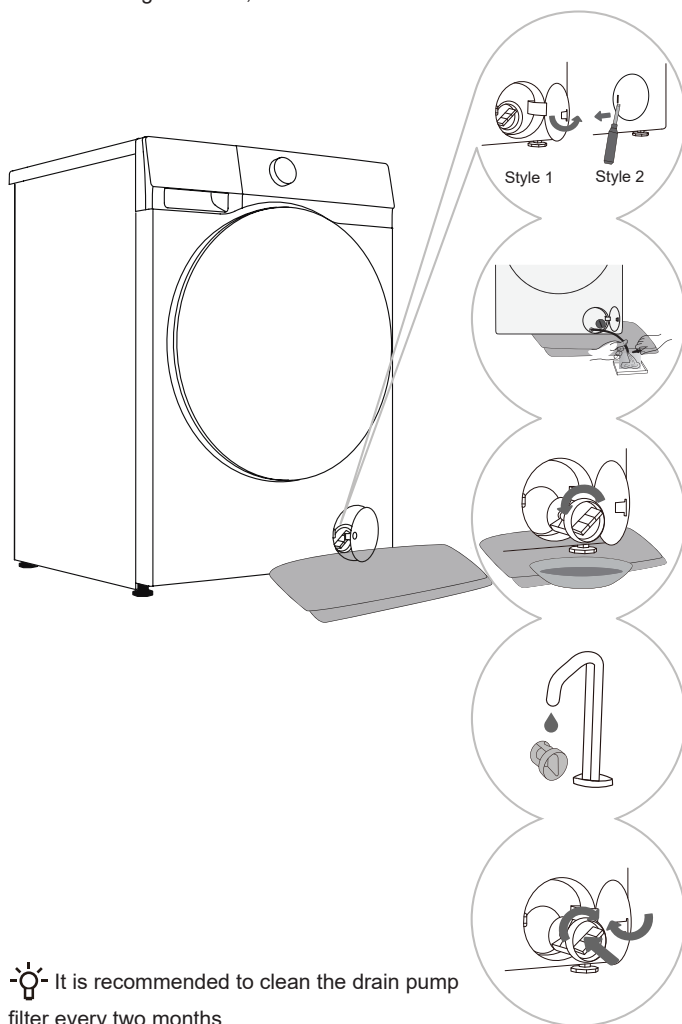

1 Open the drain pump filter cover. Style 1: Press the door cover; the filter cover pops out. Style 2: Use the appropriate tool (flat head screwdriver or a similar tool) to open the drain pump filter cover. (The style depends on different models.)

2 Place a towel under the filter door. If the device has a discharge pipe, place the discharge pipe end into a container, rotate the discharge pipe plug, remove it after it loosens, wait until the water drains out naturally, and reinstall the discharge pipe plug. If the device does not have a discharge pipe, place a container under the pump filter. (The style depends on different models.)

3 Slowly turn the pump filter counterclockwise. Pull out the pump filter to allow water to drain slowly.

4 Clean the pump filter with tap water.

5 Reinstall the pump filter as shown in the illustration, and tighten it clockwise. To ensure a good seal, the filter sealing ring surface should be kept clean.

💡 It is recommended to clean the drain pump filter every two months.

💡 It is recommended to clean the drain pump filter every time you wash items such as quilts and bath towels that are prone to shedding.





💡 If the spin program cannot start or there is debris (buttons, coins, hairpins, etc.) in the drain pump, clean the pump filter.

💡 Do not open the pump filter while the device is in operation. Do not operate the device before the pump filter is installed in place to avoid water leakage or malfunction.

CLEANING THE INLET FILTER

Check and clean the inlet filter regularly.

If the water inlet speed is slow, please clean the filter at the water inlet in time. The specific steps are as follows:

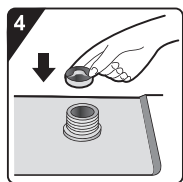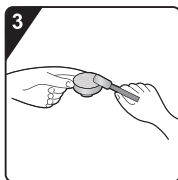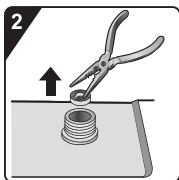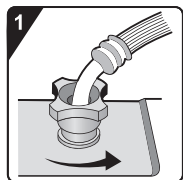

1 Turn off the water tap and loosen the water inlet hose.

2 Remove the inlet filter.

3 Clean the inlet filter.

4 Install the inlet filter.

5 Connect the water inlet hose. Turn on the water tap and make sure there are no leaks at the connections.

 The inlet filter collects impurities and sediment in the water supply of the equipment. It is recommended to clean the inlet filter at least once every six months. If the water is hard or there are limescale deposits, the filter should be cleaned more frequently.

CLEANING THE OUTSIDE OF YOUR WASHER

 **Before cleaning the outside of your washer, please be sure to disconnect the machine from the power supply.**

Clean the appliance housing and control panel with a soft, damp cloth. Then wipe them dry with a soft dry cloth.

 Do not use solvents, abrasive cleaners, or cleaning agents that may damage the device (please follow the recommendations and warnings provided by the cleaning agent manufacturer). Wipe the drum door with a damp cloth, and then wipe it dry with a soft dry cloth.

 If cleaning with a wet towel, make sure to ring out the water from the towel before wiping down the washer.

TROUBLESHOOTING

The device is equipped with various automatic safety functions, ensuring that faults can be detected promptly and effective safety countermeasures can be initiated.

These faults are usually minor and can be eliminated in a very short time.

When the device cannot operate normally, the display will show abnormal information. Please refer to the warning content and take appropriate actions.

If the fault persists after you have handled it yourself according to the recommended processing method, please contact after-sales service.

If the user performs maintenance by themselves or hires non-manufacturer after-sales personnel, all consequences will be assumed by the user.

Fault Description	Recommended handling methods
The device cannot start normally	◇ Check whether the device power supply is plugged into the power socket, and whether the power socket is working properly (you can test the power socket with other electrical devices). ◇ Check if the machine door is closed properly. ◇ Check if the "Start/Pause" button is pressed.
The device stops operating under normal working conditions	◇ Check if the machine door is closed properly. If not, close the door and press the "Start/Pause" button. ◇ Check for excessive foam. When the device detects excessive foam, it will enter a draining or standby state, or water will be taken to eliminate foam for defoaming treatment. The program is paused during this process, and the time displayed on the screen remains unchanged. After defoaming is completed, the device will automatically resume operation. If foam overflows and leaks, wipe away the foam to prevent corrosion of the device. ◇ Check if the device has activated the alarm protection.
The time at which the program starts displaying may be extended or shortened by a certain duration	This is an adaptive adjustment made by the device in response to factors affecting the washing time. ◇ Excessive foam. ◇ Bulky clothing causes imbalance. ◇ The low inlet water temperature causes the heating time to be prolonged. Due to the above reasons, the remaining time displayed by the program will be recalculated and updated in a timely manner (when the device is making imbalance adjustments, the displayed time remains unchanged). In addition, during the water intake phase, the device detects the load and adjusts the program time accordingly (fuzzy control).
After washing, there is residual detergent or other additives in the detergent drawer	◇ Check whether the detergent drawer is installed correctly and kept clean. ◇ Check whether the water pressure is normal and whether the filter of the water inlet hose is blocked (refer to "MAINTENANCE AND CLEANING").
The equipment has an odor	◇ The odor may be caused by the rubber material inside the device. This is the smell of the rubber itself and will automatically disappear after a few uses.

 Faults or problems caused by external factors (such as lightning strikes, power grid failures, natural disasters, etc.) are not covered by the warranty.

Fault Description	Recommended handling methods
Abnormal sound/noise occurs during the washing process	◇ A foreign object, such as a key, coin, or pin, may have fallen into the drum. Shut down the equipment and check whether there is any foreign matter in the drum. If there is still abnormal noise after restarting, please contact after-sales service. ◇ The laundry may be unevenly distributed in the drum. Pause the program and redistribute the laundry after unlocking the door.
The equipment vibrates intensely during spinning	◇ Check whether the device is placed level, with the four feet stably supported on a flat surface. ◇ Check that the transport screws have been removed. Before using the equipment, the transport screws must be removed. ◇ Check that all bottom support foam has been removed.
Poor Spin Effect	The device has a balance detection and correction system. If clothes are very heavy (such as bathrobes), the system detects imbalance and, after trying to spin dry multiple times, will automatically reduce the spin speed or even stop spinning to protect the device. ◇ If clothes are still very wet after the spin cycle, take them out, shake them out, and select the spin cycle again. ◇ Excessive foam will affect the spin effect. Please use an appropriate amount of low-foaming detergent. ◇ Check whether the speed selection is set to "0" or "No Spin".
Water leakage problem occurs	◇ The water inlet hose is leaking. Check whether the tap and the water inlet hose connector are leaking. If there is leakage, wrap sealing tape around the end of the tap or replace it with a suitable tap. It is recommended to check whether the water inlet hose connector and the water inlet valve port are tightened. After tightening, the leakage will be eliminated. ◇ The drain hose is leaking. For top-drain models, the drain hose fixing clip should not be removed; otherwise, the drainage will not stop. ◇ The detergent drawer is leaking. ◇ The detergent drawer is not closed tightly. Please push the handle of the detergent drawer tightly to close it. ◇ The door gasket is leaking. Check the door gasket for any foreign matter and clean it.
Excessive wrinkling	◇ Clothes were not taken out of the machine in time. After the washing program is completed, please take out the clothes from the machine in time. ◇ The device is overloaded. The drum should not be tightly packed with clothing, and the door should close easily. ◇ The spin speed may be too high. Set the appropriate speed for the clothing type.

DRYING MALFUNCTION (applicable to models with drying function)

Fault Description	Recommended handling methods
Appliance not drying	◇ Check if a drying program has been set. ◇ Check whether the water tap is turned off. ◇ Check if the machine door is closed properly. ◇ Check if the load of laundry is excessive (refer to the "PROGRAM TABLE" for the recommended capacity for the selected program). Remove some items and restart the drying cycle.
Insufficient drying	◇ Check if the load of laundry is excessive. Overloading can result in poor drying performance and may cause wrinkles. Dry the load in separate batches. ◇ Check whether clothes that are difficult to dry (such as thick cotton) are mixed with clothes that are easy to dry (such as synthetic fibers). ◇ Dry different types of clothes separately.
Drying time is too long	◇ Check if the load of laundry is excessive (refer to the "PROGRAM TABLE" for the recommended capacity for the selected program). Remove some items and restart the drying cycle. ◇ Insufficient spin of laundry (refer to the "POOR SPIN EFFECT" section for handling). ◇ The load contains many thick items (such as denim).
Odor during drying	◇ The use of detergents or softeners with strong chemical fragrances may cause odors during clothes drying. ◇ If the appliance is not thoroughly cleaned inside, residual dirt may cause odors during clothes drying. Please clean the appliance regularly (refer to "MAINTENANCE AND CLEANING") and promptly remove clothes after the drying cycle ends.

FAULT CODES AND TROUBLESHOOTING

When the device does not operate normally and the display shows the following code, it may not be a fault. Please refer to the content in the fault code and take the corresponding measures.

Problem/Fault	Description	Solution
F01	Water inlet fault	Check the following items: 1. Is the water tap open? Is the water pressure too low? 2. Is the water inlet hose pinched? 3. Is the water inlet hose filter clogged? 4. Is the water inlet hose frozen? After excluding these problems, press the "Start/Pause" button to continue running.
F03	Water outlet fault	Check the following items: 1. Is the drain hose pinched? Is there water flowing in the hose? 2. Is the drain hose filter clogged? 3. Is the drain hose frozen? After excluding these problems, press the "Start/Pause" button to continue running.
F24	Overflow	Pause the program first, then restart the program. If the device continues to overflow, please turn off the tap and contact a service technician.
F13	Door locking fault	The appliance door is closed but cannot be locked. Turn off the appliance, turn it back on, and restart the wash program. If the fault still exists, please contact a service technician.
F14	Door unlocking fault	The appliance door is closed but cannot be unlocked. Turn off the machine first, then turn it on. If the fault still exists, please contact a service technician.
Other	Electronic module fault	Turn off the appliance and then turn it on again. Restart the washing program. If the fault still exists, please contact a service technician.
Unb	Unbalance alarm	To clear the unbalance alarm, follow these steps: 1. Entangled laundry If the laundry is tangled together, first turn off the machine, open the door, and loosen clothes. Then, place them back into the drum, close the door, and select the separate "Spin" program to try again. 2. Insufficient laundry weight Turn off the machine, open the door, and add more clothes (or add one or two towels). Close the door, and select the separate "Spin" program to try again.
F15-F18	Drying abnormality (applicable to models with drying function)	Turn the appliance off and then turn it on. If the fault still exists, please contact a service technician.

SERVICING

Before calling maintenance personnel

When you contact the service center, please first state your device model.

Information such as model number, code/ID, model type, and serial number are displayed on the nameplate of the device.

 In case of defects, only use spare parts approved by the authorized manufacturer.

 Repairs or any warranty claims resulting from incorrect connection or use of the device are not covered by the warranty. In this case, the maintenance costs shall be borne by the user.

USAGE RECOMMENDATIONS

When washing colored clothes for the first time, separate them by color.

When washing heavily soiled clothes, load fewer clothes each time and use more powder detergent or select the prewash function (if available). Before starting the wash, apply a special stain remover to stubborn stains. Refer to "RECOMMENDATIONS FOR SPECIFIC STAIN REMOVAL".

If you frequently wash clothes with cold water and liquid detergent, the appliance may develop bacteria, resulting in unpleasant odors. We recommend running the "Drum Clean" (or other high-temperature) program periodically to clean the drum.

Avoid washing very small loads to prevent energy waste and poor cleaning results. Shake out clothes that are folded or tangled together before putting them into the drum.

Use detergents specifically designed for machine washing.

If the water hardness exceeds 14°dH, use a water softener. Damage to the heater caused by improper use of water softeners is not covered by the warranty. Consult your local water supplier for water hardness information.

The use of chlorine-containing bleach is not recommended, as it may damage the heater.

If using descaling agents, bleaches, or colorants, ensure they are suitable for this washing machine.

Do not use solvents or similar chemicals (such as paint thinner, turpentine, gasoline, etc.).

Do not put hardened powder detergent into the detergent dispenser, as this may clog the internal hoses of the appliance.

Powder or liquid detergents should be added according to the manufacturer's instructions, the wash temperature, and the selected washing program.

When using thick liquid fabric care products, it is recommended to dilute them with water to prevent clogging the detergent drawer drainage outlet.

Liquid detergents are suitable for washing programs without a prewash cycle.

Be careful not to confuse detergent and softener.

The higher the spin speed, the less moisture remains in the clothes. Therefore, using an appliance with a drying function is more economical and efficient for drying clothes.

RECOMMENDATIONS FOR SPECIFIC STAIN REMOVAL

Before using specialty stain removers, try natural, environmentally friendly methods to remove lighter, stubborn stains. It is easier to remove stains if you treat them promptly!

Please wash with cold water (warm water) according to the following stain removal methods. Do not use hot water!

Stain type	Stain removal method
Mud	If the stain is dried mud, first scrape it off the garment, then put it into the machine for washing. For stubborn stains, soak the garment first in an enzyme-based stain remover before washing. For less stubborn stains, pre-treat the garment with liquid or powder detergent manually before washing.
Antiperspirant	Before placing the garment in the machine for washing, apply liquid detergent directly to the stains. For stubborn stains, use a stain remover for treatment. or wash with an oxygen bleach.
Tea	Soak or wash the garment in cold water. Add the stain remover if necessary.
Chocolate	Soak or wash the garment in warm soapy water, then apply lemon juice and rinse.
Ink	Before starting the wash, apply a stain remover to stains. You may also use the denatured alcohol, turn the garment inside out and place a tissue paper under the stain, apply alcohol from the back side of the garment, then wash the garment thoroughly after treatment.
Marker pen writing	Dilute some starch with water, then apply it to the stain. After it dries, brush it off with a brush; then, put the garment into the machine for washing.
Baby stains (urine, mud, or food)	Soak the stained area in warm water for at least half an hour before putting the garment into the machine for washing. To make it easier to remove stains, an enzyme-based detergent can be added.
Grass	Before putting the garment into the washing machine, soak them in an enzyme-based detergent first. You can also soak it in diluted lemon juice or white vinegar (for about 1 hour) to remove grass stains.
Egg	Soak the garment in an enzyme-based detergent. Soak it in cold water for at least 30 minutes. If the stain is stubborn, you can soak it for several hours. Then, put the garment into the machine for washing.

Stain type	Stain removal method
Coffee	Soak the garment in salt water. For older stains, you can soak it with a mixture of castor oil, ammonia, and alcohol.
Shoe polish	Apply edible oil to the stain, then wash the garment.
Blood	For fresh blood stains, first rinse the garment with cold water, then put it into the machine for washing. For dried blood stains, soak the garment in an enzyme-based detergent. Then, put the garment into the machine for washing. If the stain remains, consider using a bleach product suitable for the fabric type.
Glue or chewing gum	Put the garment in a bag, then place it in the refrigerator until the stains harden. Scrape it off with a dull knife. Dilute the stain with a prewash stain remover and wash thoroughly. Finally, put the garment into the machine for washing.
Makeup	Use a stain remover to pre-wash, then put the garment into the machine for washing.
Butter	Before putting the garment in the washing machine, apply a stain remover to the stains. Then wash with hot water (temperature permitted by the garment).
Milk	Soak the garment in an enzyme-based detergent. Soak the garment for at least 30 minutes. If the stain is stubborn, you can soak it for several hours. Then, put the garment into the machine for washing.
Juice	Apply salt water to the stains. Leave it for a short while, then wash. Alternatively, before putting the garment in the washing machine, apply baking soda, white vinegar, or lemon juice to the stains. For old stains, apply castor oil to the stains, and rinse with cold water after 20 minutes. Finally, put the garment into the machine for washing.
Wine	Soak the garment in cold water for at least 30 minutes. Use the detergent at the same time. Then, put the garment into the machine for washing.
Wax	Put the garment in the refrigerator until the wax stains harden. Then scrape it off. Place a piece of paper towel over the stain, then iron on top until the paper towel absorbs the remaining wax.
Sweat	Before placing the garment in the machine for washing, apply liquid detergent directly to the stain.
Chewing gum	Put the garment in the refrigerator until the chewing gum harden, then scrape it off. Then, put the garment into the machine for washing.

DISPOSAL



The packaging is made of environmentally friendly materials and can be recycled, reused, processed, or destroyed without causing harm to the environment. For this purpose, the packaging materials are marked with appropriate labels.



This icon on the product or its packaging indicates that this product cannot be disposed of as household waste. Please dispose of this product at a collection point for the recycling of electrical and electronic equipment.

When the device reaches the end of its life and needs to be scrapped, please remove all power cords, destroy door locks and switches to prevent the doors from locking. This is to avoid the risk of children or small animals becoming trapped inside.

The labeling of the appliance complies with the provisions of the European WEEE Directive.

Ensure this product is handled correctly and avoid inappropriate waste disposal measures for this product, as this helps prevent potential negative impacts on the environment and human health. For more information on product recycling, please contact your local municipal department, your household waste disposal service center, or the store where you purchased the product.

EU Conformity Statement



Hereby, [HISENSE HOME APPLIANCES GROUP CO.,LTD.] declares that the radio equipment type [Washing Machine] is in compliance with Directive 2014/53/EU.

RF Exposure Information

This device has been tested and meets applicable limits for Radio Frequency (RF) exposure.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Power:

Bluetooth	2402 – 2480MHz	8.33dBm
Bluetooth LE	2402 - 2480 MHZ	7.12dBm
WLAN	2412 - 2472 MHZ	18.8dBm
WLAN	5150 - 5350 MHZ	18.95dBm
WLAN	5470 - 5725 MHZ	18.41dBm
WLAN	5745 - 5825 MHZ	12.58dBm

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	BE	EE	HR	IT	CY	LV	LT
	BG	IE	LU	HU	MT	NL	AT
	CZ	EL	PL	PT	RO	SI	SK
	DK	ES	FI	SE	DE	FR	LI
	NO	IS	CH	TR	UK(NI)		

TYPICAL CONSUMPTION TABLE

Program Instructions

1. The Eco 40-60 program is able to clean normally soiled cotton laundry declared to be washable about 40°C to 60°C together in the same cycle, and that this program is used to assess the compliance with the EU ecodesign legislation.
2. The power consumption of the off-mode is 0.49W.
3. The most efficient programs in terms of energy consumption are generally those that perform at lower temperatures and longer duration.
4. Loading the household washing machine up to the capacity indicated by the manufacturer for the respective programs will contribute to energy and water savings.
5. Correct use of detergent, softeners and other additives. Do not apply excessive detergent. This may affect the washing results adversely.
6. Periodic cleaning, including optimal frequency, and limescale prevention and procedure.
7. Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase the higher the noise and the lower the remaining moisture content.
8. The product information and QR code are reflected in the energy consumption label the product registration information can be obtained by scanning the QR code.
9. The information of standard programs.

Program	Selected Temperature (°C)	Rated Capacity (kg)	Maximum temperature in drum (°C)	Program duration (h:min)	Energy consumption (kWh/cycle)	Water consumption (litres/cycle)	Remaining moisture content (%)	Maximum speed reached (rpm)
Eco 40-60 full load	-	12.0	29	3:59	0.630	66.0	53.90	1310
Eco 40-60 half load	-	6.0	26	3:00	0.395	46.0	53.90	1400
Eco 40-60 1/4 load	-	3.0	23	2:58	0.170	33.0	53.90	1400
Cotton	20	12.0	20	2:18	0.380	145.0	55.00	1400
Cotton	60	12.0	56	3:58	2.500	145.0	55.00	1400
Synthetics	40	6.0	40	2:48	1.250	115.0	35.00	1400
Quick 15'	20	2.0	20	0:15	0.065	35.0	75.00	800

The values given for programs other than the Eco 40-60 program are indicative only.



Maximum or nominal load applies to laundry prepared pursuant to the IEC 60456 standard.



Due to deviations in terms of type and amount of laundry, spinning, power supply oscillation, and environment temperature and humidity, the program duration and power consumption values measured at the end user may differ from the ones stated in the table.

We reserve the right to any changes and errors in the instructions for use.

