



Bluetooth Speaker with Wireless Charging Instruction Manual

WJ-202
8994778



Contents

Page Contents

1. Safety Information	
Warning	2
Introduction	3
2. Getting to Know your speaker/charger	
Controls & features	3
3. Getting Started	
Charging your speaker	4
Bluetooth connection	4
Bluetooth play operation	4
AUX IN connection	5
AUX IN operation	5
Wireless charging	5
Wireless charging problems	5
4. Other Information	
Specifications	6
Declaration of conformity	6
Disclaimer	7
Technical support	7 / 8

Warnings

Warning

1. No naked flame sources, such as lighted candles, should be placed on the speaker.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The mains adaptor is used as the disconnect device and must be easily reached to unplug.
4. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
5. Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed on the speaker.
6. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
7. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the units. To clean, wipe with clean soft cloth it and a mild detergent solution.
8. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
9. Do not disassemble or modify the speaker - apart from the stylus which can be replaced, there are no other user serviceable parts.
10. If the speaker is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
11. Batteries shall not be exposed to excessive heat or direct sunlight, fire or the like.
12. Attention should be drawn to the environmental aspects of battery disposal.
13. Do not dispose this product with household waste at the end of its life cycle; hand it over to a collection center for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority or recycling advice.

Need technical support? Call our experts on 0345 604 0105 or go online at argos.co.uk/help/contact-us

Disposal of your old appliance or battery:

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive.
2. All electrical and electronic products including batteries should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.



Box Contents and Introduction

Box Contents

1x WJ-202 speaker, 1x 1m USB type C charging cable & 1x 50cm AUX IN cable

Introduction

 
The WJ-202 is a Bluetooth speaker with wireless charging designed around your phone.

Not only does it play music for up to 18 hours, it also has a built-in wireless charger to keep your phone powered up.

Getting to know your speaker/charger

Before you get started please read the warning information on pages 2 .


Top - Control Panel

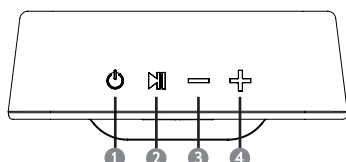

Buttons

1. Power On/Off
2. Play/Pause
3. Reduce volume/ Previous track
4. Increase volume/ Next track

 
Front - Wireless Charging & LEDs

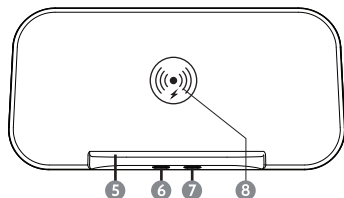

Features

5. Phone stand
6. Wireless Charging LED
7. Power/Mode LED
8. Centre of wireless charging area

 Back - Connections

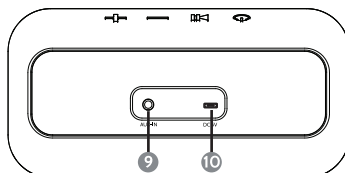

Connections

9. 3.5mm AUX IN socket
10. DC USB type C power socket

Need technical support? Call our experts on 0345 604 0105 or go online at [argos.co.uk/help/contact-us](https://www.argos.co.uk/help/contact-us)

Getting Started

Charging your WJ-202 speaker

Your WJ-202 speaker has a built-in non user-replaceable Lithium battery. For best results, the first time you use the WJ-202, let it charge for 4-5 hours until fully charged.

1. Connect the USB Type C cable supplied to the WJ-202's Speaker's USB Type C socket (10) and to a powered USB port on a USB charger or computer.
2. The Power/Mode LED (7) will be lit a constant Green while the battery is charging and will also flash Blue and Red while in Bluetooth pairing mode. The Green LED will switch off when the battery is charged or the charging cable is disconnected.
3. For mobile use disconnect the USB cable when the battery is fully charged, for wireless charging leave connected.

Please Note:

The WJ-202 will charge when connected to a 1A, 5V USB output but will charge much faster and support up to 10W wireless charging if connected to a 9V USB charger.

Bluetooth® connecting & disconnecting

1. Long press the  (1) power button to switch on your WJ-202. You will hear a "power on" message and the left hand LED (6) will flash Green once.
2. You will next hear "Bluetooth mode" and then "pairing" messages, the Power/ Mode LED (7) will start flashing Blue and red.
3. Place the device you want to pair with your WJ-202 within 1m of it, enter your device's Bluetooth menu and select "Acoustic Solutions WJ-202" in the device list. When your WJ-202 and device are paired, the Power/Mode LED (7) will stop fast flashing and you will hear the message "connected" and the Power/Mode LED (7) will now flash Blue twice at 5 second intervals. Once paired with a device the WJ-202 will reconnect automatically when switched on if the paired device is within range.

Note: This can only be paired with one Bluetooth device at one time.

Bluetooth® play operation

1. Short press  (4/3) to increase or reduce the volume level.
2. Long press  (4) to play the next track or long press  (3) to select the previous track.
3. Press  (2) to play or pause the track.

During Bluetooth playback the Bluetooth LED (7) will be lit constantly Blue.

Please Note: Your WJ-202 will notify you if you receive a call while it is connected to your phone but does not have Handsfree capability. Please answer your phone normally when it is connected to the WJ-202.

Power Saving

If there is no Bluetooth audio input for 5 minutes your WJ-202 speaker will automatically power off.

Need technical support? Call our experts on 0345 604 0105 or go online at argos.co.uk/help/contact-us

AUX IN connection and operation

For audio sources without Bluetooth capability you can connect via the 3.5mm AUX IN socket (9) on the back of the WJ-202.

1. Use the 3.5mm audio lead supplied to connect an audio source to the AUX IN socket (9). On connection you will hear an audio message, "AUX mode " and the Power/Mode LED (7) will be lit a constant Red.
2. Select and play tracks using the controls on your audio source .
3. Short press **+**/**-** (4/3) to increase or reduce the volume level. Press **▶||** (2) to mute the sound (the track will continue to play).

 
When the aux lead is disconnected the WJ-202 will revert to Bluetooth mode.

Wireless charging

With Qi enabled wireless charging capability

If you have a phone with wireless charging capability you can use your WJ-202 to charge it.

1. Place your smartphone centrally on the phone stand (5) as shown beside.
2. The battery charge status can be seen on the display of your phone and the wireless charging LED (6) will be lit a constant Green during wireless charging and switch off when charging is complete.

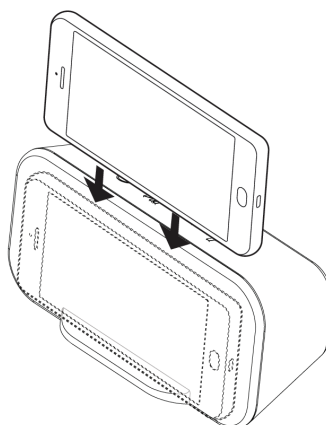

Please Note: 1. You can still charge your phone when WJ-202 is switched off, as long as the WJ-202 battery is charged or there is a USB power connection.

2. During wireless charging (with the USB cable connected) , the input power can only support wireless charging and cannot charge the speaker battery at the same time. Battery charge level will drop if the speaker is used during wireless charging. If the WJ-202 battery level is low you will need to stop wireless charging and give the WJ-202 battery time to recharge.
3. If the USB cable is unplugged during wireless charging, wireless charging will stop for 8 seconds while the electric circuit switches from using mains to using the built-in battery.

If problems occur when charging or if charging does not start

- Remove your smartphone from its case if the thickness of the case exceeds 5mm or if it has a metal composition .
- The optimum charging position for phones with wireless charging function can vary by brand/ model some phones may need to be placed slightly off centre. The charging time varies depending on the charging capacity of the battery and its current residual capacity.
- The components may heat up during the charging process. They will slowly cool down again after the charging process.

Troubleshooting

Q1 There is no power.

A1 Make sure your audio device is charged.

A2 Ensure the device is switched on correctly.

Q2 There is no sound being emitted.

A1 Adjust volume on your Bluetooth device as well as on the speaker for optimum volume and sound quality.

A2 Make sure that your Bluetooth device is in effective range.

A3 Ensure that the Bluetooth device is paired.

A4 Make sure you have selected the correct audio source.

Q3 No response from the speaker.

A1 Try switching the speaker off and on if it doesn't automatically reconnect. Use the Bluetooth menu on your device to reconnect to the speaker.

Specifications

Unit Dimension (Approx.)	W162 x D78 x H80 mm	
Unit Weight (Approx.)	0.35 kg	
Bluetooth	Specification	V5.0 + EDR
	Supported Profile	A2DP, AVRCP, HSP
	Connection Distance	Max. 10m
	Operating frequency	2.402G to 2.480G
Bluetooth pairing name	Acoustic Solutions WJ-202	
Built-in Battery	Li-ion 4000 mAh	
	Playing time : 18 hours (at 50% of volume setting)	
Power Source Input	USB Type C socket on the back of the speaker	
	DC5V 2A (Optimal 5W) / DC9V 2A (Optimal 10W)	
Signal-to-noise ratio	55 dB	
Frequency response	20 Hz-20 KHz	
Wireless Charging Output	5W, 10W (with 9V DC USB Quick Charger connected, not included)	
Audio	Audio In	3.5mm AUX IN socket
	Output Power	3W x 2 (RMS)
Operating Temperature	0 to 40°C	

This product is intended for use within UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU, Radio Equipment Regulation 2017.

Declaration of Conformity

Hereby, Argos Ltd. declares that this WJ-202 Bluetooth Speaker with Wireless Charging is in compliance with essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU, Radio Equipment Regulation 2017. The complete declaration of conformity can be obtained by contacting <https://argos.co.uk/help/contact-us>

Need technical support? Call our experts on 0345 604 0105 or go online at argos.co.uk/help/contact-us

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Product support

Help is always at hand.

Help and assistance

If you require any technical guidance or find that your Acoustics Solution Wireless Bluetooth Speaker is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at argos.co.uk/help/contact-us

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Product support

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt.

Local call rates applies* **Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.** *Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details. For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand.



Your Acoustic Solutions Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Acoustic Solutions disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Need technical support? Call our experts on 0345 604 0105 or go online at argos.co.uk/help/contact-us

Produced in China for Acoustic Solutions
Argos Limited, London, EC1M 6HA, UK. Argos (N.I.) Ltd, Forestside Shopping
Centre, Upper Galwally, Belfast, BT8 6FX, UK.
[argos.co.uk/help/contact-us](https://www.argos.co.uk/help/contact-us)



Waste electrical and electronic products
should not be disposed of with household
waste. Please recycle where facilities exist.
Check with your Local Authority for
recycling advice.

