

设计 DESIGN	林芳芳 2018.05.20	图纸名称 PART NAME BUSH MMD4S (CE-BCD482WE-ST) 说明书				图号/物料编码 PART NO. 16131000A30062	
校对 CO. BY	周军					材料 MATERIAL 80g双胶纸	
标准化 STANDARD							
业务 seller	李士梅	图样标记 REL	版本号 REV. NO.	重量(g) WEIGHT	比例 scale	美的冰箱事业部 MIDEA REFRIGERATION DIVISION	
批准 AUTHORIZE			1		1:1		
		共页 TOTAL SHEETS		第页 NO. OF SHEETS			

技术要求

1. 尺寸: **32K**
2. 印刷颜色: **单色** (灰度印刷)
3. 制件必须符合QMB-J53.005 产品说明书及其它类似印刷件技术规范;
4. 除客户特别要求外均参照美的冰箱最新版相关企业标准执行;

标记 MARKER	变更内容	修改日期	签名
1	自订单M0-XXXXX开始更新整体版面	2018.6.6	林芳芳

BUSH

Instruction Manual

MMD4S



You'll soon be enjoying your new refrigerator.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started

Help and Guidance

We're here to help you get the most from your refrigerator. Should you require any guidance, a simple solution can often be found online at.

www.bush-support.com


If you still require further assistance, call one of our experts on 0345 257 7271.

Contents

1	Safety information		
	Safety information	6	
2	Getting to know your refrigerator		
	Ready? Let's begin...	11	
	Parts	12	
3	Installing your refrigerator		
	Transportation	15	
	Installation	15	
	Electrical Connection	17	
4	Using your refrigerator		
	Before first use	20	
	Using your appliance	20	
	Useful information	22	
5	Care and Maintenance		
	General	25	
	Power failure	25	
	Moving your appliance	25	
	Disassembly / assembly the door	26	
	Technical Specifications	28	
	Disposal information	28	
6	Product support		
	Trouble Shooting	31	
	Help and assistance	32	
	Guarantee	33	

Safety information

1

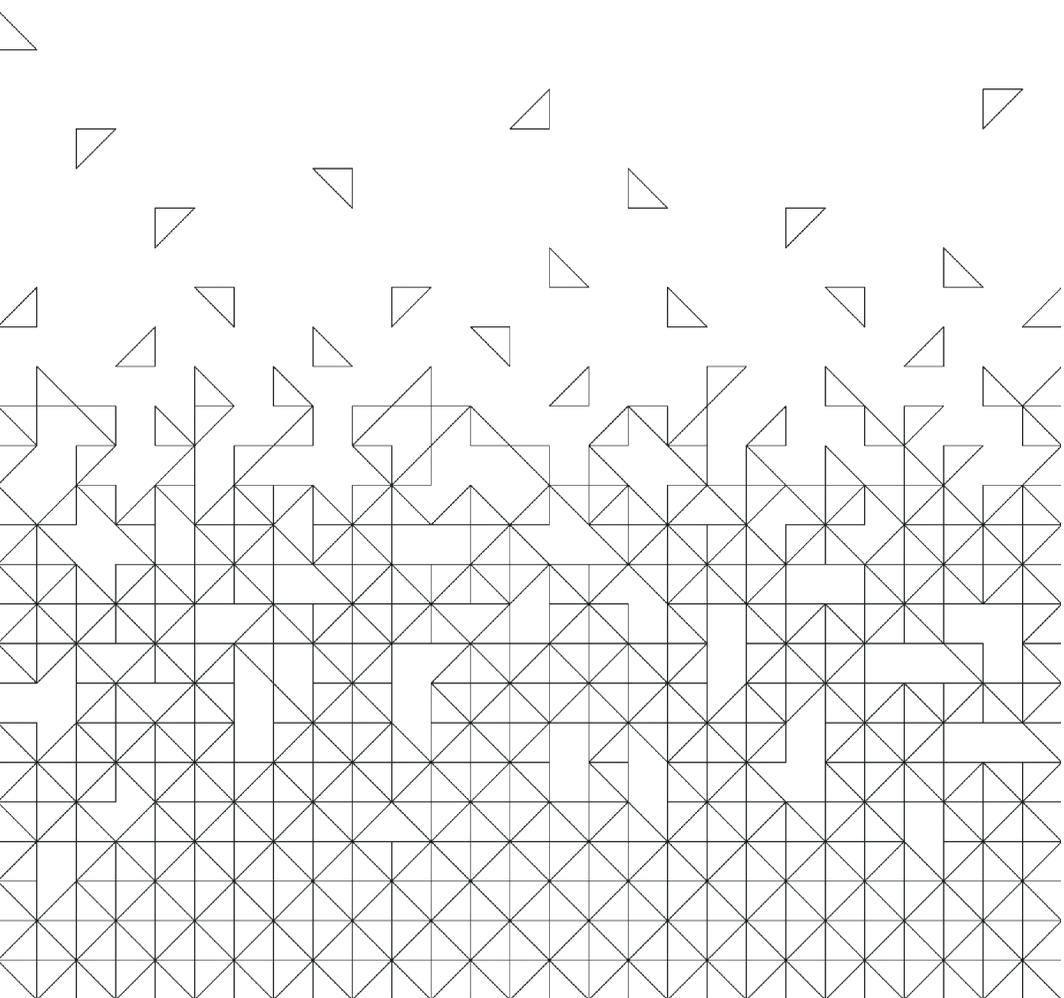



Safety information

Important-Please read these instructions fully before installing or operating

Before use

The installation of this appliance is best carried out by 2 people.

- Dispose of all packaging carefully and responsibly.
- The appliance is designed for **indoor use only** and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for house hold use. **Do not** use the appliance for industrial and commercial use, or any other purpose.
- The appliance **MUST** be positioned on a firm level base.
- **Do not** splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- Leave the appliance in its intended place of installation and in its correct orientation for at least 4 hours before switching on to allow the cooling system to settle before first use or after any transportation.
- Your appliance is an environmental friendly product and it contains non CFC/HFC gas substances in the cooling system (Called R600a) and in the insulation (Called cyclopentane) which are potentially flammable if exposed to fire. Therefore, take care not to damage, the cooling circuit/pipes of the appliance in transportation and in use. In case of damage do not expose the appliance to fire,



Safety information

Important-Please read these instructions fully before installing or operating

potential ignition source and immediately ventilate the room where the appliance is situated.

- **Do not** sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- **Do not** allow children to play with the appliance to avoid the risk of entrapment and suffocation.
- Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.

During use

- This appliance is not intended for use by persons (including

children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- **Do not** use mechanical,



Safety information

Important-Please read these instructions fully before installing or operating


electrical or chemical way to speed up the defrost process not recommended by the manufacturer.

- **Do not** use or place other electrical products inside the appliance not recommended by the manufacturer.
- **Do not** store liquids in glass containers in the freezer compartment as these may shatter.
- **Do not** store flammable materials such as alcohol, gasoline, LP gas or glue etc in the appliance.
- In case there is an inflammable gas leaking, open the window for air circulation and do not pull out the plug or turn the temperature knob. **Do not** touch the appliance until the valve of gas is turned off. Otherwise, sparks may happen.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Do not** attempt to repair the appliance yourself. Contact the Customer Helpline:0345 257 7271.



Getting to know your refrigerator

2

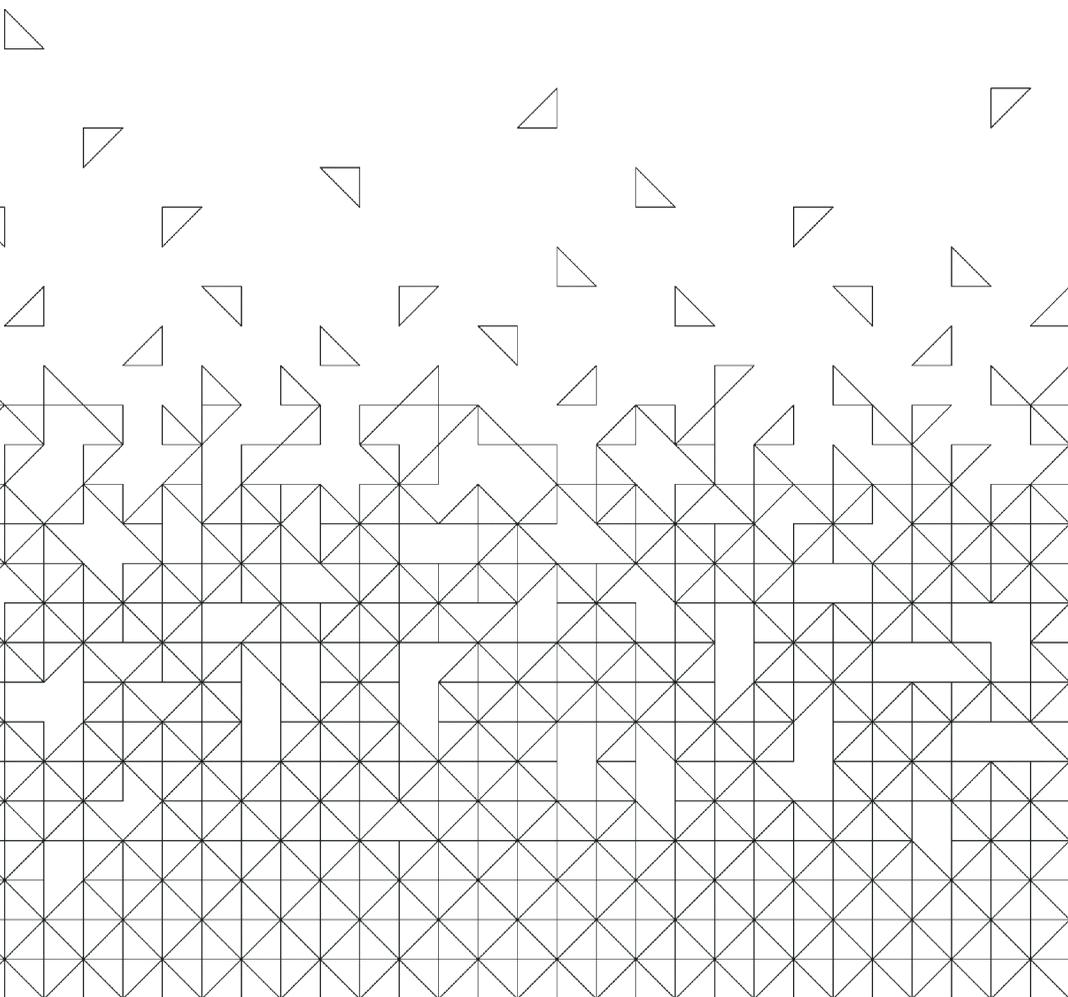

Getting to know your refrigerator

You'll be up and running in no time

Ready? Let's begin...


Please read these instructions carefully. They contain important information which will help you get the best from your refrigerator and ensure safe and correct installation and operation

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Getting to know your refrigerator

You'll be up and running in no time

Parts

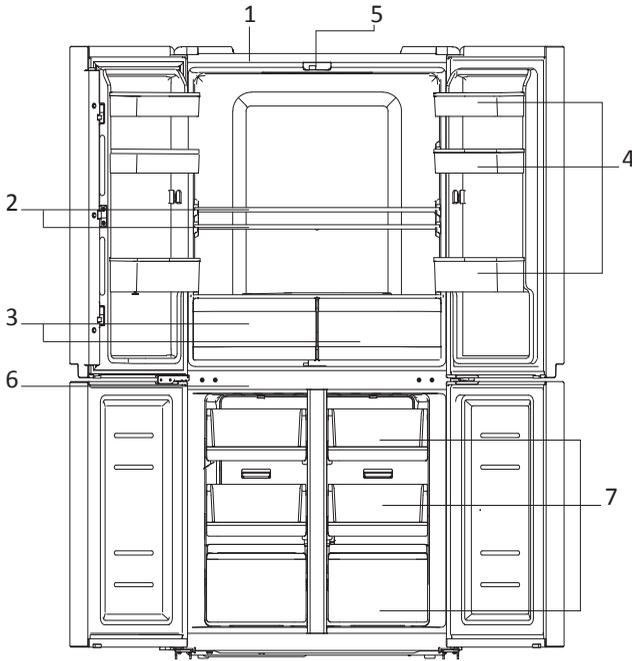

- 1. Fridge
- 2. Glass shelf
- 3. Fruits and vegetables box
- 4. Doortray

- 5. LED light
- 6. Freezer
- 7. Drawer

Accessories included




Instructions x 1




Ice-cube tray x 1



Egg tray x 1

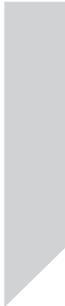

Installing your refrigerator **3**

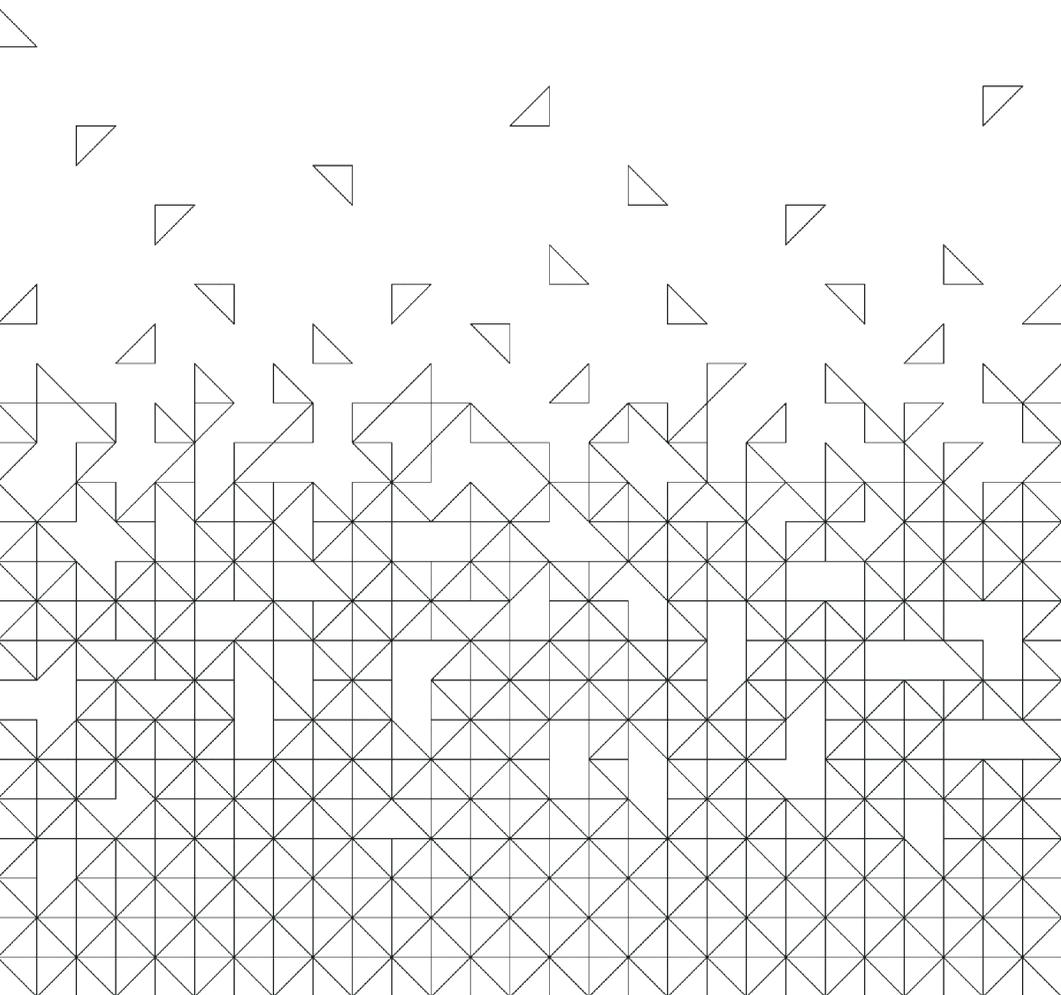

Installing your refrigerator

Bringing it all together

Transportation



Caution: 2 people are required to unpack and handle the appliance, it is recommended that gloves are worn.

- The appliance should be transported only in an upright position. Do not tilt the appliance greater than 45 degrees. The packaging as supplied must be intact during transportation.
- After transporting the appliance, leave it for at least 4 hours before switching on to allow the cooling system to settle. Failure to comply could result in damage to the appliance.
- Do not move the appliance by pulling the door or handle as it may damage your flooring and wall coverings etc.
- Empty any water in the drain tray before moving
- Make sure that the defrost water pipe at the back of the product is fixed to the plastic evaporating pan on the top of the compressor, to avoid defrost water spillage on the floor.
- Ensure the electrical cable is not caught under the appliance during and after moving
- Carefully remove all packaging materials including the foam base, dispose of correctly

Installation

- Ensure sufficient spacing is provided for the appliance to be installed. Leave space on both sides (100cm), back (100cm) and above the appliance (300cm) to ensure proper ventilation and door opening. See fig. 1&2
- Do not place the appliance near a heat source or in direct sunlight
- Do not put any heavy objects on top of the appliance. It will damage the appliance.
- Do not install the appliance in a moist or wet place. It should be installed on a smooth surface to avoid excessive vibration and noise.
- Move the appliance to the desired location and adjust the two front levelling feet to fix the appliance.

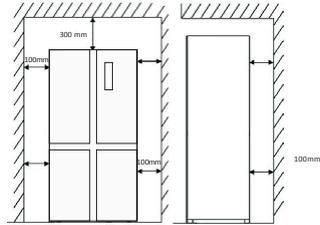


Fig. 1

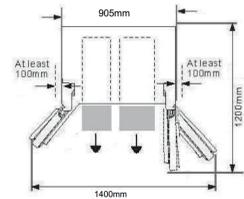


Fig. 2

Installing your refrigerator

Bringing it all together

- Try some i.e. Open/close door to confirm the appliance will not move under normal .If the appliance moves, adjust the leveling feet again it is fixed and do not move (See fig.3).
- If you need to relocate the appliance, please ensure the leveling feet on the front side have been screwed upwards before you move the appliance.
- Each appliance has a climate class (shown on the plate) that indicates the oper temperature range of the appliance. The appliance may not work properly if it is for a long period at a temperature outside the specified range.
- Refer to “Care and Maintenance” to prepare your appliance for use.

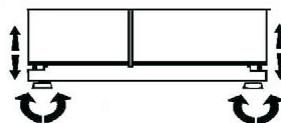


Fig.3

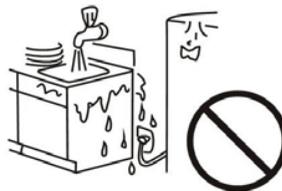


Fig.4

Climate Class	Amb.T.(C)	Amb.T.(F)
SN	10~32 C	50~90 F
N	16~32 C	51~90 F
ST	16~38 C	61~100 F
T	16~43 C	61~110 F

Installing your refrigerator

Bringing it all together

Electrical connection



Any electrical work that is required to install this appliance **MUST** be carried out by a qualified electrician.



Warning: THIS APPLIANCE MUST BE EARTHED

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house is in accordance with the related local regulations.
- Do not damage the refrigerant circuit.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Ensure the power socket is suitable for the maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plugs supplied with this unit check with a qualified electrician for replacement.
- The use of adapters, multiple connectors or extension cables are not recommended.
- The appliance must be connected to a 220-240 volt 50Hz AC supply by means of a three pin socket, suitably earthed and protected by a 13 amp fuse.
- Should the fuse need to be replaced, a 13 amp fuse approved to BS1362 must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

Plug replacement (UK & Ireland only)

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue Neutral 'N'

Brown Live 'L'

Green & Yellow Earth 'E'


As the colour of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The green & yellow wire must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol.


The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

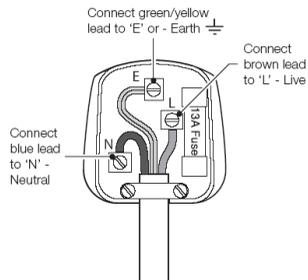

Using your refrigerator 4

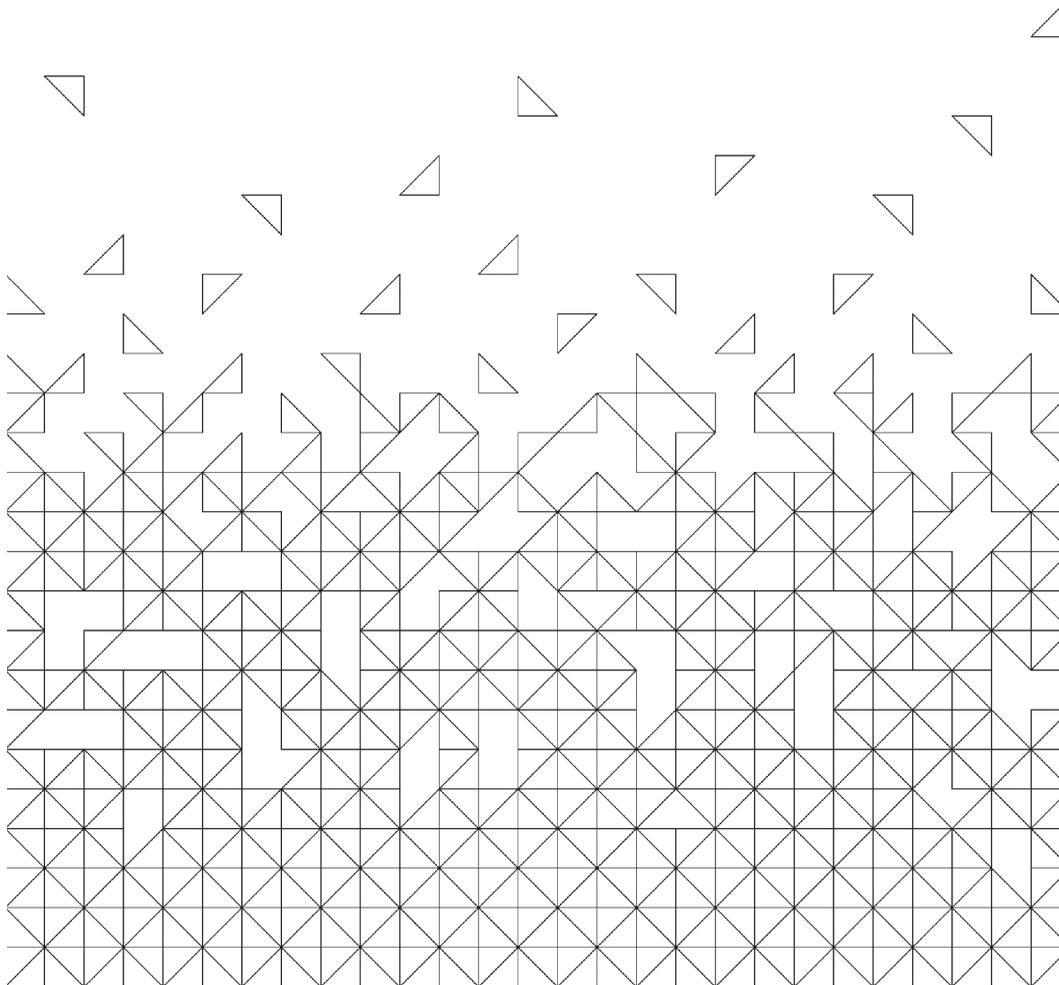

Using your refrigerator

Getting the most from your appliance

Final checks before operating the appliance

1. Good air circulation around the appliance .
2. The feet have been adjusted for perfect levelling.
3. Clean the compartment per recommendation in section “Care and Maintenance”.
4. Plug in the appliance and the interior light will come on when the door is open.



The compressor starts up and in operation may produce some background noise. It is normal, this is not a defect.


Using your appliance

Display screen:

- 1.refrigerating icon
- 2.OFF icon
- 3.temperature display area icon
- 4.super refrigerating icon
5. freezing icon
- 6.lock/unlock
- 7.vacation icon
- 8.super freezing icon

Operation button:

- A. refrigerating button
- B. freezing button
- C. mode button
- D. lock/unlock button

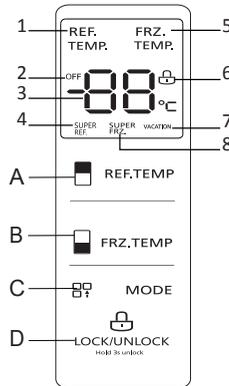

Operation instructions

1) Safety lock function

In the unlocked state, continue to press the lock button  for 3 seconds, enter the lock state, The logo  lights up and buzzer sounds, it means the display panel is locked, at this time, button operation cannot be implemented;

In the locked state, continue to press the lock button  for 3seconds, enter the unlocked state, The logo  go out and buzzer sounds, it means the display panel is unlocked, at this time, button operation can be implemented;

2) Temperature adjustment

Temperature setting of refrigerating chamber

Press temperature adjusting button of the refrigerating chamber  to change the setting temperature of refrigerating chamber, and then each time a press of temperature adjusting button of the refrigerating chamber, the temperature will be reduced 1 °C; The temperature setting range for refrigerating chamber is 2~8 °C. When the temperature is 2 °C, press the button again, and the temperature of refrigerating chamber will be set at 8 °C, and it circulates accordingly.

Temperature setting of freezing chamber

Press temperature adjusting button of the freezing chamber  to change the setting temperature of freezing chamber and then each time a press of temperature adjusting button of the freezing chamber, the temperature will be reduced 1 °C; The temperature setting range for freezing chamber is -24 °C ~ -16 °C. When the temperature is -24 °C, press the button again, and the temperature of freezing chamber will be set at -16 °C, and it circulates again and again.

Using your refrigerator

Getting the most from your appliance

First Use

- 1 Allow to stand for a minimum of 4 hours before plugging in to the mains

Mode function/setting button

Program mode	Display	Freeze r temperature	Fridge temperature	Remarks
Normal mode	/	- 24 °C - - 16 °C	2 °C - 8 °C	For normal use, both freeze & fridge temperature can be adjusted.
Vacation mode	VACATION	- 18 °C	OFF	Power save
Super refrigerating mode	SUPER REF.	unchanged	2 °C	Return to previous setting after 2.5 hours
Super freezing mode	SUPER FRZ.	- 24 °C	Unchanged	Return to previous setting after 6hours /48hours The temperature can be adjusted by customer

3) Display

The first time the power was turn on for the refrigerator, the display screen will total display for 3 seconds. Meanwhile the starting up bell rings and then the screen enters the normal display of the operation. The first time for using the refrigerator, the default temperature of refrigerating chamber and freezing chamber is 5 °C / -18 °C respectively.

When the error occurs, the display shows the error code (see next page); during normal operation, the display shows the set temperature of the refrigerating chamber or freezing chamber. Under normal circumstances, if there is no operation on display panel or door opening action within 30s, then the display shows the lock state , and the display goes out after the lock state  continued for 30s.

Hints and Tips

Storage of Fresh food

- Food should always be covered tightly with foil, wrapped in film, placed in an airtight bag or container. This will prevent it from dehydrating and prevent strong smells contaminating other food.
- Do not allow raw meat to come into contact with cooked foods.
- Fruit and vegetables should be stored in the bottom box with the glass cover in place.
- Space should be left between food items to allow free movement of cold air.
- Cool hot food down to room temperature before storing.

Storage of Frozen food

- Fresh foods such as fish and meat can be frozen to maintain freshness, and keep the nutrients in the food.
- Wrap food to be frozen or place it in an airtight container.
- Do not allow already frozen food into direct contact with food to be frozen.
- Ready frozen food should be placed it in freezer as soon as possible.
- Do not re-freeze food once it has thawed.

Using your refrigerator

Getting the most from your appliance

Useful information

The following guidelines and recommendations are suggested to obtain the best results and storage hygiene.

- Frequent door openings can cause internal temperature to rise so the door should be closed as soon as possible after use.
- For hygiene reasons, it is always a good practise to pack, wrap and cover the food before storing.
- Use a polythene bag to store raw meat and place on the lowest shelf. Avoid contact with cooked food to prevent contamination. For safety reasons, store raw meat for two to three days only.
- Cooked dishes must be stored in airtight covered containers.
- Food and beverages should cool to room temperature before storing.
- Most vegetables should be blanched and chilled before freezing.
- Bottles can be placed in the door section.
- Some fruits and vegetables like pineapples, melons, tomatoes, and cucumbers should be wrapped in polythene bags.
- Do not leave frozen food at room temperature to thaw. You could defrost the food by putting it in the fridge to thaw slowly. Make sure you avoid defrosting food dripping food juices onto other food.

Energy saving tips

- Place your fridge away from direct sunlight, your oven or any other heat sources. Allow 20 cm clear space on both sides and above, and at least 5 cm behind.
- Cover all food stored, and arrange it so that cold air can circulate freely.
- Higher cold setting will use more energy. Do not set to maximum cold if it is not necessary.
- Cool the hot/warm food to room temperature before putting them into your fridge.
- Frequently opening and closing the door

would cause the internal temperature to rise and it will consume more energy.

- Close the door(s) properly, and make sure the seals and hinges are airtight. Check the seals by putting a sheet of paper between the door and the main body of the fridge. If the paper moves, your seals need replacing.
- Defrost regularly if your refrigerator is not a frost-free or cyclic defrost model. Accumulated ice layer should not be more than 5 mm thick.
- The pre-set combination of drawers, baskets and shelves have already been set in the most efficient way for use of this product.

Defrosting


Fridge Compartment

- The fridge compartment defrosts automatically. The defrosting water runs through the drain port to the drain tray at the back of the appliance.
- In the case that some droplets may remain inside the compartment and re-freeze, after the defrosting cycle, this is normal. Do not use pointed or sharp objects, i.e. knives or forks, to remove the droplets which have frozen.
- Check the collection channel to ensure that no food particles have blocked the drain channel.


Freezer Compartment

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food, to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to thaw only the quantity required;

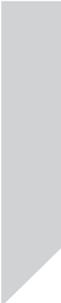

Care and Maintenance 5

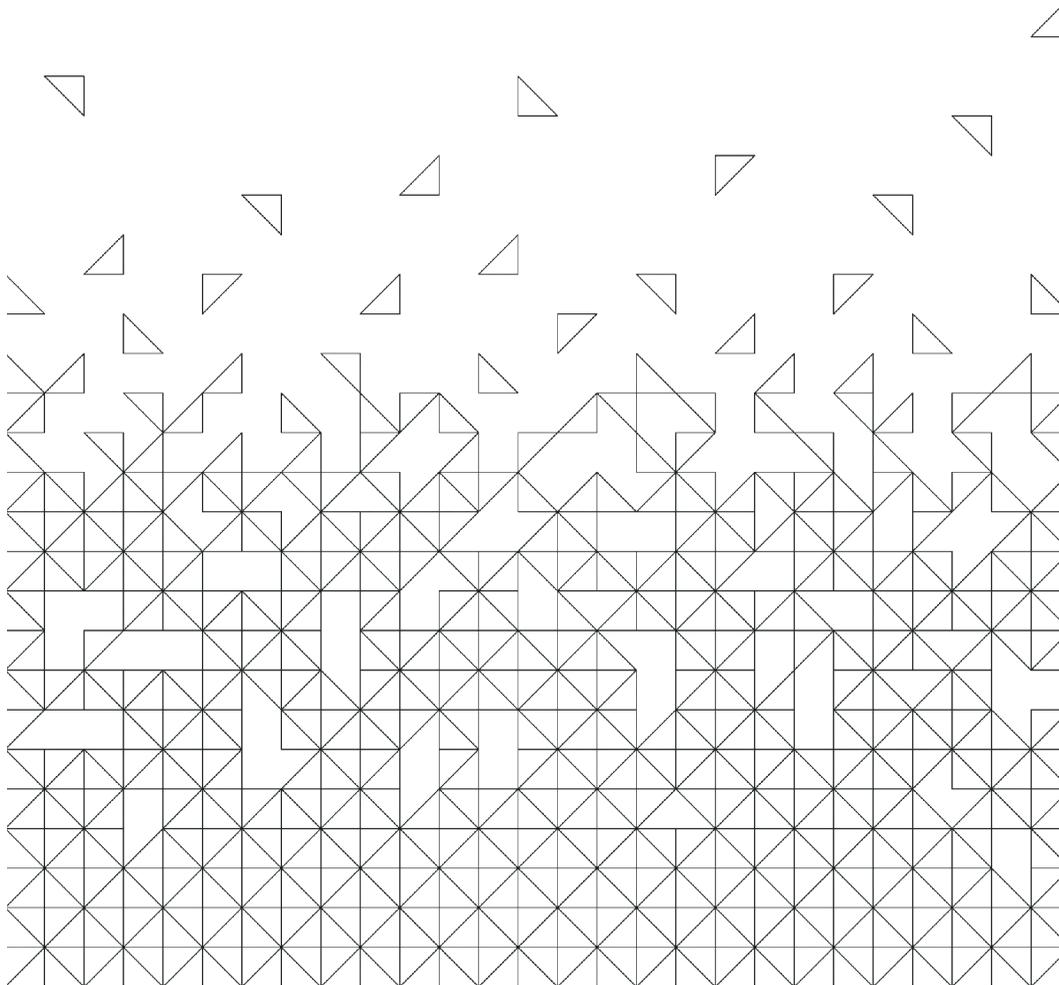

Care and maintenance

Looking after your appliance

General



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.
- Use luke warm water to clean the cabinet of the appliance and wipe it dry.
- Never clean the appliance with flammable fluids. It could cause damage and a fire hazard.
- Clean the exterior of the appliance and door seal with a damp cloth and dry it through.
- Avoid water going into the temperature control box.. Clean with a dry cloth only.
- Clean the condenser (located at the back of the appliance) with a vacuum cleaner. It is suggested to remove the dust every year.
- Shelves are all removable for cleaning purpose.



Important: Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.

Light bulb replacement

This appliance is equipped with an LED light . It can be used for a long time. If the LED light is blown, it must be replaced by a qualified person to avoid any hazard. Contact the service agent at 0345257 7271.

Error code

What to do in case of such failure is happened.

Error code	Possible issue	Solution
E1	Temperature sensor failure of refrigerating chamber	Contact service provider
E2	Temperature sensor failure of freezing chamber	Contact service provider
E4	Failure of defrosting sensor in refrigerating chamber	Contact service provider
E5	Failure of defrosting sensor in in freezing chamber	Contact service provider
E6	Communication error	Contact service provider
E7	Failure of ambient temperature sensor	Contact service provider
EH	Failure of humidity sensor	Contact service provider

Power failure

In case there is a power failure, you should contact the electricity supply company and take the following actions:

If it is less than 24 hours, keep the doors closed. This will allow the stored food to stay cold as long as possible.

If it lasts more than 24 hours, it is advised to empty the freezer compartment and temporarily store the food in a portable freezer or using artificial ice packs. Try to use up the food which is more easily perishable.

Remarks: A full appliance will stay cold longer than a partially filled one. If ice crystals are still visible on the food, it may be frozen again, although flavour and aroma may be affected. If food is found to be in a poor condition, it is best to throw it away.

Short vacation

There is no need to disconnect the appliance from the mains if you will be away for two to three weeks. Use up the perishable food.

Long vacation

Remove all the food if you are away for three weeks or more. Unplug the appliance and leave the doors open to provide air circulation to prevent odour and mould.

Moving your appliance

Moving

Refer to section “Transportation” under “Installation”

Care and maintenance

Looking after your appliance

Disassembly / assembly the door

- In case, there is problem with a door, you can contact the service agent for a replacement or you can replace it by yourself.
- The size of the doors are, 411.5 mm(W)x769.5mm (H) and Fridge 411.5 mm(W)x960.5mm(H).

 Warning: 2 people may be required to re-align the door.

- A Philips screwdriver will be required for this task.
- Put a protective layer on the floor before taking off the door.

To disassemble the door.

1. First, in the state of door close, use the cross screwdriver to remove the 2 pcs screws highlighted by red rings in right picture, then dismantle the hinge cover. Second, use the same method to dismantle hinge cover on the other side.

2. disconnect the wiring connector  , use screwdriver to remove the screw  , lift the right/left top hinges upwards, please take care when dismantle the refrigerator door, in order to cause any damage.

3. uplift the right/left door   from the middle hinge   according to the direction of arrow.

4) use cross screwdriver to remove the screws  , then dismantle the middle hinges  , at last to uplift the right/left freezer doors from bottom hinges.

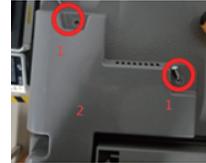


Fig.a

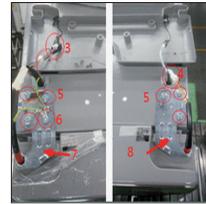


Fig.b



Fig.c




Fig.d

To assemble the door.

1. Put the right/left freezer doors on bottom hinges downwards. Please take care when assemble the doors, avoiding be hurt by door falling down.




2. Insert the axis of right/left middle hinge into the axis hole of freezer door top end cap. Then use cross screwdriver to fix the middle hinge.

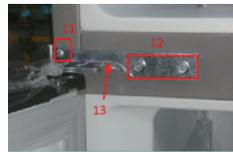

3. Put the right/left refrigerator doors on middle hinge downwards, then close the door, please take care when assemble the door, avoiding be hurt by door falling door occasionally.



4. In the axis of top hinges into the axis hole of refrigerator door top end cap, then connect the wiring connectors and fix the top hinges.

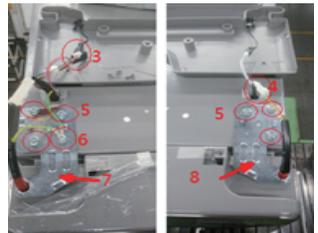

5. Place the top hinge cover on proper position and use screws to fix it.



Care and maintenance

Looking after your appliance

Technical Specifications


Model	MMD4S
Energy efficiency class	A+
Energy consumption KWh/year	398
Net storage volume fresh food (litres)	327
Net storage volume frozen food (litres)	142
Total net storage (litres)	469
Frozen food compartment rating	4star 
Climate class	N/ST/T
Operating noise level dB(A)	42
Minimum Operation Temperature	10 °C

Disposal information




The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

Remember : Old fridges must be disposed of carefully- older models contain CFC gases that are harmful- if in doubt , contact your local council for details on how to dispose of an old fridge.

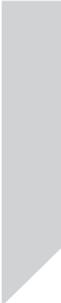

Product support 6

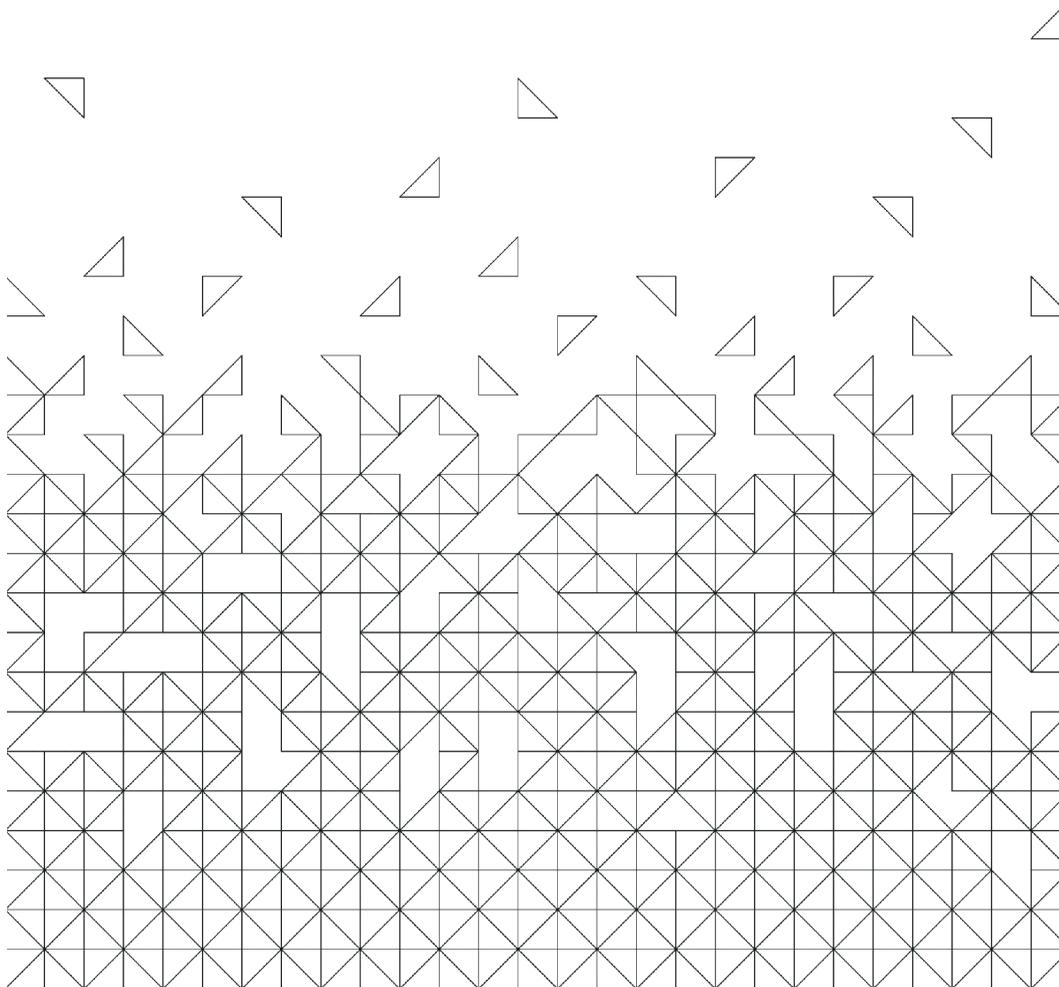

Product support

Help is always at hand

Troubleshooting

If you have a problem with your product, these questions may be able to assist you?

Question- Appliance does not work.

Answer

Appliance is not switched on - Switch on the appliance.

Mains plug is not plugged in or is loose. - Insert mains plug.

Fuse has blown or is defective - Check fuse, replace if necessary.

Socket is defective - Mains malfunctions are to be corrected by an electrician.

Question - Appliance cools too much.

Answer

Temperature is too cold - Change to a warmer setting in front control panel.

Question - The food is too warm.

Answer

Temperature is not properly adjusted - Change to a cooler setting.

Door was open for an extended period - Open the door only as long as necessary.

A large quantity of warm food was placed in the appliance - Change to a cooler setting.

Cool warm food before placing in the refrigerator.

The appliance is near a heat source - Position the refrigerator away from a heat source.

Question- Interior light does not work.

Answer

Light bulb is defective - Replace the LED light part by service agent.

Question- Heavy build up of frost, possibly also on the door seal.

Answer

Door seal is not air tight - Carefully warm the leaking sections of the door seal with a

hair dryer (not hotter than approx 50 degree). At the same time shape the warmed door seal

by hand such that it sits correctly.

Question - Water on the floor or on storage shelves.

Answer

Water drain hole is blocked - Remove food residue or ice from the entrance of the drain hole.

Question - Appliance is making unusual noises

Answers

Appliance is not level - Readjust the front levelling feet.

Appliance is in contact with wall or other objects. - Push appliance away a short distance

A part at the back of the appliance e.g. a tube, is in contact with another appliance part or

wall - Gently bend this part away carefully if necessary

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your refrigerator is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on **0345 257 7271**. To help give us give you a fast and efficient service please have the following information ready.

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purpose, telephone calls to and from customer service centres may be recorded and monitored. Call from Republic of Ireland will attract international call charges.



This appliance complies with the following EEC directives:
2014/35/EEC Low voltage directive
2014/30/EMC directive

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sale service and useful updates.

www.bushregistration.co.uk

FREEPHONE*
0800 597 8548

Lines are open 8am-8pm, 365 days a year. *Call may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage misuse cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product
- This guarantee is in addition to and does not diminish your statutory or legal rights

Important Date Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

BUSH

Contact

www.bush-support.com

Helpline: 0345 257 7271