 


ProBreeze[®]

Instruction Manual

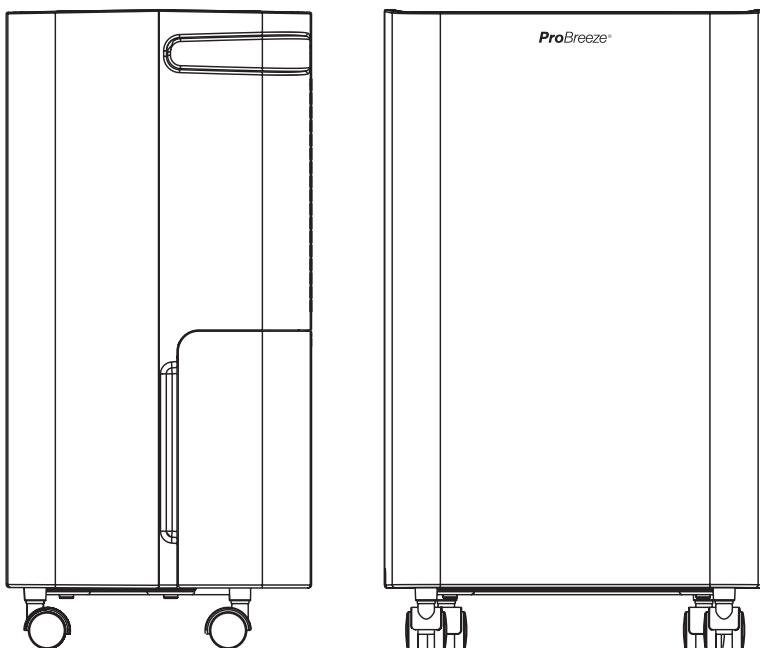

Model PB-D-26

6L Compressor Dehumidifier

**IMPORTANT INSTRUCTIONS
– RETAIN FOR FUTURE USE**

CONTENTS

EN	Safety Instructions.....	Page 3
	Specific Information Regarding R290 Refrigerant Gas.....	Page 5
	Symbols Explained	Page 6
	Specification	Page 6
	Parts	Page 7
	Assembly.....	Page 7
	Operating Instructions.....	Page 7
	Defrosting.....	Page 9
	Setting up Continuous Drainage	Page 9
	Cleaning, Maintenance and Storage.....	Page 10
	Recycling and Disposal	Page 11

ProBreeze®

**6L COMPRESSOR DEHUMIDIFIER
MODEL PB-D-26**

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

 **WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PEOPLE, ALWAYS TURN THE APPLIANCE OFF, UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET AND EMPTY THE WATER TANK BEFORE HANDLING, CLEANING OR SERVICING THE APPLIANCE.**

- Use this dehumidifier only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to person.
- Always unplug the dehumidifier when not in use.
- Keep the dehumidifier out of reach of children and pets.
- Do not leave children alone or unattended in the area where the dehumidifier is in use.
- Children shall not play with the dehumidifier.
- Cleaning and user maintenance shall not be made by children without supervision.
- Dispose of water held by the dehumidifier. This water is not drinkable.
- This dehumidifier can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Never leave the dehumidifier unattended while in use. Always turn the dehumidifier off and disconnected from the power supply when not in use.
- Never place anything on top of the dehumidifier.
- Ensure that the mains supply (including voltage, frequency and power)

- complies with the rating label of the dehumidifier.
- Do not operate the dehumidifier with wet hands.
- Do not use this dehumidifier near water or in the immediate surroundings of a bath, shower or a swimming pool. Never place the dehumidifier where it may fall into a bathtub or other water container.
- Do not allow water or other liquids to run into the interior of the dehumidifier, as this could create a fire and/or electrical hazard.
- This dehumidifier is intended for indoor household use and similar applications. Do not use outdoors.
- The mains cable should not hang down from the surface on which the dehumidifier is placed in order to prevent the dehumidifier from being pulled down.
- To avoid a circuit overload when using this dehumidifier, do not operate another high-wattage dehumidifier on the same electrical circuit.
- Always plug the dehumidifier directly into a wall socket. Avoid using extension leads where possible as they may overheat and cause a risk of fire.
- Do not use this dehumidifier with an external programmer, timer switch or any other device which would switch the dehumidifier on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord. Never move, carry, or hang the dehumidifier by the power cord.
- Do not kink or wrap the power cord and plug around the dehumidifier, as this may cause the insulation to weaken or split, particularly where it enters the dehumidifier.
- Do not operate the dehumidifier with any safety guards removed.
- Do not operate the dehumidifier if there are any signs of damage to the appliance or accessories supplied.
- Do not attempt to repair or adjust any electrical or mechanical elements in the dehumidifier. Doing so may be unsafe and will void your warranty.
- The appliance shall be installed in accordance with national wiring regulations.
- Do not cover the dehumidifier whilst in use.
- When moving the dehumidifier, ensure it is kept in an upright position.
- The dehumidifier must have a minimum 50 cm clearance around all sides.
- Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners or similar.
- Place the dehumidifier on a flat, stable and dry surface and always keep the appliance in an upright position. Operating the appliance in any other position could cause a hazard.

- There may be trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
- Do not place the dehumidifier against a wall or other appliances.
- Do not cover, obstruct or push objects into the vents and opening of the dehumidifier as this may cause an electric shock, fire or damage the dehumidifier.
- Do not operate the dehumidifier without the filter.
- Do not use mechanical devices to accelerate the appliances defrosting process.
- Do not place the continuous drainage hose outside when the temperature falls below 1 °C.
- Do not use the dehumidifier near petrol, paints, flammable gases, ovens, or other heating sources.
- Do not operate the dehumidifier with the water tank removed.
- Ensure the mains cable is fully extended before use and arrange it so that it is not in contact with any part of the dehumidifier.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Never insert fingers or metal objects into the vents and openings of the appliance.
- The unit's circuit board (PCB) is designed with a fuse to provide overcurrent protection. The specifications of the fuse are printed on the circuit board.
- Do not expose the appliance to direct sunlight, heat sources or extreme cold.
- Do not cover the appliance or restrict the air flow of the inlet or exhaust grills whilst in use.

SPECIFIC INFORMATION REGARDING R290 REFRIGERANT GAS



WARNING: THE DEHUMIDIFIER MUST BE INSTALLED, OPERATED AND STORED IN A ROOM WITH A FLOOR AREA LARGER THAN 4M².

- This appliance contains 0.034 kg (34 g) of R290 refrigerant gas.

- R290 is a refrigerant gas that complies with the European directive on the environment.
- Do not puncture any part of the refrigerant circuit.
- Be aware that R290 refrigerant is odourless and does not have the odour normally associated with natural gas and propane tanks.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The dehumidifier must be placed in an area without any continuous sources of ignition such as open flames, gas, or electrical appliances in operation.
- Do not puncture and do not burn the refrigerant circuit.
- If the appliance is installed, operated or stored in a nonventilated area, the room must be designed to prevent the accumulation of refrigerant leaks resulting in a risk of fire or explosion due to ignition of the refrigerant caused by electric heaters, stoves, or other sources of ignition.
- The appliance must be stored in such a way as to prevent mechanical failure.
- Individuals who operate or work on the refrigerant circuit must have the appropriate certification issued by an accredited organisation that ensures competence in handling refrigerants according to a specific evaluation recognised by associations in the industry.
- Maintenance and repairs that require the assistance of other qualified personnel must be performed under the supervision of an individual specified in the use of flammable refrigerants.

SYMBOLS EXPLAINED

 
	For indoor use only.		Please read instruction manual and retain for future use.
	Equipment complies with the applicable UK safety requirements and regulations.		Equipment complies with the applicable EU safety requirements and regulations.

SPECIFICATION

Model:	PB-D-26-UK	Voltage:	220-240 V~
Frequency:	50 Hz	Power:	150 W
Product Dimensions:	256 x 205 x 430 mm	Net Weight:	6.2 kg
Fuse:	250V~, 3.15 A	Gross Weight:	6.8 kg

PARTS

- 1. Control Panel
- 2. Air Inlet
- 3. Continuous Drainage Hole
- 4. Water Tank
- 5. Handle
- 6. Back Housing
- 7. Wheels x 4

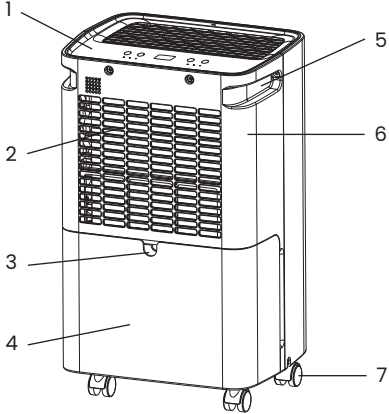


If you find you're missing any parts from your order, please contact our customer care team by emailing help@probreeze.com for fast and friendly help.

These images are for reference only, please refer to your product.

ASSEMBLY

- 1. Remove all parts from the packaging and ensure you have all parts listed above.
- 2. Take the 4 x wheels and clip them into the four holes on the bottom of the unit.
- 3. Your dehumidifier is now ready to use.

 OPERATING INSTRUCTIONS

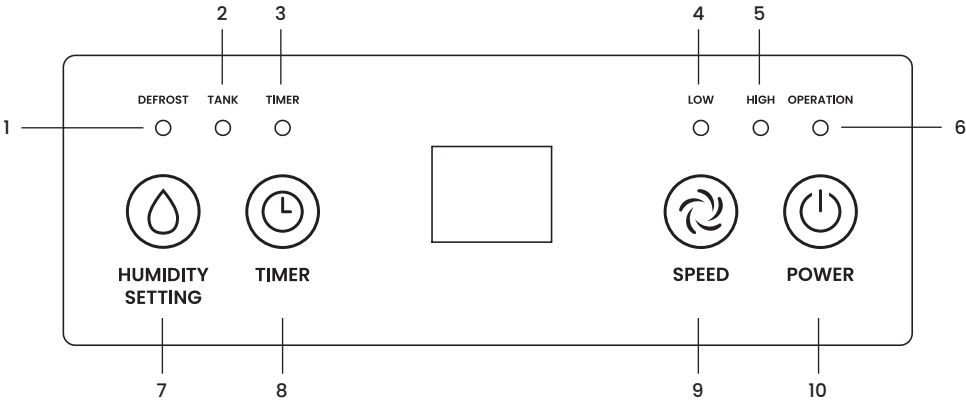

- 1. Defrost Indicator Light
- 2. Water Tank Full Indicator Light
- 3. Timer Indicator Light
- 4. Low Fan Speed Indicator Light
- 5. High Fan Speed Indicator Light
- 6. Power Indicator Light
- 7. Humidity Setting Button
- 8. Timer Button
- 9. Fan Speed Button
- 10. Power Button

Turning On/Off

1. Plug in the dehumidifier. It will beep once.
2. To turn on the dehumidifier, press the power button. The dehumidifier will beep once and the power indicator light will turn on.
3. To turn off the dehumidifier, press the power button again. The power indicator light will turn off.

Note: When the indoor humidity reaches the target value set, the compressor will stop running and the indicator light will flash.

Setting the Humidity

1. Plug in and turn on the dehumidifier.
2. Repeatedly press the humidity setting button to cycle through the following modes:
 - Continuous dehumidification
 - Relative humidity from 30 % to 90 %, increasing 5 % with every press.
 - Automatic dehumidification

Continuous Dehumidification Mode

When the dehumidifier is plugged in, continuous dehumidification mode will be the default.

Drying Laundry with Continuous Dehumidification Mode

To use this dehumidifier to efficiently and quickly dry laundry press the fan speed button to turn the fan speed to high when the unit is in continuous dehumidification mode. Ensure the dehumidifier is placed near the drying laundry in a well-ventilated room.



Drying Laundry? Scan this QR code for our comprehensive guide.

Relative Humidity Mode

- The dehumidifier will bring your environment's ambient humidity to your target relative humidity percentage, between 30 % and 90 %.
- Compressor turns off if ambient humidity is 3 % below the set target, while the fan continues running at the set speed.
- The compressor will automatically turn back on when the ambient humidity is higher than your set target humidity by 3% .

Automatic Dehumidification Mode

- When the ambient temperature is lower than 5 °C, the compressor will automatically turn off.
- At an ambient temperature between 5 °C and 20 °C, the target relative humidity will automatically be set to 60 %.

- At an ambient temperature between 20 °C and 27 °C, the target relative humidity will automatically be set to 55 %.
- When the ambient temperature is higher than 27 °C, the target relative humidity will automatically be set to 50 %.

Setting the Fan Speed

1. While the dehumidifier is on, press the fan speed button repeatedly to cycle through the fan speed options of low and high.
2. The corresponding indicator high or low fan speed indicator light will turn on.

Setting a Timer

Setting a turn-on timer:

1. Plug in the dehumidifier.
2. Press the timer button repeatedly to cycle through the time options of 1 – 24 hours.
3. When you reach your desired amount of hours, do not press anything. When the display stops flashing, the timer has been set.
4. The timer indicator light will be on while the timer is in use.
5. The dehumidifier will turn on when the set time elapses.
6. To cancel the timer, press the power button at any point.

Setting a turn-off timer:

1. Plug in and turn on the dehumidifier.
2. Press the timer button repeatedly to cycle through the time options of 1 – 24 hours.
3. When you reach your desired amount of hours, do not press anything. When the display stops flashing, the timer has been set.
4. The timer indicator light will be on while the timer is in use.
5. The dehumidifier will turn off when the set time elapses.
6. To cancel the timer, press the power button at any point.

DEFROSTING

The dehumidifier will automatically defrost if the compressor becomes too cold. While defrosting, the defrost indicator light will turn on, the compressor will turn off, and the motor will keep working.

SETTING UP CONTINUOUS DRAINAGE

1. Remove the water tank.
2. Attach one end of the continuous drainage hose to the continuous drainage port and place the other end where you would like the water to drain out into.
3. Replace the water tank.

Emptying the Water Tank:

When the water tank is full, the indicator light will turn on and the compressor will turn off.

1. Unplug the dehumidifier and place it on a flat, stable surface.
2. Firmly grip each side of the water tank and gently pull it out of the dehumidifier. Do not pull from the continuous drainage port hole.
3. Carefully empty the water tank and replace it by slotting it back in the appliance.
4. Press the power button to turn the appliance back on.

Note: The water tank indicator light will also turn on if the dehumidifier is on, but the tank is missing or placed in incorrectly.

CLEANING, MAINTENANCE AND STORAGE



WARNING: ALWAYS TURN THE APPLIANCE OFF AND UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE HANDLING OR CLEANING IT.



CAUTION: DO NOT ALLOW WATER OR OTHER LIQUIDS TO RUN INTO THE INTERIOR OF THE APPLIANCE, AS THIS COULD CREATE A FIRE AND/OR ELECTRICAL HAZARD.



CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENTS, AS THIS CAN DAMAGE THE APPLIANCE.

- Do not attempt to clean the appliance in any other way than that detailed by the manufacturer.
- Empty and clean the appliance before storage. Clean the appliance before next use.
- Clean the exterior surface of the appliance by wiping it with a soft, damp cloth. Dry the appliance with a soft, clean cloth.
- Always empty the water tank, clean and dry the appliance when not in use to prevent mould.
- Store in a clean, dry place away from direct sunlight. Place out of reach of children.
- To store your product, we recommend using the original or a similar sized box.
- The filter should be cleaned every two weeks using a damp cloth.
- Unplug the appliance during filling and cleaning.
- Never leave water in the water tank when the appliance is not in use.

 
Cleaning the water tank:

1. Remove and empty the water tank as per the instructions above.
2. Clean the water tank with warm tap water and mild detergent (e.g. washing up liquid). **Note:** Do not use boiling water to clean the water tank.
3. Remove any scale or deposits that have formed inside the water tank.
4. Wipe all surfaces dry before placing the water tank back into the appliance.
5. Ensure the appliance and water tank are clean and dry before storage.

Cleaning the filter:

We recommend you clean the filter of this unit every 2 weeks.

1. Remove and empty the water tank as per the instructions above.
2. Remove the filter by pulling down on the handle.
3. Wash the filter with cool water.
4. Let the filter air-dry.
5. Replace the filter and water tank.

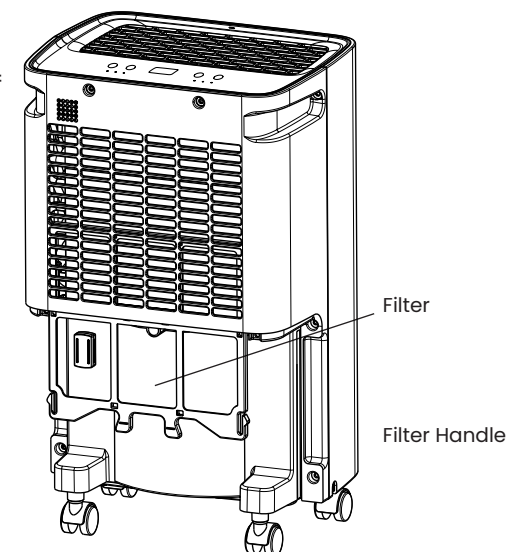

Maintenance:

The unit may need defrosting in temperatures less than 23°C - This will happen automatically and last up to 5 minutes. During this time, the dehumidifying function will stop and the defrost indicator will light up. Do not switch off while the unit is defrosting.

RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	The Mobius Loop	This symbol indicates that the product or packaging is capable of being recycled.

Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit www.probreeze.com

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.



www.probreeze.com

One Retail Group, Ryland House,
24A Ryland Road, Kentish Town, London, NW5 3EH, United Kingdom

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria
Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2026