 
 


<b>File Name</b>	GW1135VE-IB-E
<b>Description</b>	GW1135VE IB for Argos
<b>Colour</b>	Black
<b>Material</b>	80g, 單色, 雙面印
<b>Dimension</b>	paper size: 148 x 210mm
<b>Link</b>	server/Sales 2013/Argos/2014/AW14 (Cat 82)/ GW1135-AR/IB

Requisition	By	Date	Ver.	Description
Ken	Charmaine	9-6-2014	E	Rev the hotline num.


## Folding diagram

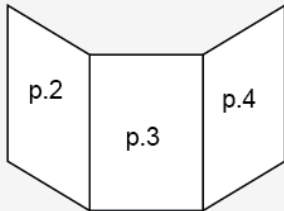
 
# CV Grand Piano

Assembly & User Instructions – Please keep for future reference

900/2023

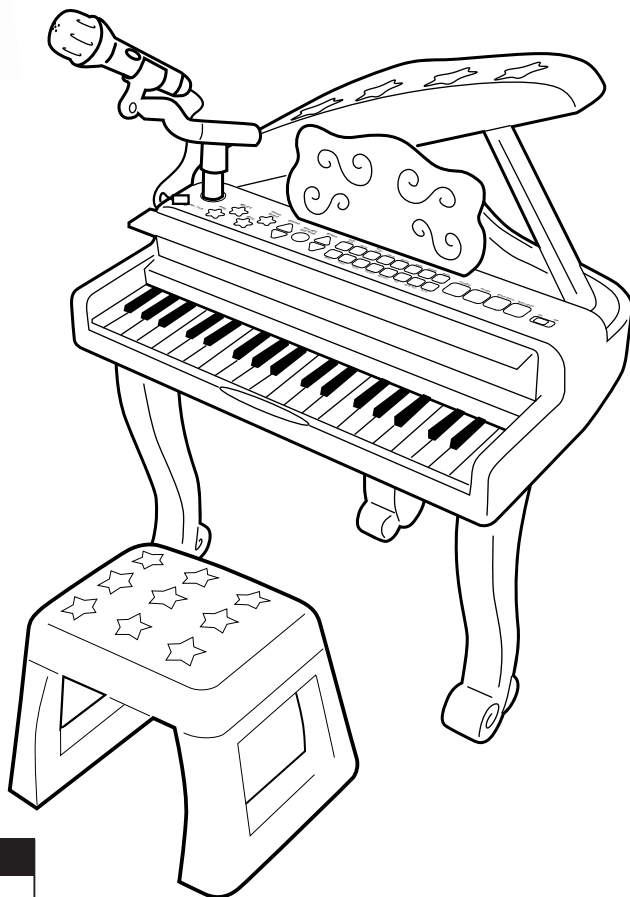

## Important

Age: 3 years +  
Maximum user weight  
for the stool: 50 kg.

## Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**



# Safety Information

**Important – Please read these instructions fully before assembly or use**

## General Safety

• **WARNING - Not for children under the age of 36 months due to small parts may present a choking hazard! Risk of strangulation due to the cable!**

• SPECIFICATIONS, COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS.

• Young children in play are unaware of potential dangers and hazards, therefore responsible adult supervision is essential.

• **Caution:** Remove all packaging and attachments before giving this toy to a child. Please retain all information relating to this product for future reference.

• Adult assembly required.



• **Warning:** Due to insufficient strength, the stool is not for children with a body weight of more than 50kg.

## Safety Battery Precaution

• Only use the batteries specified (3 x 1.5 V LR6).

• Non-rechargeable batteries are not to be recharged.

• Rechargeable batteries are to be removed from the toy before being charged.

• Rechargeable batteries are only to be charged under adult supervision.

• Different types of batteries or new and used batteries are not to be mixed.

• Only batteries of the same or equivalent types as recommended are to be used.

• Batteries are to be inserted with correct polarity.

• Exhausted batteries are to be removed from the toy.

## During Use

• The keyboard will automatically power-down after three minutes without input to preserve battery life. The unit can be turned on again by pressing any button.

• Please turn the unit off when the program/ activity stops working. Interrupt the power supply by removing the batteries. Let the unit rest for a few minutes with batteries, then replace the batteries. Turn the unit on. The unit should now be ready to play again.

• The supply terminals are not to be short-circuited.

• Do not dispose the battery in fire, battery may leak or explode.

• Battery should only be replaced by adult.

• Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

 
• Remove batteries during long periods of non-use.

## Battery Installation & Replacement

• Loose the screw by screw driver to open the battery compartment doors at the back of keyboard.

• Insert/ replace the new batteries in the proper direction indicated inside the battery compartment. Close and screw the battery door.


• Keyboard is powered by 3 X 1.5V "AA" (Not included).

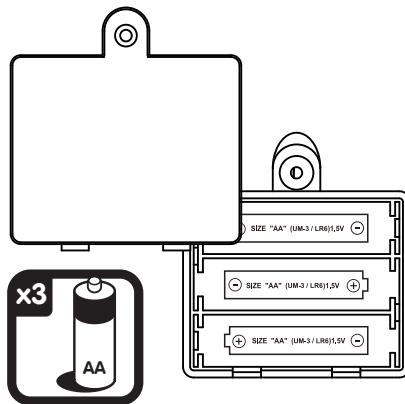

# Parts

If you have damaged or missing parts,  
call the **Customer Helpline: 0345 640 0800**

 Please check you have all the parts and fittings listed below

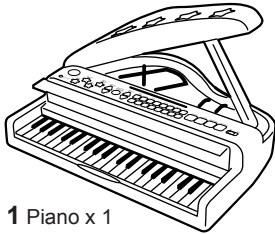


1 Piano x 1



2 Short legs x 2



 
3 Long legs x 1

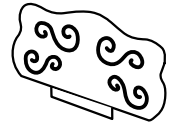

4 Book Stand x 1



 
5 Microphone stand x 1

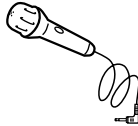

6 Microphone x 1



 7 Seat x 1

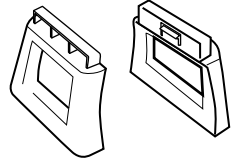


8 Seat legs x 2

## Assembly Instructions
 
### Step 1

#### Assembly the piano legs


Install the legs to the bottom of the piano.

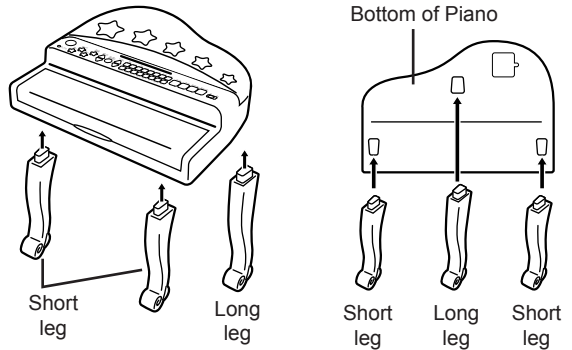

### Step 2

#### Assembly the Bookstand

 Insert the bookstand into the slot on the top of the Grand Piano.

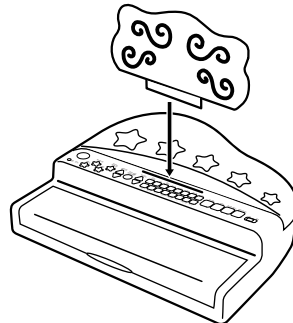


# Assembly Instructions

## Step 3

### Assembly the Microphone Stand

 
Insert the Microphone Stand into the microphone stand hole of the Grand Piano and plug the microphone jack into the microphone socket.

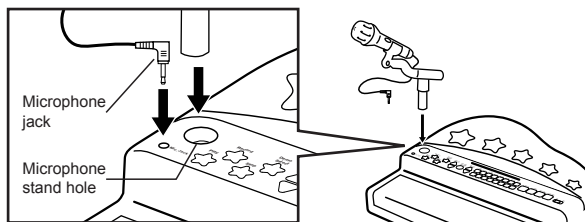

## Step 4


### Assembly the Stool

 Insert the Seat legs into the slot on the bottom of the seat.

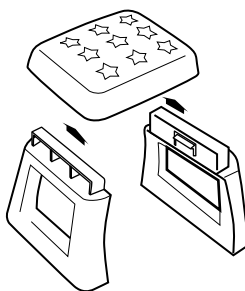

## Step 5

 Open the Piano Top Panel

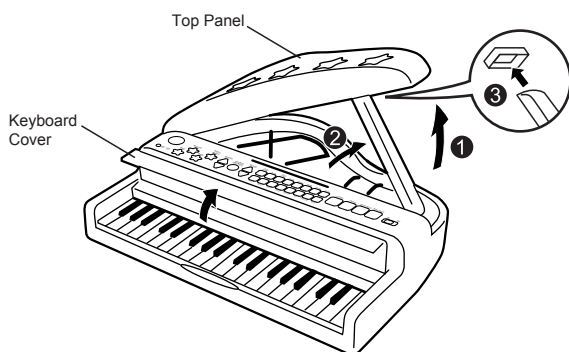


## Step 6

Open the keyboard cover

# User Instructions
 
## Product Features

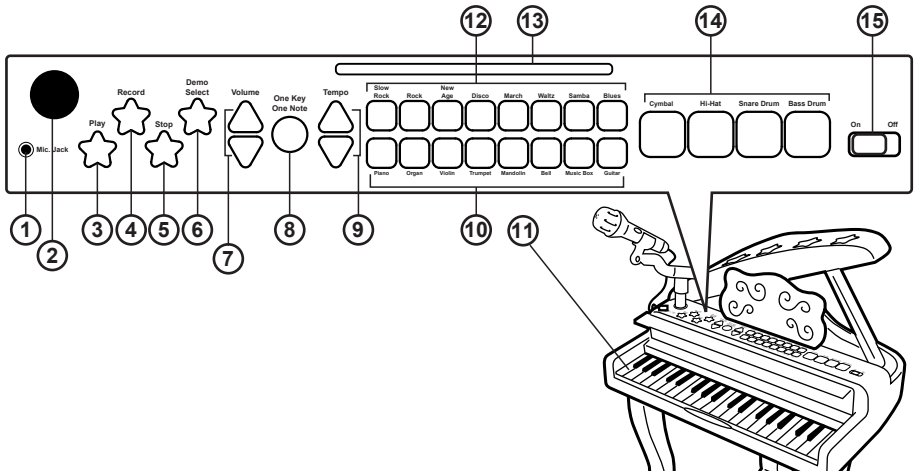

### Main Features

1. "MIC" jack
2. Microphone stand hole
3. Play
4. Record
5. Stop
6. Demo Select
7. Volume
8. One Key One Note
9. Tempo up and down keys
10. 8 Musical instrument keys
11. 37 piano keys
12. 8 rhythm keys
13. Bookstand slot
14. 4 drum keys
15. Power on off switch

# User Instructions

## How to Play

### ON/OFF

Switching ON/OFF.

### MUSICAL INSTRUMENT SELECTION

You can select one of the 8 instrument (Piano, Organ, Violin, Trumpet, Mandolin, Bell, Music box, Guitar) by pressing the related buttons.

### TEMPO UP / TEMPO DOWN

Press "△" to increase or "▽" to reduce the rhythm speed.

### RHYTHMS SELECTION

You can select one of the 8 rhythms (Slow rock, Rock, New age, Disco, March, Waltz, Samba, Blues) by pressing the related buttons.

### DRUM KEYS

You can select one of the 4 drumbeat sounds (Cymbal, Hi-Hat, Snare Drum, Bass Drum) by pressing the related buttons.

### VOLUME UP / VOLUME DOWN

Adjust volume to desired level.

# User Instructions

## How to Play

### ONE KEY ONE NOTE

Press the "One Key One Note" key and press one of a white key on the piano to start playback note by note.

### PLAY

To listen to the last recording.

### DEMO SELECT

This piano has 22 demo songs. Press "Demo Select" and select one of these 22 song by pressing one of the white keys on the piano to listen a demo songs.

### RECORD

To record the notes played.

**RECORD/ PLAYBACK Function:** This function enables you to record and playback a tune played. Press Record before playing a tune. When you have finished, press Play to listen to the tune.

### STOP

To stop the rhythm or the demo song and to clear the Recorded notes.

# Care and Maintenance

## General

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Do not drop the unit on hard surface and do not expose the unit into moisture or water.

## Inspect Regularly For

Do not plug in the microphone while the unit is on.

To avoid "feedback" place the microphone as far from the speaker as possible.



Not suitable for children under 3 years due to small parts, choking hazard. Long cable. Strangulation hazard.

## Disposal Information



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative

consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800  
Produced for Chad Valley Toys. Country of origin: China  
Address: 489 - 499 Avebury Boulevard, Central Milton Keynes, MK9 2NW.