

210MM

15MM

9019827

front



Components

Ⓐ 1 x Shelter



Ⓑ 1 x Tent Bag



Ⓔ 1 x Peg Bag




Ⓒ 2 x Black Fibreglass Pole



Ⓕ 1 x Pole Bag



Ⓓ 1 x Black arch Fibreglass Pole

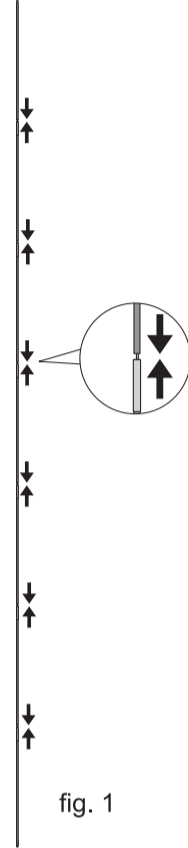

150MM

Fittings

Ⓐ 12 x Peg



Ⓑ 1 x Spare Peg




1. Open the Tent Bag Ⓑ, take out and separate components.


2. Assemble the fibreglass poles Ⓒ and the fibreglass pole Ⓓ. All the poles are for the flysheet. (fig. 1)

fig. 1

3. Spread tent. Take 2 longer poles Ⓒ and insert to sleeve poles.

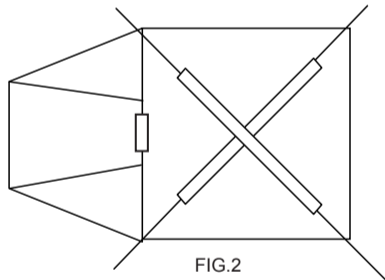

5. Use metal pegs Ⓐ to secure the tent (fig.6) Keep the front door zipped closed before secure the metal pegs

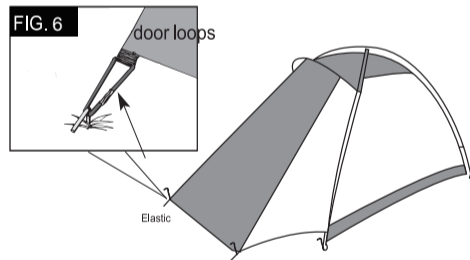


7. The guy ropes can be adjusted to even the tension all around the tent(fig.8)



YOUR TENT IS NOW READY FOR USE.

back

4. Insert the poles Ⓒ to the pin and ring(fig.4) and bend to fit the other end. insert the hooks into the loops (fig.5) Insert the arch pole Ⓓ on the eyelet, bend the other end to fit the other end(fig.3)

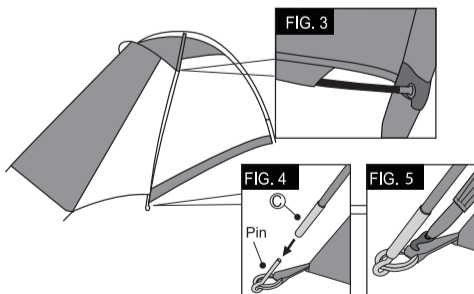

6. Secure the completed tent by pegging the guy ropes and flysheet into the ground using pegs(fig.7)



150MM

! IMPORTANT

For Expert advice, please Phone Argos Helpline On: **0845 640 0800**

Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9, 2NW