

# Constant Large display digital alarm clock

## CAT NO. 9063550

## Care & Instruction Manual


PLEASE READ THESE INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE REFERENCE

### Warnings

- **Keep out of reach of children**
- **Batteries should only be installed by an adult.**

### INSTALLATION

1. Place your clock face down on a flat surface.
2. Remove the battery cover at the back of the clock.
3. Insert 2 x AA batteries into the battery compartment by observing the correct "+" and "-" polarity.
4. Replace the battery cover.

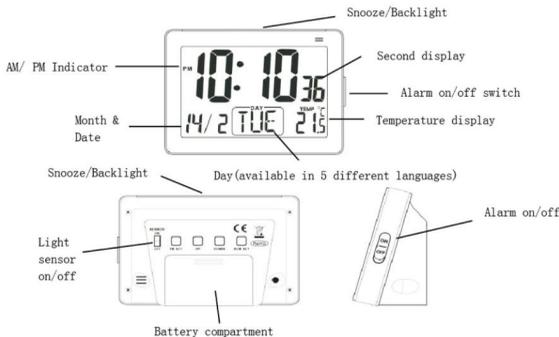

### TO SET THE TIME, 12/24HR TIME, CALENDAR AND LANGUAGE

Please note that during the below process, if the clock is left untouched for 30 seconds, the clock will return to the normal time display mode.

1. The setting will occur in the following sequence: Year→Month→Date (day will set automatically once the month and date has been set) →Language →12HR/24HR →Hour →Minute.
2. To start, hold the "TM SET" button on the back of the clock for 2 seconds, until the front screen begins to flash with the year.
3. Use the "UP" and "DOWN" buttons on the back of the clock to select the correct year. (Press and hold the "UP"/"DOWN" button for 2 seconds to accelerate setting). Press the "TM SET" button on the back of the clock to confirm.
4. The month digit will now begin to flash. Use the "UP" and "DOWN" buttons on the back of the clock to select the correct month. (Press and hold the "UP"/"DOWN" button for 2 seconds to accelerate setting). Press the "TM SET" button on the back of the clock to confirm.
5. The date digit will now flash. Use the "UP" and "DOWN" buttons on the back of the clock to select the correct date. The day will change automatically according to the date. (Press and hold the "UP"/"DOWN" button for 2 seconds to accelerate setting). Press the "TM SET" button on the back of the clock to confirm.
6. The language will now flash where the day is displayed. The day can be expressed in 5 different languages: the clock will flash ENG for English, DEU for German, FRA for French, ITA for Italian and ESP for Spanish. Use the "UP" and "DOWN" buttons on the back of the clock to select the language. Press the "TM SET" button on the back of the clock to confirm.
7. The time digits will now flash 12Hr or 24Hr. Use the "UP" and "DOWN" buttons on the back of the clock to select 12Hr format or 24Hr format. If you select 12Hr format, "AM" or "PM" will appear on the top left hand side of the screen to indicate morning or afternoon time. Once you have chosen 12Hr or 24Hr, press the "TM SET" button to confirm.
8. The hour digit will now flash. Use the "UP" and "DOWN" buttons on the back of the clock to select the correct hour. (Press and hold the "UP"/"DOWN" button for 2 seconds to accelerate setting). Press the "TM SET" button on the back of the clock to confirm.

- The minute digit will now flash. Use the “UP” and “DOWN” buttons on the back of the clock to select the correct minute. (Press and hold the “UP”/“DOWN” button for 2 seconds to accelerate setting). Press the “TM SET” button on the back of the clock to confirm and the clock will return to normal display.

## TO SET THE ALARM

Please note that during the below process, if the clock is left untouched for 30 seconds, the clock will return to the normal time display mode.

- To turn the alarm function on, move the “ON/OFF” switch on the right hand side of the case to the “ON” position. A bell icon will appear on the display to indicate that the alarm function is ON.
- With the clock in normal time display, press the “ALM SET” button on the back of the clock to switch to alarm display mode.
- Press and hold the “ALM SET” button on the back of the clock for 3 seconds until the hour digit begins to flash. Use the “UP” and “DOWN” buttons on the back of the clock to select the desired hour. (Press and hold the “UP”/“DOWN” button for 2 seconds to accelerate setting). Press the “ALM SET” button on the back of the clock to confirm.
- The minute digit will now flash. Use the “UP” and “DOWN” buttons on the back of the clock to select the desired minute. (Press and hold the “UP”/“DOWN” button for 2 seconds to accelerate setting). Press the “ALM SET” button on the back of the clock to confirm.
- Once the alarm is set, press the “TM SET” to return to normal display.
- When the alarm sounds, the backlight will automatically turn on and the alarm will sound for 60 seconds.
- Press the “LIGHT/SNOOZE” button on the top of the clock to snooze the clock for 5 minutes. (This button can also be used to turn the light on during normal display).
- To turn the alarm function off, move the “ON/OFF” switch on the right hand side of the case to “OFF” position. The bell icon will disappear to indicate that the alarm function is Off.

## TO ACTIVATE THE LIGHT SENSOR

- There is a light sensor installed in this clock which detects the surrounding light. The sensor will activate the backlight if there is diminished light in the surroundings.
- To activate the light sensor, move the “SENSOR” switch on the back of the clock to the “ON” position.
- To de-activate the light sensor, move the “SENSOR” switch on the back of the clock to the “OFF” position.

## TEMPERATURE

- There is a temperature display function on this clock.
- When the clock is in normal display, press the “UP” button on the back of the clock once to switch the temperature between Celsius (°C) and Fahrenheit (°F)

## Care instructions

- Wipe the clock with a soft dry cloth only.
- Replace the battery every 12 months or when the clock stops.

## Battery safety & disposal

- Dispose of any used batteries responsibly by taking it to your local authority household waste recycling facility
- Don't dispose of batteries in a fire as they may explode
- This clock will only take 'AA' 1.5V batteries in this clock.
- Make sure you've inserted the batteries correctly, so you have the correct polarity (+ and -). You should only use batteries that are the equivalent of those recommended above. Don't use rechargeable batteries with this item. And never mix old and new batteries, change them at the same time.



## Recycling



We expect this clock to give you many years of use, but when you've finished with it, please don't just throw it in the bin. Do your bit for the environment by recycling electrical items.

Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) click “bank locator” and type in to find your nearest recycling site.

Made in China for Habitat, Argos Limited. Sainsbury's Supermarkets Ltd, London, EC1M 6HA, UK. [Argos \(N.I.\) Ltd](#) and Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.  
[habitat.co.uk/help/contact-us](http://habitat.co.uk/help/contact-us)