# DERWENT CHEST OF DRAWERS

### **Assembly Instructions** - Please keep for future reference

### DERW-CD-SS20-A

#### Dimensions


Width - 95cm Depth - 47cm Height - 100.5cm

Tools required







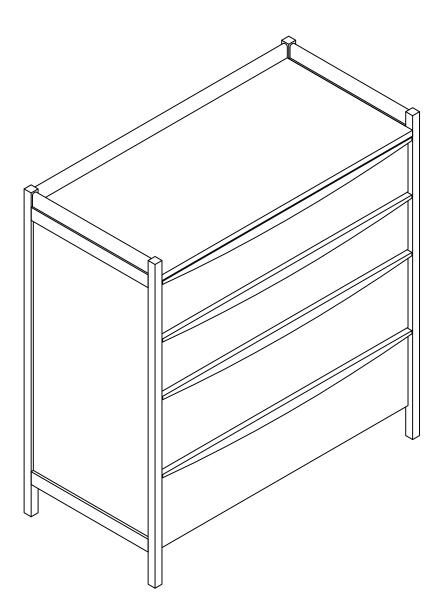

### **Important** – Please read these instructions before assembly

If you need help or have damaged or missing parts, email: customerservices@habitat.co.uk or call: 0344 499 4686

habitat®

# ⚠️ Safety and Care Advice

### Important – Please read these instructions fully before starting assembly

Check you have all the components and tools listed on the front cover and page 3.

## Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke if swallowed.

Make sure you have enough space to layout the parts before starting.

Do not stand or put weight on the product, this could cause damage.

### General care and maintenance

Take care when moving furniture dragging pieces across the floor will damage the joints. Always lift and move.

From time to time check that there are no loose fittings. Tighten as necessary.

Assemble the item as close to its final position (in the same room) as possible.

Do not place furniture directly in front of radiators, fires or any other source of heat.

Assemble on a soft level surface to avoid damaging the unit or your floor.



Assembly requires at least 2 people

We do not recommend the use of power drill/ drivers for inserting screws, as this could

damage the unit. Only use hand screwdrivers.

Dispose of all packaging carefully and responsibly.

Avoid exposing your furniture to direct and prolonged periods of sunlight and heat sources as fading and cracking may occur. Take care to prevent sharp objects e.g. toys, buckles and heels from coming into contact with your furniture, and avoid contact with chemicals e.g. cosmetics or hairs products which may permanently mark the surface.

### **Cleaning and care**

Dust regularly with a clean dry cloth.

Wipe up any spills immediately with a damp cloth and then dry the surface with a clean dry duster.

Repeat this procedure for periodic cleaning.

Remove stubborn stains with a weak washing up liquid solution and a damp cloth and dry after with a clean cloth.

The use of furniture polish or spray is not necessary or recommended.

Never use abrasive or corrosive cleaning agents.



### **General information**

If for any reason you should have problems with your Habitat product, please contact the store from which you purchased it.

Please retain your receipt as proof of purchase.

If you have any comments or suggestions regarding this product, assembly instructions or service received, please contact the store or Habitat Head Office via its web site: www.habitat.co.uk

or write directly to: Habitat Retail Ltd. 489-499 Avebury Boulevard, Milton Keynes MK9 2NW


## **Components and Fittings**

If you need help or have damaged or missing parts, email: **customerservices@habitat.co.uk** or call: **0344 499 4686** 

## Please check you have all the panels listed below



NOTE: There are 'Batch code' labels where shown on the indicated items, these should be retained.

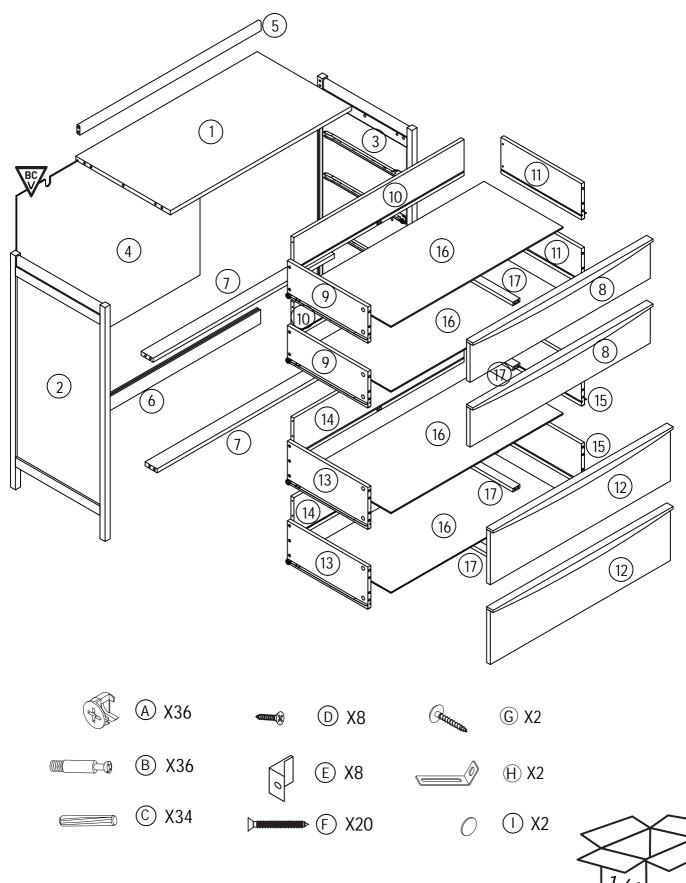

## Assembly Instructions

## Please keep safe for future reference


Before assembling the furniture please identify all component parts.

It would be sensible to assemble the furniture as close to its final position as possible.


Do not place furniture directly in front of radiators, fires or any source of heat.

Ensure the surface on which you are assembling the furniture is flat and clear of anything that might scratch it. Check all packaging carefully for components and fittings before discarding it.


### Step1:

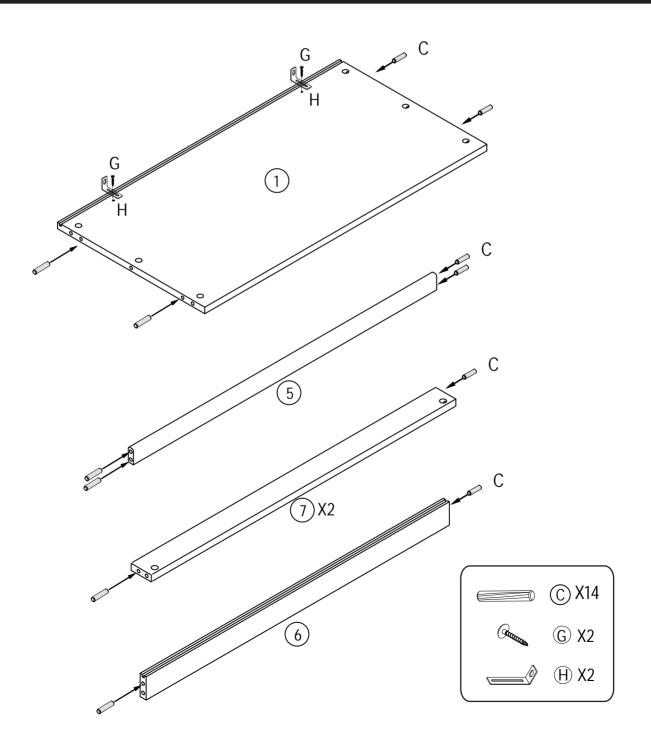




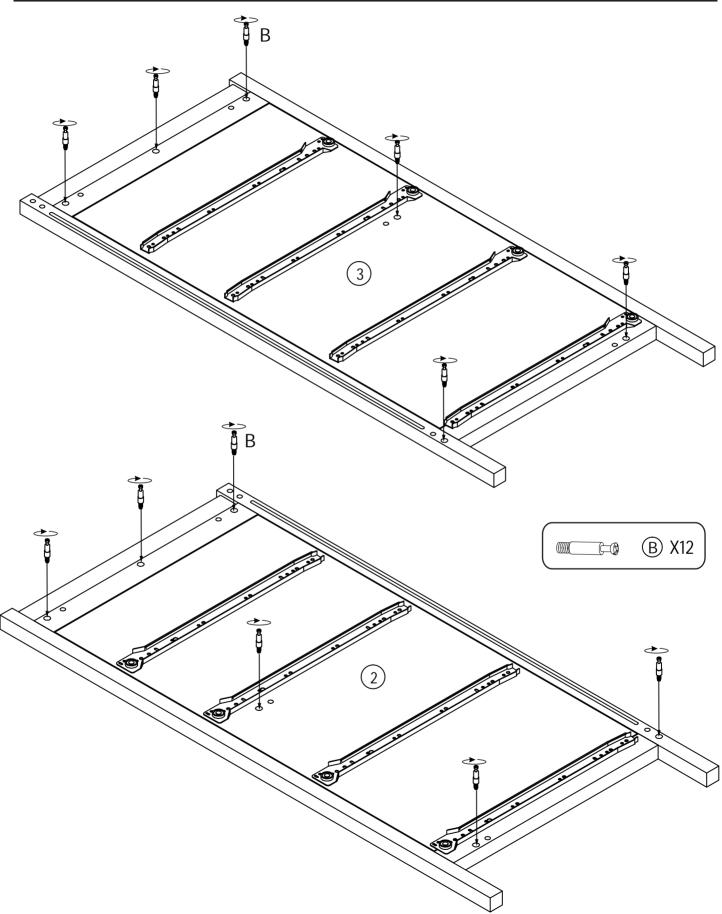




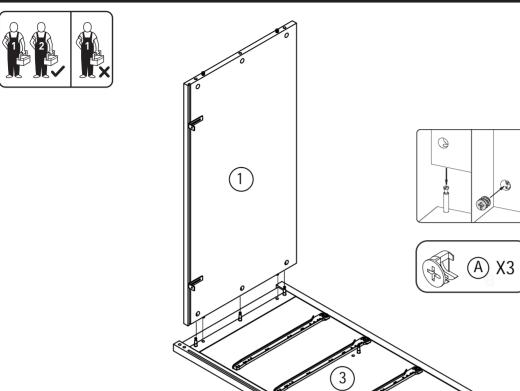

### Step4:

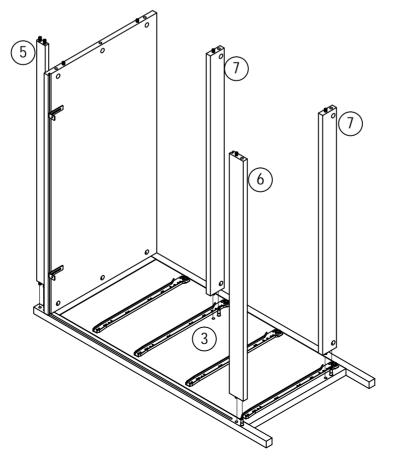

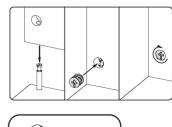




۲

Ð


Step5:



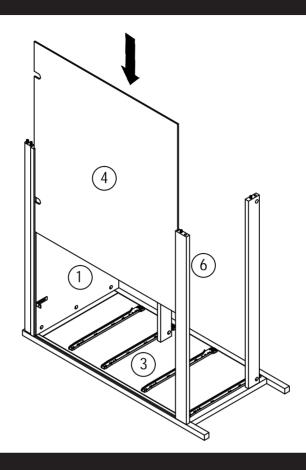


Step6:



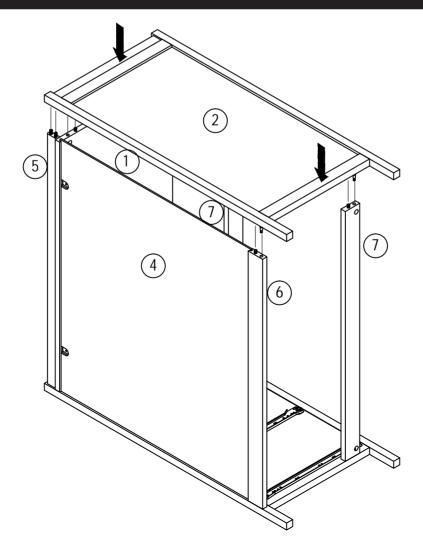



## Step7:

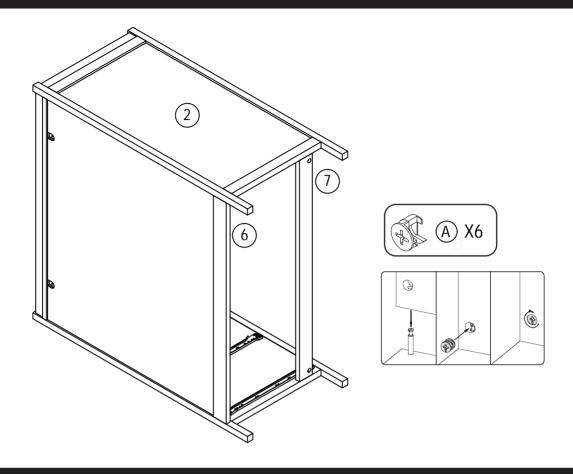


### Step8:




 


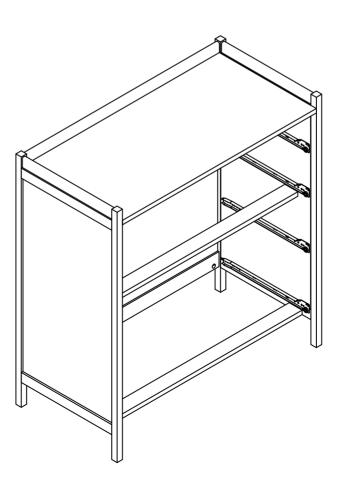

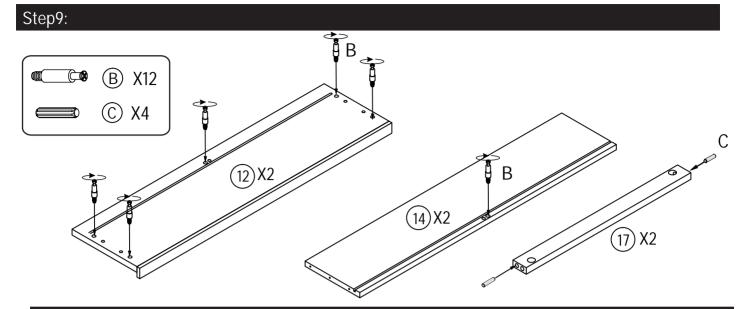



Step10:

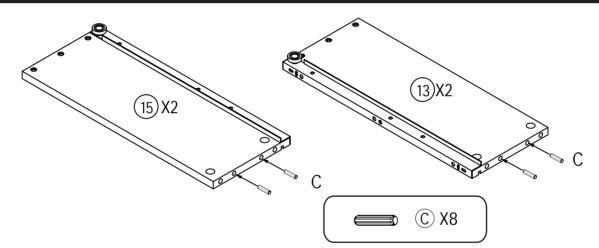

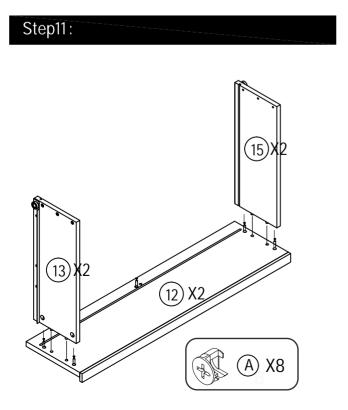


## Step12:

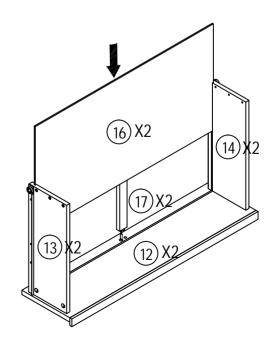


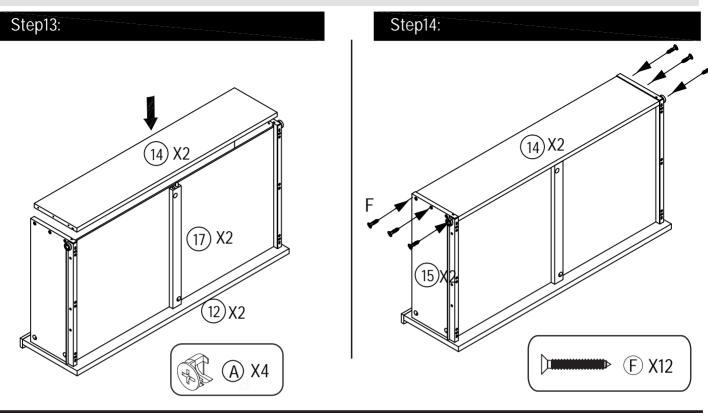


Step15:

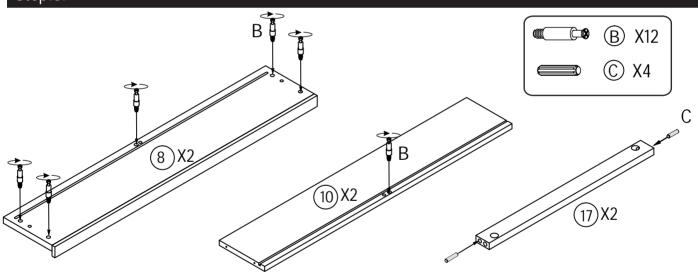

Step16:

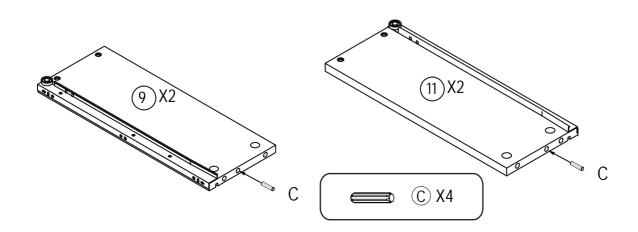

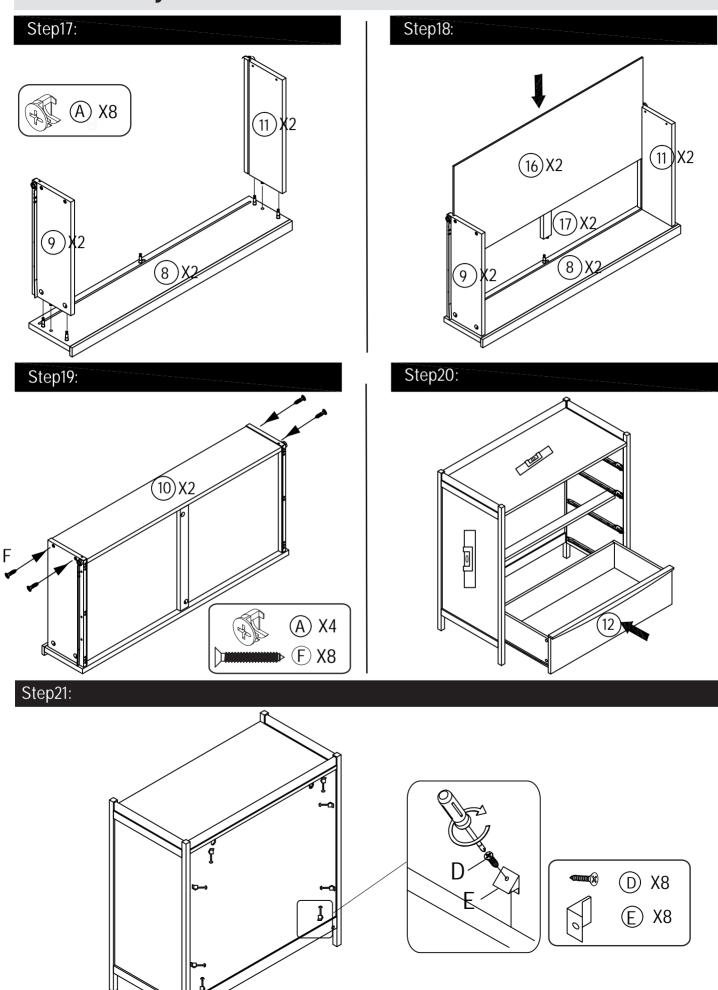

### Step22:


#### WARNING!


In order to prevent overturning this product must be used with the wall attachment device provided. Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent topple over :-

- -Use the wall attachment devices provided
- -Never allow children to climb or hang on drawers
- -Do not overload the drawer beyond maximum recommended loading.
- -Place heaviest items in the lower drawers or shelves.
- -Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product
- Never open more than one drawer at a time

An attachment device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt consult a qualified trades person.

Always ensure that the wall to be drilled into is free from hidden electrical wires, water and gas pipes.

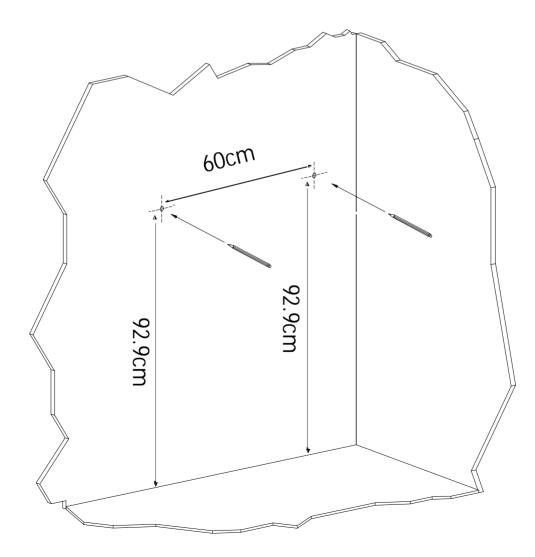

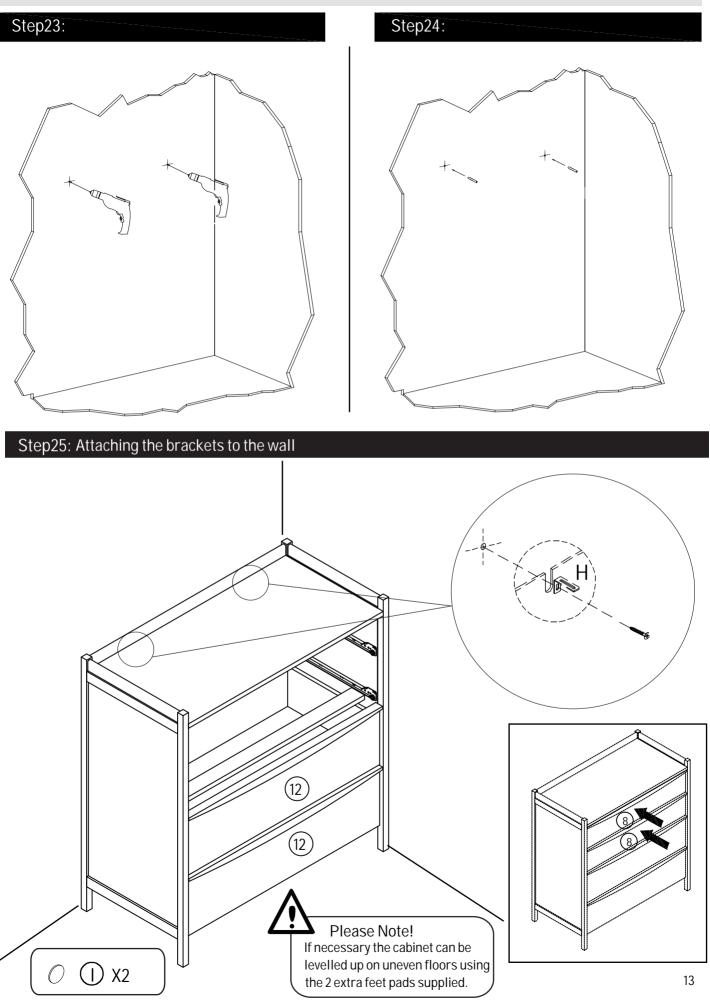

# A Guide to - Wall Mounting & Fixings

### Important note:

### Wall Fixings:



- because of the variety of different wall types, Habitat cannot provide you with the exact fixings you will need to fix this product to the wall.

You must first identify the type of wall you intend to fix product onto and then contact your local hardware store to get the appropriate fixings.



 
**Important:** When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

### Hints:


- **1: General rule:** Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

### Types of walls



Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

#### No.2 "Plasterboard" wall plug

 


For use when attaching light loads on to plasterboard partitions.




## You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.
 
#### No.3 "Cavity Fixing" wall plug



For use with plasterboard partitions or hollow wooden doors.


#### No.4 "Cavity Fixing-Heavy Duty" wall plug

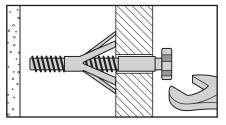

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


**Safety:** Always check the fitting and location to ensure your safety in and around the home.

#### No.5 "Hammer Fixing" wall plug

 

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

#### No.6 "Shield Anchor" wall plug Heavy loads

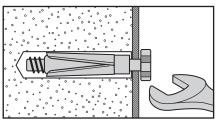

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

**Fitting:** From time to time check the fitting to ensure the wall plugs or screws do not become loose.