## Straight Slide

Assembly & User Instructions - Please keep for future reference 910/8453,910/8446



#### Warning

Age: 3+ years

### Important - Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

If you need help or have damaged or missing parts, call the Customer Helpline: 01291 650581

## Contents

## Parts

Assembly Instructions

Steps 1-3 5

4

7

- Steps 4-6 6
- Steps 7-9
- Steps 10-12 8
- Steps 13-15 9

## Parts

## if you have damaged or missing parts, call the **Customer Helpline: 01291 650581**



0	10	20	30	40	50	60	70	80	90 1	100
										mm

•To avoid scratches to metal pipes, please assemble on a soft surface.

## Step 1

#### **Insert Handle Bars**

Insert handle bar (B) into the grooves on slide (A).

## Step 2

#### Assemble Handle Bar

Fix rear hole with 40mm screw (N) and nut (H).

## Step 3

#### Assemble Handle Bar

Fix front hole with 40mmm screw (N) and nut (H).





## Step 4

#### **Assemble Plug**

Insert plug (L) and repeat all operations on the other side.

## Step 5

#### **Assemble Stiles**

Insert stiles (C).

## Step 6

#### Assemble First Step

Insert upper step (F).



## Step 7

#### **Fix Step**

Fix upper step (F) with 45mm screw (M) and nut (H) on both sides.

## Step 8

#### **Assemble Steps**

Insert midde and lower steps (F).

## Step 9

#### **Connect Handle Bars**

Fix the steps (F) on both ends with 45mm screw (M) and nuts (H).



## Step 10

Assemble Connector Tube

Place connector tube (D) in position.



### Step 11

#### **Fix Connector Tube**

Fix connector tube (D) on stile (C) with 40mm screw (N) and cap nut (J).



### Step 12

#### **Fix Connector Tube**

Fix connector tube (D) on slide (C) with plastic washer (I), screw (N) and nut (H) and repeat step 10-12 on the other side.

## Step 13

#### **Assemble Base**

Fit base connectors (G) on base tube (E) and fit assembly on stiles (C).

# E G G C

### Step 14

#### **Fix Base**

Fix assembly with 45mm screws (M) and nuts (H).



## Step 15

#### **Assemble End Caps**

Assemble end cups (K) in both sides of base tube (E).





- Remove all packaging materials such as: bags, bands & cartons.
- Side bars are not for standing or climbing on.
- WARNING! domestic use.
- WARNING! For indoor/outdoor use
- WARNING! Max load 50 kg.
- WARNING! Recommended age of use: 3 years and above.
- Place the toy on a level surface at least 2 m from any structure or obstruction, such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
- The toy shall not be installed over concrete, asphalt or any other hard surface.
- Do not face slide-shute directly towards the sun when in use.
- Check toy before every use for any damage or missing parts.
- Check connections regularly for continued security and for any evidence of deterioration or hazards.
- Replace, if required, with suitable & new parts.
- Failure to do so may result in an injury or fall.
- Adult assembly required.
- Adult supervision is required at all times
- Please keep this instruction sheet for future reference.



If you need help or have damaged or missing parts, call the **Customer Helpline: 01291 650581** Produced for Chad Valley Toys. Country of origin: Israel. Argos LTD Address: 488 - 499 Avebury Boulevard, Central Milton Keynes, MK9 2NW. **www.argos.co.uk/chadvalley**