

IVAR FLOOR LAMP INSTALLATION INSTRUCTIONS

These instructions are provided for your safety.

Please read carefully before commencing work and retain for future reference.

SAFETY INFORMATION

- * If you are in any doubt consult a person competent to give advice on the installation of electrical equipment.
- * This fitting should be fitted in accordance with IEE Wiring Regulations and the Building Regulations
- * To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electricity supply without your knowledge.
- * If the flexible cable of this product is damaged it should be exclusively replaced by the manufacturer or a similar qualified person in order to avoid a hazard.
- * To prevent electrocution switch off at the mains supply before assembling or maintaining this fitting. Ensure the plug is not connected to any power supply and read instruction before assembly.
- * This fitting is fitted with a 3 Amp fuse and is suitable for 240 Volt ring mains.
- * Always be sure to use the correct type and wattage of bulbs as indicated on the fitting. Never exceed the wattage stated.
- * When changing the bulb, ensure product is unplugged and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.

INSTALLATION

1. Ensure the house electricity supply is off at the fuse board.
2. Unpack the product and remove all packaging. Be careful not to scratch the surface of the product whilst removing the wrapping.
3. Lay the product out on the floor. If the floor is not carpeted please cover it with a soft cloth to avoid damage to the flooring and surface of the product. Assembly should take place with the product lying flat. It may be necessary to remove protective packaging (plastic / cardboard) located at cable.
4. Screw the upper pole into the lamp holder section. Ensuring the poles are kept parallel, hold the lamp holder section still and rotate only the upper pole taking care not to twist the wiring or cross thread.
5. Screw the centre pole into the upper pole. Ensuring the poles are kept parallel, hold the upper section still and rotate only the centre pole taking care not to twist the wiring or cross thread.
6. Screw the lower pole into the centre pole. Ensuring the poles are kept parallel, hold the centre section still and rotate only the lower pole taking care not to twist the wiring or cross thread. Gently pull any excess cable through the hole in the base
7. Carefully rotate the base plate onto the lower pole section until tight and then place in a vertical position on the floor. If cross threading occurs undo and start again. Attach the protective foam base pad evenly to the base of the floor lamp where applicable.
8. Turn the base onto the lower pole. Keep poles parallel to avoid cross threading. Keep the pole stationary and only rotate the base.
9. **Fit bulb:** type and wattage as indicated on fitting. **The wattage indicated must not be exceeded.**
10. Switch on the electricity supply at the fuse board.

GENERAL INFORMATION

This fitting is designed for internal use only and must be fitted to a DRY SURFACE as any dampness in plaster or paint can damage the finish. **Do not use polish or abrasive cleaner - just a soft dry cloth.**

If for any reason you should have problems with your Habitat product, please contact the store from which you purchased your product or call customer services on 0344 499 4686

If you have any comments or suggestions regarding this product, assembly instructions or service received, please enquire at your nearest store or contact us through our website

WWW.habitat.co.uk or write to this address:

Habitat Retail Ltd.,489-499 Avebury Boulevard,Milton Keynes MK92NW

