

黑白 RH-607A 20190423  
145.00 mm Sainsbury's 第三种

210.00 mm

**phil  
smith**  
BE GORGEOUS



## Ceramic Straightener

RH-607A / SKU:135542085 / CAT:9205428  
220-240V~ 50/60Hz 35W

**FOR HOUSEHOLD AND INDOOR USE ONLY**

**Please read these instructions before use and retain for future reference**



Issue 1 05/19

1

## **ELECTRICAL SAFETY**

- Switch off and unplug when not in use and before cleaning the appliance.
- Do not leave unattended whilst connected to the mains supply.
- Children should be supervised to ensure they do not play with the appliance, and the appliance and cable should be kept completely out of reach of young children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep cable, plug and appliance dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not pull on the cable to disconnect from mains supply.
- Do not operate the appliance if dropped, shows signs of damage or after it malfunctions. In the event the supply cord is damaged, it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.


## **ADDITIONAL SAFETY PRECAUTIONS - WARNING!**

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always ensure hands are dry before using the straightener, touching the plug or the socket. Do not use whilst bathing.
- Always check the cable carefully for kinks, fraying or damage (particularly where it enters the product and the plug) before plugging in the straightener. Do not use if the cable is damaged.
- The straightener becomes VERY HOT in use. Take care to avoid contact between the surface of the plates and the skin, particularly around the ears, face and neck. DO NOT exceed the recommended application times, or singeing or burning of hair may result.

### ADDITIONAL SAFETY PRECAUTIONS - WARNING!(continued)

- Do not rest the straightener on non-heat resistant surfaces or near flammable materials whilst the straightener is in use or cooling down.
- Do not cover and allow the straightener to cool fully (e.g. 30 mins) before storing. Do not wind the cable tightly around the straightener.
- Do not use the straightener on artificial hair or wigs.
- Trip hazard beware of trailing cables when in use and while in storage.
- Cord entanglement hazard. The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed. Please make sure that the electric cable is positioned safely.


### PARTS

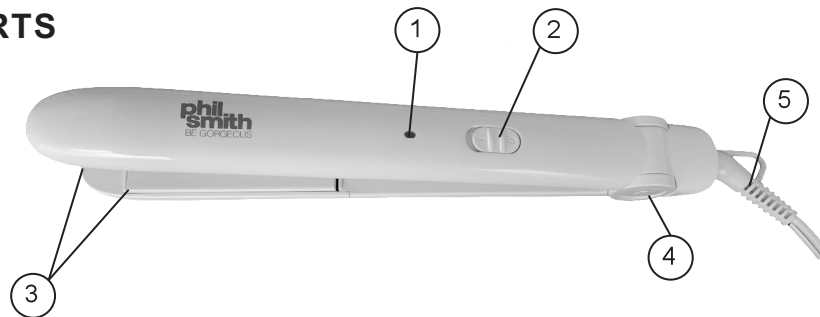

- |                     |                   |
|---------------------|-------------------|
| 1. Power indicator  | 4. Hinge lock bar |
| 2. O/I slide switch | 5. Power cable    |
| 3. Ceramic plates   |                   |

### TO USE

The straightener is suitable for use on dry hair. For best results wash, comb and dry the hair.

1. With dry hands, fully unwind the cable and plug in the straightener to the mains supply. Ensure the hinge lock bar is the 'locked' padlock position (heating plates are pressed together).
2. Place the straightener onto a dry, flat heat resistant surface.
3. Slide the O/I switch to the "I" position and the red indicator light will illuminate.
4. After one minute the straightener will be ready for use.
5. Push the hinge lock slider marked with the unlock symbol  to open the arms of the straighteners.
6. Take a section of hair to be straightened and place the hair between the ceramic plates as close to the root as possible **but do not touch the scalp**. To prevent damage to the hair do not repeat on the same section of hair more than once.
7. Close the ceramic plates firmly together and slide the straightener down the length of the hair in a single motion taking not more than 5 seconds from root to tip to prevent overheating / scorching the hair.


8. Release the section of hair and repeat on the next section, straightening the lower sections of hair before the top ones.
9. The hair straightener can be turned off any time by moving the 0/I switch back to the 0 position or by switching it off at the mains and unplugging it.

## STYLING TIPS

- For best effect, the section of hair to be straightened should not be more than 5cm wide and 1cm thick.
- For extra protection, use heat protection products before straightening.

## CLEANING & MAINTENANCE

Keep the straightener clean and free of styling products.

1. Switch off, unplug and always allow the straightener to cool (at least 30 minutes) before storing or cleaning.
2. Close the plates and push the hinge lock slider marked with the lock symbol  to lock for storage.
3. Do not wrap the mains cable around the straighteners when storing or hang by the cable as this may damage the cable in the long term.
4. Wipe the outside of the straighteners, the ceramic plates and cable with a damp cloth to remove any build-up of styling products. Wipe dry. Do not use detergent or abrasives as these may scratch the surface. Never immerse the straighteners, cable or plug in water.
5. Regularly check the mains cable for wear or damage, particularly where it enters the product and plug. Do not use if damaged.
6. Should it become necessary to replace the fuse in the plug, please replace with a **5A fuse** that conforms with BS 1362.

## RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), click on "bank locator" and enter your postcode to find your nearest recycling site.

We care about our quality and what you think,  
If you have any comments, good and bad,  
Please call our Careline **0800 636 262**  
or visit [www.sainsburys.co.uk](http://www.sainsburys.co.uk)  
Your statutory rights are not affected.

Produced in China for and imported by  
Sainsbury's Supermarkets Ltd,  
London, EC1N 2HT