

cookworks

Pyramid Kettle

Model No. WK8213NAH



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference




ELECTRICAL SAFETY

- You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug when not in use and before cleaning the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep stand, cable, plug and outside of kettle dry and away from areas where it is likely to get splashed. Avoid spillage on the connector. Never immerse in water.
- Do not pull on the cable to disconnect from mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.
- This appliance must be plugged in to an earthed socket outlet.

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Do not remove the lid while the water is boiling or when steam is coming out of the kettle.
- Do not cover and allow the kettle to cool fully before storing
- The surfaces of the kettle will become hot during use. Do not touch and always carry by the handle. Note the kettle and heating element is subject to residual heat after use.
- Do not use the kettle near or under surfaces that are heat sensitive or those that may be damaged by steam.
- Do not overfill the kettle as boiling water may be ejected during operation.
- Use only with the stand provided and to heat water. This appliance can cause personal injury if misused

PARTS

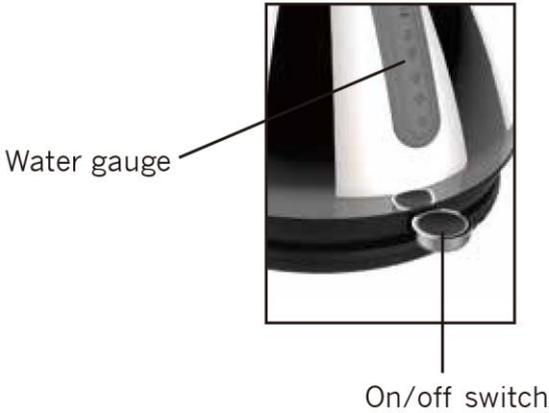

TO USE

1. Place the kettle and stand on a stable, flat, heat resistant surface and away from surfaces that may be damaged by steam.
2. Fully unwind the cable from the stand and plug in. For safety do not allow the cable to dangle over the edge of units.
3. Remove the kettle from the stand; remove the lid and fill to the required level using the markings on the clear water gauge as a guide. Do not fill past the MAX (1.7 litre / 7 cups) or below the MIN (0.75 litre / 3 cups) level.
4. Close the lid fully until it clips into place and ensure that the switch is in the off position (lift switch up) before replacing on the stand.
5. Turn the kettle so that the spout faces away from you and switch the kettle on by pressing the switch downward (I). The kettle will start to operate and the power indicator (in the switch) will illuminate.
6. When the water boils, the kettle will switch off automatically and the indicator light will go off.
7. To stop or interrupt the boiling process, switch the appliance off by lifting the switch up before removing the kettle from the stand.


Notes:

- Before using for the first time, fill the kettle to the maximum level, bring to the boil and then discard water. Repeat this step two further times.
- This kettle is fitted with a safety device that automatically switches off the heater element if the appliance is inadvertently switched on when empty or if it boils dry. In this case allow the kettle to cool completely (minimum 15 minutes) before refilling with cold water. The kettle will resume operation after refilling.

CLEANING

To maximize the efficiency of the kettle, clean and descale regularly.

1. Switch off, unplug the kettle and allow it to cool completely.
2. Remove the lid and unclip the filter (fig 1 & 2).

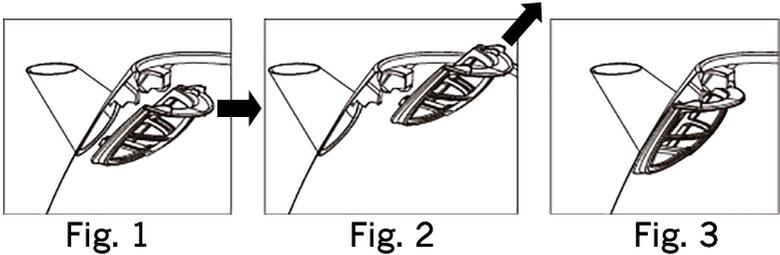

3. Clean the filter under a running tap while gently brushing with a soft nylon brush to remove the scale.
4. Descal with a proprietary descaler suitable for kettles and use in accordance with the instructions on the pack. Alternatively half fill the kettle with water and add the juice of one lemon. Boil the kettle and allow it to stand for 15 minutes. Repeat this last step a further two times before discarding the solution.
5. After descaling, fill the kettle to the maximum level, bring to the boil and then discard the water.
6. Refit the filter (fig. 3). Support the filter with the fingers on the inside the kettle and hook the clip at the bottom of the filter over the lip on the base of the spout. Once the hook is in position, press the top of the filter into the holder.
7. Wipe external surfaces with a soft damp cloth; do not use detergents or abrasives as these may scratch the surface.

TECHNICAL SPECIFICATION

| | |
|-------------------------------|------------------------------------|
| Cookworks Pyramid Kettle | |
| Model No. | WK8213NAH |
| SKU no. | 135891066/ 135891082/ 135891200 |
| Rated Voltage & Frequency | 220 – 240V AC 50 – 60Hz |
| Rated Power Input | 2550 – 3000W |
| Capacity | 1.7 litre |
| Class rating | 1 (earthed) |
| BS 1362 fuse | 13A |
| Product dimensions (external) | 211 x 243 x 290mm |
| Product weight (net) | 1.28kg approx. |



RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



