

210MM

15MM

9275647

front

150MM

### Components

Ⓐ 1 x Tent



Ⓒ 2 x Black Fibreglass Pole



Ⓓ 1 x Pole Bag



Ⓑ 1 x Tent Bag



Ⓔ 1 x Peg Bag



### Fittings

Ⓐ 8 x Peg



Ⓑ 4 x Guy Rope

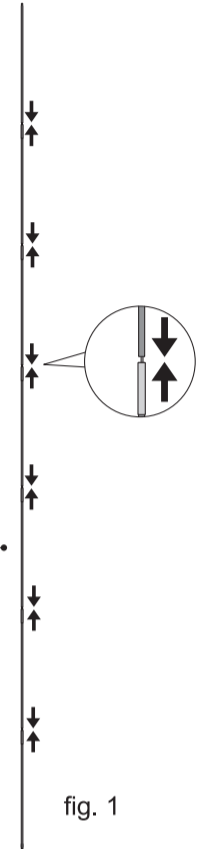


fig. 1

1. Open the Tent Bag (B), take out and separate each of the components inside.

2. Assemble the two Black Fibreglass Poles (C). These poles are for the main structure of the tent.  
**See fig. 1.**

3. Slide the Black Fibreglass Poles (C) through the sleeves in Tent (A).  
**See fig. 2.**

4. Carefully bend the Black Fibreglass Poles (C) fitting each of the ends into the rings in the corners of the Tent (A).  
**See fig. 3.**

5. Secure the completed Tent by pegging the Guy Ropes into the ground using Pegs (A). Care must be taken not to bend the Pegs, use a rubber mallet if the ground is hard.  
**See fig. 4.**

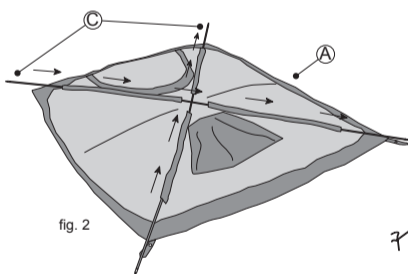


fig. 2

7. Remove any slack from the Guy Rope by grasping the rope and sliding the Tensioner up towards the Tent.  
**See fig. 5.**

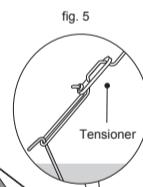


fig. 5

9. Fit the roof cover by inserting the hooks into the loops on the sleeves.  
**See fig. 7 and 8.**

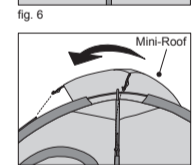
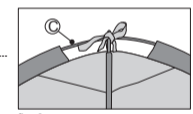


fig. 7

6. The length of the Guy Ropes can be adjusted by feeding the rope through the Tensioner.  
**See fig. 5.**

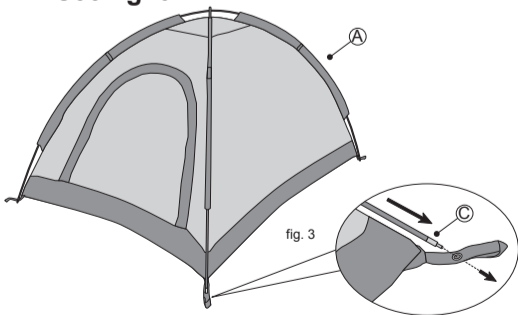


fig. 3

8. Use the ties on the top to secure the top of the Tent to Black Fibreglass Poles (C).  
**See fig. 6.**



fig. 8

YOUR TENT IS NOW READY FOR USE.

### ⚠ IMPORTANT

For Expert advice, please Phone Argos Helpline On:

**0845 640 0800**

Address: 489-499 Avebury Boulevard Saxon Gate West,  
Central Milton Keynes Bucks, MK9, 2NW

back

150MM