

## CASIO®

### W-214H-4AVEF Specifications

- ⇒ Water Resistant
- ⇒ Daily Alarm
- ⇒ Stopwatch
- ⇒ 50M WR
- ⇒ LED Light



Model variations may differ in appearance from the example above.

<b>Stop Watch</b>	1/100-sec accuracy	Press button <b>B</b> until you reach ST mode. Start and stop stopwatch using button <b>C</b> , reset stopwatch using button <b>A</b> .   A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 59 minutes 59.99 seconds. For longer times, reset and start again.  (a) Net time measurement C → Start → C → (Time loss) Stop → C → Re-start → C → Stop → A → Reset
<b>Alarm</b>	Allows you to specify the hour, minutes, day and month of the alarm.	In Alarm Mode, Press <b>A</b> to set hours and minutes. Press <b>C</b> to advance the alarm setting by each hour. Press <b>A</b> to set minute digits, each Press of <b>C</b> advances the alarm setting by 1 minute. Press <b>A</b> again to exit setting screen once hour and minute digits have been set. *If button <b>B</b> is pressed, the watch reverts to the regular timekeeping mode. (Quick digit advance) when button <b>C</b> is pressed for more than 2 seconds, the digit advances quickly. When released, digit advance will stop.
<b>Water Resistant</b>	Suitable for bathing, swimming, and showering. not for diving.	Not suitable for swimming, snorkelling or diving. *Do not fully submerge for long periods of time.
<b>LED Light</b>	In any mode Press <b>L</b> to illuminate display	