 


135541461 RH-1803A
黑白 20190403 Sainsbury's
第5页 方框三行

145.00 mm

210.00 mm

**phil.
smith**
BE GORGEOUS

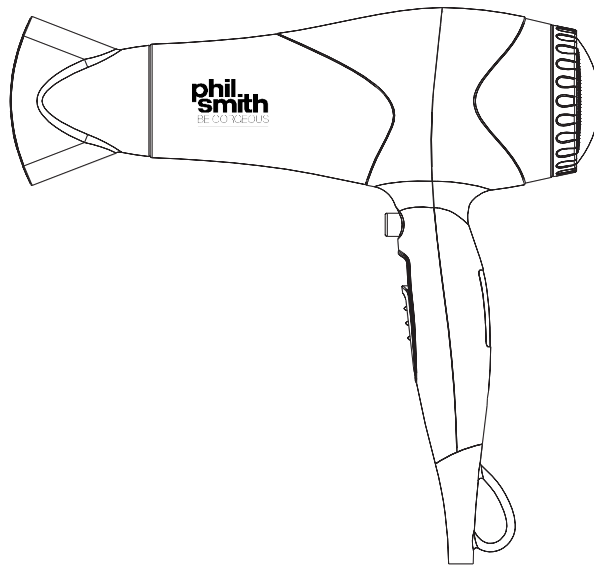

HAIR DRYER

Model: RH-1803A / SKU: 135541461 / CAT: 9328161

220-240V~ 50/60Hz 1800-2000W

 
FOR HOUSEHOLD AND INDOOR USE ONLY

Please read these instructions before use and retain for future reference



Issue 1 05/19






ELECTRICAL SAFETY

- Switch off and unplug when not in use and before cleaning the appliance.
- Do not leave unattended whilst connected to the mains supply.
- Children should be supervised to ensure they do not play with the appliance, and the appliance and cables should be kept completely out of reach of young children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep dryer, cable and plug dry and away from areas where they are likely to get splashed. Never immerse in water.
- When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk even when switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- **WARNING:** do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not pull on the cables to disconnect from mains supply.
- Keep appliance and cable away from heat, sharp objects or anything that may cause damage. Ensure all ventilation slots, grilles etc are kept clear of debris and foreign objects.
- Do not operate the appliance if dropped, shows signs of damage or after it malfunctions. In the event the supply cord is damaged, it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.

ADDITIONAL SAFETY PRECAUTIONS - WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Always ensure hands are dry before using the hairdryer, touching the plug or the socket. Do not use whilst bathing.
- Always check the cable carefully for kinks, fraying or damage (particularly where it enters the product and the plug) before plugging in the hairdryer. Do not use the hairdryer if the cable is damaged.
- The hairdryer becomes HOT in use. Take care to avoid contact between the hot surfaces and the skin, particularly around the ears, face and neck.
- Do not rest the hairdryer on non-heat resistant surfaces or near flammable materials whilst it is in use or cooling down.
- The hairdryer should NEVER be stored whilst hot or whilst still connected to the mains. Always switch off appliance, unplug from the mains and allow to cool fully (e.g. 30 mins) before storing.
- Do not wind the cable tightly around the appliance when storing. Do not hang up by the power cord.
- Keep your hair away from the immediate vicinity of the air inlet opening.
- Do not obstruct the air inlet or outlet. In the event that the air inlet is blocked, the appliance will cut off when the heating elements become too hot – if this happens, switch off, unplug and allow the hairdryer to cool. Ensure obstruction is removed before trying hairdryer again.
- Do not use the hairdryer on artificial hair or wigs.
- Trip hazard beware of trailing cables when in use and while in storage.
- Cord entanglement hazard. The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed. You must make sure that the electric cable is positioned safely.

 PARTS

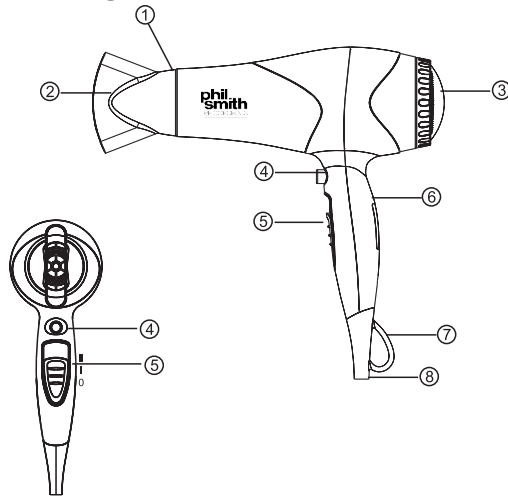

1. Concentrator nozzle
2. Nozzle / air outlet grille
3. Air inlet grille
4. Cool-shot button
5. Power switch
6. Handle
7. Hanger
8. Supply cord

HAIRDRYER USE

The hairdryer is suitable to dry damp and wet hair. For best results wash and towel-dry and then comb or brush the hair to untangle. To minimise heat damage to the hair, try the lowest temperature setting first. Do not try to dry too much hair at any one time. The thinner the lock of hair that is dried, the quicker it will dry.

1. Fully unwind the mains cable.
2. If required fit the concentrator nozzle. Small sections of hair can be dried by concentrating the flow of air using the concentrator nozzle.
3. With dry hands, ensure that the power switch is set to the off position (0), then plug the hair dryer into the mains supply and switch on at the socket.
4. Select the required airflow and heat setting power switch:-
Position 0 – off
Position I – gentle air flow and low temperature for styling
Position II – high airflow and high temperature for quick drying
5. Cool-shot button (☼) – once the hair is dry use this button to produce a cool stream of air to lock in the style.

CLEANING & MAINTENANCE

Keep the hair dryer clean and free of styling products.

1. Switch off, unplug and always allow the hair dryer to cool before storing or cleaning.
2. Do not wrap the mains cable around the appliance when storing as this may damage the cable in the long term. The hair dryer may be hung from the hanging loop when not in use.
3. Turn the inlet grille to open position, take off and use a soft dry brush may be used to remove dust and hairs from the air inlet grille to ensure proper airflow at all times.
4. Wipe the outside of the hair dryer body and cable with a damp cloth and then wipe dry. Do not use detergent or abrasives as this may scratch the surface. Never immerse the hair dryer, cable or plug in water.
5. Regularly check the mains cable for wear or damage, particularly where it enters the product and plug. Do not use if damaged.
6. Should it become necessary to replace the fuse in the plug, please replace with a **13A fuse** that conforms with BS 1362.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

We care about our quality and what you think,
If you have any comments, good and bad,
Please call our Careline 0800 636 262
or visit www.sainsburys.co.uk
Your statutory rights are not affected.

Produced in China for and imported
by Sainsbury's Supermarkets Ltd,
London, EC1N 2HT

