## **\*\*STANDARD DISPLAY AND BUTTON FUNCTION\*\***

Operate and adjust the watch according to the following indications on the screen. SIGN INDICATION/BUTTON POSITION/FUNCTION



A (heat) Her: ALARM ON

A AM :MORNING TIME P PM :AFTERNOON TIME

L-LIGHT :COLD LIGHT BUTTON (with 3-second delay function)
M-MODE :FUNCTION SELECT

ON/OFF BUTTON
R-RESET: TIME ADJUST BUTTON
ALARM TIME DISPLAY
STOPWATCH RESET BUTTON BUTTON STOPWATCH RESE

NOTE: Different models have different designs, but have same functions and operation ways.

## **\*\*FUNCTION AND SPECIFICATION\*\***

- 1. Standard display: hour, minute, second, month, date, week second, month, date, week sound in the stage time stage time
- S. Degree of accuracy at normal temperature: ±60 seconds per month
  9. Bartery: 1. 5V high-capacity alkaline Zn-Mu button battery
  10. Life of battery: able to supply power for 18 months under the following situation

10:50

S-START: DIGIT CAPPY SUTTON

DATE DISPLAY BUTTON

 
STOPWATCH TIMEKEEPING

- - One illumination operation per day
  - One alarm operation per day

-1)-

## **\* OPERATION \***

Press "M" button, the mode would change in turn as following:



M\*:When operating in "Stopwatch Function Operation Mode" or "Alarm Time Adjust Mode", if "S" or "R" button was pressed before, by pressing "M" button can back to "Normal Time Display Mode" directly.

■In "Normal Time Display Mode": press "S" button to display date: press "R" button to display

"In "Normal Time Display Mode": press "S" button to display date; press "R" button to display alarm time.

\*\*In "Normal Time Display: In "Normal Time Display Mode". press "M" dirice to enter into "Time Adjust State", press "R" button twice to enter into "Hour Adjust State", then press "S" button until 12/24 Time System display on screen, and then press "M" once to back to "Normal Time Display Mode".

\*\*Jime Adjust State", press "S" to adjust second value press "M" intince to enter into "Time Adjust State", the second value bithis, press "S" to adjust second value bithis, press "S" to adjust minute value; then press "R" and "S" respectively to adjust hour value, date, month, week; and then press "M" to back to normal mode.

\*\*Alarm Time Setting: in "Normal Time Display Mode", press "M" button twice, then press "S" to set the hour value; press "R" once, then press "S" again to set the minute value; press "M" to back to normal mode.

\*\*Jime Adjust State", press "S" button to start timekceping, press "S" again to stop timekceping, the count value would display on the screen; Press "R" button to reset, press "M" button to back to "Normal Time Display Mode".

\*\*Jime Value "Adjust Display "Adjust Display "Adjust Display "Adjust Display "Adjust Display "Adj

-2-

●Cold Light Lamp: press "L" bu cold light with 3-second time term use of cold light would be

> The enterprise has I ISO9001:2 008 Qualit System Verifica:



