

# English

## CALENDAR SETTING



- With a pen press **S2** TWICE to show the month.
- Press **S1** to change the month.
- Press **S2** ONCE again to display the day.
- Press **S1** to change the day.

 
## TIME SETTING



- Press **S2** ONCE again, which is the fourth time now, to show hour with 'A' for AM and 'P' for PM.
- Press **S1** to change hour and AM or PM.

- Press **S2** ONCE again to show the minutes.
- Press **S1** to change the minutes.
- Press **S2** ONCE again to show the correct time.
- Press **S1** ONCE again to start watch. Blinking dots indicate watch is running.

- DO NOT REPLACE BATTERY
- DO NOT WEAR IF CASE BACK IS MISSING OR DISASSEMBLED
- THIS WATCH IS NOT WATER RESISTANT



### User Guide

How to Light Up:

For LCD Style only

1. Press button "**S1,S2**" for set time.
2. Press button "**A**" once, **Flashing lights** will be shown.