

White ball string lights

12 warm white LED lights.

Length: 2m.

Requires 2 x 1.5V AA batteries (not included).

Care and use

- Household and indoor use only • For decorative use, not intended to light up a room • Ensure the cable is completely unravelled and positioned so it's not a tripping or entrapment hazard • Clean with a soft dry cloth • On/off switch is located on the bottom of the battery compartment • Battery replacement: Use a suitable screwdriver to remove the safety screw and open the battery compartment cover. Place batteries into the compartment, making sure they follow the directions in the inside of the battery compartment. Check that you have the correct polarity (+ and -). Refit the compartment cover and safety screw

- CAUTION - TO PREVENT BATTERY LEAKAGE. Be sure to insert batteries correctly and always follow the product and battery manufacturers' instructions. Never mix old and new batteries (replace all batteries at the same time). Never mix alkaline, standard (Carbon Zinc) or rechargeable batteries. Use only batteries of the same or equivalent type as recommended • Dispose of used batteries safely (at a battery collection point if available)

Warnings

- Keep out of reach of small children • Warning! Long cords becoming a long loop when fitted - strangulation hazard • Hang high out of the reach of children • Do not use as a decoration on or around a child's cot or bed • Never look directly into the LED light source • The cable on this decoration cannot be replaced; if the cable becomes damaged, the

product should be discarded • THIS IS NOT A TOY - children must be supervised when near this decoration

- Keep away from heat and sources of ignition • Do not cover. Keep away from curtains, bedding etc.

BATTERY SAFETY

- Batteries should be installed by an adult only • Do not re-charge non-rechargeable batteries • Always remove exhausted or dead batteries from the product; do not dispose of in fire • Remove batteries from product before extended storage • Do not short circuit the supply terminals • Batteries may explode or leak if misused • Please retain this information for future reference



Recycling electrical products: You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk click on "bank locator" and enter your postcode to find your nearest recycling site.

Produced in China. Sainsbury's Supermarkets Ltd. Argos Limited, London, EC1M 6HA, UK. [Sainsbury's \(NI\) Ltd](http://Sainsbury's(NI)Ltd) and Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

help.sainsburys.co.uk/help/contact-us

argos.co.uk/help/contact-us



1225

