
# Suki

## habitat®

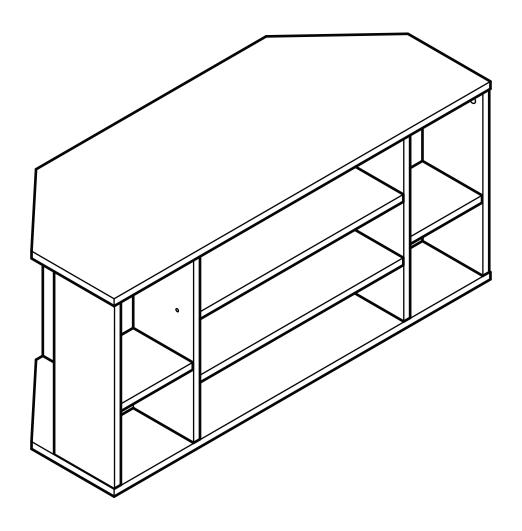

### **Spare Parts**

- www.argos-support.co.uk
- Help@ClickSpares.co.uk
- 0370 112 1928

### **Customer Support**

0345 640 2020



## Safety and Care Advice

#### **Product Details**

Suki Corner TV Unit 940/7879, 609/7426, 392/4970

#### IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



• We do not recommend the use of power drill/drivers for inserting screws

as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

#### WARNING


In order to prevent overturning this product must be used with the wall attachment device provided.

#### Additional Guidance


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tighten properly.
- This product is compliant BS4875-7 level 3

## Fittings (Shown to scale)

### Bag 1

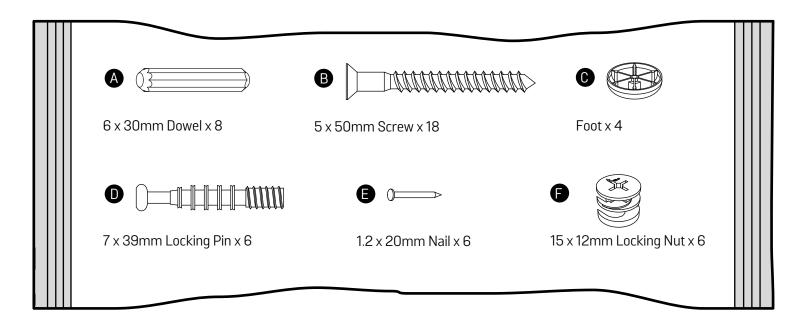

## **Tools required**

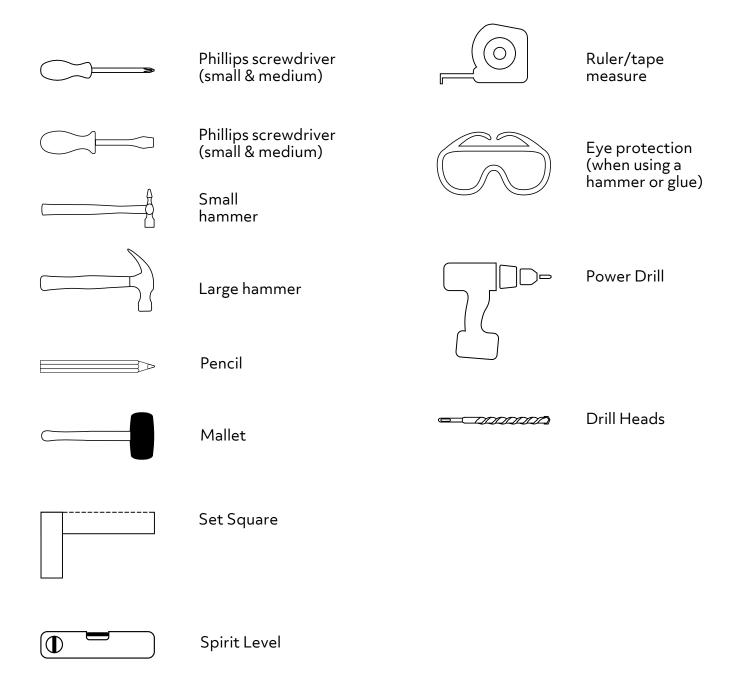

### **Panels**

