

CARE AND USE GUIDE

VACUUM INSULATED GLASS LINED FLASK



NOT RECOMMENDED FOR CHILDREN



WARNING:
GLASS BREAKAGE CAN
CAUSE CUTS OR BURNS

IMPORTANT SAFEGUARDS

This Genuine Thermos Brand glass vacuum insulated product is designed for safe use. With all glass vacuum insulated products, certain safeguards must be followed to prevent breakage. Glass vacuum insulated product breakage can be accompanied by a loud noise and can cause glass and contents to eject forcefully. The warranty does not cover glass or capillary breakage caused by the customer or damage that occurs due to improper use. The warranty is also not valid in cases of faults or defects arising from repairs or modifications implemented by unauthorised third parties.

WARNINGS

- Glass breakage can cause burns or cuts to the eyes, face, and hands.
- NOT RECOMMENDED FOR USE BY CHILDREN: Keep out of the reach of children, especially when product contains hot contents, which may burn or scald user.
- DO NOT put hands, cleaning tools, or other object including, but

not limited to cutlery, into container.

- DO NOT use to carry or store ice cubes. Anything other than liquid can cause glass breakage.
- DO NOT place product in a freezer.
- Glass liners are fragile. If mishandled or dropped, the liner may break. Do not drink directly from the container as the contents could contain broken glass, especially if there are signs of leaks.
- Always check glass liner for breakage or cracks before each use.
- For maximum thermal efficiency and to reduce risk of glass liner breakage, preheat or pre-chill product just prior to use. Fill with hot/cold tap water, attach lid, let stand 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.
- DO NOT use product in microwave, on a drip coffee maker, on stove top, or in any type of oven.
- Periodically twist-tighten base to prevent from coming off.
- DO NOT overfill container: Leave space at top of container for lid and stopper (if present) to avoid overflow. Hot contents may burn or scald user if overflow occurs.
- Always test temperature of contents before consuming.
- DO NOT look directly into product when filling; keep at arm's length.
- After filling, always ensure stopper is securely tightened.

- DO NOT stir contents.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through stopper when stopper is closed. Missing, worn or misaligned gasket may cause product to leak. Leakage of hot contents may burn or scald user.
- In general, contents should not be left in container for longer than 24 hours, however, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy and/or tomato may start to spoil sooner. Proceed with caution when using the product with quick spoiling contents.
- If contents are left in the container for longer than 24 hours, or you suspect spoilage, use caution when opening container. Contents spoilage can cause pressure inside container to build, possibly leading to forceful ejection of stopper or contents. In such circumstances, before attempting to open container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.

GENERAL CARE


- Before first use and as soon as possible after each use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry. Store with stopper off. Using any other methods of cleaning may damage glass liner and cause glass to break or implode.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Allow parts to dry completely prior to next use or shortage.
- DO NOT use abrasive soaps, scouring pads, brushes, or other objects to clean inside of container.
- DO NOT use abrasive cleaners or scrubbers to clean outside of product since they may dull finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of product.
- HANDWASH ONLY - this product is not dishwasher safe.
- DO NOT immerse or soak in water for prolonged periods of time. Residual contents may become trapped between parts, under gaskets (flexible band around lid and/or stopper), or in straws. Hand washing is recommended to ensure that these parts of the product are thoroughly cleaned.
- For maximum thermal efficiency and to reduce risk of glass liner breakage, preheat or pre-chill product just prior to use. Fill with

hot/cold tap water, attach lid, let stand for 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.

ASSEMBLY & USE

Twist-And-Pour Stopper:

1. Remove lid-cup (A) by twisting anticlockwise. Then, remove twist-and-pour stopper (B) by twisting anticlockwise.
2. Wash all parts separately.
3. Fill container (C) with contents. Do not overfill. Leave space for the twist-and-pour stopper (B), to avoid overflow.
4. Reassemble twist-and-pour stopper (B) in container (C).
5. To pour, rotate twist-and-pour stopper (B) anticlockwise 1/2 - 1 turn. Orient product

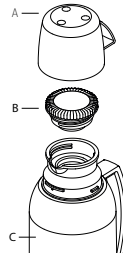

* Image for reference only: actual product may vary

so pour indicator is pointing down while pouring into lid-cup (A). Note: twist-and-pour stopper (B) does not need to be removed completely to pour contents.

6. Secure twist-and-pour stopper (B) by twisting clockwise until tightly closed.
7. Replace lid-cup (A) by twisting until tightly closed.
8. After filling, always ensure both twist-and-pour stopper (B) and lid-cup (A) are closed and secured tightly to product.

LIMITED WARRANTY

This warranty is given by UK Thermos Limited.

This warranty only applies to Thermos brand products manufactured by or under our licence from us and which have been purchased from a retail outlet within the United Kingdom. For consumers, the benefits conferred by this warranty are in addition to all rights and remedies provided to consumers under consumer protection laws. This warranty does not exclude, limit, vary or otherwise affect any of your legal rights as a consumer. Our obligations under this warranty are limited to the terms set out below.

We warrant this Thermos brand product to be free from defects in material or workmanship under normal use in accordance with any user instructions accompanying this product for one year from the date of original purchase (the "warranty period"). If any

such defect arises and a valid claim is received within the warranty period we will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. Nothing in this warranty excludes our liability for defective products under the Consumer Protection Act 1987. Subject to the foregoing and except where this Thermos brand product has been purchased by a consumer, all and any liability on our part for any loss of profits, revenues, use, savings, contracts, goodwill or any indirect, special, incidental, consequential loss or damage are excluded to the maximum extent permitted by applicable law. Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you. For information on returning a defective product under this warranty, please contact our customer careline.

THERMOS is a registered trademark in over 115 countries.

UK Thermos LTD, Albany House, 214A Leeds Road, Leeds, LS26 0JF
www.thermos.co.uk
customer.service@thermos.co.uk
 (EU Rep) N.I. Thermos LTD, 3 Bedford Square, Belfast, BT2 7EP
www.eu.thermos.global
contact@eu.thermos.global

- DO NOT stir contents.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through stopper when stopper is closed. Missing, worn or misaligned gasket may cause product to leak. Leakage of hot contents may burn or scald user.
- In general, contents should not be left in container for longer than 24 hours, however, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy and/or tomato may start to spoil sooner. Proceed with caution when using the product with quick spoiling contents.
- If contents are left in the container for longer than 24 hours, or you suspect spoilage, use caution when opening container. Contents spoilage can cause pressure inside container to build, possibly leading to forceful ejection of stopper or contents. In such circumstances, before attempting to open container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.

GENERAL CARE


- Before first use and as soon as possible after each use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry. Store with stopper off. Using any other methods of cleaning may damage glass liner and cause glass to break or implode.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Allow parts to dry completely prior to next use or shortage.
- DO NOT use abrasive soaps, scouring pads, brushes, or other objects to clean inside of container.
- DO NOT use abrasive cleaners or scrubbers to clean outside of product since they may dull finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of product.
- HANDWASH ONLY - this product is not dishwasher safe.
- DO NOT immerse or soak in water for prolonged periods of time. Residual contents may become trapped between parts, under gaskets (flexible band around lid and/or stopper), or in straws. Hand washing is recommended to ensure that these parts of the product are thoroughly cleaned.
- For maximum thermal efficiency and to reduce risk of glass liner breakage, preheat or pre-chill product just prior to use. Fill with

hot/cold tap water, attach lid, let stand for 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.

ASSEMBLY & USE

Twist-And-Pour Stopper:

1. Remove lid-cup (A) by twisting anticlockwise. Then, remove twist-and-pour stopper (B) by twisting anticlockwise.
2. Wash all parts separately.
3. Fill container (C) with contents. Do not overfill: Leave space for the twist-and-pour stopper (B), to avoid overflow.
4. Reassemble twist-and-pour stopper (B) in container (C).
5. To pour, rotate twist-and-pour stopper (B) anticlockwise 1/2 - 1 turn. Orient product

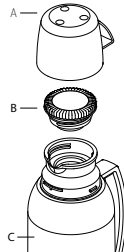

* Image for reference only: actual product may vary

so pour indicator is pointing down while pouring into lid-cup (A). Note: twist-and-pour stopper (B) does not need to be removed completely to pour contents.

6. Secure twist-and-pour stopper (B) by twisting clockwise until tightly closed.
7. Replace lid-cup (A) by twisting until tightly closed.
8. After filling, always ensure both twist-and-pour stopper (B) and lid-cup (A) are closed and secured tightly to product.

LIMITED WARRANTY

This warranty is given by UK Thermos Limited.

This warranty only applies to Thermos brand products manufactured by or under our licence from us and which have been purchased from a retail outlet within the United Kingdom.

For consumers, the benefits conferred by this warranty are in addition to all rights and remedies provided to consumers under consumer protection laws. This warranty does not exclude, limit, vary or otherwise affect any of your legal rights as a consumer. Our obligations under this warranty are limited to the terms set out below.

We warrant this Thermos brand product to be free from defects in material or workmanship under normal use in accordance with any user instructions accompanying this product for one year from the date of original purchase (the "warranty period"). If any

such defect arises and a valid claim is received within the warranty period we will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. Nothing in this warranty excludes our liability for defective products under the Consumer Protection Act 1987. Subject to the foregoing and except where this Thermos brand product has been purchased by a consumer, all and any liability on our part for any loss of profits, revenues, use, savings, contracts, goodwill or any indirect, special, incidental, consequential loss or damage are excluded to the maximum extent permitted by applicable law. Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you. For information on returning a defective product under this warranty, please contact our customer careline.

THERMOS is a registered trademark in over 115 countries.

UK Thermos LTD, Albany House, 214A Leeds Road, Leeds, LS26 0JF
www.thermos.co.uk
customer.service@thermos.co.uk
 (EU Rep) N.I. Thermos LTD, 3 Bedford Square, Belfast, BT2 7EP
www.eu.thermos.global
contact@eu.thermos.global