


Cocoland®

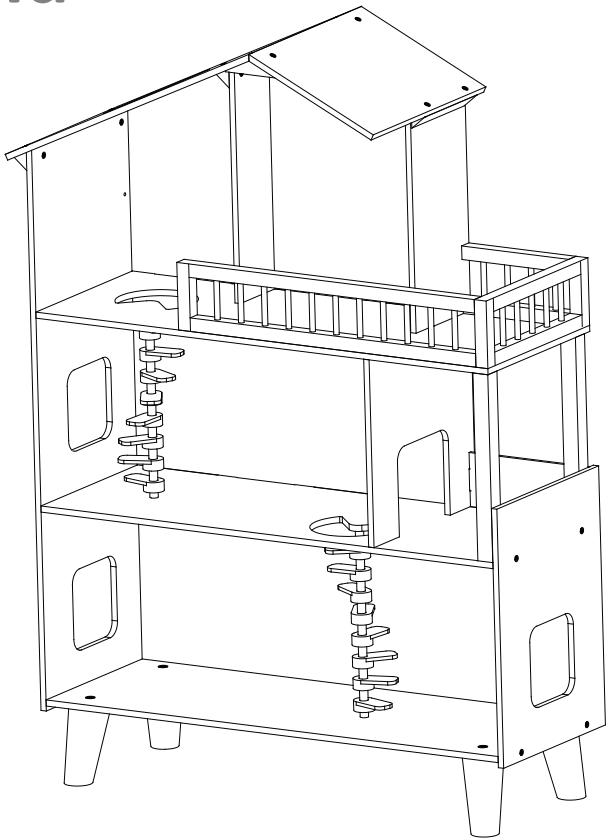

Important  
Age: 3+ years

Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.  
If you need help or have damaged or missing parts, call the Customer Helpline: 0345 604 0105

Issue 1 - 16/04/21

Safety Information

Important – Please read these instructions fully before assembly or use


- General safety
- Adult assembly required!
  - Before use, please ensure the item is on a stable and level surface.
  - Do not use the item if any part is broken or missing.
  - Young children in play are unaware of potential dangers and hazards, therefore responsible adult supervision is essential.
  - Wipe clean only with a soft cloth.
  - Caution ! Product should be used only for the purpose for which it was designed. Children should not stand or climb on the product.

- Warning
- Keep small parts out of the reach of children under 36 months because of possible choking hazard.
  - Warning ! Not suitable for children under 36 months due to small parts - choking hazard. Must be secured using a screwdriver.

Parts

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 604 0105


Please check you have all the parts and fittings listed below

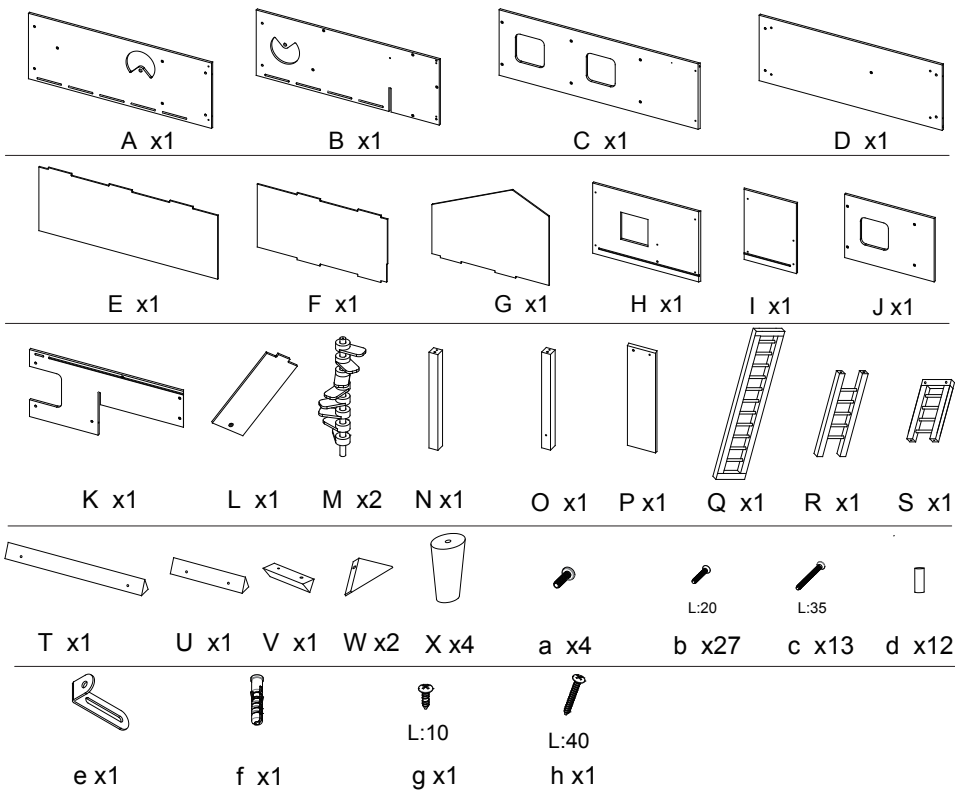


Note: Each style screw quantity listed above shows the correct amount to complete the assembly. In some cases more fittings may be supplied than required.

Assembly Instructions

Step 1:

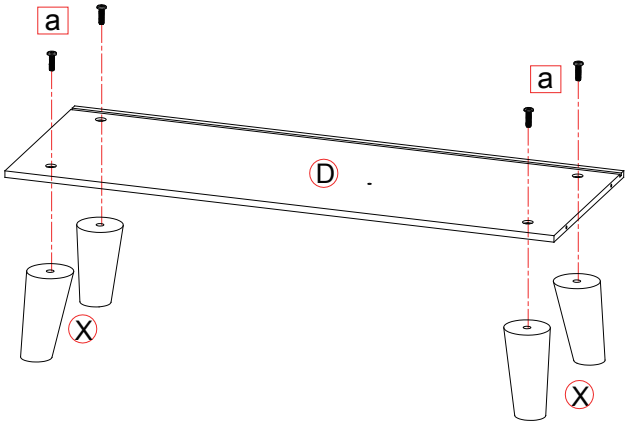


Step 2:

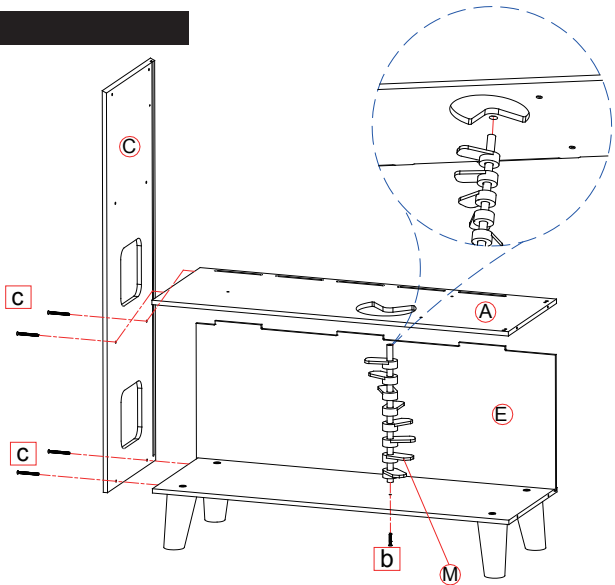


Assembly Instructions

Step 3:

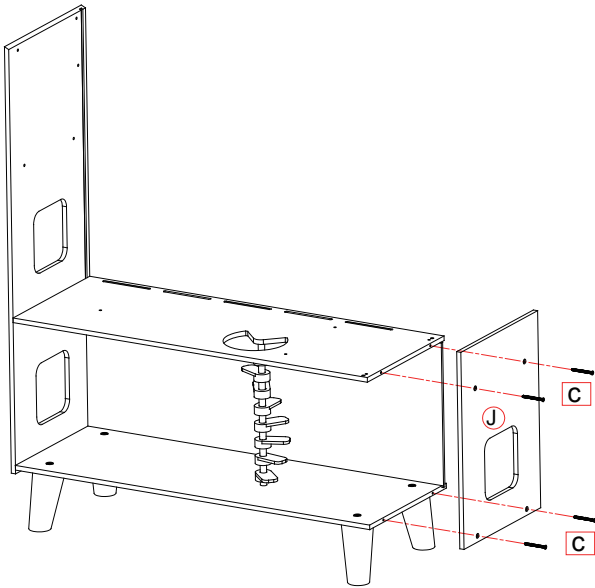


Step 4:

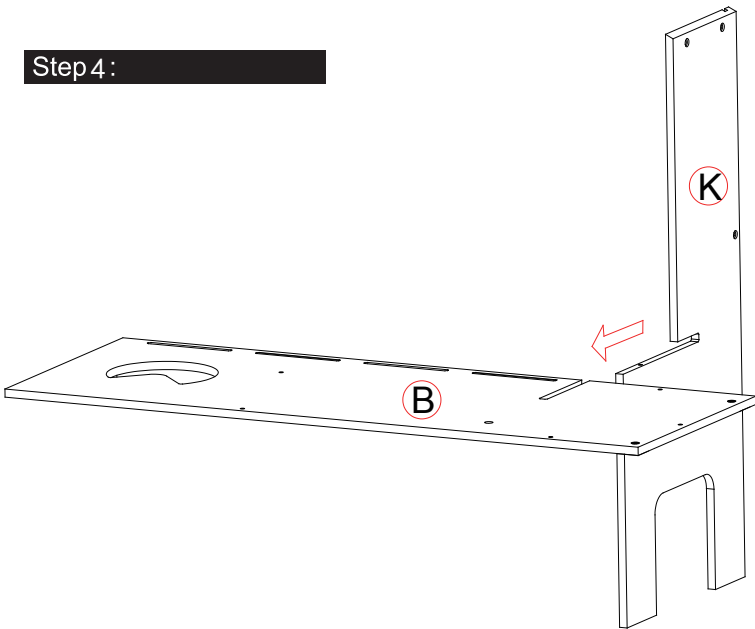


Assembly Instructions

Step 5:

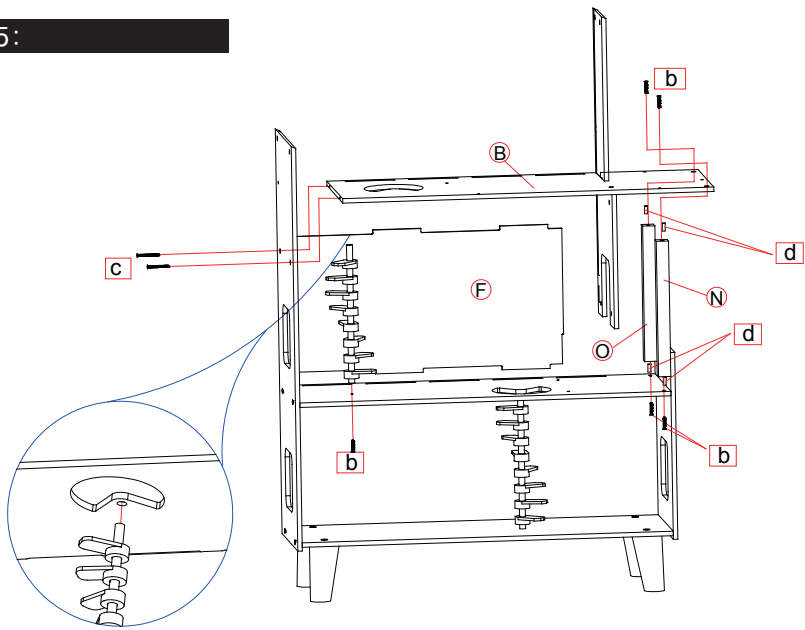


Step 6:

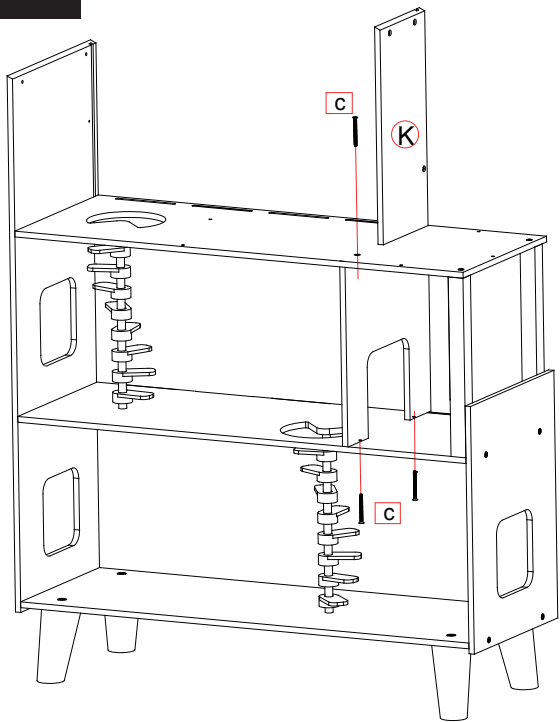


5

Assembly Instructions

Step 9:

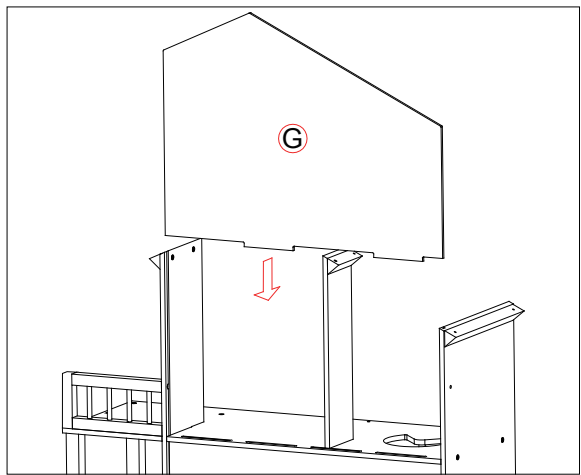


Step 10:

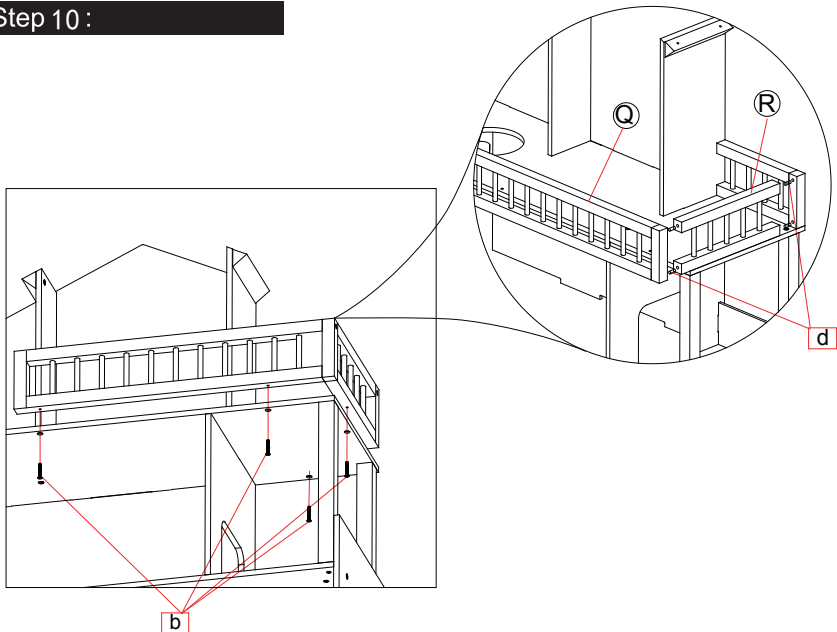


7

Assembly Instructions

Step 7:

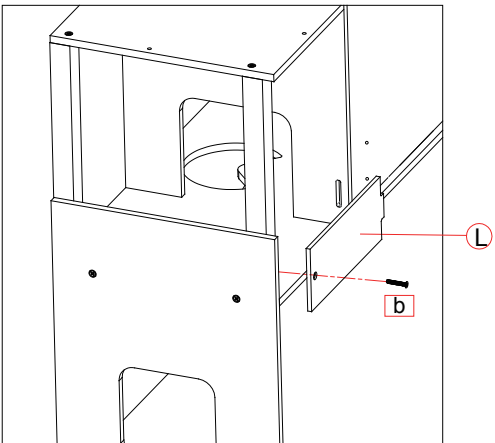


Step 8:

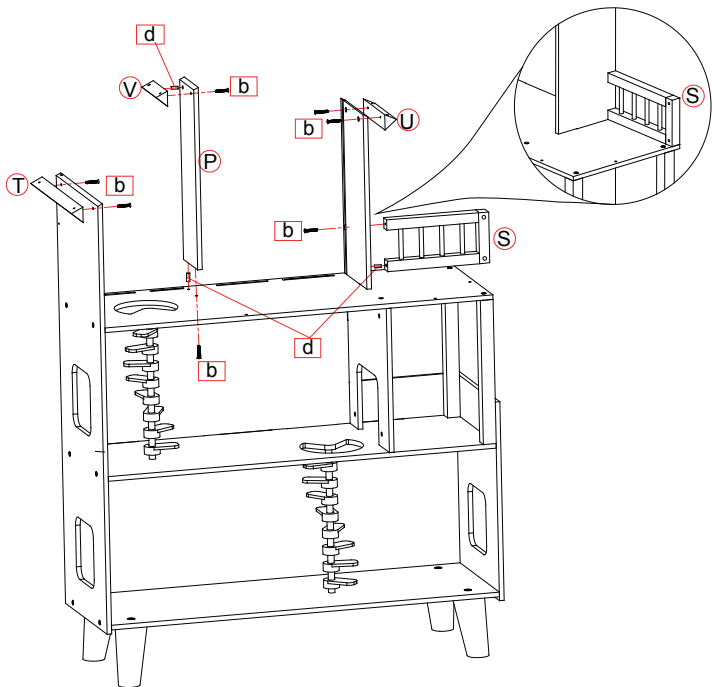


6

Assembly Instructions

Step 11:

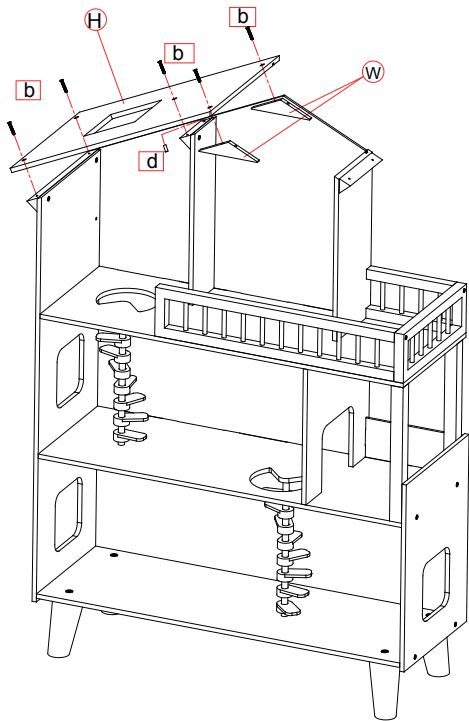


Step 12:

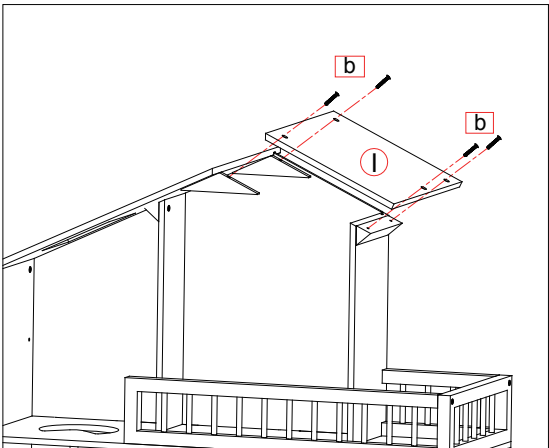

8

# Assembly Instructions


## Step 13 :

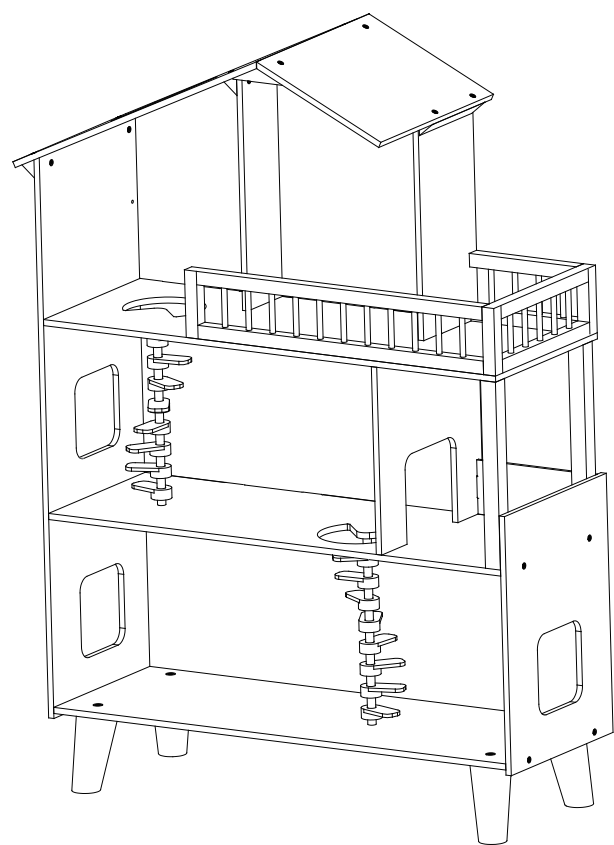

9

## Step 14 :

Optional : Secure the doll house to a wall.

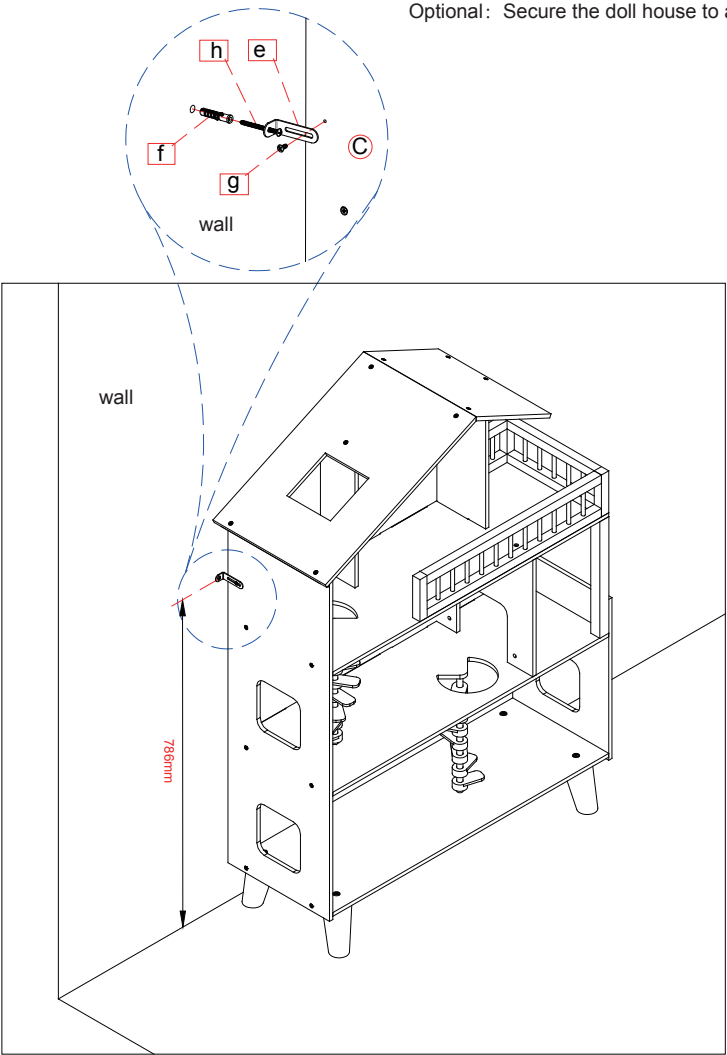

10

## Care and Maintenance

- Periodically check all fittings to ensure that none have come loose.
- Any loose fittings must be tightened using the correct tool.



Not suitable for children under 3 years  
due to small parts, choking hazard.

If you need help or have damaged or missing parts, call the **Customer Helpline:** 0345 604 0105  
Produced for Chad Valley Toys. *Country of origin:* Made in China.  
Address: 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW.  
[www.argos.co.uk/chadvalley](http://www.argos.co.uk/chadvalley)