
## BASE CAMP TV GAMING BED

#### **IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE**

**X**Rocker

Watch the unboxing video here!



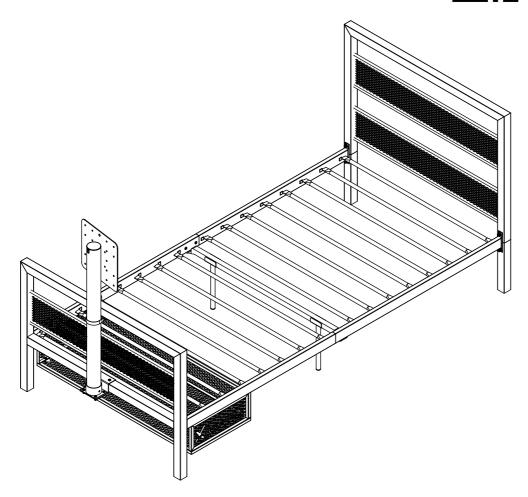

#### **Dimensions**

Width - 205 cm Depth - 95.7 cm Height -108.6 cm

**Need Help?** Contact X Rocker at: www.xrockeruk.com/pages/support

**IMPORTANT**: You must keep your original retail receipt as proof of purchase.



## Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, Small parts may cause a choking hazard.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Dispose of all packaging carefully and responsibly.
- Place the product on a flat and steady surface during use.

- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Keep these instructions for further use.
- To ensure an easier assembly we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.


#### Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

# Components - Panels


Please check you have all the panels listed below


### **PARTS**

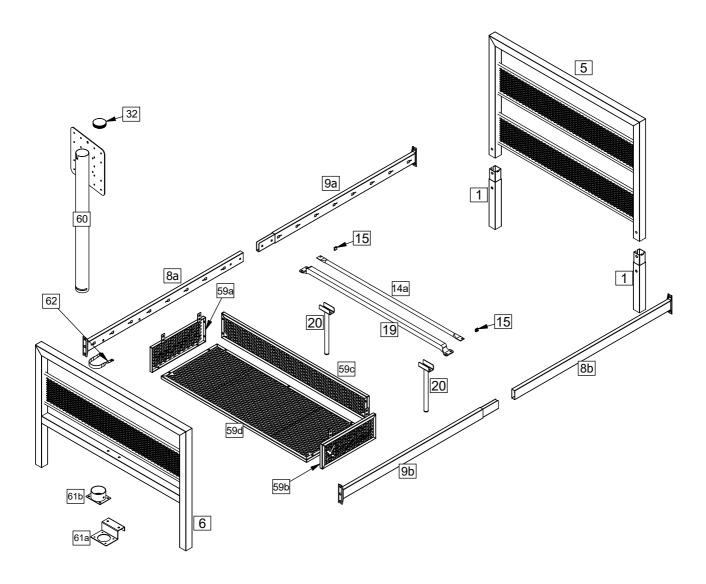


# Components - Panels

### Please check you have all the panels listed below

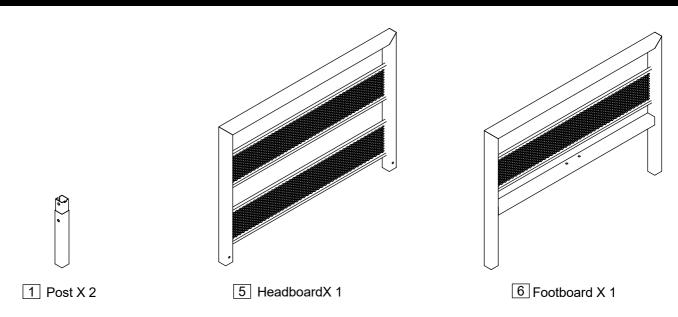


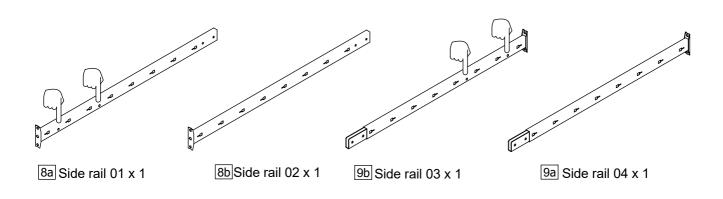

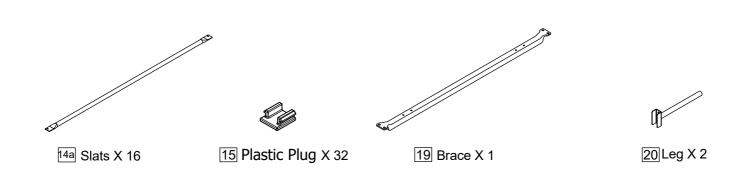

# Components - Panels

### Please check you have all the panels listed below

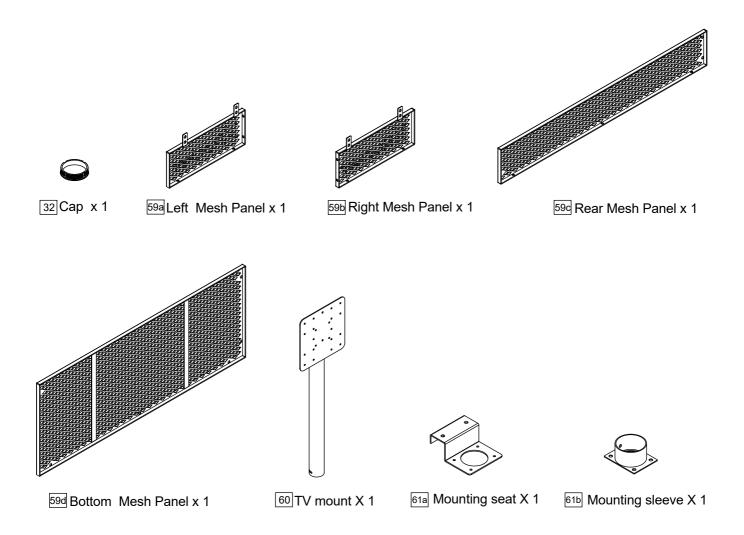




## Components - Fittings

#### Please check you have all the panels listed below


**Note**: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

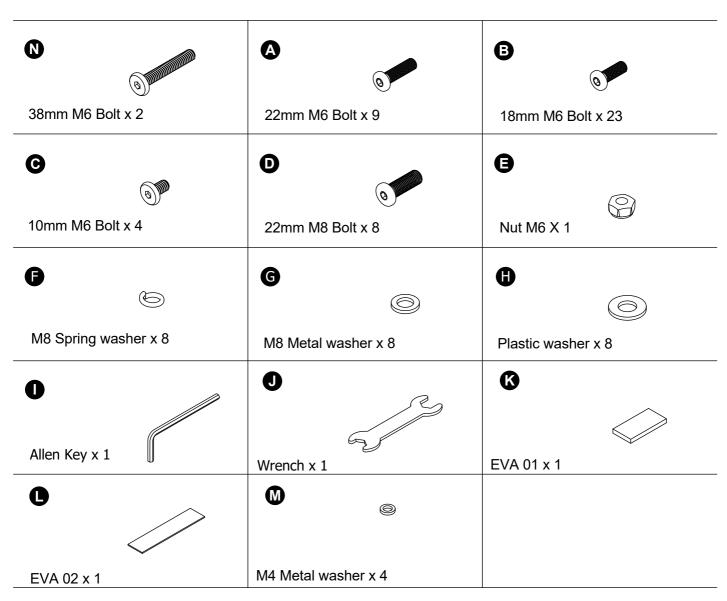

#### Tools required


Ruler/tape measure


## 

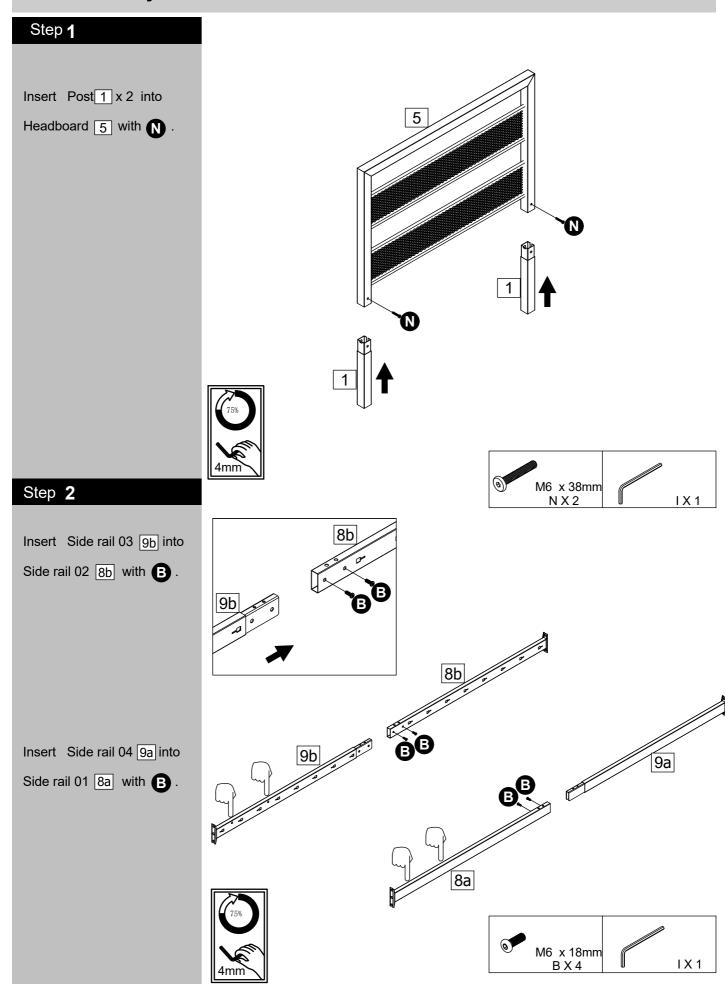

### Step 3

 
Attach Leg 20x 2 to Brace
19 with A.

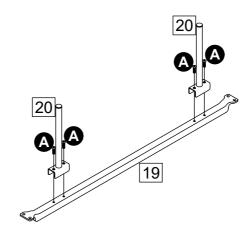




### Step 4

Attach Brace 19 to Side rail 01 8a and Side rail 02 8b with (A).

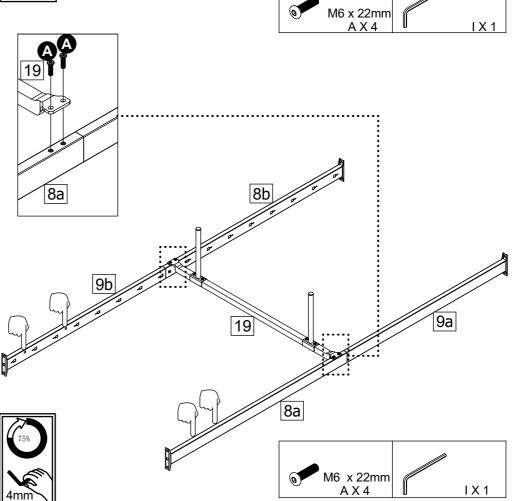

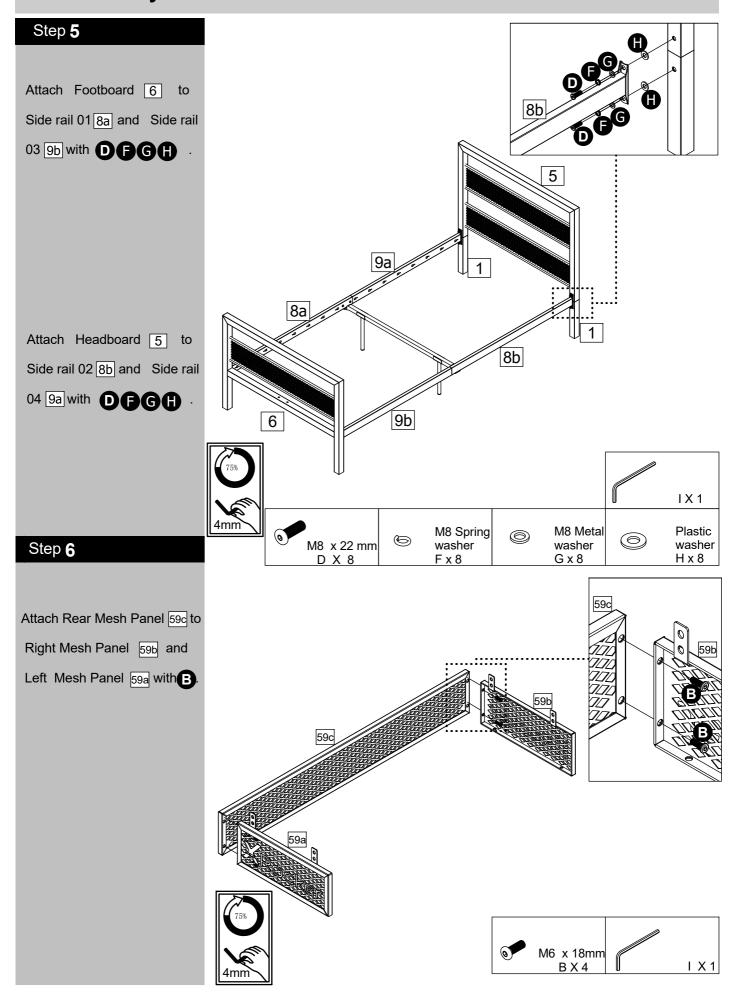

### Step 7

Attach Bottom Mesh Panel

59d to Right Mesh Panel


59b

/Left Mesh Panel

59a

and


rear Mesh Panel 59c with B

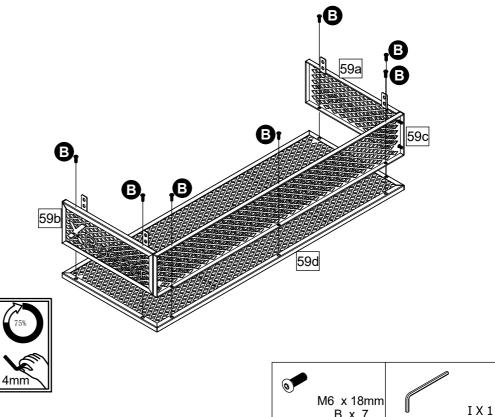

### Step 8

Attach Right Mesh Panel 59b to Side rail 03 9b and Left Mesh Panel 59a to Side rail 01 8a with **B**.


- For devices that are less than 14.5cm in height (laid horizontally) attach the mesh panel using the lower bolt hole.
- For devices that exceed 14.5cm (up to 16.5cm) or those that require extra clearance, attach the mesh panel using the upper bolt hole.

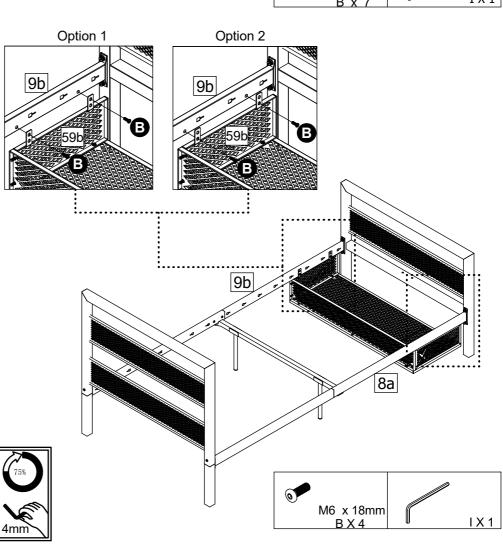

### Step 9


a: Secure the slats 14a x24 to Side rail 018a/Side rail 028b /Side rail 039b and Side rail 049a

b: Secure the plastic plug 15 x48 to Side rail 01 8a /Side rail 02 8b /Side rail 03 9b and Side rail 04 9a

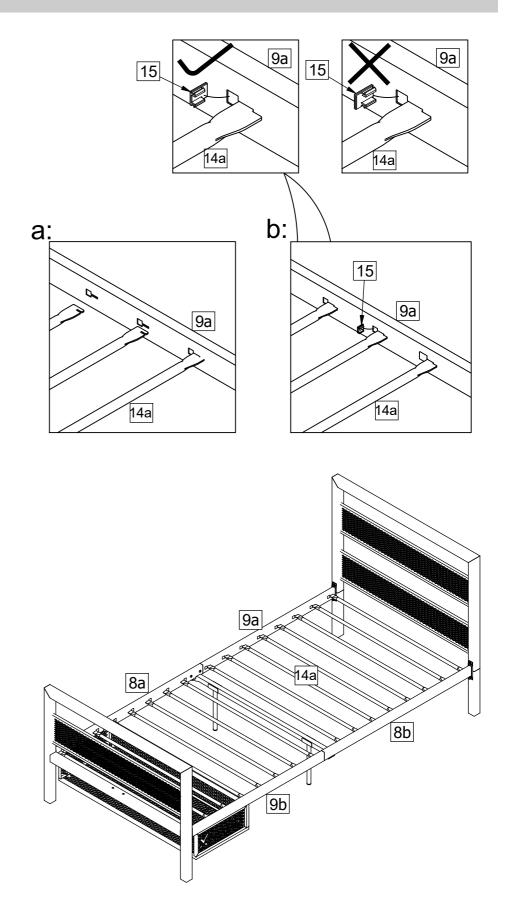


### Step **10**

Attach EVA 01 to the middle of footboard 6 as shown.

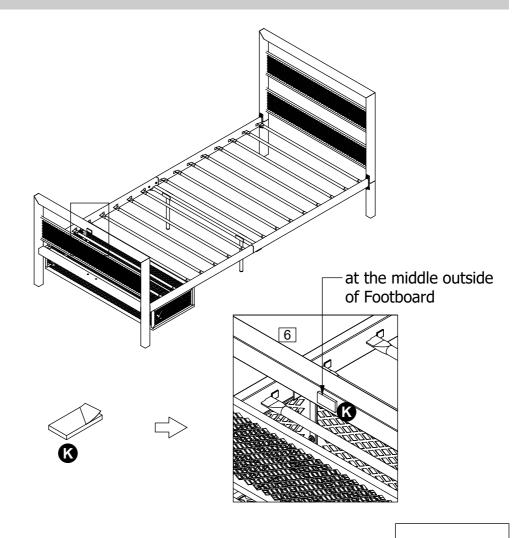


### Step **11**

Attach EVA 02 to the middle of buckle 62 as shown.

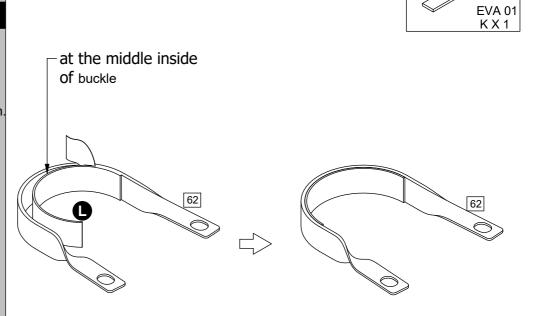



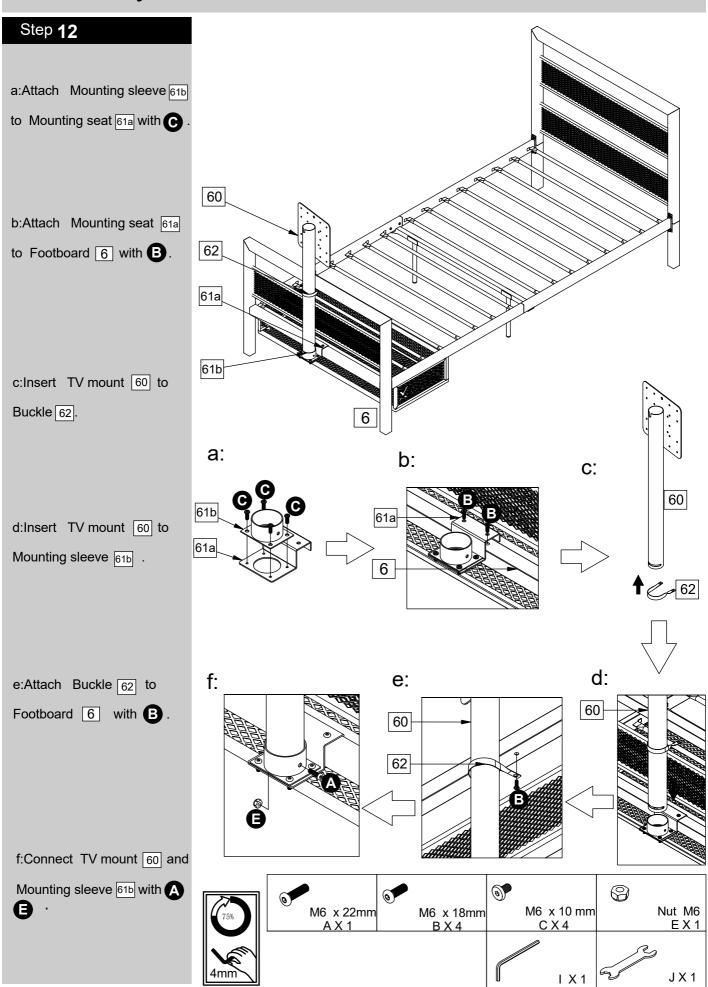


### Step **13**

a: Cable (not provided) to pass through the TV mount


from top of the pole.


Please note: A minimum power cable length of 1.4m is required to connect the mounted TV to the undercarriage of the bed.


Please check your TV cable length before installation to ensure fit.

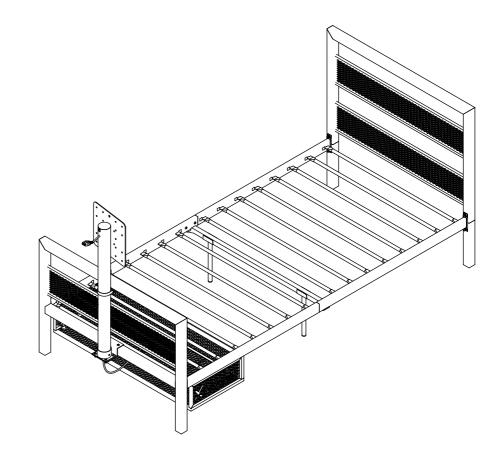

 b. Cover the pole of TV mount60 with cap 32.



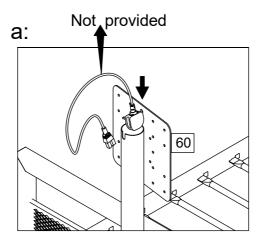

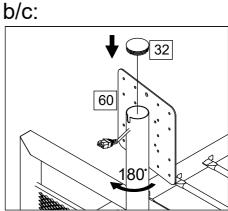

Note 1: The TV mount mates with M6 screw.

If you're using M4 screw to assemble the TV screen, please use part M washer as provided to make sure M4 screw could be also workable for it.



Note 2: If the TV pole can't be rotated freely, please loosen Screw (A) in step 12 (f) a little.

Do not 100% tighten it.