




**EN** Instruction manual



### **SMART** Glass Panel Heater

01.348100.02.001/01.348101.02.001/01.348102.02.001  
01.348150.02.001/01.348151.02.001/01.348152.02.001  
01.348200.02.001/01.348201.02.001/01.348202.02.001

PARTS DESCRIPTION

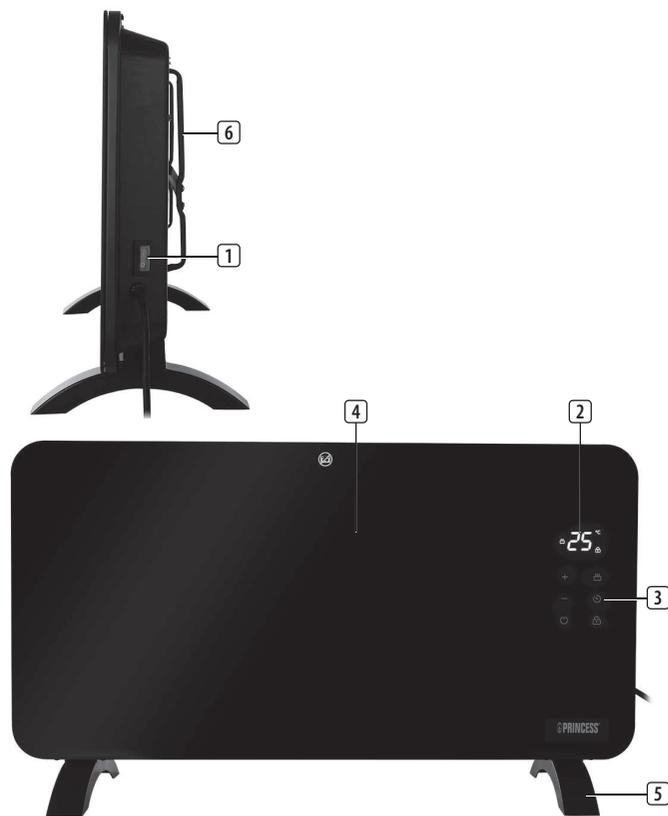

**SAFETY**

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the appliance unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- **WARNING:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

- Joists, beams and rafters shall not be cut or notched to install the appliance.
- Please do not install the appliance close to curtains and other combustible materials. This could cause a fire.
- The appliance shall, under no circumstances, be covered with insulating material or similar material.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater if it has been dropped.
- **WARNING:** The heater must not be used if the glass panels are damaged.
-  **WARNING:** In order to avoid overheating, do not cover the heater.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtain, or any other flammable material a minimum distance of 1m from the air outlet.

- The heater needs to be installed so that the switches and other controls cannot be touched by a person in the bath or shower.



This product complies with conformity requirements of the applicable European regulations or directives.



The Green Dot is the registered trademark of Der Grüne Punkt – Duales System Deutschland GmbH and is protected as a trademark worldwide. The logo may only be used by customers of DSD GmbH holding a valid trademark usage contract or by engaged waste management companies within the Federal Republic of Germany. This also applies to reproduction of the logo by third parties in a dictionary, an encyclopaedia or an electronic database containing a reference manual.

**IP24**

A product with an IP24 rating is protected from touch by fingers and objects greater than 12 millimeters. It is also protected from water spray from any direction.

**UK  
CA**

This product complies with conformity requirements of the applicable UK Regulations.



The universal recycling symbol, logo, or icon is an internationally recognized symbol used to designate recyclable materials. The recycling symbol is in the public domain and is not a trademark.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or local store for recycling advice.

## Installation

### Installation Foot assembly

- Before using the heater, check the feet on a horizontal surface. Make sure they stand flat on the surface. After that, the feet can be attached to the unit. (image 1)
- These are to be attached to the base of the heater using the 8 ST4x12mm screws provided. Check if the holes correctly align to the unit. Use a manual screwdriver to install the feet. Using an electric screwdriver exerts excessive pressure and could result in an uneven placement of the feet. (image 2)

- Take care to ensure that the feet are located correctly on the bottom end of the heater.
- The heater should stand vertically once the feet are installed (image 3). If the heater tilts backwards then please remove the feet and rotate them before fitting again. (image 4)



1

2




3

4

Wall mounting

EN

- Demount the bracket from the back of the device, by loosening the screws.
- Please note that the product must be installed at least 15 cm from the floor and 50 cm from the ceiling.
- Install the bracket with the provided screws. (image A)
- Drill the holes in the wall on each side, then insert the plastic expanded plugs and fix the bracket in the wall with the screws provided. (image B)
- Place the heater in a suitable position and ensure that the holes are aligned with the bracket. (image C)
- Tighten the screws on top of the bracket. (image D)

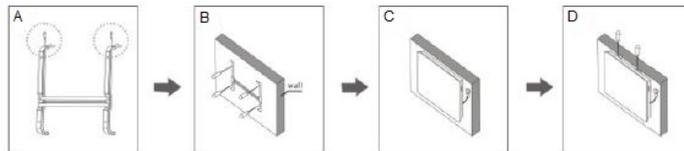

### Parts description


1. On / Off switch
2. Display
3. Touch button control panel

4. Heater
5. Feet
6. Wall bracket

### Before the first use

- Place the device on a flat stable surface and ensure a minimum of 15cm free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This smell is only temporary and will soon fade.
- During heating up and cooling down there may be some noises caused by the heater casing expanding and contracting, this is normal and does not indicate any fault.
- Connect the power cable to the socket. (Note: Make sure the indicated voltage on the device matches the local voltage before connecting the device. Voltage 220V-240V 50-60Hz).

## DISPLAY/TOUCH BUTTON FUNCTIONS

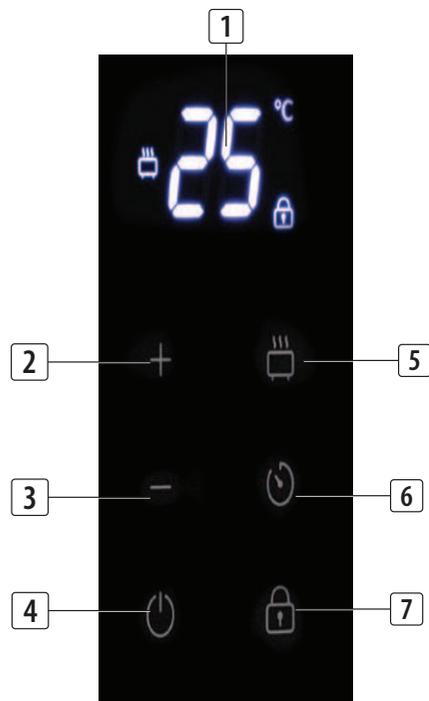

1	Display
2	Temperature “+” button
3	Temperature “-” button
4	Power button
5	Mode button
6	Timer button
7	Child lock button

### USE

- Push the On/Off switch on the side of the heater to turn the heater on.
- Press the power touch button to set the functions. The display will show what function is active.
- Use the mode button to adjust to low or high power. The upper symbol on the display is for high power, the lower one indicates the low power setting.
- Press 'temperature up (+)' or 'temperature down (-)' buttons to regulate the temperature you desired. The temperature can be set between 15°C and 35°C.
- Press the timer button to select the desired range between 1 hour to 24 hours. The set time will disappear after a few seconds.
- To enable the child lock HOLD down the lock button for 5 seconds and the lock symbol will appear on the display.
- To disable the child lock HOLD the lock button again for 5 seconds and the lock symbol will disappear.
- The child lock can be overridden by unplugging the heater or by switching it off using the main ON/OFF switch on the side of the device.

- Once the child lock is active you cannot operate any of the heater touch functions.

#### **TIP-OVER PROTECTION**

- Should the heater be tipped over during use then the heater will automatically turn off.
- If the unit has been tipped over then it cannot be turned on from the Climate app or via a smart speaker.
- To reset the unit, place it upright on a stable surface and the heater will automatically power on and connect to WiFi if previously setup. In around 2 minutes the device will be ready to be controlled via the app or smart speaker again.

#### **CHILD LOCK AND SMART SPEAKER**

- If the child lock is active then voice control from a smart speaker will be disabled. You would need to disable the child lock to enable voice control.
- **WARNING:** Ensure the device cannot be operated by unsupervised persons.



#### **Pair your heater to Princess Home app**

- Make sure your heater is powered.
- Open the Princess Home app.
- Select your country code, enter the cell phone number and tap "Get" to get a message containing the verification code.
- Enter the verification code in the message and tap "Log in" to log in to the App.
- Click "Add Device" to add a new device.
- Select the device you wanted to connect.
- Follow the instructions on the app to connect the heater.
- To control your device with voice using a smart speaker please refer to the manufacturer's instructions on how to enable a skill through your device.



#### **USING THE HEATER WITH PRINCESS HOME APP**

- The heater can be used manually with its built-in controls or you can use a smart phone or smart speaker to control it. Before you begin, ensure the Princess Home app is downloaded. The Princess Home app is available on Android and iOS.
- Download the correct version of the Princess Home app via our website [princesshome.eu/nl-nl/princess-home-app](http://princesshome.eu/nl-nl/princess-home-app) or use QR:

### Technical Specification

Details	348100/348101/ 348102	348150/348151/ 348152	348200/348201/ 348202
Voltage	220-240V	220-240V	220-240V
Frequency	50-60Hz	50-60Hz	50-60Hz
Power (maximum)	1000W	1500W	2000W
IP Code	IP24	IP24	IP24

### CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Clean the two air outlets (above and below) by using a vacuum cleaner to remove dust from inside.

### DECLARATION OF CONFORMITY

- Hereby, Smartwares Europe declares that the radio equipment type  
01.348100.01.001/01.348101.01.001/01.348102.01.001/01.3481  
50.01.001/01.348151.01.001/01.348152.01.001/01.348200.01.00  
1/01.348201.01.001/01.348202.01.001 /  
01.348100.02.001/01.348101.02.001/01.348102.02.001/01.3481

50.02.001/01.348151.02.001/01.348152.02.001/01.348200.02.00  
1/01.348201.02.001/01.348202.02.001 are in compliance with  
Directive 2014/53/EU

- The full text of the EU declaration of conformity is available at the following internet address: [www.princesshome.eu/doc](http://www.princesshome.eu/doc)

EN

### ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at [www.princesshome.eu](http://www.princesshome.eu)!



**smartwares<sup>®</sup> Europe**  
Swaardvenstraat 65 | 5048 AV | Tilburg  
The Netherlands | [www.princesshome.eu](http://www.princesshome.eu)



**smartwares<sup>®</sup> Safety and Lighting Ltd.**  
West Point, Second Floor | Mucklow Office Park  
Mucklow Hill | Halesowen | West Midlands | B62 8DY  
United Kingdom | [www.princesshome.co.uk](http://www.princesshome.co.uk)