

Hisense

life reimagined

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference.

DH7I108BWAB1
DH7I108BBAB1*
DH7I108BT3B1

DH7I108BWAB1*
DH7I108BTAB1
DH7I108BW3B1

DH7I108BBAB1
DH7I108BTAB1*
DH7I108BB3B1

EN

English

Thank you very much for choosing our company's products.

- Please correctly install and use this product, and do not use this product to dry items that are not suitable for drying in dryer.
- The images in the manual are for illustration purposes only. The appearance, printing, etc. shall be subject to the actual product.
- Our company emphasizes technology updates. In order to enhance the overall performance of this device, we will make technical changes to it without further notice. Your understanding is appreciated.
- This product is for household use only.

The meanings of the following symbols in this manual are indicated as follows:



Information, suggestions, prompts, or advice



WARNING - GENERAL HAZARD



WARNING - ELECTRIC SHOCK HAZARD



WARNING - BURN HAZARD



WARNING - FIRE HAZARD



Please read the user manual carefully.

CONTENTS

4 SAFETY PRECAUTIONS	INTRODUCTION
13 PRODUCT DESCRIPTION 14 Specifications	
15 INSTALLATION AND CONNECTION 15 Packaging/package 16 Installation location 16 Adjustable feet 17 Installation clearance 19 Stacking installation 20 Changing the door opening direction 22 Connect the drain hose 23 Drying rack 24 Transportation after installation	PREPARATION BEFORE FIRST USE
25 BEFORE THE FIRST USE	
26 CONNECTING TO POWER MAINS 28 The first use 29 Program function interface 30 Program table 32 Additional settings and functions 35 Function selection table 36 Connect life interface 37 Setting options 40 Smart networking 42 Start the program 42 End of the program	DRYING STEPS
43 MAINTENANCE AND CLEANING 43 Cleaning the filter 44 Clean the heat exchanger 45 Empty the condensate box 46 Clean the humidity sensor 47 Clean the water tank filter 47 Clean the door seal 47 Cleaning the outside of washer	CLEANING AND MAINTENANCE
48 TROUBLESHOOTING 50 FAULT CODES AND TROUBLESHOOTING 51 SERVICING 51 USAGE RECOMMENDATIONS	TRUBLE- SHOOTING
52 DISPOSAL 53 CONSUMPTION DATA TABLE 54 TYPICAL CONSUMPTION TABLE	MISCELLANE- OUS

SAFETY PRECAUTIONS



Please read the manual carefully before using this appliance.

Do not use this device if you have not read or understood this manual.

This manual is applicable to multiple models. Therefore, this manual may contain functions not covered by this model.

Failure to follow the instructions or improper operation may damage clothing or the device, or cause injury to you. Please place the manual near the appliance for easy access.

⚠ To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

If the appliance is used for professional, for-profit purpose or purpose exceeding normal use in a household and similar applications, or if the appliance is used by a person who is not a consumer, the warranty period shall be equal to the shortest warranty period required by relevant legislation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

The lint trap has to be cleaned frequently.

The lint must not to be allowed to accumulate around the tumble dryer.

For appliances with ventilation openings in the base, a carpet must not obstruct the openings.

The maximum capacity in some cycles for dry clothes to be used is Dry (10.0 kg).

The recommended maximum capacity may vary among different programs. For best drying results, refer to the "Program Table".

Do not dry unwashed items in the tumble dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Remove all objects from pockets such as lighters and matches.

Fill steam generators only with liquids specified by the manufacturer.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Exhaust air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

That adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

ELECTRICAL SAFETY

This device complies with relevant safety standards.

Before connecting the device to the power supply, please wait at least 2 hours to ensure it reaches room temperature.

This device must be repaired by an authorized service center, and only spare parts recognized by the authorized manufacturer shall be used.

Any repairs and maintenance related to safety or performance should be conducted by trained professionals.

Do not attempt to repair this device yourself. Repairs by unprofessional personnel may cause personal injury or more serious malfunctions. Please consult your local service center and always use original spare parts.

Before connecting the appliance to the power supply, ensure that the electric voltage specified on the rating plate matches the Voltage of your socket.

Do not attempt to operate the device if it is damaged, malfunctioning, partially disassembled, or has missing or damaged parts, including damaged wires or plugs.

Do not bend the power cord excessively or place heavy objects on it.

Ensure that the mains cable is not kinked or trapped, and it does not come into contact with heat sources or sharp edges.

Do not use multiple outlets, extended power cords, or dual adapters on the device. Do not use an extended cord to connect the device to the power supply.

Do not spray water to clean inside or outside the device.

In case of flooding, please disconnect the power plug and contact the after-sales service center.

Do not connect the device to the electrical socket of an electrical outlet or hair dryer.

Do not connect the device to an electrical outlet specifically designed for low-load appliances.

This appliance must be earthed via the power cord. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.

This appliance is equipped with a power cord having an equipment-grounding earthing pin and a grounding power plug. The power plug must be plugged into an appropriate outlet socket that is installed and grounded in accordance with all local codes and ordinances.

INSTALLATION

Before using the device, be sure to remove the packaging (sponge, polystyrene foam, etc.) attached to the bottom of the device.

Please install the device correctly according to the instructions and connect the water and electricity (see "INSTALLATION AND CONNECTION"). The connection of water and electricity should be carried out by fully trained technicians or professionals.

Installing a dryer on top of a washing machine at least requires two people.

Do not install this device in places where door opening is restricted.

Always use the pipe or hose provided with the device.

The appliance may not be in contact with a wall or adjacent furniture.

Please install the device in a room with adequate ventilation and a temperature between **5°C and 35°C**. **Do not install the device in an area where the temperature may drop to 5°C below**, otherwise, the parts may be damaged when water freezes.

Place the device on a sturdy flat surface. If the device is installed on a high platform, it must be secured to prevent it from tipping over.

Keep the bottom and surrounding area of the appliance free of flammable materials such as threads, paper, rags, chemicals, etc.

This device must not be stored or used in any outdoor locations.

Avoid lint accumulation near the device. For device with vents at the bottom, please ensure that the vents are not blocked by carpet.

Do not block the air outlet, and do not place the device on a long-fiber carpet to avoid obstructing air circulation.

Do not install the device near heaters or any flammable items.

Do not install the device in places where gas leakage may occur or where the air contains dust particles.

Please ensure good ventilation conditions to avoid the gas generated by this device from flowing back into the room, thereby causing a fire.

USAGE

After the installation is complete, please let the device stand for 24 hours before using it. If the appliance needs to be laid down during transportation or maintenance, please face the appliance and tilt it to the left side horizontally.

Inspect the device to see if it has been damaged during transportation. Never operate the device in a damaged condition.

The dryer uses a heat pump system to heat the air.

If the condensate tube is blocked or clogged, then tumble dryer operation is stopped.

Clean the dryer filters after each drying cycle. If you have removed the filters, replace them before the next drying cycle.

When cleaning the filters, the lint should be thrown in the garbage bin and not washed through the drain in order to avoid spreading microplastics in the used water system.

Do not use wet hands to touch the power plug or operate the device.

The system consists of a compressor and a heat exchanger. When the dryer is started, compressor operation (the sound of flowing liquid) or flow of refrigerant may be louder as long as the compressor operates. This is not a sign of malfunction and it will not affect useful life of the dryer. In time and with use of the dryer this noise will become quieter.

Do not drink or prepare food with the condensed water/ distilled water. It can cause health problems to people and pets.

Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.



BURN HAZARD

If you open the dryer door during the drying process, the clothes may be very hot and there is a risk of burning.



FIRE HAZARD

This device is only for drying clothes washed with water. Do not dry clothes washed or cleaned with industrial cleaners, chemicals, flammable cleaners, or similar substances (such as gasoline, trichloroethylene, etc.); otherwise, it may cause an explosion.

Do not attempt to separate any panels or disassemble the device.

Do not use sharp objects like pins, knives, or fingernails to press the button.

After the program is finished, unplug the power plug. Never unplug an appliance by pulling on the power cord. Always firmly grasp the power plug and pull it directly out from the socket.

Because the device is heavy, you may injure yourself trying to lift it. Do not lift the device by yourself; your hands may be cut by its sharp edges.

Do not grasp the device by its protruding parts. The protruding parts on the device may break when lifting or pushing the device.

Do not dry clothes with large buttons or other heavy metal items. Make sure all pockets of clothes to be dried are empty. To prevent odors and mold, leave the door open and let the drum air dry after the drying cycle.

Do not leave metal objects in the drum for a long time.

The door glass may break due to strong impact, so be careful when using the device.

Please put the clothes completely into the drum so that the clothes do not get caught in the door.

Unplug the power cord from the electrical outlet when the device is not in use.

Do not put animals (such as pets) into the appliance.

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate the hazard.

Do not use any solvents or cleaning agents that may damage the device (please refer to the recommendations and instructions of the relevant cleaning agent manufacturer).

Do not use this device to dry unwashed clothing (except for certain drying care programs).

BURN HAZARD

During the drying process, the door may become hot. Be careful to avoid burns. Do not let children play near the door. Do not touch the door glass during the operation of the device.

The back of the device may become very hot during operation. Do not touch the back of the device until it has completely cooled down.

Do not turn off the power during the drying process. After drying, please take out the clothes immediately to avoid leaving them in the device for a long time to prevent fire. After taking them out, please hang or lay them flat as soon as possible and let them cool naturally.

The dryer is protected with an automatic switch-off system in case of overheating. This system will switch off the dryer if the temperature is too high.

Never reach into the appliance while it is operating. Wait until the drum has completely stopped.

Do not push down on the door, when the appliance door is open.

If the net filter is clogged, the overheating automatic switch-off system may be activated. Clean the filter, wait for the dryer to cool down, and try running it again. If the dryer still fails to start, call a service technician.

WARNING

In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.

WARNING

The appliance contains refrigerant which although it is environmentally friendly, is flammable R290. Failure to dispose of it properly may result in a fire or poisoning. Dispose of the appliance properly and do not damage the pipes in the refrigerant circuit.

Always ensure that the condensate tank is drained before moving the device or storing it in an unheated room during the winter.

WARNING

Do not damage the refrigerant circuit.

CHILD SAFETY

Before you close the device door and run the program, please ensure that there is only clothing in the drum. Make sure that no children climb into the device and close the door from the inside.

Do not let the device door stay open. Children may hang on the door or climb inside the device, causing damage or injury.

Keep all packaging materials in a place out of the reach of children, as these may be dangerous.

Do not let children under 3 years old approach the device if they are not supervised at all times.

After understanding the safe use of the device and the dangers caused by improper use, children aged 8 years and above, as well as people with reduced physical, sensory, or mental abilities, or lack of experience and knowledge, can use this device, but they need to be supervised.

Children must not clean the device or perform any maintenance on it without supervision.

SERVICING


The user shall be responsible for the maintenance cost of damage caused by improper connection, improper installation and use, or repair by unauthorized personnel, as such damage is not included in the warranty.

The warranty does not include consumables, slight color deviations, increased noise due to device aging (which does not affect the functionality of the device), and cosmetic defects of parts (which do not affect the functionality and safety of the device).

PRODUCT DESCRIPTION


Front

- 1 Condensate box
- 2 Knob
- 3 Control panel
- 4 Door
- 5 Filter
- 6 Air vent
- 7 Heat exchanger door cover

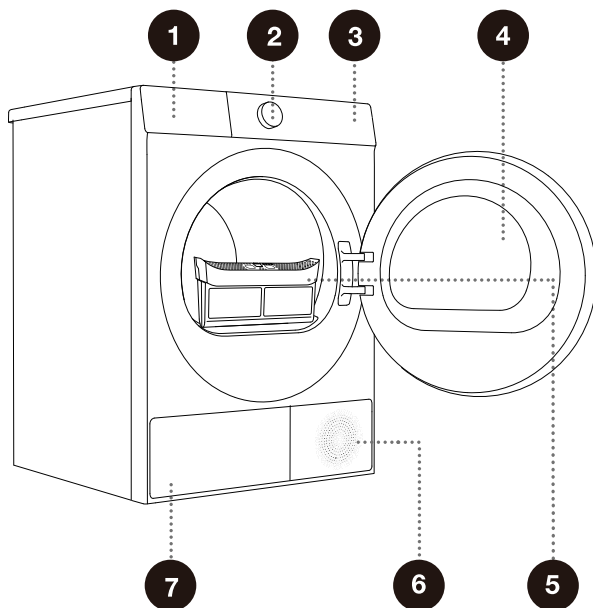

Back

- 1 Power cord
- 2 Condensate discharge hose
- 3 Adjustable feet

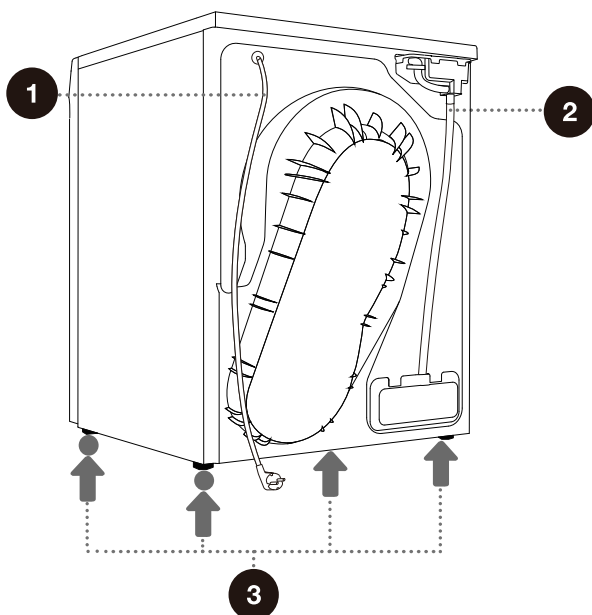

 The illustrations in this manual are for demonstration purposes only. Due to product improvements and series expansion, the product appearance, color, and functional components you receive may differ from the illustrations in this manual. Please refer to the actual product.


SPECIFICATIONS

(depending on the model)



Maximum load	10.0kg
Net weight	57kg
Rated voltage	220-240V~
Rated frequency	50Hz
Rated power	700W
Refrigerant type	R290
Refrigerant capacity	150g
Noise level	60dB
Waterproof rating	IPX4
Allowed ambient temperature	5-35°C

DIMENSIONS (MM)

Index	Size (mm)
A	595
B	845
C	615
D	640
E	680
F	1170
G	390

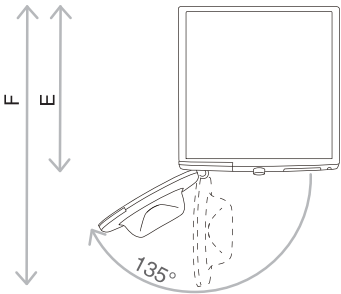

E = Device depth
F = Depth with door open

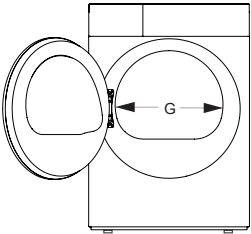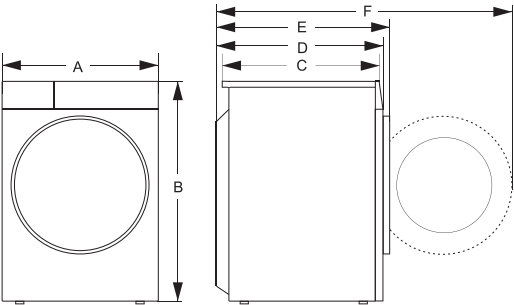


G = Diameter of the drum opening

INSTALLATION AND CONNECTION

Packaging/package

💡 Please first remove all packaging and foam, especially the foam base. When unpacking the device, please do not use sharp objects to damage it. Keep packaging materials (plastic bags, other plastic parts, etc.) out of reach of children.

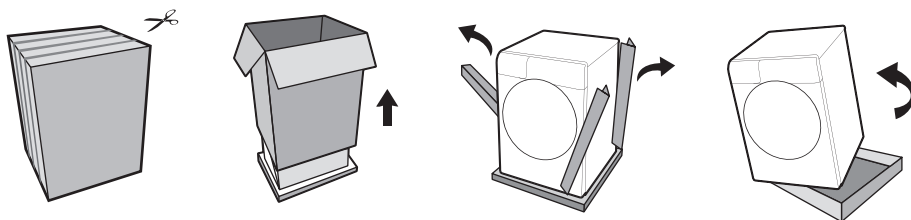


💡 The process of packing the machine is just the opposite of unpacking above.

💡 Please check the device for any damage. If damaged, do not use it, and immediately contact after-sales service.


The accessories included with this device include one or more of the following:



Instructions

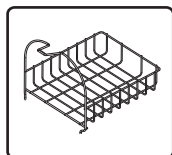

Drying rack

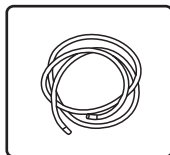

Drain pipe

💡 Different models have different configurations, and the accessories included with this device are subject to the actual configuration of the model.


💡 For your safety and extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of unauthorized components or parts.

INSTALLATION LOCATION

⚠ Please place the device on a solid surface and keep it steady. The flat surface should be kept clean and dry; otherwise, the device may slip. Also, clean the bottom of the adjustable feet.

ADJUSTABLE FEET

Use a spirit level and a 22 mm wrench for adjustment.

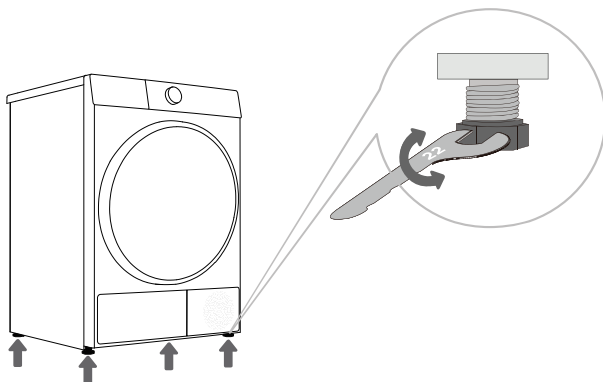


1 Level the device by turning the four adjustable feet. The adjustable feet allow 1cm height adjustment.

2 After adjusting the height, tighten the lock nut counterclockwise with the wrench (as shown in the figure).

⚠ Incorrect levelling of the dryer with the adjustable legs may cause vibration, appliance sliding across the room, and loud operation. Incorrect levelling of the dryer shall not be subject to warranty.

⚠ Sometimes, unusual or louder noise may appear during appliance operation; these are mostly the result of improper installation.

INSTALLATION CLEARANCE

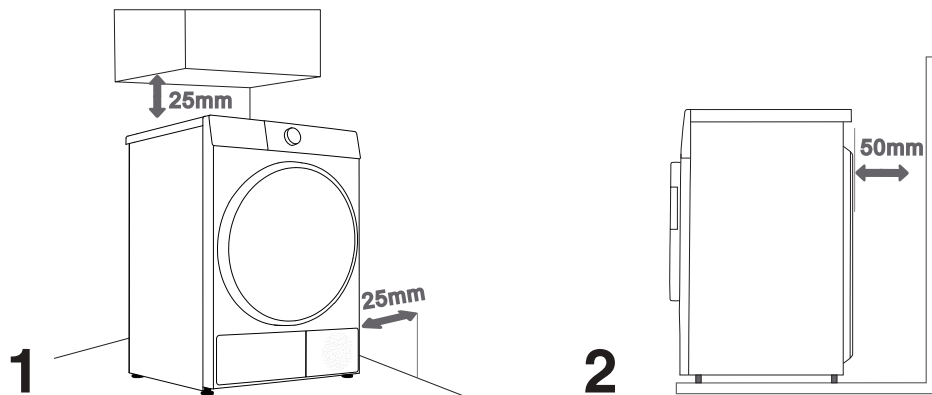

💡- The dryer may not be in contact with a wall or adjacent furniture. For optimum dryer operation, we recommend observing the clearance from the walls as indicated in the figure. In case of failure to heed the required minimum clearance, the dryer may overheat.

💡- Vents on the back wall and the air exhaust opening on the front side of the dryer should never be obstructed.


💡- The room in which you will install the dryer should be sufficiently ventilated, with a temperature between 5°C and 35°C. Dryer operation at a lower environment temperature may result in condensate accumulation in the dryer interior. Do not place the dryer into a place where there is danger of freezing. Frozen water in the condensate tank and pump may damage the dryer.

💡- The dryer emits heat. Therefore, do not place it in a very small room, as the drying process may take longer due to limited amount of available air.

💡- Lighting in the room should be sufficient to allow reading the information on the display unit on the control panel.

⚠ Do not place the dryer behind lockable or sliding door, or door with a hinge on the opposite side of the dryer door hinge. Install the dryer in such way that the door can always be freely opened.

⚠ Do not place the dryer on a carpet with long fibres as this may impede air circulation.

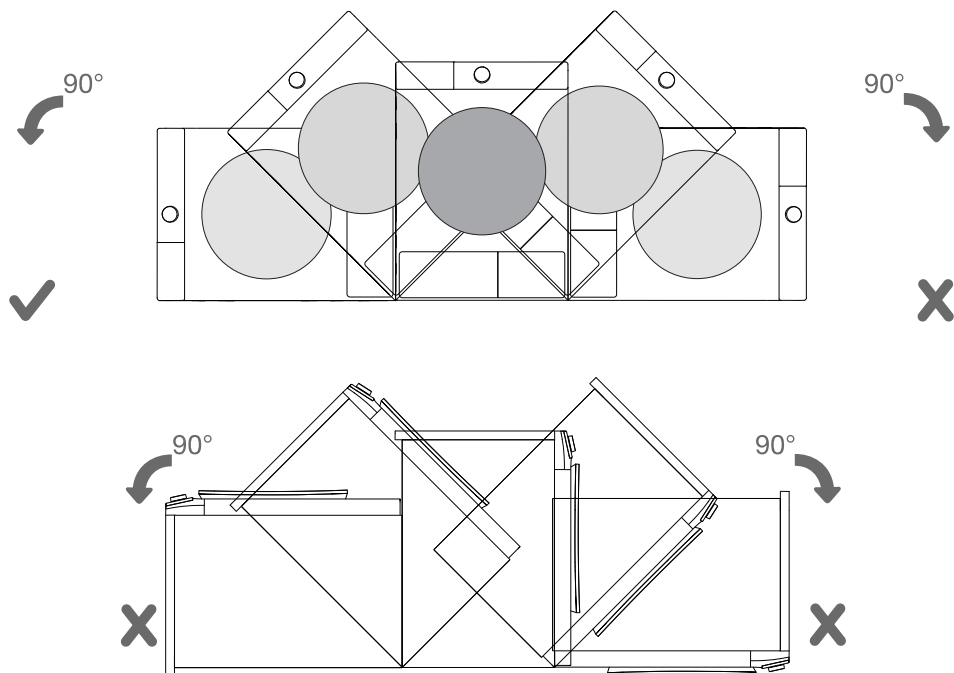


💡 After installation, wait for 24 hours without moving the appliance before using it for the first time. If the dryer has to be laid down on one of the sides during transport or servicing, place it with its left side, viewing from the appliance front, downwards.

STACKING INSTALLATION

This dryer must be stacked with a washing machine of the same brand using a stacking kit of the same brand(see Figure 1). You can contact aftersales for purchase figure a, and install it according to user manual.

Alternatively, the dryer can be placed next to the washing machine (figure 2).

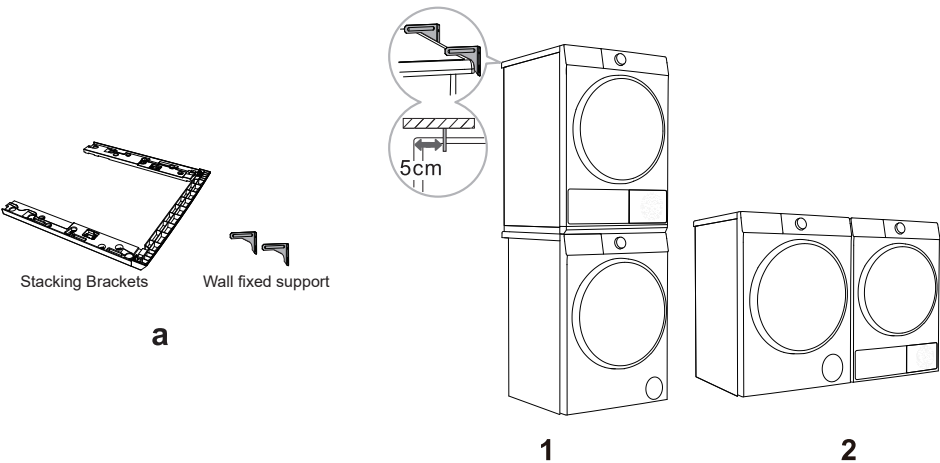

STACKING BRACKETS (ACCESSORIES)

Please use original accessories. You can refer to the following recommendations for purchasing stacking brackets.

Dryer series	Dryer depth(D)	Washing machine series	Washing machine depth(D)	Matching Stacking Brackets
7l	640 mm	7l	595 mm	WZ3I10W

 At least two persons are required to install the tumble dryer on top of a washing machine.

CHANGING THE DOOR OPENING DIRECTION

For easier operation, you can change the door opening direction. The steps are as follows (taking the example of changing from opening the door from the left side to opening the door from the right side).

WARNING

Support the door with a stool or box that fits under the door, or have an assistant support the weight of the door.

Avoid dropping the door.

Unplug the appliance or turn off power at the main circuit breaker before beginning door reversal.

 
Always reverse the door BEFORE stacking the appliance on top of the washer.

Do not reverse the door while the appliance is stacked on a washing machine.



Before removing the hinge screws, have an assistant support the weight of the door. The door could fall on the floor due to the weight of the door.

For safety reasons, two or more people need to work together to reverse the door.


The appearance of the screws varies and the screws must be inserted differently depending on the position. Make sure that you've selected the correct screw before tightening.








1 Fully open the door.

  

 2 Unscrew the two fastening screws of the door hinge with a phillips screwdriver (or 8 mm socket spanner) to remove the whole door body.



    3 Unscrew the two screws of the door hook cover plate with a phillips screwdriver, and remove the whole door hook cover plate (including the door hook).

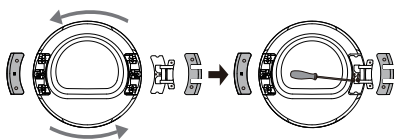

4 Unscrew the two screws of the hinge cover plate, pull it out horizontally with a little force, and then remove the two screws (stainless steel pan head screws) on the reinforcing iron plate. And press the door body with one hand, grasp the hinge with the other hand, lift it up little by little, and slowly remove the hinge from the positioning pin. If necessary, use a flat head screwdriver to pry it.

5 Rotate the hinge assembly 180° to the other side, install the hinge assembly on the stud and press it tightly, and then tighten the two screws in the middle.


6 Rotate the hinge cover plate and the door hook cover plate 180° respectively and install them at the corresponding positions on the other side of the inner frame, and then tighten the screws.

7 Remove the door lock screw of front assembly pull down the door lock vertically by hand, take it down and rotate it 180° to the other side. Then install it to the hole of front assembly, pull it down to clamp it, and tighten the screws. Now, the reversing of door lock is completed.

8 Finally, install the door hinge on the front assembly, tighten the two screws, and close the door. At present, the door reversing (from left opening to right opening) is completed.

CONNECT THE DRAIN HOSE

If the device is not connected to a water discharge hose, the water extracted from the clothes by the condenser will accumulate in the condensate box, which needs to be emptied after each program. If the installation location of the device is close to the drain outlet, or if the dryer is stacked on top of the washing machine, you can install the water discharge hose included in the package to drain the water directly into the drain outlet.

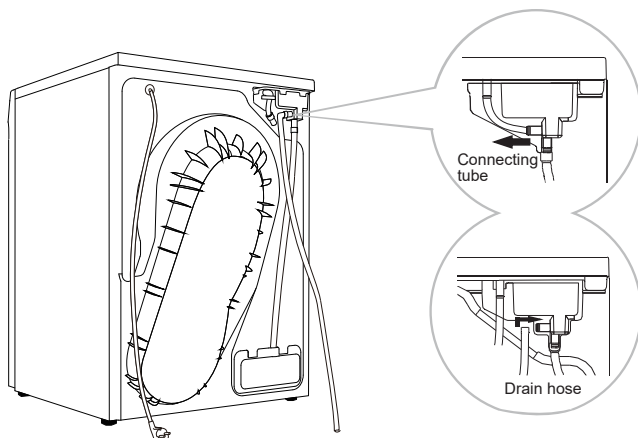

1 Unplug the connecting tube at the back of the device's condensate box and hang it on the back of the device.

2 Install the water discharge hose in the accessories to this position (as shown in the figure), please confirm that the installation connector is firmly inserted, and insert the other end of the water discharge hose into the drain outlet.

💡 If you decide to place the condensate water discharge hose into the drain outlet, make sure the water discharge hose is installed correctly. After the water discharge hose is installed in place, the condensate water can be discharged directly, without the need to empty the condensate box after each use.


💡 Please use the water discharge hose provided with this device.

💡 Do not twist or compress the water discharge hose, otherwise it will affect normal drainage. The height of the water discharge hose must not exceed the height of the machine body; otherwise, the water cannot be drained. If the water discharge hose is too long, please cut off the excess portion.

💡 Do not place the drain outlet in stagnant water; this may cause backflow.

DRYING RACK (AVAILABLE ON SELECT MODELS)

Before the first drying cycle, remove the drying rack and all packaging materials from the drum. When using the drying rack for special garments, install it as follows:

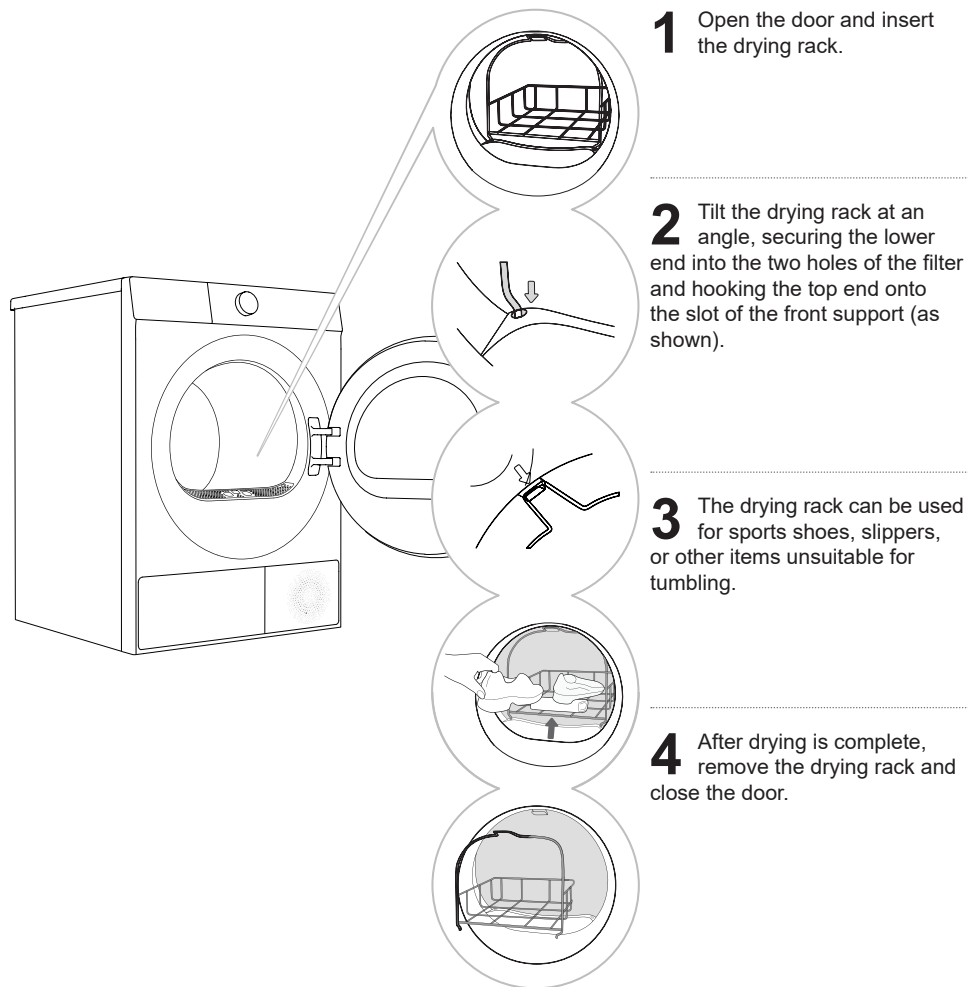

💡 Before drying, sports shoes or slippers should be wrung out to prevent dripping.

💡 The drying rack remains stationary during drum rotation. Therefore, ensure items on the drying rack do not contact the drum. Otherwise, garments and the dryer may be damaged.

TRANSPORTATION AFTER INSTALLATION

If you need to transport an installed device, first unplug the power plug, detach the water discharge hose, and ensure the door is closed properly.

After each drying program, a small amount of condensation may remain in the device. Start the device, select any program, and run it for about half a minute to drain the accumulated water to prevent damage to the device during transportation. If it is not possible to transport the device upright, please tilt it to the left.

Pack all packaging materials (plastic bags, other plastic parts, etc.).


 The device is heavy; please use at least two people to move it. When transporting, do not hold protruding parts such as the door, top cover, etc., to prevent them from falling off or being damaged.

 After transport, let the device sit for at least 2hours before connecting it to the power supply. The device should be installed and connected by trained technicians.

 Read the instructions carefully before reconnecting the device. Damage caused by improper connection or use is not covered by the warranty.

 If the device was not transported according to the instructions, it should be allowed to rest for at least 24 hours before connecting it to the power supply. Failure to do so may lead to heat pump failure, and such failures are not covered by the warranty. Be careful not to damage the cooling system: please refer to "INSTALLATION AND CONNECTION".

Transport and Handling Method

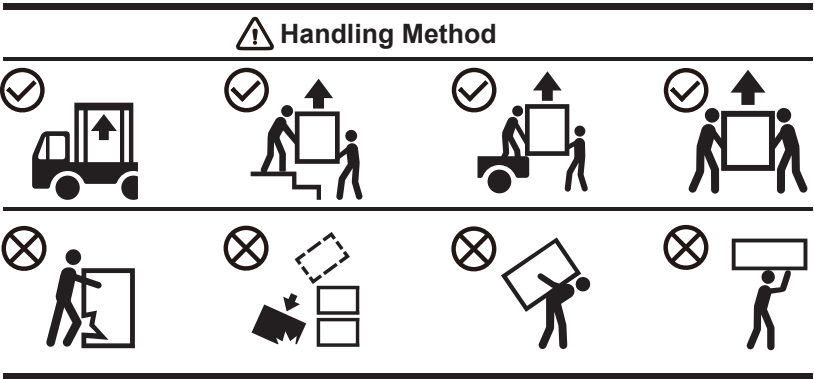

BEFORE THE FIRST USE

THE FIRST USE

Before using this product for the first time, please ensure that the device is not connected to the power supply. Then, open the door and clean the drum with a soft damp cloth.


 Do not use solvents or cleaning agents that may damage the device (please follow the recommendations and warnings provided by the cleaning agent manufacturer).

PAY ATTENTION TO CLOTHING LABELS


Washing	Maximum water temperature 95°C  	Maximum water temperature 60°C  	Maximum water temperature 40°C  	Maximum water temperature 30°C  	Hand wash only 	Non-washable 
Rinse	Rinse in cold water 				Do not rinse 	
Dry clean	It can be dry cleaned. No restrictions on detergent 	Dry clean with petroleum solvents R11 and R113 	Dry clean with kerosene, pure alcohol and R113 		Do not dry clean 	
Ironing	Maximum ironing temperature 200°C 	Maximum ironing temperature 150°C 	Maximum ironing temperature 110°C 		Do not iron 	
Drying	Dry flat (placed on a flat surface) 	Drip dry  Line dry 	High heat  Low temperature 		Do not dry 	

PREPARATION FOR DRYING

1. Classify clothing according to its type and thickness, and refer to the requirements on the clothing labels.
2. Empty clothing pockets; remove any metal items that could damage clothing and device; button up and turn clothing with buttons or embroidery inside out; zip up your clothing; if the clothing has drawstrings, please tie them.
3. Place sensitive clothing and small, lightweight clothing into a dedicated mesh laundry bag and dry them with other clothing.
4. For clothes with pilling surfaces or long pile fabrics, please turn them over before drying.
5. It is not recommended to use a dryer to dry delicate fabrics, as they may be damaged during drying. To avoid damage, please do not put the following types of clothing into the device:
 - Leather clothing and other leather products.
 - Clothing that has undergone waxing treatment or requires special care.
 - Clothing with a large amount of wool, plastic, or metal decoration.
 - Clothing with sequins.
 - Clothing with metal accessories that are prone to rusting.

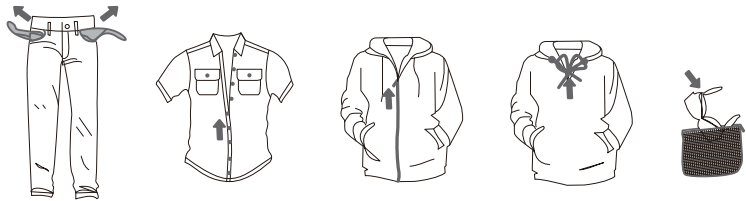

CONNECTING TO POWER MAINS

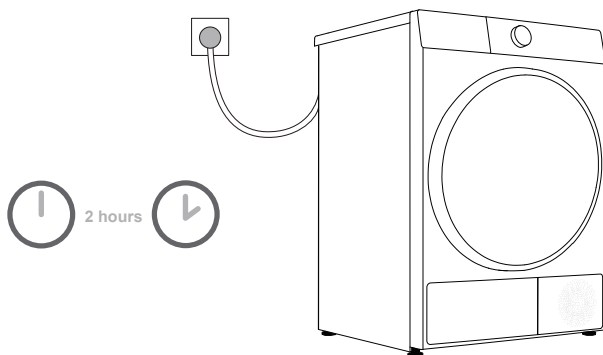

 After installation, the device must remain on a stable surface for at least 2 hours before connecting to the power supply.

This device is connected to a grounded electrical outlet, and there should be no obstructions between the device and the socket. The electrical outlet should have compliant grounding protection. Ensure that the power supply is consistent with the power requirements of the device. For basic information about the device, please refer to the nameplate.

 It is recommended to use overvoltage protection devices to protect this device from lightning strikes.

 Do not use an extension cord to connect the device to the power supply.

 Do not connect the device to an electrical outlet designated for light-load appliances.

 Please do not plug or unplug the device with wet hands.

 The repair and maintenance of this device should be handled by professionally trained personnel.

 Only personnel authorized by the manufacturer can replace a damaged power cord.


PUT IN THE CLOTHES TO BE DRIED

Open the machine door, confirm there is no foreign matter in the drum, and loosely place the clothes into the drum.

Close the door until you hear a "click" indicating it is securely closed.

☀- Do not overload the drum! Refer to the "PROGRAM TABLE" for the maximum load. If the drum is too full, the clothes will be more wrinkled and may not dry effectively.

☀- Please completely put the clothes into the drum to prevent the clothes from getting caught in the door.

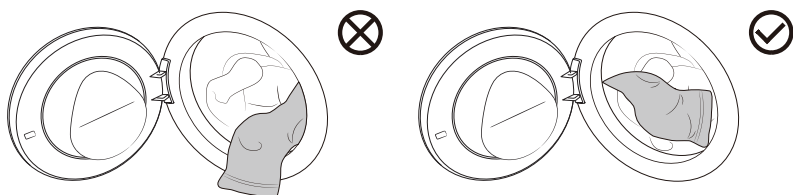

☀- While the dryer is operating, you can easily open the door to add or remove clothes. After closing the door, press the Start/Pause button to resume operation.

☀- Do not put clothing into a dryer without wringing or spinning it (recommended minimum drying spin speed of 800 RPM).

☀- When drying larger items (bedding, quilts, etc.), be sure to shake out the clothing before placing it in the dryer.

THE FIRST USE

Tap "⏻" to power on and enter the startup navigation.



Based on the startup navigation and the actual needs of the users, the Language, Country and Region, Time Zone, User Agreement, and Policy preferences are configured. (Different countries and regions have different energy efficiency requirements. If the selected countries and regions do not match the actual situation, the energy efficiency rating and energy efficiency data will be different.)

Language

Set the language, the default is English.

Country and Region

Set the country or region.

Time Zone

Set the time zone, different countries and regions correspond to different time zones.

User Agreement

Instructions for users, select Agree and click "NEXT".

Policy

Data Protection Policy, select Agree and click "NEXT".

WLAN

Configure the device for network binding

- Select WLAN or WPS to configure the network. Follow the prompts to complete App and Pairing, Remote Control, Voice Assistant and then enter the main interface.
- Skip this step and go directly to the Date And Time settings (after skipping the network configuration, you can reconfigure the network in the system settings later). After completion, click "NEXT" to enter the main interface.


📶 This product supports software updates via Wi-Fi (OTA). After the update, some user interfaces (UI), functions or operation procedures may differ from those described in this manual.

THE MAIN INTERFACE

This machine uses a touch display + control via the rotary main knob, with power, start/pause buttons operated by touching the corresponding icons; program selection can be done by sliding + touching display or by rotating the main knob; program parameters and other settings are adjusted by sliding + touching display.

Swipe left or right on the display to switch between the program function interface, Connect Life interface.

Please refer to the actual situation for the final display

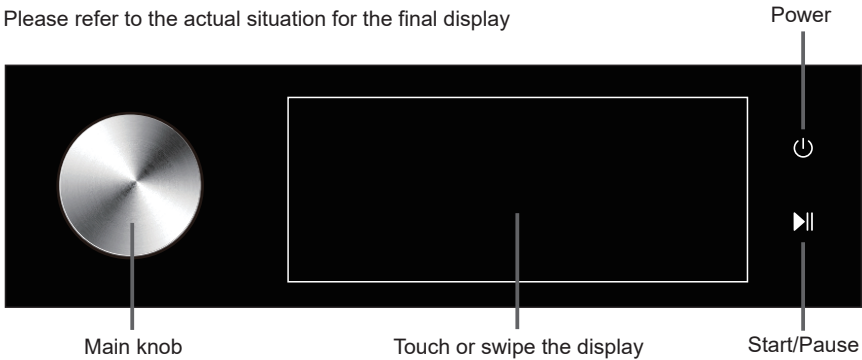

PROGRAM FUNCTION INTERFACE

Icon description

Icon	Name	Description
	Power	It is used to turn on/turn off the device power.
	Start/Pause	It is used to start/pause the program.
	Back	Used to return to the previous interface.
	Setting options	You can access the quick switch and function card interface for settings.
	WLAN	When the device is connected to the network, this icon is displayed.
	Child Lock	Used to lock operations during program running to protect the safety of children.
	Favorites	Tap this icon to save the current program to Favorites.
	Reservation	Tap this icon to enter the reservation settings interface.
	Power indicator	Displays the estimated power consumption for the rated capacity of this program.
	Water shortage reminder	When this icon lights up, it indicates the steam generator is low on water. Please promptly add purified water to the water tank (for detailed steps, see the "Cleaning the water tank filter" section).

PROGRAM TABLE

Tap the power button to turn on the machine. According to the type of clothing and the required drying level, rotate the main knob or slide + touch the touchscreen program area to select the appropriate program. During operation, the main knob will not turn automatically.

Program	Program description	Maximum load (kg)	Stop method	
			Stop when the clothes are dry	Timed dry
Eco	This program is suitable for drying general cotton clothes.	10	✓	
Cotton	This program is suitable for drying thicker, non-sensitive cotton clothes.	10	✓	
Synthetics	This program is suitable for drying clothing made of synthetic fibers.	5	✓	
AI Super Dry	This program is suitable for drying mixed cotton and easy-care garments.	5	✓	
Quick 29'	This program is suitable for the quick drying of lightweight and small clothing (fewer than 3 pieces).	1	✓	
Down	This program is suitable for drying textiles filled with down (pillows, down comforters, jackets, etc.).	2	✓	
Bedding	This program is designed with a reverse anti-tangle function for large garments and is suitable for drying large items such as bedding sets.	2.5	✓	
Baby Care	This program is suitable for drying infant and toddler clothing.	2	✓	
Power Dry 59'	This program is suitable for drying daily clothes such as synthetic fibers or blended fabrics in a short period of time.	4	✓	
Shirts	This program is suitable for drying shirts.	2	✓	
Delicates	This program is suitable for drying delicate synthetic fiber garments. The garments may be slightly damp at the end of the program. It is recommended to put the clothes in a special mesh laundry bag for drying.	1.5	✓	
Sportswear	This program is suitable for drying garments containing films and sportswear made of mixed materials, breathable fabrics, etc.	2	✓	
Pets	This program is suitable for drying clothes that have pet hair after washing and spinning.	3	✓	
Towels	This program is suitable for drying non-sensitive clothing (fleece, kitchen wiping cloths, etc.).	5	✓	

Program	Program description	Maximum load (kg)	Stop method	
			Stop when the clothes are dry	Timed dry
Jeans	This program is suitable for drying denim garments.	3	✓	
Warm Dry	This program is used to warm clothing and enhance wearing comfort.	/		✓
Ion Refresh	This program is a dry clothing care program that makes your clothes fresh again. When using this program, the heating function is turned off.	/		✓
Allergy Care	This program is suitable for drying clothes that need to remove allergens such as mites.	2		✓
Time Dry	This program is a timer program with a drying function that can dry or warm clothing.	/		✓
Wool-Rack	This program is suitable for softening or fluffing wool and silk garments (refer to the garment label for drying requirements). It is recommended to use the drying rack for drying.	1		✓

 If your laundry has not reached the expected dryness level, please use other functions or select a more suitable drying program.

ADDITIONAL SETTINGS AND FUNCTIONS

After powering on, the display will show the default program and parameters. If no adjustments are needed, you can directly tap the **"Start/Pause"** button to start operation.

Users can select appropriate programs and parameters and add additional functions as needed: touching the parameter or function to be set to turn on/off the corresponding setting. The icon lights up to indicate that the function is turned on.

Touch the selected program to enter the settings interface of Temp. , Target , Time , Delay End and Favorites, as well as settings for additional functions. Additional functions can be selected by sliding left or right. The additional functions and gear ranges supported vary by program, and some functions cannot be enabled simultaneously.

Most functions can only be set in standby mode. Tap **" Start /Pause"**. After the program is launched, some of the pre-defined functions will be unchangeable. To adjust settings, touch the "<" key to exit the program or long press the " Power" button. After shutting down and restarting, you can choose programs and functions again.

Power

It is used to turn on/turn off the device power.

During program operation, if you need to shut it down, press and hold the "Power" button to turn it off.

If no operation is performed for a period of time, the screen will automatically turn off and enter power-saving mode; at this time, turning the main knob or tapping the screen will wake the screen.

In standby mode or after the program ends, if no operation is performed for a period of time, the device will automatically turn off the screen; if there is still no operation for a long time after the screen is off, the device will automatically shut down.

In alarm status, the device screen will not turn off.

Start/Pause

Tap to start/pause the program.

If the door is not closed, the device cannot start.

Temp.

It is used for selecting the drying temperature of the "Stop when the clothes are dry" programs.

Tap this option to enter the temperature selection interface. Swipe the screen to cycle through the set gear options; temperature selection range: Cool/Low/Middle/High(Different programs support different drying temperature selection ranges).

After making your selection, tap "OK" to confirm; tap "CANCEL" to cancel the selection.

Target

This function is used for selecting the dryness level of the "Stop when the clothes are dry" programs.

When using the "Stop when the clothes are dry" program, tap this option to enter the drying level selection interface. Swipe the screen to cycle through the set gear options; drying level selection range: Extra Dry/Iron/Cupboard(Different programs support different drying level selection ranges).

"Extra Dry": It is for drying garments to a condition suitable for storage.

"Iron": It means that the garments retain a small amount of moisture after drying, allowing for further ironing.

"Cupboard": Dried clothes can be ready to wear immediately.

Time

This function is used to select the drying time for the Timed Dry program. You can choose the appropriate drying time based on the type and quantity of clothing.

When using the Timed Dry program, tap this option to enter the drying time selection interface. Swipe the screen to cycle through the set gear options; drying time selection range: 30/60/90/120/150/180/210/240/270min(Different programs support different drying time selection ranges). Please select a suitable drying time. If the drying time is too short, the clothes cannot be completely dried.

Ion Refresh is a dry clothing care program. The optional care time range: 5/10/15min.

 If your clothes are not as dry as you expect, you can increase the drying time or use a "Stop when the clothes are dry" program to dry them.

Steam

This function can generate steam spray, suitable for reducing or eliminating wrinkles in small amounts of clothing, making garments more comfortable (when the amount of clothing is large, the wrinkle removal effect will significantly weaken).

Tap this option to turn on / turn off this feature.

After this function is enabled, the maximum load of the clothes, some functions, and gears will be automatically adjusted.

Anti Crease

This function adds an anti-crease mode, which rotates the inner drum gap after the program ends to prevent wrinkles from forming when clothes are not taken out for a long time.

Tap this option to enable/disable this function.

When this function is activated, the appliance automatically enters anti-crease mode at the end of the program.

Anti-crease mode can be manually ended by opening the door, turning the knob, tapping the Start/Pause button, or the Power button. If no operation is performed, it will automatically end after a maximum runtime of 12 hours.

Quicker

This function can reduce the program's drying time and speed up the drying process.

Tap this option to turn this function on or off. Some programs have this function enabled by default and do not require repeated selection. This function cannot be selected for Timed Dry programs.

After this function is enabled, the maximum load of the clothes, some functions, and gears will be automatically adjusted.

Gentle Dry

This function can provide drying care at a relatively low temperature, nurturing your clothes.

Tap this option to enable/disable this function.

After this function is enabled, some functions and gears will be automatically adjusted.

Night Dry

This function can reduce drying noise, making it suitable for drying clothes at night.

Tap this option to enable/disable this function.

After this function is enabled, the mute function will automatically turn on, and some functions and gears will be automatically adjusted.

Delay End

This function allows you to schedule drying clothes at your convenience.

After selecting the program and function, tap the icon to make a reservation.

Reservation time is the program end time (including running duration); it must be greater than the program running time and no more than 24 hours.

After the reservation time has been set, tap "**Start/Pause**" button to enable the reservation function.

If the reservation function has been selected before the program starts, you can cancel the reservation by selecting another program or setting a function (the total duration must exceed the reservation time), except for the Anti Crease function.

If you need to cancel the reservation after the program starts, you can cancel the operation by pressing the Back button or turn off and restart the machine.

Favorites

Tap this icon to add the current program and function parameter settings to Favorites.

Child Lock

To prevent children from operating the device accidentally and protect their safety, this device is equipped with a Child Lock function.

Tap the icon to turn on; press and hold the icon to turn off.

When the child lock is enabled, only the Power button's on/off operation and the child lock release function are available; all other functions and knob operations are locked.

The program ends or the application is shut down and restarted. Child Lock Function can be automatically cancelled.

Washer-Dryer link

This function enables intelligent interconnection between the dryer and the washing machine device.

Tap the "" icon to select the linked device.

This function is applicable to some programs.

FUNCTION SELECTION TABLE

	Program	Temp.	Dry Level	Dry Time	Steam	Anti Crease	Quicker	Gentle Dry	Night Dry
SMART END	Eco	-	-	-	-	•	-	-	-
	Cotton	•	•	-	•	•	•	•	•
	Synthetics	•	•	-	•	•	•	•	•
	AI Super Dry	-	-	-	-	-	-	-	-
	Quick 29'	-	-	-	-	•	◦	-	-
	Down	•	•	-	-	•	-	-	-
	Bedding	•	•	-	-	•	•	-	•
	Baby Care	•	•	-	•	•	•	-	-
	Power Dry 59'	-	-	-	-	•	◦	-	-
	Shirts	•	•	-	•	•	•	•	-
	Delicates	-	•	-	-	•	-	•	-
	Sportswear	•	•	-	•	•	•	•	-
	Pets	•	•	-	•	•	•	•	-
	Towels	•	•	-	-	•	•	•	•
	Jeans	•	•	-	-	•	•	-	•
TIME DRY	Warm Dry	-	-	•	-	•	-	-	-
	Ion Refresh	-	-	•	-	•	-	-	-
	Allergy Care	-	-	•	-	•	-	-	-
	Time Dry	-	-	•	-	•	-	-	-
	Wool-rack	•	-	•	-	•	-	•	-

- The function is optional
- The function is not optional
- Default function that cannot be cancelled

CONNECT LIFE INTERFACE

When cloud-connected, this interface displays the devices under the account; when offline, it only displays devices discovered via Bluetooth.
Supports device viewing and control functions.

One Screen, Dual Control

When connecting for the first time, press and hold the " " icon on the washer to enter the bind interface, enable the "Washer-DryerLink" option, then search for and bind the dryer.

After binding is successful, click the corresponding device to control the device's start/pause, program switching, partial function operations, and status viewing.

Tap the " " icon on the right to return to this device with one touch.

Note:

By default, Bluetooth is enabled to allow the washer and dryer to communicate and automatically coordinate their cycles.

Voice Control

When connected to a network, you can use voice commands to control cycles or check information like the weather and energy usage. Just say "Hi, Vidaa" to activate it.

The voice prompt volume is based on the system volume and can be adjusted in the Settings menu.

Note:

The appliance has a built-in microphone for hands-free operation. Say "Hi, Vidaa" to activate the Voice Assistant and open the voice interface. Your voice commands are securely uploaded to the cloud for real-time recognition, and instantly translated into control commands. To protect your privacy, voice data is not stored.

You can enable or disable the Voice Assistant at any time in the Settings menu. When disabled, the microphone is turned off to safeguard your privacy. Once the voice interface is closed, the microphone also stops collecting voice input.

SETTING OPTIONS

On the home or running page, tap the "" icon at the top of the drop-down screen to enter the quick switch interface, where you can select WLAN, Remote Control, Notifications, Drum Light, Mute, Accessibility, Settings, and other options as needed. The corresponding icon is lit to indicate that this function is enabled. On this interface, swipe the screen from right to left to enter the function card interface.

Quick operation:

- Swipe down from the upper left half of the display screen to show the quick switch interface.
- Swipe down from the upper right half of the display screen to show the function card interface.

QUICK SWITCH INTERFACE

WLAN

Tap this option to turn on/turn off the device WLAN Function, press and hold to enter WLAN Network settings. After the device is connected to the network and pairing bind is completed, it can be remotely controlled via the mobile App.

Remote Control

Tap this option to enable/disable the device's remote control module.

Note: Before enabling, make sure that the WLAN is turned on and connected properly, and the door is closed normally.

- The connection of WLAN is normal, but when the "" icon is not lit: you can check the status or set program parameters and function items through your mobile phone (depending on the permissions of the model), but you cannot start the program remotely.
- The connection of WLAN is normal, and when the "" icon is lit: you can set program parameters and functions via the mobile phone and remotely start the program.

After remote control start, if the device pauses the program, the remote control function will be automatically canceled and must be re-enabled to start the program remotely again.

After this function is enabled, children should be closely supervised to prevent them from climbing into the drum and causing danger.

After activation, if the appliance and App have no operation for a long time, it will enter Energy Saving mode, 7 days without operation will automatically shut down.

Notifications

Tap to enter and view current messages. Supports one-tap clear.

Drum Light

This option can manually turn on/ turn off the drum light.

The drum light automatically illuminates when the door is opened, the machine is powered on, the program is paused, or the program has ended.

Mute

This function can mute all prompt sounds except the alarm sound.

Tap this option to enable/disable this function.

Accessibility

Tap this option to enter the corresponding function homepage in Settings.

- Set "Font Size".
- Open/ close" Voice Reading "Function.

After "Voice Reading" is enabled, a  function icon will be displayed in the top left corner of the screen, program selection and program startup will be accompanied by voice prompts. Double-tap the screen to launch the program. This function does not support parameter adjustment. Temporarily exiting can turn off the function switch at the top left corner of the screen (it will default to re-enable on next startup); completely disable this function, go to "Accessibility" to configure the settings.

Settings

Tap this option to enter the system settings interface.

Users can set General , WLAN , Display , System Volume , Time Out , User Program , Reminder , Voice Assistant , Accessibility , User Manual , Evaluate , App and Pairing , System and so on as needed.

Name	Description
General	Configure language, weather, temperature, time zone, time, and date format; view the user agreement; turn on/off the Store Mode and so on. •When Store Mode is enabled, programs cannot be started. Repeatedly tap the upper-left corner of the screen several times to exit the demo playback; fully disable, go to "General" to configure.
WLAN	Configure device network connection.
Display	Adjust the screen brightness and configure the default display page.
System Volume	Slide to set system volume.
Time Out	Set the screen-off time, lock screen time, and drum light illumination duration.
User Program	Customize the programs displayed on the home screen (some programs do not support removal) and download cloud programs.
Reminder	Set Filter Reminder, Stage Reminder, and other functions.
Voice Assistant	Set voice control, language, and sound effects.
Accessibility	Set font size and voice reading function.
User Manual	Refer to the electronic version of the User Manual.
Evaluate	Check the last operation record and you can also add comments to this record.
App and Pairing	SupportAppbind, remote control, and unbind functions.
System	Query device information, perform system update, and restore factory settings.

System Update

Tap the top left corner of the pull-down menu to enter settings options, then tap " Settings ", then click " System", and click " System Update "to upgrade the system according to the prompts on the screen.

Reset

Tap the top left corner of the pull-down menu to enter settings options, then tap " Settings ", then click " System", and click " Reset"option. The option allows you to restore the device settings according to the on-screen prompts. After the reset is complete, the user data stored on the device will be deleted.

FUNCTION CARD INTERFACE

Evaluate

This card displays the result of the last evaluation. Click to view/add evaluation.

Device statistics

This card displays the total power consumption and supports switching between week/month/year views to check energy consumption and program rankings. Data updates require an internet connection for statistics.

Clean Reminder

Tap this card to enter the filter cleaning reminder settings interface.

Weather

This card displays location, temperature, and weather information from the cloud. If the location is not set or the cloud is not connected, it will prompt for the corresponding settings.

User Manual

This card displays a thumbnail of the User Manual. After the user binds to the cloud, click it to view details; if the cloud is not connected, it prompts the user to connect to the network.

SMART NETWORKING

Connecting your appliance to the application ConnectLife

ConnectLife is a smart home platform that connects people, devices, and services.

The **ConnectLife** application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features vary depending on your appliance and your region/country).

To connect your smart device, you need a home Wi-Fi network and a smartphone with the application **ConnectLife**.



To download the **ConnectLife** application, scan the QR code or search for **ConnectLife** in your favorite app store.

1. Install the **ConnectLife** application and create an account.
2. In the **ConnectLife** application, go to the "+" menu and select the appropriate type of device. Then scan the SN code (you can also enter the SN code manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

Do you have more questions?

Visit us at www.connectlife.io or contact us at hello@connectlife.io.

Network configuration description

1. Enabling WLAN on the appliance

Click on the "**WLAN**" button in the top left corner of the dropdown menu to enable or disable the Wi-Fi Function.

2. Connection setup

For first start up: follow the boot to complete device Settings and App account binding.

If you have reject to finish the WLAN setting and binding, you can start like below:

- 2.1. Click on the "**Settings**" button in the top right corner of the dropdown menu to enter the "**Settings**", and go to "WLAN" settings to set up the WLAN;
- 2.2. Or Long press on the "WLAN" button in the top left corner of the dropdown menu to enter the "WLAN" directly.

3. Pairing

Click on the "**Settings**" button in the top right corner of the dropdown menu to enter the "**Settings**" page.

- 3.1. Click on "**App and Pairing**" to enter the pairing page.
- 3.2. Click on "**Bind A New Account**" to start the pairing process for a new user.
- 3.3. Click "**Next**" and the dedicated QR code will be shown up for device pairing.

4. Unpairing

4.1. On the appliance side:

- A. Click on the "**Settings**" button in the top right corner of the dropdown menu to enter the "**Settings**" page.
- B. Click on "**App and Pairing**" to enter the pairing page.
- C. Click on "**Unbind**" to unbind the connected account.
- D. Tick the accounts that you want to unbind and click "**Unbind**" to disconnect.

4.2. On the smartphone side:

- A. Select and click the device you want to unbind in "**Devices**" page.
- B. Click "**Settings**" to enter the Settings page.
- C. Click "**Remove Device**" to unbind the device on the **ConnectLife** app.

5. Remote start

Click on "**Remote Control**" button in the top left corner of the dropdown menu to enable or disable this function.

LOCK SCREEN RELEASE

The auto-lock screen supports multiple time options. In standby (except on specific interfaces), if no operation occurs within the set time, the device automatically enters the lock screen interface. Press and hold the screen for 3 seconds to exit the lock screen.

START THE PROGRAM

Select the program and function parameters, then tap the **"Start/Pause"** button to operate the program.

During the program operation, the display will show the remaining time and other related information; the remaining time displayed by the program may differ from the actual running time. Due to factors such as clothing type and quantity, drying grade, and ambient temperature, the device will automatically adjust the actual drying time.

END OF THE PROGRAM

At the end of the program, the device will emit a prompt sound, and the screen will display the end interface. At this time, press and hold the power button to turn off the device.

You can also enter the following interface by tapping the icon. If no operation is performed for a period of time, the device will automatically shut down.

Report

Tap "" to view this program's power consumption, running time, etc.

Favorites

Tap "" to add the current program and function parameter settings to Favorites.

Home

Tap "" to return to the home screen.

Evaluate

Tap "" can rate the drying effect with stars, and the system will automatically optimize subsequent drying parameters based on the rating to help users obtain a drying experience that better meets their individual needs.

 After the program ends, please turn off the power, unplug the power cord from the outlet, open the door, and take the clothes out of the drum.

MAINTENANCE AND CLEANING

 Regular maintenance can extend the device's service life. Before maintenance, please be sure to disconnect the power supply.


 Children are not allowed to clean or perform any maintenance work on this device without supervision. The dryer is equipped with a filtration system made up of several filters that prevent impurities from entering the heat exchanger system.

 The device must not be operated if the filter is not installed in place or the filter is damaged, as excessive accumulation of fabric fibers may cause the device to malfunction or fail.

 Never use harsh chemicals, abrasive cleaners, or solvents to clean the appliance. They will damage the finish.

CLEANING THE FILTER

 Please clean the filter after each use.

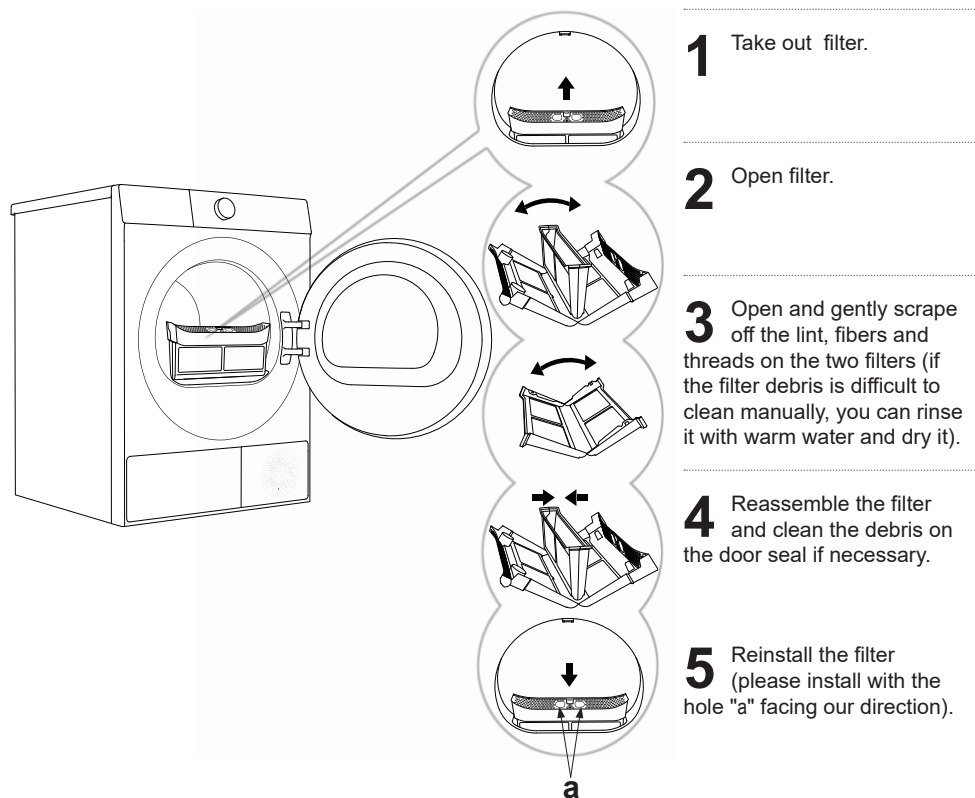


 Do not run the dryer without the lint filter installed.

 Please be careful not to get your fingers caught in the filter cover.

 Refer to the instructions to clean the filter properly, otherwise it will cause cotton velvet accumulation and affect the drying performance of the device. Proper and timely cleaning of the filter can reduce the drying time and energy consumption of the device and prevent unnecessary malfunctions.

CLEAN THE HEAT EXCHANGER

 When cleaning the heat exchanger, water may overflow; it is recommended to place an absorbent cloth on the floor.

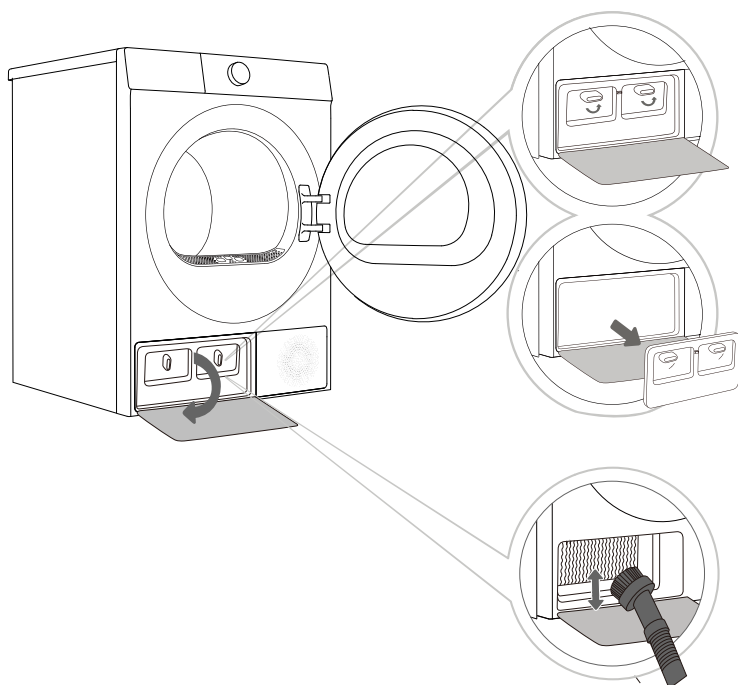

1 Press the heat exchanger door cover buckle on the lower left to open the door cover.

2 Turn the locking knob on the inner door cover to the unlocked position.

3 If after using for a period of time, there is dust on the heat exchanger, please use a vacuum cleaner, soft brush, or other tools to remove the dust. The heat exchanger can be seen after removing the heat pump filter. Lightly brush the metal sheet with the brush, and the brush can only be moved from top to bottom. Excessive force may damage or bend the metal sheet. Do not touch the heat exchanger directly with your hands to avoid injury.

4 After cleaning, reinstall the heat pump filter and inner door cover to their original positions, tighten the knob, and close the heat exchanger door cover.


 Do not touch the internal metal parts of the heat exchanger with your bare hands to avoid scratches. Wear suitable protective gloves when cleaning the heat exchanger.

 Improper cleaning of the heat exchanger metal sheets may cause permanent damage to the device. Do not press the metal sheet with hard objects (such as the plastic tube of a vacuum cleaner, etc.).

 It is recommended to clean the heat exchanger at least once every 20 drying programs.

EMPTY THE CONDENSATE BOX

If the condensate box is full, the drying program will automatically pause. Please follow the steps below to empty the condensate box.

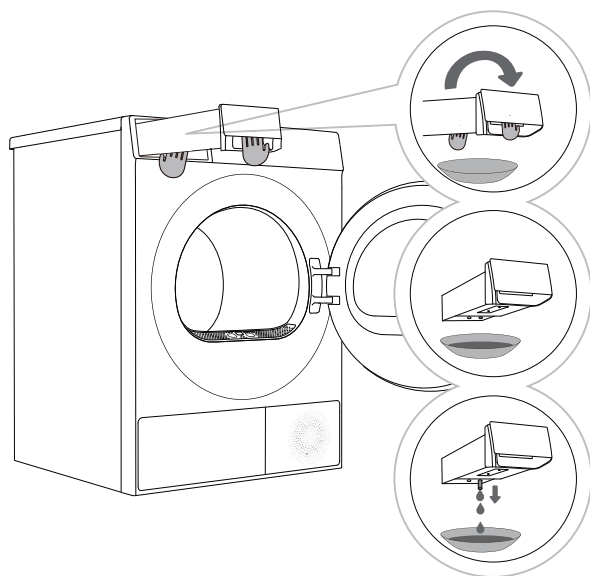

1 Pull out the condensate box (using both hands, as shown in the figure).

2 Turn the condensate box upside down over a basin, sink, or any suitable container.

3 Empty condensate box.


4 Reinstall the condensate box back to its original position.

💡 Empty the condensate box after each drying program.

💡 The water discharged from the condensate box is not for drinking. After sufficient filtering, it can be used for ironing.

💡 Do not add chemicals or fragrances to the condensate box.

CLEAN THE HUMIDITY SENSOR

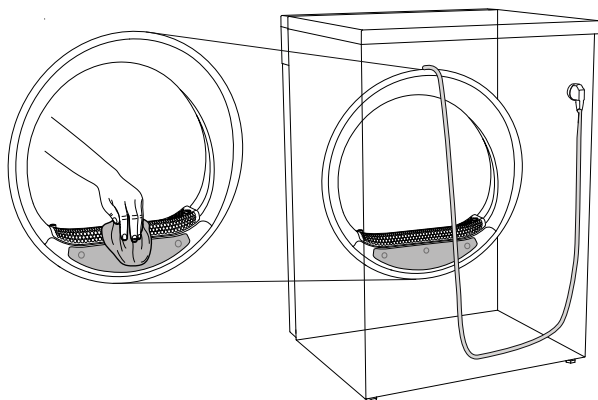

This device uses a humidity sensor to monitor garment moisture in real time, ensuring precise and controllable drying performance. To avoid scale buildup affecting sensor accuracy, please perform the following cleaning steps regularly:

1. Disconnect the device from the power supply, open the door.
2. After the device has cooled down, use a soft sponge dipped in clean water to gently wipe the surface of the humidity sensor.

⚠ Do not use steel wool, abrasive cloths, or other hard/rough tools to avoid scratching the sensor coating.


⚠ Do not use solvents, alcohol, or other chemical substances for cleaning.

⚠ Ensure the sensor surface is completely dry before powering on after cleaning.

CLEAN THE WATER TANK FILTER (APPLICABLE TO SOME MODELS)

💡- The water tank filter may be clogged with impurities after long-term use; it is recommended to clean it once a month.

- If the appliance is equipped with the steam function program, ensure that there is sufficient water in the water tank to form steam. When using for the first time or when the low-water icon appears on the screen during operation, please add purified water.
- For the models without the steam function program, there is no need to add purified water into the water tank; simply remove the water tank filter for cleaning.

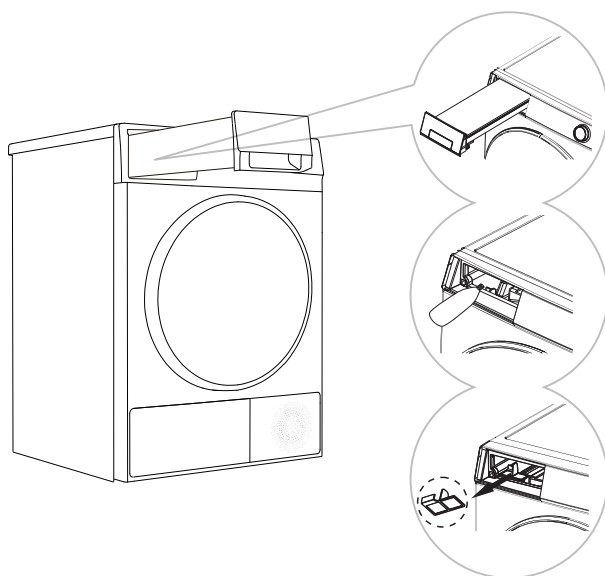

1 Pull out the condensate box by pulling it outward.

2 Pour approximately 500 ml of purified water into the water tank using a water kettle or a pointed mineral water bottle.

3 Reach in with your fingers to grasp the water tank filter at the bottom, remove it, clean it, and reinstall it in place. Finally, reinstall the condensation box to its original position.

CLEAN THE DOOR SEAL

Check the door seal regularly; clean it with a damp cloth if necessary.

💡- After use, slightly open the door for ventilation and drying.

CLEANING THE OUTSIDE OF WASHER

⚠️ Before cleaning the outside of your washer, please be sure to disconnect the device from the power supply.

Clean the device housing and control panel with a soft damp cloth. Then wipe them dry with a soft dry cloth.

⚠️ Do not use solvents, abrasive cleaners, or cleaner that may damage the device (Please follow the recommendations and warnings provided by the cleaner manufacturer).

Wipe the drum door with a damp cloth, and then wipe it dry with a soft dry cloth.

💡- Do not use too much water to clean the device.

TROUBLESHOOTING

The device is equipped with various automatic safety functions, ensuring that faults can be detected promptly and effective safety countermeasures can be initiated.

These faults are usually minor and can be eliminated in a very short time.

When the device cannot operate normally, the display will show abnormal information. Please refer to the warning content and take appropriate actions.

If the fault persists after you have handled it yourself according to the recommended processing method, please contact after-sales service.

If the user performs maintenance by themselves or hires non-manufacturer after-sales personnel, all consequences will be assumed by the user.

Fault phenomenon	Recommended handling methods
The device cannot start	◇ Check the power connection. ◇ Check whether the Start/Pause button is pressed. ◇ Check whether the door is closed correctly. ◇ Check whether a fuse has blown, a circuit breaker has tripped, or a power outage has occurred.
The device cannot start, and the screen displays "End"	◇ Check whether the program settings are correct. ◇ Check whether there are any clothing items in the drum.
Drying time is too long	◇ Check whether the program settings are correct. ◇ Check whether there is too much clothing tangled into a bunch. ◇ Check the filter for cleanliness. ◇ Some programs have a cooling process after drying.
Poor drying effect	◇ Check whether the clothes have been washed and dehydrated. ◇ Check whether the program settings are correct. ◇ Check whether the amount of clothing is too much. ◇ Check whether the clothing is sorted correctly and whether the clothing that dries easily is mixed with the clothing that dries slowly. ◇ Check whether there are too many heavy garments. ◇ Check whether the filter is clean.
The remaining time on the display stops or jumps	◇ The remaining time may vary depending on the type of clothing, weight, moisture, and surrounding environment; this is a normal phenomenon.
Wrinkled clothing	◇ The drying time of the clothes is too long; try shortening the drying time. ◇ Leaving clothing in the dryer for too long after the program has ended.
The program running time displayed on the device is different from the actual program running time	◇ For programs that stop automatically when clothes are dry, the drying duration displayed is calculated according to standard environment, initial laundry moisture, load mass and type. The drying time is automatically adjusted for any change in conditions. The difference between the actual time and the display time is normal, which ensures the best drying effect.

 Faults or problems caused by external factors (such as lightning strikes, power grid failures, natural disasters, etc.) are not covered by the warranty.

Fault phenomenon	Recommended handling methods
The appliance is too loud	◇ Look for coins, loose buttons, nails, and other objects and remove them immediately. ◇ Check the lint filter. Remove any items stuck inside the lint filter. ◇ Make sure the dryer is level and standing firmly on the floor. ◇ The dryer may hum due to air moving through the drum and fan. This is normal.
Clothes are shrinking	◇ Garment care instructions are not being followed. Use a low or no heat setting.
Lint is left on clothes	◇ Lint filter has not been cleaned properly. ◇ Clothes have not been sorted properly. ◇ Some fabrics cause more lint and should be dried separately from fabrics that lint attaches easily. ◇ Tissue, paper, etc., has been left in pockets.
The appliance has an odour	◇ The smell is caused by rubber material that is attached to the appliance inside. This kind of smell is a rubber's own smell and disappears automatically after using the appliance several times. ◇ When washing the clothes, use the detergent in accordance with the manufacturers recommendations. If you use the detergent excessively not according to the recommendations, undissolved detergent may accumulate on the clothes and cause an odour. ◇ You can smell odours from the clothes if the clothes were left in the appliance after drying or in the washing machine after washing. Unload the clothes promptly at the end of the drying or washing cycle. ◇ Ensure you can smell same odour in the washing machine. If so, clean the tub of the washing machine referring to the washing machine user manual. ◇ Always take care of both lint filters clean. If any residues were left in the lint filter after drying, it may cause odours. And also dry the lint filter completely after cleaning.
The appliance is powered on and started directly after power failure, but does not work	◇ When the program is suspended, the set functions cannot be changed, If the program or function needs to be changed during operation, or the power is off during operation and the power needs to be powered on again, select the required program and function, and finally start it.

FAULT CODES AND TROUBLESHOOTING

When the device does not operate normally and the display shows the following code, it may not be a fault. Please refer to the content in the fault code and take the corresponding measures.

 Some fault codes are only applicable to certain models. The actual alarm display is subject to the actual model.

Problem / Fault	Description	Solution
F50/F51	Sensor error	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.
F21	Communication error between the display panel and the main control board	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.
F22	Variable frequency motor communication error	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.
F26	Communication error between main control board and load board	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.
F35	Inverter compressor communication error	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.
F06-F12	Variable frequency motor error	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.
F30-F36	Inverter compressor error	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.
Other	Electronic module fault	Turn off the device power, then turn it on again; If the fault still exists, please contact a repair technician.

SERVICING

Before calling a repair technician

When you contact the service center, please first state your device model.

Information such as model, code/ID, model and serial number are displayed on the nameplate of the device.

 In case of defects, only use spare parts approved by the authorized manufacturer.

 Repairs or any warranty claims resulting from incorrect connection or use of the device are not covered by the warranty. In this case, the maintenance costs shall be borne by the user.

USAGE RECOMMENDATIONS

The most economical way of drying is to dry the recommended amount of laundry in each batch (see PROGRAMME TABLE).

Drying laundry made of particularly delicate fabrics that may be deformed is not recommended.

Use of conditioner in the washing cycle is not necessary as the laundry is soft and smooth after drying in the dryer. Drying time will be shorter and power consumption will be lower if the garments are thoroughly wrung or spun before drying. By selecting the appropriate drying programme, you will avoid over-drying your laundry and problems with ironing or shrinkage of fabric

Regular cleaning of the filters will lead to optimum drying time and minimum power consumption.

When drying smaller amounts of laundry or individual garments, the sensor may not perceive the actual level of moisture in the laundry. In such cases, it is recommended to dry smaller items or amounts with programmes for dryer laundry or with the timed programme.

DISPOSAL



The packaging is made of environmentally friendly materials and can be recycled, reused, processed, or destroyed without causing harm to the environment. For this purpose, the packaging materials are marked with appropriate labels.



This icon on the product or its packaging indicates that this product cannot be disposed of as household waste. Please dispose this product at a collection point for the recycling of electrical and electronic equipment.

When the device reaches the end of its life and needs to be scrapped, please remove all power cords, destroy the door locks and switches to prevent the door from locking.

Children or small animals may be trapped in it and cause danger.

Ensure this product is handled correctly and avoid inappropriate waste disposal measures for this product, as this helps prevent potential negative impacts on the environment and human health. For more information on product recycling, please contact your local municipal department, your household waste disposal service center, or the store where you purchased the product.

EU Conformity Statement



Hereby, [HISENSE HOME APPLIANCES GROUP CO.,LTD.] declares that the radio equipment type [Washing Machine] is in compliance with Directive 2014/ 53/EU.

RF Exposure Information

This device has been tested and meets applicable limits for Radio Frequency (RF) exposure.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Power:

Bluetooth	2402 – 2480MHz	8.33dBm
Bluetooth LE	2402 - 2480 MHZ	7.12dBm
WLAN	2412 - 2472 MHZ	18.8dBm
WLAN	5150 - 5350 MHZ	18.95dBm
WLAN	5470 - 5725 MHZ	18.41dBm
WLAN	5745 - 5825 MHZ	12.58dBm

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	BE	EE	HR	IT	CY	LV	LT
	BG	IE	LU	HU	MT	NL	AT
	CZ	EL	PL	PT	RO	SI	SK
	DK	ES	FI	SE	DE	FR	LI
	NO	IS	CH	TR	UK(NI)		

CONSUMPTION DATA TABLE

Programme Instructions

The table indicates the power consumption and time values for drying of a test batch of laundry with various loads and after washing machine spinning.

The following requirements apply to the consumption values specified below.

Inlet air temperature	room temperature
Inlet air humidity	50–60%
Drying temperature	Normal

Program	Rated capacity (kg)	Spinning (rpm)	Initial moisture (%)	Programme consumption approximately (kWh)*	Programme duration approximately (h:min)*	Final moisture content (%)
ECO	10.0	1000	60	1.33	4:59	0.0
	5.0	1000	60	0.69	2:55	0.0
Synthetics Extra	5.0	1200	40	0.78	2:30	0.0
Synthetics Cupboard	5.0	1200	40	0.63	1:50	2.0
Synthetics Iron	5.0	1200	40	0.54	1:30	10.0
Cotton Extra	10.0	1000	60	2.38	5:04	-2.0
	5.0	1000	60	1.02	2:13	-2.0
Cotton Iron	10.0	1000	60	1.20	3:34	12.0
	5.0	1000	60	0.76	1:36	12.0
Delicate	1.0	800	70	0.45	1:27	1.0

1. The values given for programs other than the eco program are indicative only.
2. In accordance with standard EN 61121 and Commission Regulation (EU) 2023/2533, when testing the Eco program at full and partial load, the drain hose must be connected to the appliance to allow condensate water to be drained externally. If the drain hose is not yet connected, refer to the "Connect the drain hose" section for installation instructions.
3. The eco programme is suitable to dry wet cotton laundry, and that this program is used to assess the compliance with the EU ecodesign legislation.
4. The eco programme is the most efficient program in terms of energy consumption for drying wet cotton laundry.
5. Loading the household tumble dryer up to the maximum capacity indicated by the manufacturer for the respective programs will contribute to energy savings.
6. At full load of eco programme, acoustic airborne noise emission of the drying cycle: 60dB.
7. The product information and QR code are reflected in the energy consumption label the product registration information can be obtained by scanning the QR code.
8. The power consumption of the off-mode is 0.5 W. Time on switching automatically to off-mode: 10min.

 The product information sheet can be accessed by scanning the QR code on the energy label.

 Due to deviations in terms of type and amount of laundry, spinning, power supply oscillation, and environment temperature and humidity, the values measured at the user may differ from the one stated in the table.

We reserve the right to any changes and errors in the instructions for use.

TYPICAL CONSUMPTION TABLE

Parameter	Unit	Value
Rated capacity for the eco programme, at 0,5 kg intervals (c)	kg	10.0
Energy consumption of the eco programme at full load (E_{dry})	kWh/drying cycle	1.33
Energy consumption of the eco programme at partial load ($E_{dry, \frac{1}{2}}$)	kWh/drying cycle	0.69
Weighted energy consumption of the eco programme (E_{ic})	kWh/drying cycle	0.84
Standard energy consumption of the eco programme (SE_c)	kWh/drying cycle	1.96
Energy Efficiency Index (EEI)	/	42.9
Program duration for the eco programme at full load (T_{dry})	h:min	4:59
Program duration for the eco programme at partial load ($T_{dry, \frac{1}{2}}$)	h:min	2:55
Weighted program duration for the eco programme (T_i)	h:min	3:25
Average condensation efficiency of the eco programme at full load (C_{dry}) (if applicable)	%	88
Average condensation efficiency of the eco programme at partial load ($C_{dry, \frac{1}{2}}$) (if applicable)	%	88
Weighted condensation efficiency of the eco programme (C_i) (if applicable)	%	88
Acoustic airborne noise emission during the eco programme	dB(A) with respect to 1 pW	60
Power consumption in off mode (P_o) (if applicable)	W	0.50
Power consumption in standby mode (P_{sm}) (if applicable)	W	N/A
Does 'standby mode' include the display of information?	/	N/A
Power consumption in 'standby mode' in condition of networked standby (P_{nsm}) (if applicable)	W	2.00
Power consumption in delay start (P_{ds}) (if applicable)	W	4.00

Compliance information

Radio equipment type (depending on the model)	DH7I108BWAB1 DH7I108BWAB1* DH7I108BBAB1 DH7I108BBAB1* DH7I108BTAB1 DH7I108BTAB1* DH7I108BT3B1 DH7I108BW3B1 DH7I108BB3B1
Wi-Fi	
Operating frequency range	2.4000 GHz – 2.4835 GHz
Maximum output power	≤10 dBm/MHz (EIRP)
Maximum antenna gain	Gain: 0.5 dBi
Bluetooth	
Operating frequency range	2400 MHz – 2483.5 MHz
Carrier output	4 dBm
Emission type	F1D

Declaration of conformity

The company declares that the device with the function **ConnectLife** complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The detailed Declaration of Conformity can be found at the web address <https://auid.connectlife.io> on the page of your device among the additional documents.

