
 
# Corners Large TV Unit



### **Spare Parts**

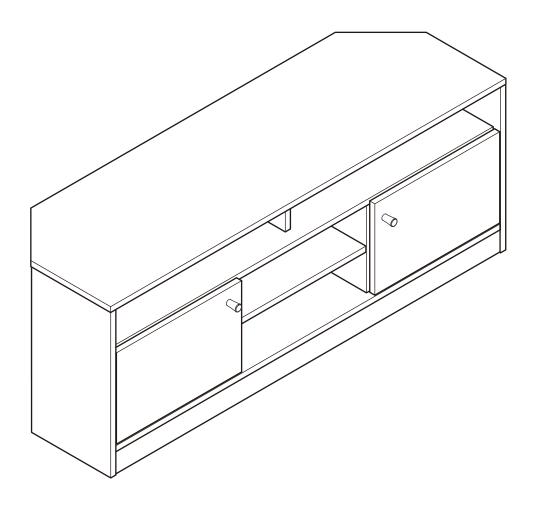



Ø 0370 112 1928

### **Customer Support**

9 0345 640 2020



# $begin{array}{c} extstyle extsty$

#### **Product Details**

Corners 2 Door TV Unit White 9583119 Corners 2 Door TV Unit Black 9601503 Corners 2 Door TV Unit Oak 9525407

#### IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



• We do not recommend the use of power drill/drivers for inserting screws

as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- Use a dry cloth to clean the product, furniture polish is not recommended.

From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

#### **Additional Guidance**


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- This product is compliant EN12521 ; BS4875-7 ; EN14749

# Fittings (Shown to scale)

## Bag 1

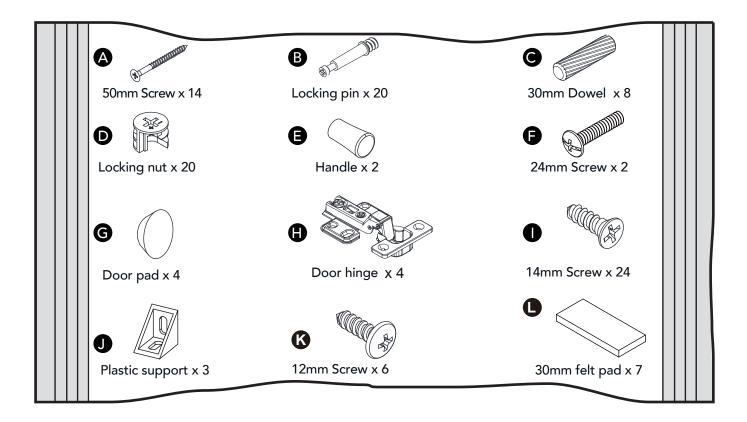

# **Tools required**

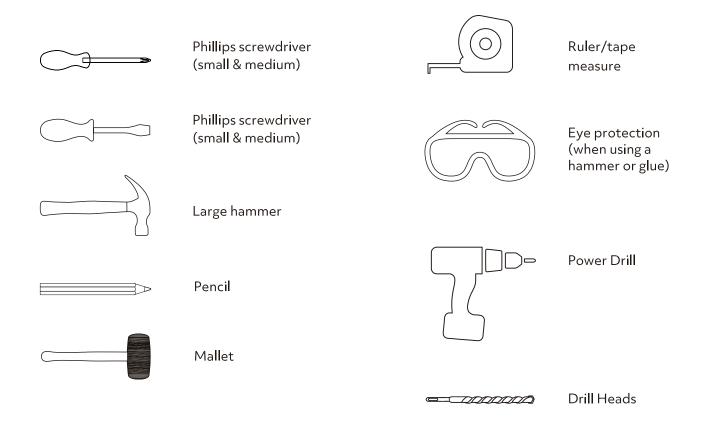

# **Panels**

